
Tanaka.

Parts Catalog

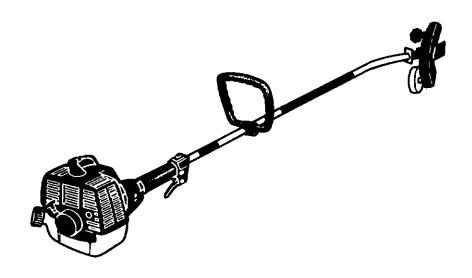

Portable Edger

Model: TPE-250

TPE-250 OPTIONS AND ACCESSORIES

SHOULDER STRAP



PSS-175

MANUALS / CATALOGS

970-47290-201

Owner's Manual DPL-LE250-HST Parts Catalog

PERFECT MIX® 2-Cycle Engine Oll



700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity

SPECIAL TOOLS

006-29326-000 Flywheel Remover 009-29323-500 Piston Pin Remover 070-2000W-500 Pressure Tester

001-29000-000

Tachometer

016-29338-000 Pinion Remover

015-23998-000 Gear Shaft Remover 070-2000W-501 Carb. Tool Kit



FIG.1 ENGINE


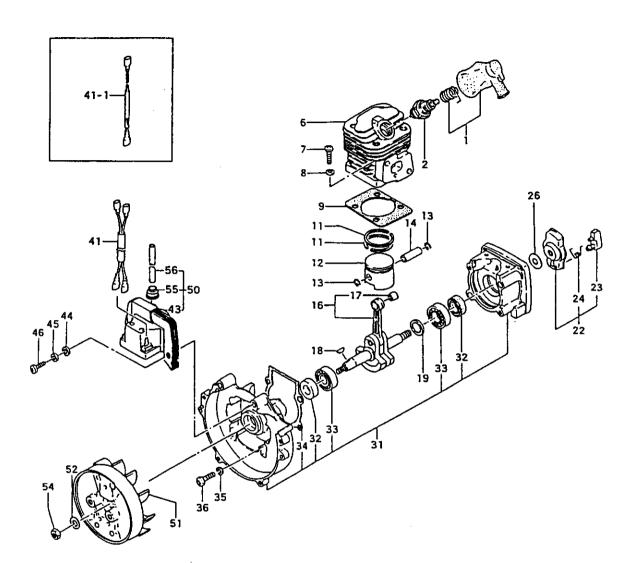


FIG	IURE 1	TPE-250	S	LISTING			
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
1	157-0097A-900	CAP,SPARK PLUG,ASS'Y	1		В		
2	018-11660-21	PLUG,SPARK	1		В		
6	002-00980-21	CYLINDER	1	1	С		
7	990-11050-181	SCREW,5X1B	4		В		·
8	992-10050-012	WASHER,S,5	2		Α		
9	017-00980-200	GASKET,CYLINDER	1		С		
11	041-01601-200	RING,PISTON	2		Α		
12	031-01601-20	PISTON	1		С		
13	039-01620-200	CIRCLIP, PISTON PIN	2		Α		
14	037-01601-200	PIN,PISTON	1		С		
16	046-0631A-81	CRANKSHAFT	1		D		
17	999-62081-225	BEARING,NEEDLE,F-810	1		C		
İ							
18	068-10100-200	KEY,WOODRUFF,3X13X4.5	1	ļ	С		
19	330-00200-210	SHIM,12.2X19X.10	1	1	D		Shims are "as needed" to obtain
19	330-00200-220	SHIM,12.2X19X.15	1		D		correct c/s side clearance.
19	330-00200-230	SHIM,12.2X19X.20	1	İ	D		
19	330-00200-240	SHIM,12.2X19X.30	1		D		
22	798-06500-900	PULLEY,STARTER,ASSY	1		С	,	
					1		
23	788-06500-20	PAWL,STARTER	1		C	}	•
24	790-06097-200	SPRING,STARTER PAWL	1		C		
26	359-10112-203	WASHER,CLUTCH B	1	1	Α		
31	072-00980-900	CRANKCASE,ASS'Y	1		D		Includes bearings, seals & gasket
32	999-66122-240	SEAL,OIL,12227	2		Α		
33	999-61600-100	BEARING,BALL,#6001	2		В		
						<u> </u>	
34	090-06097-200	GASKET, CRANKCASE	1	1	C		
35	992-10050-012	WASHER,S,5	4		Α		
36	990-11050-251	SCREW,5X25	4		D	l .	
41-1	178-01280-80	CORD,STOP,380mm	2	1	D	~N159150	
41	178-06550-80	CORD,STOP,180mm	1	1	D	N159151~	
43	167-20521-80	COIL,IGNITION	1		D		
]	
44	992-00050-011	WASHER,SMALL,5	2		C		
45	992-10050-012	WASHER,S,5	2	Ł	A		
46	990-11050-201	SCREW,MX20	2		D	1	
50	167-20521-90	COIL,IGNITION	1		D	1	
51	155-20508-800	ROTOR,MAGNETO	1		D		1
52	992-01070-011	WASHER,7	1		D		
54	066-00000-200		1		D	i .	
55	560-20517-200	CAP,RUBBER	1		C		
56	264-20516-200	LEAD,HIGH TENSION	1		0		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE COMPONENTS

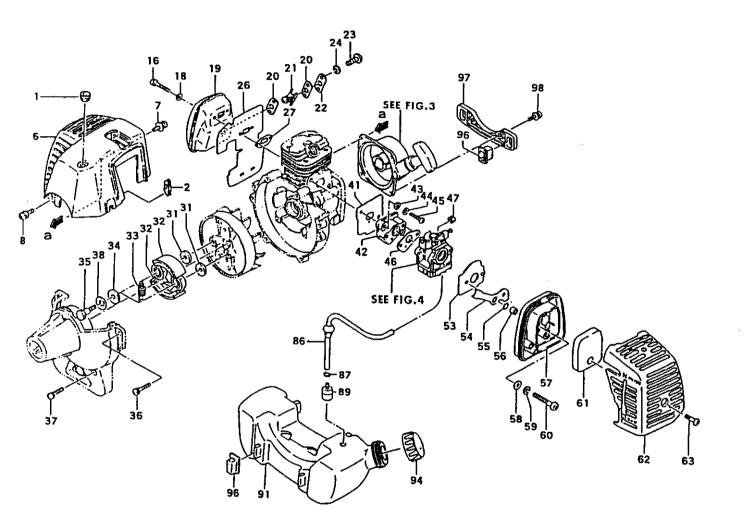

	DADTAGO	PART PEOCHIPTION					
REF.		PART DESCRIPTION	_	C		SERIAL NO	REMARKS
1		GROMMET,SECONDARY CORD	1		디		
, 2	203-0631A-200		1		D		
6	738-0631A-201	PROTECTOR, MUFFLER	1		C		
7	994-15040-222	SCREW,PS,4X22	2		A		
8	994-15040-122	SCREW,4X12/PS	2		c		
16	990-51050-503	BOLT,HEX,5X50	2		lci		<u> </u>
18	992-01050-011	WASHER,5	2		A		
19	706-0631A-801	MUFFLER	1		D		
20		GASKET, MUFFLER	2		С		
21		ARRESTER, SPARK	1		С		
l l	1	PIPE,TAIL	1		D		
	990-11040-081	SCREW,4X8	2		C		
20			2				
24	992-10040-012	WASHED S 4	۱		ᅵᅴ		
		WASHER,S,4	2		В		
	1	SHIELD,HEAT	1		В		
27	737-06100-21	GASKET,MUFFLER	1		В		
1	i .	WASHER,CLUTCH,B	2		В		
		SHOE,CLUTCH	2		Α		
33	342-0630B-200	SPRING,CLUTCH	1		Α		
 							
1		WASHER,CLUTCH A	2	İ	В		
•	357-0075T-200		2		Α		
	994-14050-202	SCREW,5X20/S	2				
		SCREW,5X35/S	2		C		
	992-05080-030	WASHER,8	2		C		
41	403-0631A-202	GASKET,INLET MANIFOLD	1	l	Α		
i i				ı			
42	404-0631A-800	INSULATOR, CARBURETOR	1		В		
43	992-00050-011	WASHER,SMALL,5	2		C		
44	992-10050-012	WASHER,S,5	2		Α		
45	990-11050-221	SCREW,5X22	2	- 1	в		
46	402-0602K-21	GASKET,CARBURETOR	1	- 1	в	!	
47	991-01060-013	NUT,6	1		- E	~N159150	
					-		
53	436-0162V-20	BASE,CLEANER	4		c		
		PLATE, CHOKE	 				
1	-	O-RING,S-8	4		C		i
l l		COLLAR,CLEANER					
	423-0637C-800						
					В		
30	992-00030-011	WASHER,SMALL,5	2		C		
E0	000 10050 010	W40UED 0 -					
	992-10050-012	*	2		Α		
	990-11050-571		2		C		
61	446-0637C-200	ELEMENT, CLEANER	1		Α		
<u></u>	·			丄			

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 2 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS
62	452-0637C-200	COVER,CLEANER	1		С	~N219620	
62	452-0637C-21	COVER,CLEANER	1		C	N219621~	
63	380-0637C-200	BOLT,CLEANER	1		В		
86	223-0162V-900	PIPE, FUEL, ASS'Y	1		A		
87	680-00731-201	CLIP	1		В		
89	675-04042-80	FILTER,FUEL	1		Α		
				١,			
91	591-0635A-200	TANK	1		С		
94	595-0650A-90	CAP,TANK	1		Α		
96	655-00940-201	CUSHION, FUEL TANK	4		A		
97	653-0631A-200	BRACKET,TANK	1		С		
98	994-15040-222	SCREW,PS,4X22	2		Α		
			П				

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 RECOIL STARTER


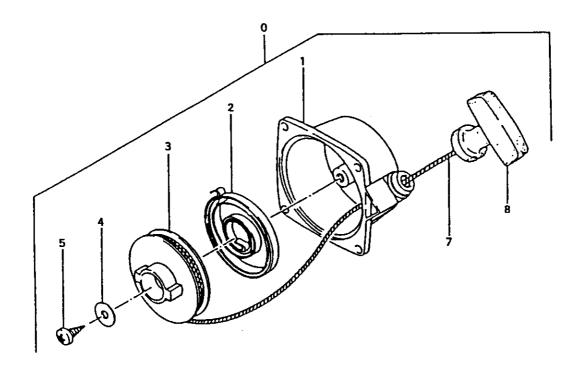


FIGURE 3

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
0	762-06097-902	STARTER, RECOIL ASS'Y	1		В		······································
1 1	772-06097-80	BODY,RECOIL STARTER	[1]		С		
2	780-06097-200	SPRING,RECOIL	[1]		Α		
3	774-06097-200	PULLEY,STARTER	1		В		
4	801-06091-200	WASHER,ROPE REEL	1		C		
5	839-00025-200	SCREW,SET	1		ם		i
7	783-06097-200	ROPE,STARTER	1		С		
8	785-06097-200	HANDLE,STARTER	1		С		


FIG.4 CARBURETOR

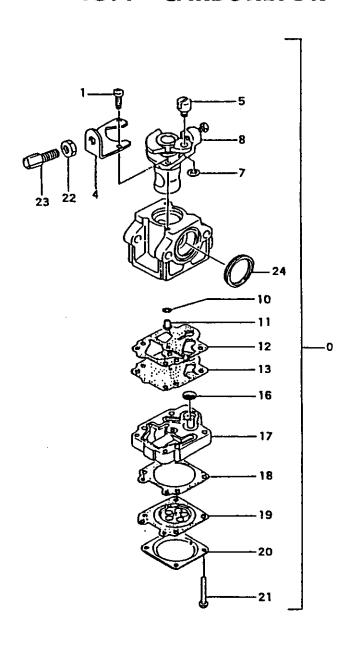

REF.	PART NO.	PART DESCRIPTION	Q	C	S	SERIAL NO	REMARKS					
0	455-25155-90	CARBURETOR, ASS'Y	1		D	~N219620						
<u>'</u> 0	455-25155-91	CARBURETOR,ASS'Y	1		c	N219621~						
1	514-25100-200	SCREW,THROTTLE SET	2		D							
4	544-25120-200	STAY,ADJUST,CABLE	1		D							
5	539-25120-200	SWIVEL	1		ם		* Contained in Carb. Repair Kit					
7	489-25100-200	RING,STOP	1		D		650-25124-900					
				•]		(Not availiable individually)					
8	488-25154-80	VALVE,THROTTLE	1		D		(**************************************					
10	~~~	*O-RING	1		c							
11	599-2000W-420	JET,MAIN,#42	1		F	~N091653						
11	599-2000W-430	JET,MAIN,#43	1		D	N091654~						
12	~~~	*GASKET,PUMP	1		В							
13	~~~	*DIAPHRAGM,PUMP	1		в							
16	~~~	*SCREEN,INLET	1		C							
17	575-25152-80	BODY,PUMP	11		c		Includes inlet needle					
18	~~~	*GASKET,DIAPHRAGM .78mm	1		D							
19	~~~	*DIAPHRAGM,METERING	1		A							
20	476-25004-200	COVER,DIAPHRAGM	11		D							
21	548-25101-200	SCREW,SET	4		D							
22	991-01060-013	NUT,6	1		В	N219621~						
23	614-25137-200	ADJUSTER,CABLE	1		D	N219621~						
24	431-0634C-200	PACKING, CLEANER	1		С							
				j								

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.5 CLUTCH CASE & GEAR CASE

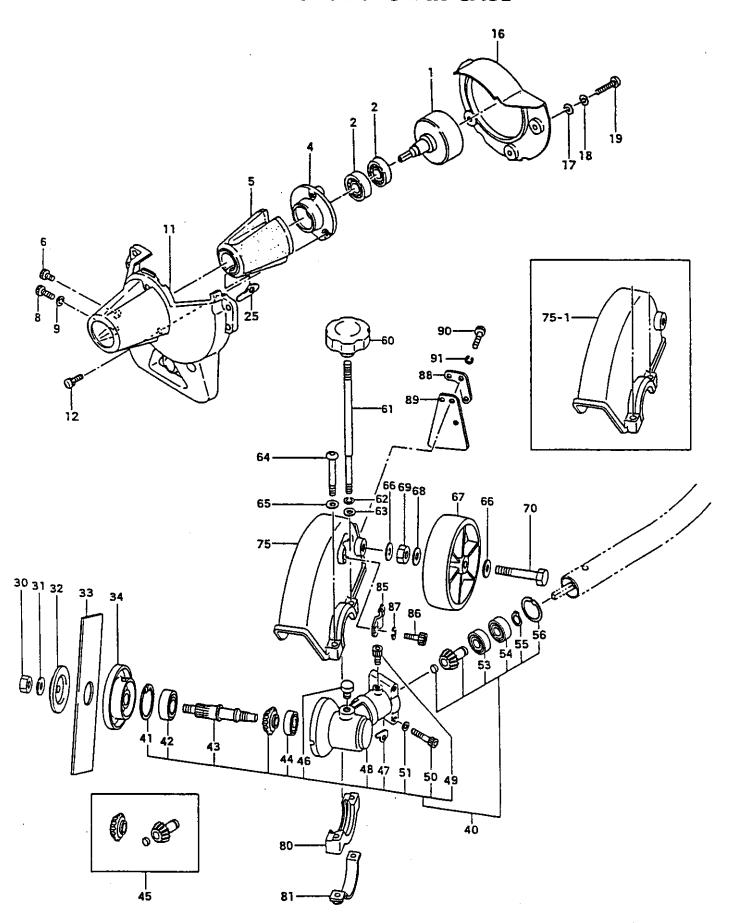

		TPE-250 F					
REF.		PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
1	289-0098T-80	DRUM,CLUTCH	1		D		
2	999-61600-102	BEARING,BALL,#6001Z	2		В		
4	374-0631A-20	FLANGE,CLUTCH	1		В		
5	599-0631A-802	CUSHION	1		c		
6	990-51050-103	BOLT,HEX.HOLE,5X10	1		c		
8	990-51050-203	BOLT,HEX.HOLE,5X20			c		
9	992-10050-062	WASHER,S,5	1		D		
11	112-0631A-201	CASE,FAN	1		D		
12	994-14050-122	SCREW,S,5X12	3		В		
16	091-0631A-200	SHIELD,HEAT	1		D		
17		WASHER,4	3		С		
18	B .	WASHER,S,4	3		в		
1					_		
19	990-11040-121	SCREW,4X12	3		В		
25	249-0165A-21	SPACER	11		D		
30	991-06080-001	NUT,8/L.H.			c		
31	992-01080-011	WASHER,8	1		A		
32	311-37290-20	CAP, CUTTER HOLDER					
33	435-37290-20	BLADE, CUTTING			В		
			$ \cdot $	- 1			
34	310-37290-80	HOLDER,CUTTER	$ $ $_{1} $		c		
40	300-37290-90	CASE,GEAR,ASSY			D		
41	993-51032-002	RING,STOP,C-32 IN	$ $ $_{1} $	ĺ	c		
42	999-61620-103	BEARING,BALL #6201D	1	ı	D	ı	
43	304-37290-20	SHAFT,GEAR	4		D		
44	999-61628-000	BEARING,BALL,#628	1		D		
		• •		l	_		
45	301-37290-00	SET,GEAR/PINION	1	ŀ	Ы		
46	990-15080-100	SCREW,8X10	1	ı	D		
47	324-37350-20	WASHER,GEAR CASE	1	1	- 1	~N091653	
47		WASHER,GEAR CASE	1	- 1	- 1	N091654~	
48	i	CASE,GEAR			D	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
49		BOLT,HEX.HOLE,5X10			c		
				ı	Ĭ		
50	990-51050-253	BOLT.HEX.5X25	2		в		
		WASHER,S,5	2	- 1			
		BEARING,BALL,#609	-	- 1	D		
		BEARING,BALL,#609Z	;		Ы		
	993-50009-002		-				
	I	RING,STOP,C-28,IN		- 1			
		·····			\mathbb{I}		
60	210-37290-80	HANDLE,LOCK	4		c		
	I	BOLT,ADJUST	4	- 1	c		
- 1		WASHER,S,6			Ă		
ļ		ے۔ ب سر بہتاہ ا	١.		$^{\prime}$		
					L_		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS				
63	992-01060-011	WASHER,6	1		Α						
64	990-53060-453	BOLT,HEX,6X45	1	ł	C	,					
65	992-01060-011	WASHER,6	1		Α						
66	992-01080-011	WASHER,8	2		Α						
67	120-37290-20	WHEEL	1		D						
68	992-01080-011	WASHER,8	1		Α						
69	991-74080-003	U-NUT,8	1		C						
70	297-37290-20	SHAFT,WHEEL	1		D						
75	441-37290-21	GUARD,SAFETY	1		C						
80	442-37290-20	BRACKET,GUARD	1		c						
81	445-37290-80	HOLDER,GUARD	1		c						
85	209-37290-20	HOLDER	1		С	N219621~					
86	990-51050-123	BOLT,HEX,5X12	2		С	N219621~					
87	992-10050-062	WASHER,S,5	2		D	N219621~					
88	496-37290-20	HOLDER,MUD FLAP	1		Ç	N219621~					
89	500-37290-20	FLAP,MUD	1		С	N219621~					
90	990-51050-123	BOLT,HEX,5X12	3		С	N219621~					
91	992-10050-062	WASHER,S,5	3		D	N219621~					
				-							

^{*} Indicates the part is included in a kit or assembly and is not availiable individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG. 5 CLUTCH CASE

UNITS AFTER SER. # Q243101


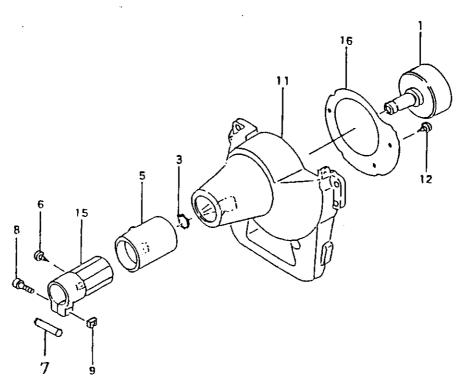


FIGURE 5a

REF.	PART NO.	PART DESCRIPTION	O	С	S	SERIAL NO.	REMARKS
11111	289-0099E-80	DRUM,CLUTCH	1		В		
3		RING,STOP,C-12 EX	1		A		
1	599-00980-20	CUSHION, RUBBER	1			~R288067	
_	599-00980-21	CUSHION, RUBBER	1			R288068~	
6		SCREW,TAPPING,4.5X12			1 1	~R288067	
6		SCREW,TAPPING 4.5x16				R288068~	
0	330-74043-104	JOHEW, IAIT ING 4.5X10				1,200000	
7	096-04300-20	COLLAR 6.3x18	4		C	R288068~	
	Į						
8	į.	BOLT,HEX,5X20			i	~R288067	
8	990-54050-253	BOLT,HEX 5x25	1		C	R288068~	·
9	991-91050-001	NUT,5	1		C		
11	112-00980-80	CASE,FAN	1		В	~R288067	Includes bearings
11	112-00980-81	CASE,FAN	1		С	R288068~	Includes bearings
12	990-72045-164	SCREW,TAPPING,4.5X16	3		С		
15	360-00980-20	HOLDER,PIPE	1		С	~R288067	
15	360-00980-21	HOLDER,PIPE	1		c	R288068~	
16	091-00980-20	SHIELD,HEAT	1		С		


FIG.6 HANDLE

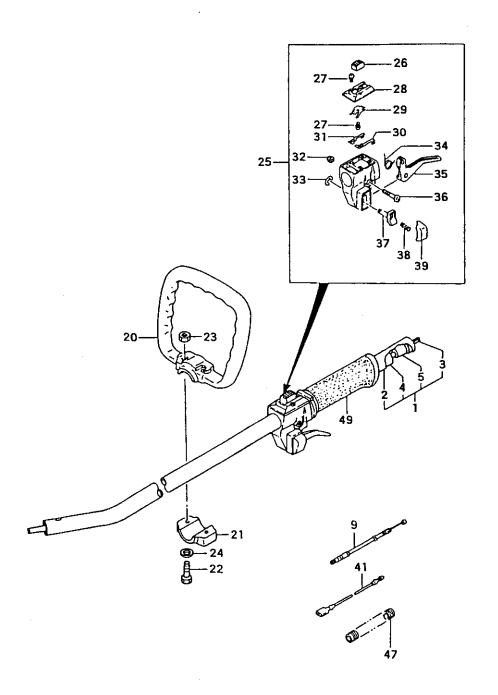


		1FE-250 I					
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	353-37290-90	SET,DRIVE SHAFT PIPE	1		D		
	341-37290-20	PIPE,DRIVE SHAFT	1]	D		
3	344-37290-20	SHAFT,FLEXIBLE	1		D		
4	350-37290-20	LINER,FLEXIBLE	1		D		
5	320-37290-20	SPACER	1		C		
9	885-0631A-802	WIRE,THROTTLE	1		A	~N219620	
		l	1.				
		WIRE,THROTTLE	1		1	N219621~	
1	500-33316-20	HANDLE	1		D		
	Ì	BRACKET,HANDLE A	1		D		
	990-23060-401	BOLT,P,6X40	2		D		
		NUT,6	2		A		
24	992-01060-011	WASHER,6	2		A		
25	870-37300-900	LEVER, THROTTLE ASS'Y	4		A		
		SWITCH,STOP			C		
l l		SCREW, TAPPING, 3X8	3		D		
1	•	BASE,STOP SWITCH	1		c		
		SPRING,STOP SWITCH	1		D		
	177-37101-200	TERMINAL, EARTH B	1		c		
31	176-37101-200	TERMINAL,EARTH A	1		D		
32	991-86050-000	NUT,LOCK,5	1		D		
33	993-55060-001	RING,STOP,6	1		D		
34	832-37101-200	SPRING,RETURN	1		C		
35	880-37101-200	LEVER,THROTTLE	1		В		
36	994-31050-251	SCREW,S.,5X25	1		С		
		SHAFT,LOCK BUTTON	1		D		
		SPRING,LOCK,BUTTON	1		D		
1 1		BUTTON,LOCK	1		D	•	
41	178-37300-801	CORD,STOP 230mm	2			~N219620	
	178-37394-80	CORD,STOP 430mm	2		1 1	N219621~	
47	164-13014-010	TUBE,PROTECTION	1		D	~N219620	
47	164-10019-00	TUBE,PROTECTION	4		ام	N219621~	
	504-37300-200	GRIP,SHAFT			٥	112 1002 17	
.							
				1			

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.7 TOOLS

 

 

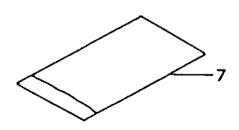


FIGURE 7

TPE-250 PARTS LISTING

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS						
1	813-20000-200	WRENCH,HEX,4	1		D								
2	829-20000-80	SPANNER,COMBI,13X19	1		С								
7	948-39907-200	BAG,TOOL	1		D		į						



CAUTION

TO AVOID POSSIBLE INJURY, GUARD MUST BE IN PLACE DURING OPERATION.
FOR SAFE USE, FOLLOW INSTRUCTIONS IN OWNER'S MANUAL.
EYE PROTECTION SHOULD BE WORN BY USER OF THIS UNIT.





Tanaka. PRO FORCE.—5

DANGER KEEP HANDS AND FEET AWAY

FIGURE 8

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
1	906-37290-20	DECAL	1		D		
2	919-37701-200	DECAL	1		D		
3	950-37503-200	DECAL,PRO-FORCE A	1		D		
4	923-37400-200	DECAL,LEVEL	1		D.		
1 5	951-31310-200	DECAL,PRO-FORCE B	1		D		
6	919-33111-201	DECAL, CAUTION	1		D		
					 		



Date: September 2000

Model & Serial: TPE-250

All Units

Reason: The newer style of guard assembly is now available as an assembly. This

assembly can be used to update the older style edgers, thus improving ease of

height adjustment.

All components depicted below are included. Individual part numbers can be found in the parts catalog for the TPE-2510, TPE-270PF or TPE-270PN. Gear cases are common between all models, so it is not necessary to replace

the gear case when updating an older model to the newer style guard.

Part Number Changes:

Old Part #	New Part #	Description	Remarks	
	441-37294-00	Safety Guard Assembly		

