



HIGH PERFORMANCE STROLLERS

Assembly Instructions



City Elite Double

Amazing 360° Turns

Make For Extreme Maneuverability

This product complies with BS EN 1888:2003 inc. A1,2,3: 2005

This product complies with ASTM F833-07a








*Read these
instructions carefully
before use and
keep them for
future reference.*

*Your child's safety may be
affected if you do not follow
these instructions.*




WARNING: Ensure all locking devices are engaged before use.

For the sake of your precious cargo, please read these warnings before using your stroller.

-  • **WARNING:** DO NOT exceed 3 mph – this stroller is not suitable for running, jogging, skating or roller blading.
-  • **WARNING:** Prevent serious injury to your children by always using the safety harnesses.
-  • **WARNING:** Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
-  • **WARNING:** Never leave your children unattended.
-  • **WARNING:** Recommended weight for seat pocket is 2 lbs and basket is 4.4 lbs. Excessive weight may cause a hazardous unstable condition to exist.
-  • **WARNING:** Stroller is not meant to be used for transporting children up or down stairs. Damage resulting to stroller, will not be covered under warranty.
-  • **WARNING:** Child may slip into leg openings and strangle. Never use in reclined carriage position unless safety harness is properly fastened.
- Accessories which are not approved by the manufacturer or distributor shall not be used.
- The passengers shall remain seated (no standing in the stroller).
- Watch out for cars – never assume that a driver can see you and your children.
- Total weight load recommended for this stroller is 100 lbs / 45.36 kg (combined passengers and baggage weight).
- This stroller seats two passengers.
- It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer.

Frame

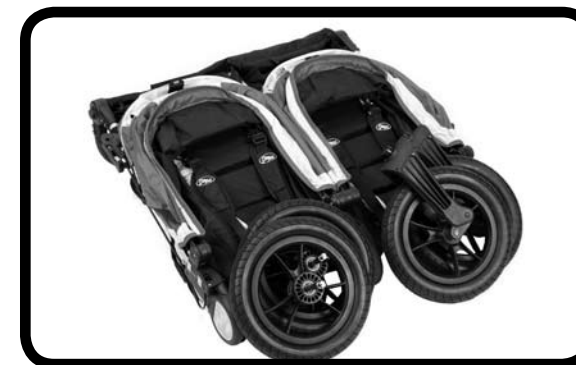

1 Unpack stroller from box and set rear wheels aside. Ensure that storage strap is not fastened around frame before unfolding stroller.



2 Pull front wheel fork up from underneath the handlebar. Then, pull bottom of frame up and away from handlebar.




3 Lay stroller flat so that both ends are resting on the floor. The stroller frame will click and lock into place.



4 Turn stroller over.

To fold: Unsnap safety strap from frame and pull up on fold strap.

Front Wheels

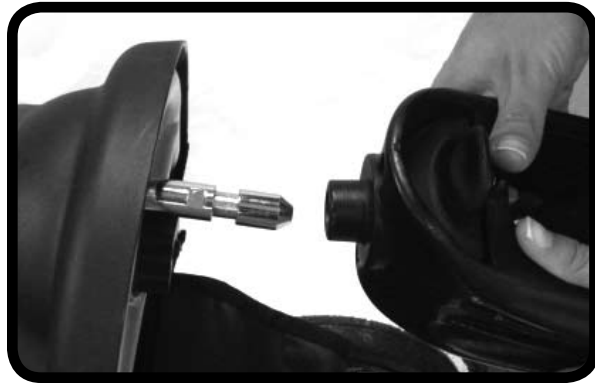

1 To install front wheel, lay stroller back so the handle is resting on floor.



2 Align the round opening on the top of the front fork with the round metal peg underneath the foot plate. Slide the front wheel onto the metal peg until it clicks into place.



Front Wheel Locking Lever
*Turn to the left to lock front wheel.
Turn to the right for swivel action.*



To remove the front wheel, press down on the lever on the top of the front fork and slide the wheel off.

Rear Wheels



1 To install, gently slide the rear wheel's axle into the hole in the frame until the wheel clicks into place.



2 To remove, simply press the wheel button while gently sliding the wheel away from the frame.

Safety Harnesses



1 Unclip top of shoulder strap from the seat and re-clip on the pair of seat loops closest to your child's shoulder height.



2 To adjust the shoulder and crotch strap length: Remove the shoulder pads and slide the plastic guide up or down to lengthen or shorten.



WARNING: Always use the crotch strap in combination with the shoulder straps and waist belt.



3 To buckle the harness: Simply push side buckle into center buckle until it locks into place.

To unbuckle: Push one side of the center button and pull the corresponding side buckle away from the center buckle. Repeat to unbuckle other side.



Brake



WARNING: Engage parking device before loading and unloading passenger.



• To engage parking brake: Gently pull brake lever into upright position until it clicks into place.



• To release parking brake: Pinch gray tabs and pull towards you. Push brake lever down until it is parallel with the frame.

Canopy



1 To attach canopy to frame, simply slide canopy axle into top hole of the bracket on the frame, until you hear it click into place. The bottom hole can be used for accessories (sold separately), and they should be inserted into bracket the same way as the canopy.



To remove canopy: stand facing the stroller and press the bracket buttons with index finger while removing canopy from the bracket.



2 Snap webbing together around top of frame.



3 Secure canopy around frame with velcro tab.



4 Once canopy is in place, attach the console by aligning the velcro strips on the console and canopy.

Seat



WARNING: Always be sure the safety strap is securely snapped onto the frame before using stroller!



1 Secure seat fabric to frame by lining up snap placement on frame and fabric.



2 Secure seat straps around the bottom of the frame, behind the front wheels. Thread one seat strap through the D ring of the other strap, and fasten both Velcro sides firmly together.



3 Secure safety straps to both sides of the frame before use.



4 Be sure that fold strap rings are secured to the frame before use.



To fold stroller: Remove child from seat. Unsnap safety straps from frame and pull upwards on the fold straps with a gentle tug.

Raised Kickers



1 To use the raised kicker, pull up on seat flap above the footplate, and remove the kicker stand from storage pocket. Attach the kicker stand to the seat with the hooks provided under seat flap.



2 Attach kicker stand by wrapping both sides of the webbing under the footplate. Thread one side of the velcro webbing through the D ring of the other side, and secure velcro together.



3 When not using the raised kicker, tuck the kick stand and the webbing straps into the pocket provided under the seat.

Basket



1 Remove child from stroller. *From the front of the stroller:* Remove lower seat fabric to expose bottom front portion of frame. Fasten basket Velcro around frame tubing on right side. Repeat on left side. Re-apply seat fabric to frame once complete.



2 Tilt stroller back so the handle is flat on the floor. Fasten front middle snap of the basket around frame tubing under the footwell. Return stroller to upright position.



3 *From the rear of the stroller:* Fasten the top snaps of the basket around frame tubing above the middle support bar. Fasten the bottom snaps around the frame tubing above the middle support bar. Repeat on other side.



4 Fasten the middle snap of the basket around center frame tubing, above the middle support bar.

Reclining Seats



1 *To recline:* Pinch the clamp behind the seat, and slide it down to desired recline. Pull seat down on both sides to match recline position of clamp.



- *Weather Cover:* If desired, pull weather cover down and over the seat back mesh. Secure firmly over both sides of seat. When not in use, roll weather cover up and fasten with elastic loop and barrel provided under top of the seat fabric.

Reverse steps to return to the upright position.

Quick Fold Technology

Simple Lift & Fold (Patented)



WARNING: Always be sure the safety strap is securely snapped onto the frame before using stroller!

In Motion

Steering

- Steering your stroller is simple: It is balanced to turn with just a light touch on the handlebar without having to lift the front wheel.

In the Dark

- Since we are concerned about the safety of you and your child, we recommend that you not use your stroller at night. However, if you choose to, please attach reflective strips to the wheels and the seat. Bicycle lights can also be mounted on the handle crossbar. These accessories can be found at most bike stores.

Maintenance

- To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. The tires on your stroller are foam filled. Though the P.S.I is printed on the tire, you will never need to inflate them. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.



To fold stroller:

- 1 Remove child from seat. Remove safety straps from frame. Pull upwards on the fold straps with a gentle tug.



NOTE: When contacting Baby Jogger regarding your stroller, please have your stroller's serial number and manufacturing date ready. They can be found on the lower back portion of the frame, above the right wheel.



The sample product shown in this manual may differ slightly from your production quality Elite stroller. However, this will not affect the assembly or functionality of your Baby Jogger stroller.

Stroller Care

Washing

- You can machine wash your stroller's seat in cold water with a mild detergent. To minimize shrinkage, simply reattach the seat to the frame to dry. (Please do not put the seat in the dryer!)
- Be sure to remove the frame from the back of the seat before washing.



Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.

Storing

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks. However, if you do store it outside, using a tarp will help protect against weather wear.

WARRANTY REGISTRATION ON-LINE AT www.babyjogger.com/register

Baby Jogger's Limited Lifetime Warranty:

Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect
- Commercial Use
- Improper storage/care of the unit

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

E-MAIL: customerservice@babyjogger.com

CALL: 1-800-241-1848 between 8am – 6pm EST, Mon. – Fri.

FAX: 1-804-262-6277

MAIL: BABY JOGGER COMPANY
8575 Magellan Parkway
Suite 1000
Richmond, VA 23227

Thank You!

We wish you many happy journeys with your new stroller! Your stroller is a great product, and we are proud to manufacture it. If you have any questions or comments, please give us a call at:

1.800.241.1848



H I G H P E R F O R M A N C E S T R O L L E R S

Baby Jogger is a Division of Dynamic Brands

8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227
T: 800.241.1848 • F: 804.262.6277 • www.babyjogger.com