

morphy richards®



COMFIGRIP iron steam/spray/shot

TIP TECHNOLOGY
PRECISION STEAM SHOT



Please read and keep these instructions

Getting the best from your new iron....

Safety first

Caution must be used when handling this appliance as it does get very hot. Always switch off the unit and allow to cool before cleaning or storing.



To improve the life of your new product and to ensure the cleanliness of your clothes, we strongly recommend the use of distilled or demineralised water.



RN40704 MUK Rev 3

If you have a problem or complaint, please call our dedicated UK based helpline before returning your product to the retailer from where it was purchased.



UK Helpline: 0844 871 0953
Replacement Parts: 0844 873 0719
Ireland Helpline: 1800 409 119



For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

www.morphyrichards.com

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Location

- Do not use outdoors or near water.
- The iron must be used and rested on a stable surface.

Children

- Close supervision is necessary when any appliance is used near children.
- Children do not understand the dangers associated with operating electrical appliances.
- Children should be supervised to ensure that they do not play with the appliance.

Personal safety

- **WARNING:** Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down, there may be hot water in the water tank.

- **WARNING: To protect against the risk of electric shock, do not put the appliance in water or in any other liquid.**

- Do not use the vertical steam feature on clothes that are being worn.
- Do not leave the iron unattended whilst plugged in or on an ironing board.
- Never allow the mains lead to over hang the work surface.
- The socket should always be off before plugging or unplugging from the socket. Never yank the cord to disconnect from the socket, instead, grasp the plug and pull to disconnect.

- Do not allow the cord to touch hot surfaces.
- Let the iron cool completely before putting away. Loop the cord loosely around the iron before storing.

- The iron must not be left unattended while it is connected to the supply mains.
- When placing the iron on its heel, ensure that the surface on which the heel is placed is stable.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Other safety considerations

- Use the iron only for its intended use.
- Always disconnect the iron from the electrical socket when filling with water or emptying, and when not in use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person(s) in order to avoid a hazard.
- Do not operate the iron with a damaged cord, or if the iron has been dropped or damaged and if there are visible signs of damage, or if it is leaking. To avoid the risk of electric shock, do not disassemble the iron, but telephone Morphy Richards for advice. Incorrect reassembly can cause a risk of electric shock when the iron is used.

Special instructions

- If your iron does not work, check the following points:
Has the temperature control been set to the required temperature? Is the plug in its socket? Is the plug itself or the socket faulty? (Check by plugging in another appliance).
- **WARNING: When not in use, your iron should never be placed flat and left on an ironing board.**
- To prevent damage to the textile being ironed, follow the temperature guide carefully. (Test the inside of the hem of the garment).
- When ironing is complete, remove the plug from the socket, empty any remaining water from the tank, and allow to cool before storage.

- If you drop or severely knock your iron, this could cause internal damage even if the outside appears alright. Have it checked by a qualified electrician.
- It is recommended that you use up one beaker of water by operating your iron's steam and shot of steam functions before ironing any clothes as some dripping may occur while your iron's steam system is activated.

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

ELECTRICAL REQUIREMENTS



Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

INSTRUCTIONS FOR USE

Temperature guide

Heat setting markings on the adjustable control dial of all Morphy Richards irons match those of the International Textile Care Labelling Code.

Symbol	(120°C Max) Cool	(160°C Max) Warm	(210°C Max) Hot
Control knob positions	Do not iron at all	● ●	● ● ●
Fabric	Nylon, Acetates e.g. Acrilan Courtelle, Orlon Triacetates, e.g. Tricel/Polyester	Wool, Polyester mixtures e.g. Polyester/Cotton	Cotton, Linen Rayon, Rayon mixtures, e.g. Rayon/Linen
Ironing	Iron on wrong side, if moisture required use damp cloth (Not Acetate)		Fabrics requiring this setting usually require steam pressing for heavy cotton, denim etc.
With water in tank	← Dry and spray →	← Steam/spray/shot of steam →	
Without water in tank	← →	Dry ironing	→

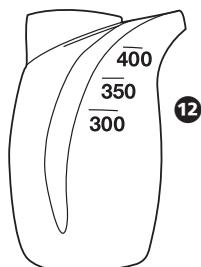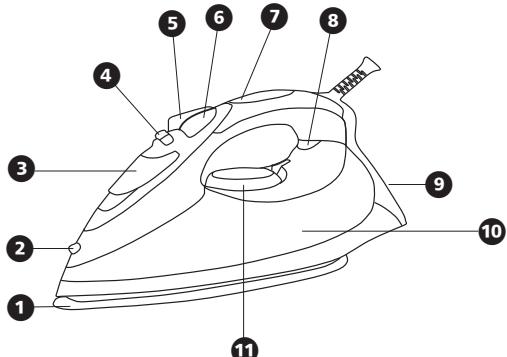

COMPONENTS OF YOUR IRON

- ① Soleplate
- ② Spray nozzle
- ③ Filling hole with cap
- ④ Variable steam switch
- ⑤ Shot of steam button
- ⑥ Spray button
- ⑦ Auto shut-off indicator light (certain models only)
- ⑧ Temperature indicator light (red)
- ⑨ Life long anti-scale (certain models only)
- ⑩ Water tank (illuminated on certain models)
- ⑪ Temperature control dial with indicator
- ⑫ Graduated filling beaker

BEFORE USE

Sort out the items to be ironed according to the type of fabric. This will minimise the frequency of temperature adjustment for different garments.

Note: The steam facility should only be used on garments which are suitable for ironing at the 2 and 3 dot settings.

When ironing with the steam facility at the 2 dot setting, the steam output should be set at the lower end of the steam range (see the 'Variable steam' section on page 5).


Textiles and clothes are supposed to carry ironing instructions. If they don't, you should follow the fabric guide on page 3, but be sure to test the temperature by ironing the hem of the garment or similar area first.

If you turn the control dial ⑪ down from a hot setting to a cooler setting, wait until the iron temperature has stabilised before you continue ironing.

Delicate fabrics such as silk, wool, velour, etc, are best ironed with an ironing cloth to prevent shine marks.

FILLING

- 1 Make sure that the iron is not plugged in, then set the variable steam control ④ to the '0' position before filling the iron with water.
- 2 Lift up the filler cap ③ and pour water through the hole into the water tank ⑩, using the beaker provided ⑫ A.

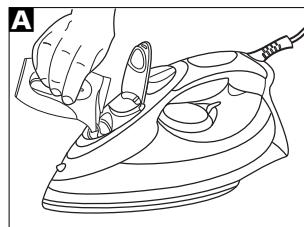

After filling, replace the fill cap.

**IN HARD WATER AREAS,
THE USE OF DISTILLED
OR DEMINERALISED
WATER IS
RECOMMENDED.**

WARNING: Never use battery topping up fluid or water containing any substances like starch, or sugar, or defrosted water from a refrigerator.

- 3 Always pour out the remaining water after use.

WARNING: When filling your iron with tap water, always use the beaker provided. Never fill directly under the tap.

Tank capacity

- Models 40704 / 40709 / 40732 / 40733:
Advise 400ml
- Model 40734:
Advise 350ml

Temperature control **B**

Plug in the iron and switch on. Set the temperature control dial **11** to the required temperature, but don't start ironing immediately.

If you wait a few minutes, the iron will stabilise at the required setting. Your Morphy Richards iron is fitted with a temperature indicator light **8** which will go on and off while you are ironing.

This is perfectly normal as it shows that the iron is maintaining the heat setting you have chosen.

It is always a good idea to begin with cool fabrics and work up to higher settings.

An iron heats up quicker than it cools down, so you'll save time and electricity.

FEATURES OF YOUR IRON

Temperature indicator light

The indicator light **8** shows that the iron is warming up. When the required temperature is reached, the light will go out and will cycle on-off during operation.


Dry ironing

You can use your iron as a dry iron only. Make sure the variable steam control **4** is set to the '0' symbol.

Any temperature setting may be used depending on the garment. The spray feature may be used, providing there is water in the tank (see the 'Filling' section on page 4). You do not need to put any water in the tank when dry ironing only.

Spray **C**

Press the spray button **6** and aim the spray of water at stubborn creases. You can do this whilst dry ironing, providing there is water in the tank. When using the water spray, it may be necessary to push the button a few times to get the spray pump primed.

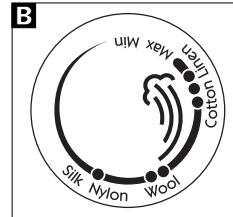


Variable steam **D**

Fill the iron with water (as described in the 'Filling' section on page 4) and insert the plug into the electrical socket.



The steam output can be varied from low to high by moving the variable steam control **D**. When using the iron at 2 dot, the steam output should be adjusted to the low setting.

The steam facility should only be used on garments which are suitable for ironing at 2 and 3 dot setting.

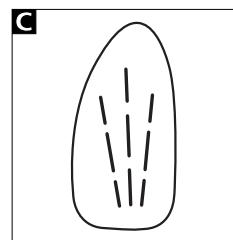


Shot of steam **E**

Press the shot of steam button **5** to obtain a burst of extra steam for ironing out creases in heavy material such as denim etc.





The shot of steam can be used whilst dry ironing, providing there is water in the tank, and the temperature control is set within the steam range.

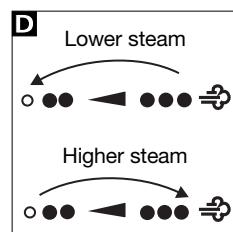

Do not use the shot of steam at temperatures below the steam range shown on the control dial.

Note: For optimum steam quality, do not operate the shot more than three times in succession.

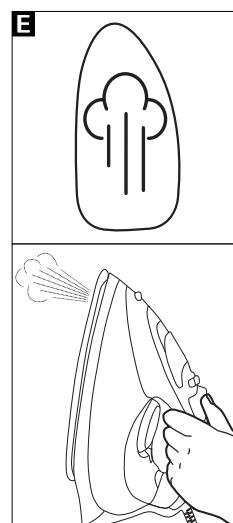


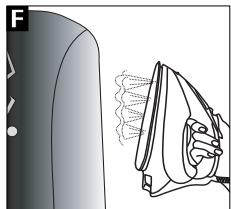

Vertical steam F

Hold the iron in a vertical position between 1cm and 2cm away from the item **F**. Press the shot of steam button **5**, this will create vertical steam. This feature is especially useful for removing creases from hanging clothes, curtains, wall hangings, etc.


Note: For optimum steam quality, do not operate the shot more than three times in succession.

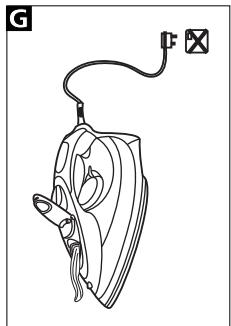

No drip system

Your iron is fitted with a no drip system which is designed to prevent water escaping from the soleplate when the iron is too cold.

During use, the no drip system may emit a loud click, particularly during heat-up or whilst cooling down. This is perfectly normal and indicates that the system is functioning correctly.

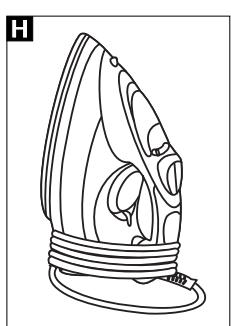

Auto shut-off (certain models only)

If your iron is fitted with the auto shut-off function, it will automatically shut down after a set period.

If the iron is left unattended in the horizontal position, it will shut down after 1 minute.

If it is left in the vertical position, it will shut down after 8 minutes.

The auto shut-off light **7** will flash, indicating the product is in shut-down mode.

To reactivate the iron, gently shake it, the temperature indicator light will come on, indicating the iron is warming up. Wait for the iron to heat-up as normal.

Life long anti-scale system (certain models only)

The life long anti-scale system reduces scale deposits and helps prolong the life of the iron.

Emptying and storing

When you have finished ironing, unplug your iron. Ensure that the variable steam control is set at the '0' position, lift up the fill cap and empty any remaining water out of the filling hole. Do not store in the box, but in an upright position, so that any drops of water remaining cannot leak out and discolour the soleplate **G**.

IMPORTANT: The flex can be damaged if wound too tightly around the iron after use. Make a loose loop with the flex and wrap it around the iron. The iron must be cool before winding the flex and storing on its heel **H**.

MAINTENANCE

To clean a stainless steel soleplate

To keep the soleplate of your iron clean and free of limescale, we recommend that you use one of the gentle chrome, silver or stainless steel cleaners that are generally available. Always follow the manufacturer's instructions. To clean off melted man-made fibres, set the iron at the 3 dot position and pass it over a clean piece of cotton which will draw the deposit off the surface.

To clean a coated soleplate

(certain models only)

In the unlikely event of any man-made fibre fusing to the soleplate, set the iron at the 3 dot position and pass it over a clean piece of cotton which will draw the deposit off the surface.

Do not use scouring powder or solution as this could cause damage to the coating.

To clean the exterior

Allow the iron to cool and wipe over with a damp cloth and mild detergent, then wipe with a dry cloth.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product.
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

UK Helpline 0844 871 0953

Replacement Parts 0844 873 0719

Ireland Helpline 1800 409 119

WEBSITE

You may also contact us through our website, or visit the site to browse and purchase appliances, spare parts and accessories from the extensive Morphy Richards range.

www.morphyrichards.com

For details of other Morphy Richards products, please see our website: **www.morphyrichards.com**

YOUR TWO YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore, it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the manufacturer's instructions. For example, kettles should have been regularly descaled.

4 The appliance has been used for hire purposes or non domestic use.

5 The appliance is second-hand.

6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.
- This guarantee is valid in the UK and Ireland only.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations, or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

morphy richards®

**The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ**

Helpline (office hours)
UK 0844 871 0953
Spare Parts 0844 873 0719
Republic of Ireland 1800 409 119

RN40704 MUK Rev3 02/09

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore, reserves the right to change the specification of its models at any time.

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

www.morphyrichards.com