

BELKIN®

**SuperSpeed USB 3.0
2-Port ExpressCard™**

User Manual

8820-00417 F4U024

TABLE OF CONTENTS

Table of Contents	SECTIONS	1	2	3	4
Introduction		1			
Features		2			
USB Specifications		2			
Package Contents.		2			
System Requirements.		2			
Installation		3			
Windows XP		3			
Windows Vista and Windows 7		4			
Hardware Installation		5			
Verifying Proper Installation (XP)		7			
Verifying Proper Installation (Windows Vista, Windows 7)		7			
Troubleshooting		8			
Information.		10			

INTRODUCTION

Welcome to Belkin SuperSpeed Connectivity!

Thank you for purchasing the Belkin SuperSpeed USB 3.0 2-Port ExpressCard.

Now you can upgrade your laptop to the latest USB technology, for better speed and performance. You will be ready to take advantage of a host of new SuperSpeed USB 3.0 products!

Connecting your USB 3.0 products to your computer with the ExpressCard will allow them to work much faster than ever before. This includes your hard drives, thumb drives, video cameras, and more. Your current or legacy-generation USB devices will continue to work as they always have, and in some cases, even better. Just follow the simple installation instructions in this User Manual to get your ExpressCard set up and working well—then, enjoy the speed and convenience of Belkin USB 3.0 connectivity!

INTRODUCTION

Features

- Single chip NEC μ PD720200F1USB 3.0 host controller
- Supports ExpressCard form-factor design
- 2 SuperSpeed USB 3.0 ports
- Simultaneous connection capability for low-, full-, high-, and SuperSpeed USB devices
- Auto-detection of new devices as they are connected, along with the speed of each device
- Backward-compatibility with legacy USB devices (1.1, 2.0)
- Plug-and-play technology

USB Specifications

- Intel Extensible Host Controller Interface (xHCI) revision 0.96 compliant
- Current: 900mA per port
- USB 3.0 revision 1.0-compliant
- USB-IF Certified

Package Contents

- One - Belkin SuperSpeed USB 3.0 2-Port ExpressCard
- One - Power Adapter
- One - User Manual
- One - Driver Installation CD

System Requirements

- A Pentium® class PC with one available ExpressCard slot and a CD-ROM drive
- Windows® XP (SP3), Windows Vista® (SP1), or Windows 7 operating system

INSTALLATION

Installation is composed of three parts: Install Drivers, Install Hardware, and Initialize Drivers with Hardware.

Driver installation is recommended prior to installing the ExpressCard into your laptop computer. Please refer to the section that corresponds to your operating system.

Windows XP

1. Insert the Driver Installation CD into your CD-ROM drive and the installation wizard should start immediately. If it does not, please open “My Computer” and right-click on your CD-ROM drive and select “Explore”. Then double-click “Setup” to start the installation wizard.
2. Using the default options, complete the install wizard.
3. Once the installation is complete, click the “Start” button in the lower, left-hand corner of your Windows desktop display. Next, click “Shutdown” and then select “Shutdown” from the drop-down menu.
4. Follow the hardware installation steps for the ExpressCard in the next section.

INSTALLATION

Table of Contents

SECTIONS

1

2

3

4

Windows Vista and Windows 7

1. Insert the Driver Installation CD into your CD-ROM drive and the installation wizard should start immediately. If it does not, click the Start icon, click “Computer”, right-click on your CD-ROM drive, and select “Explore”. Then double-click “Setup” to start the installation wizard.
2. Using the default options, complete the install wizard.
3. Once the installation is complete, click the “Start” button in the lower, left-hand corner of your Windows desktop display, and then select “Shutdown”.
4. Follow the hardware installation steps for the ExpressCard in the next section.

INSTALLATION

Table of Contents

SECTIONS

1

2

3

4

Hardware Installation

1. Locate your computer's ExpressCard slot.
2. Insert the ExpressCard into the slot. Apply pressure as needed until the Card is fully seated.
3. The ExpressCard will be detected and hardware will be installed automatically. Installation is now complete.

Note: Depending on the speed of your computer, it may take up to 30–60 seconds for the ExpressCard to be detected.

The installation procedure is now complete.

Verifying Proper Installation (XP)

After installation, you may check the Device Manager to confirm that the ExpressCard has been properly installed.

1. Right-click on “My Computer”.
2. Select “Properties”.
3. Select the “Hardware” tab and click the “Device Manager” button.
4. Expand “Universal Serial Bus Controllers”.
5. Look for an entry called “NEC Electronics USB 3.0 Host Controller”.
6. Look for an entry called “NEC Electronics USB 3.0 Root Hub”.

Verifying Proper Installation (Windows Vista, Windows 7)

After installation, you may check the Device Manager to confirm that the ExpressCard has been properly installed.

1. Click “Start” and right-click “Computer”.
2. Select “Properties”.
3. Click the “Device Manager” link on the left panel.
4. Expand “Universal Serial Bus Controllers”.
5. Look for an entry called “NEC Electronics USB 3.0 Host Controller”.
6. Look for an entry called “NEC Electronics USB 3.0 Root Hub”.

Note: If your computer features built-in USB ports, you will see additional USB controller and root-hub entries in the Device Manager list.

TROUBLESHOOTING

Table of Contents

SECTIONS

1

2

3

4

With which operating systems will the ExpressCard work?

Windows XP (SP3), Windows Vista (SP1), and Windows 7

What are the hardware requirements for the ExpressCard?

Pentium class computer with one available ExpressCard slot

My notebook computer does not detect the ExpressCard.

What should I do?

1. Make sure your computer meets all hardware and software requirements.
2. Make sure the ExpressCard is properly seated into the ExpressCard slot.
3. Make sure the power adapter is plugged into your ExpressCard.
4. Make sure your operating system has the latest updates and service packs.

TROUBLESHOOTING

Table of Contents	SECTIONS	1	2	3	4
-------------------	----------	---	---	---	---

My USB device does not work when connected to the Belkin USB 3.0 ExpressCard. What should I do?

Confirm the correct installation of the Belkin USB 3.0 ExpressCard. Confirm the correct installation of your USB device.

Note: It may be necessary to reinstall the software/drivers for your USB device when switching USB ports.

Which ports are SuperSpeed USB 3.0 ports?

All the ports on the ExpressCard are compatible with Hi-Speed USB 3.0 and legacy USB.

Will my low-, full-, or high-speed (USB 1.1, 2.0) device run at SuperSpeed (USB 3.0) on this ExpressCard?

No. The ExpressCard will not increase the speed of 2.0 or 1.1 devices.

How far away from my computer can a USB 3.0 peripheral be located?

The maximum USB 3.0 cable length is three meters (9 feet). Anything longer will begin to cause problems due to propagation delays and compromised signal integrity.

INFORMATION

FCC Statement DECLARATION OF CONFORMITY WITH FCC RULES FOR ELECTROMAGNETIC COMPATIBILITY

We, Belkin International, Inc., of 501 West Walnut Street, Compton, CA 90220, declare under our sole responsibility that the product:

F4U024

to which this declaration relates:

Complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE Declaration of Conformity

We, Belkin International, Inc., declare under our sole responsibility that the F4U024, to which this declaration relates, is in conformity with Generic Emissions Standard EN55022:1998 Class B, EN50081-1, and with Generic Immunity Standard EN50082-1:1992.

Belkin International, Inc., Limited Lifetime Product Warranty

What this warranty covers.

Belkin International, Inc. ("Belkin") warrants to the original purchaser of this Belkin product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

Belkin warrants the Belkin product for the lifetime of the product.

What will we do to correct problems?

Product Warranty.

Belkin will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). Belkin reserves the right to discontinue any of its products without notice, and disclaims any limited warranty to repair or replace any such discontinued products. In the event that Belkin is unable to repair or replace the product (for example, because it has been discontinued), Belkin will offer either a refund or a credit toward the purchase of another product from Belkin.com in an amount equal to the purchase price of the product as evidenced on the original purchase receipt as discounted by its natural use.

Table of Contents	SECTIONS	1	2	3	4
-------------------	----------	---	---	---	---

What is not covered by this warranty?

All above warranties are null and void if the Belkin product is not provided to Belkin for inspection upon Belkin's request at the sole expense of the purchaser, or if Belkin determines that the Belkin product has been improperly installed, altered in any way, or tampered with. The Belkin Product Warranty does not protect against acts of God such as flood, lightning, earthquake, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to get service.

To get service for your Belkin product you must take the following steps:

1. Contact Belkin Tech Support at the number listed on page 12, within 15 days of the Occurrence. Be prepared to provide the following information:

- a. The part number of the Belkin product.
- b. Where you purchased the product.
- c. When you purchased the product.
- d. Copy of original receipt.

2. Your Belkin Customer Service Representative will then instruct you on how to forward your receipt and Belkin product and how to proceed with your claim.

Belkin reserves the right to review the damaged Belkin product. All costs of shipping the Belkin product to Belkin for inspection shall be borne solely by the purchaser. If Belkin determines, in its sole discretion, that it is impractical to ship the damaged equipment to Belkin, Belkin may designate, in its sole discretion, an equipment repair facility to inspect and estimate the cost to repair such equipment. The cost, if any, of shipping the equipment to and from such repair facility and of such estimate shall be borne solely by the purchaser. Damaged equipment must remain available for inspection until the claim is finalized. Whenever claims are settled, Belkin reserves the right to be subrogated under any existing insurance policies the purchaser may have.

How state law relates to the warranty.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF BELKIN. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR, EXCEPT AS REQUIRED BY LAW, IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL BELKIN BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR MULTIPLE DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY BELKIN PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state. Some states do not allow the exclusion or limitation of incidental, consequential, or other damages, so the above limitations may not apply to you.

Free Tech Support*

*National call rates may apply

www.belkin.com

You can find additional support information on our website www.belkin.com through the tech-support area. If you want to contact technical support by phone, please call the number you need from this list*.

COUNTRY	NUMBER	INTERNET ADDRESS
AUSTRIA	0820 200766	www.belkin.com/de/
BELGIUM	07 07 00 073	www.belkin.com/nl/ www.belkin.com/fr/
CZECH REPUBLIC	239 000 406	www.belkin.com/uk/
DENMARK	701 22 403	www.belkin.com/uk/
FINLAND	0972519123	www.belkin.com/uk/
FRANCE	08 - 25 54 00 26	www.belkin.com/fr/
GERMANY	0180 - 500 57 09	www.belkin.com/de/
GREECE	00800 - 44 14 23 90	www.belkin.com/uk/
HUNGARY	06 - 17 77 49 06	www.belkin.com/uk/
ICELAND	800 8534	www.belkin.com/uk/
IRELAND	0818 55 50 06	www.belkin.com/uk/
ITALY	02 - 69 43 02 51	www.belkin.com/it/
LUXEMBOURG	34 20 80 85 60	www.belkin.com/uk/
NETHERLANDS	0900 - 040 07 90 €0.10 per minute	www.belkin.com/nl/
NORWAY	81 50 0287	www.belkin.com/uk/
POLAND	00800 - 441 17 37	www.belkin.com/uk/
PORTUGAL	707 200 676	www.belkin.com/uk/
RUSSIA	495 580 9541	www.belkin.com/
SOUTH AFRICA	0800 - 99 15 21	www.belkin.com/uk/
SPAIN	902 - 02 43 66	www.belkin.com/es/
SWEDEN	07 - 71 40 04 53	www.belkin.com/uk/
SWITZERLAND	08 - 48 00 02 19	www.belkin.com/de/ www.belkin.com/fr/
UNITED KINGDOM	0845 - 607 77 87	www.belkin.com/uk/
OTHER COUNTRIES	+44 - 1933 35 20 00	

belkin.com

Belkin Ltd.
Express Business Park
Shipton Way, Rushden
NN10 6GL, United Kingdom

Belkin SAS
130 rue de Silly
92100 Boulogne-Billancourt,
France

Belkin GmbH
Hanebergstrasse 2
80637 Munich
Germany

Belkin Iberia
C/ Anabel Segura, 10 planta baja, Of. 2
28108, Alcobendas, Madrid
Spain

Belkin Italy & Greece
Via Carducci, 7
Milano 20123
Italy

Belkin B.V.
Boeing Avenue 333
1119 PH Schiphol-Rijk,
Netherlands

© 2009 Belkin International, Inc. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. ExpressCard is a trademark of PCMCIA.

8820-00417 F4U024