

# Operating Instructions For

# CLIKR™ -5 Cable Remote Control

UR5L-8700L & UR5L-8720L



Universal Remote Control, Inc.  
www.universalsremote.com  
OCE-0060E REV 07 (02/26/10)

## 1 Introduction


The CLIKR™-5 UR5L-8700L & UR5L-8720L are designed to operate the Scientific-Atlanta, Pioneer, Pace Micro, Samsung and Motorola digital set tops, plus the majority of TV, VCR, DVD and AUDIO equipment on the market as shown below.

**CABLE** : Cable Converters **TV** : Televisions  
**VCR** : VCRs and TV/VCRs **DVD** : DVD Players  
**AUX** : Audio Receivers and DVRs, etc.

## 2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1** Remove the battery compartment cover on the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

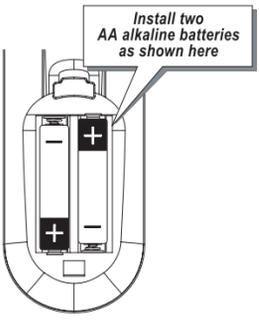


## 3 Operations

**DEFAULT STATE:** Component Default: CABLE Set Top Box (STB)  
**Channel Default:** CABLE channel and numbers through the CABLE STB. You have the option of controlling your CABLE channel and numbers through the TV or VCR. Refer to section I for programming steps.

**Volume Default:** Volume and Mute control are automatically transferred to the respective Component mode you select, as follows: CBL: Cable Set Top Box / TV: TV / AUX: AUX. Volume and Mute control for VCR and DVD are automatically transferred to the TV. However, you have the option of controlling CABLE Volume and Mute through the TV, VCR or AUX. Refer to section J for programming steps.

## 4 Button Functions

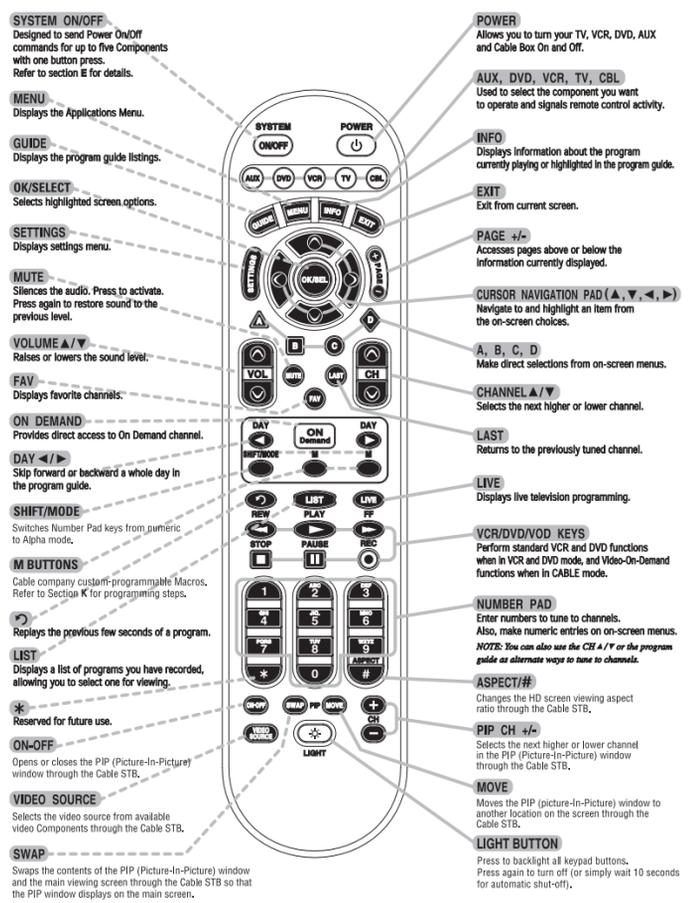

## 5 Programming the Remote Control

There are two ways you can program your CLIKR™-5 remote:

- \* **The Pre-Programmed 3-Digit Code Method**
- \* **The Auto-Search Method**
- \* **The Learning Method**

The Pre-Programmed Code Method allows you to setup all the buttons at once by entering 3-digit code numbers that correspond to a particular Component's manufacturer/brand, so it's the fastest and easiest of the two methods. (Code Tables are on the backside of this Instruction Sheet.) The Auto-Search Method scans through all the codes in the remote control, one at a time. The Learning Method allows you to transfer functions from other remotes, one button at a time.

**IMPORTANT SETUP NOTE!**  
This pertains to all programming steps. When you are in setup mode, a component LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode and you will need to start over.

**A. Pre-Programmed 3-Digit Code Method**  
**STEP1** Turn on the Component you want to program (TV, VCR, DVD or AUX).

- STEP2** Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds indicating the unit is ready to be programmed.
- STEP3** Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

*\*Note: If the 3-digit code number you just entered is correct, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.*

- STEP4** After you've entered the correct code number and the Component has turned Off, press the [POWER] button to turn the Component back On. Now it is time to test the VOLUME and MUTE buttons for the TV (or PLAY and STOP buttons for VCR and DVD) to make sure they all work. If any of the functions do not work as they should, repeat from STEP 3 using the next 3-digit code number listed for that brand until you find the best Component code.
- STEP5** Once you have found the correct 3-digit code, save it by pressing the same [COMPONENT] button one more time. The Component LED light will blink twice to confirm that the code was successfully stored.

**Now, program the rest of your Components by repeating STEPS 1-5.**

*\*Note: If the Pre-Programmed Method did not work, or if the Code Tables do not list your Component brand, use the Auto-Search Method as explained in Section B.*

## B. Auto-Search Method

- STEP1** Turn on the Component you want to program (TV, VCR, DVD or AUX).
- STEP2** Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds indicating the unit is ready to be programmed.
- STEP3** Point the remote toward the Component and press the [CH ▲] or [CH ▼] button one step at a time or keep it pressed. The remote will emit a series of ON/OFF commands. Release the [CH ▲] or [CH ▼] button as soon as the Component turns Off.
- STEP4** Test functions. (Same as for 3-Digit Code Programming Method - Section A). If any of the functions do not work as they should, repeat from STEP 3 using [CH ▲] or [CH ▼] buttons to find the correct code.
- STEP5** Save the code. (Same as for 3-Digit Code Programming Method - Section A).

**Now, repeat the Auto-Search Method for those Components you could not program earlier with the Pre-Programmed Method. If you can't find the right code using the Auto-Search Method, try the Learning Method in Section C.**

## C. The Learning Method

- STEP1** Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and the [ASPECT] buttons simultaneously for 3 seconds until the Component LED light turns on.
- STEP2** Line up the CLIKR™-5 to the other remote, head-to-head, 1 or 2 inches apart.
- STEP3** Press any button on the CLIKR™-5 that you want to teach a command to. For example, if you want to teach the [MUTE] button, press the [MUTE] button.
- STEP4** Press and hold the [MUTE] button on the other remote until the CLIKR™-5 Component LED light blinks twice.

*\*Note: The LED will blink 5 times if there was an error in the learning process. In so, repeat STEPS 3 and 4. Continue learning other buttons by repeating STEPS 3 and 4.*

- STEP5** Once you have completed teaching CLIKR™-5 all desired commands for that Component, save the learned commands by pressing the [COMPONENT] and [ASPECT] buttons simultaneously until the Component LED blinks 3 times. Now test all the buttons to make sure they learned correctly.

## D. Erasing a Single Learned Command

- STEP1** Press the [COMPONENT] and [ASPECT] buttons simultaneously for 3 seconds until the Component LED light turns on.
- STEP2** Press and hold the button you want to erase for 3 seconds. The Component LED will blink twice to confirm the erasure.
- STEP3** To exit, press and hold both the [COMPONENT] and [ASPECT] buttons simultaneously until the Component LED blinks 3 times.

## E. Erasing All Learned Commands from One Component

- STEP1** Press the [COMPONENT] and [ASPECT] buttons simultaneously for 3 seconds until the Component LED light turns on.
- STEP2** Press and hold both the [COMPONENT] button you want to erase and the [PAUSE] button for 5 seconds. The Component LED will blink twice to confirm the erasure.

- STEP3** To exit, press and hold both the [COMPONENT] and [ASPECT] buttons simultaneously until the Component LED blinks 3 times.

## F. Finding a Component Button's Setup Code Number

If you used either the Auto-Search or Learning Methods to program a Component, you may not know what the correct code number is. Here is a way for you to identify the code number, so you can record it for future reference.

- STEP1** Press the [COMPONENT] button (TV, VCR, DVD or AUX) you want to verify and the [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds.
- STEP2** Press the [INFO] button and count the number of times the Component LED light blinks. This number indicates the first digit of the code, followed by the second and third, each separated by a one second pause when the LED will turn off.

*\*Note: 10 blinks represents the number zero.  
Example: One blink, (pause), eight blinks, (pause) and three blinks, indicates code number 183.*

## G. AUX Function: Programming a 5<sup>th</sup> Component

You can take advantage of the AUX function to program a 5<sup>th</sup> Component such as a second TV, VCR, DVD or Audio Component.

- STEP1** Turn on the 5<sup>th</sup> Component you want to program (TV, VCR, DVD or Audio).
- STEP2** Press the [AUX] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUX] Component LED will turn on for 30 seconds.
- STEP3** Press the [COMPONENT] button you want to setup. Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

*\*Note: If the 3-digit code number you just entered is the correct number, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.*

- STEP4** Test functions. (Same as for 3-Digit Code Programming Method - Section A). If any of the functions do not work as they should, you need to find a new code.
- STEP5** Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The Component LED light will blink twice to confirm the code was stored. Now when you press the AUX button, all the buttons will work with that 5<sup>th</sup> Component.

## H. Programming the System On/Off Button

This allows you to program the System On/Off button so it can send up to five power On/Off commands with one button press.

- STEP1** Press the [CBL] button.
- STEP2** Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.
- STEP3** Press the first [COMPONENT] button you want to store in the [SYSTEM ON/OFF] button and then the [POWER] button. Repeat this for other Components until you have stored all the desired power commands into the [SYSTEM ON/OFF] button.
- STEP4** Press the [CH ▲] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

## I. Programming Channel Control

You can program the channel controls (Channel Up, Channel Down, Last and Numbers) from one Component to operate in another Component mode. Default channel control settings on the remote control are as follows:

**CBL** : CBL **TV** : CBL **VCR** : CBL  
**DVD** : DVD **AUX** : AUX

If you wish to store the TV channel control in TV mode, use the following steps.

- STEP1** Press the [TV] button and the [OK/SEL] button simultaneously for 3 seconds. The [TV] Component LED will turn on for 30 seconds.
- STEP2** Press the [VOL ▼] button.
- STEP3** Press the [TV] button again. The Component LED will blink twice to confirm the programming.

**To return to original state:**

If you wish to restore the CABLE channel control in TV mode, repeat the above steps but press [CBL] in **STEP3**.

## J. Programming Volume Control

Volume and Mute control are factory-programmed to automatically transfer to the respective Component mode you select, as follows:

**CBL** : CBL **TV** : TV **VCR** : TV  
**DVD** : TV **AUX** : AUX

However, you can program the volume controls (Volume Up, Volume Down and Mute) from one Component to operate in another Component.

If you wish to store the TV volume control in CBL mode, use the following steps.

- STEP1** Press the [CBL] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] Component LED will turn on for 30 seconds.
- STEP2** Press the [VOL ▲] button.
- STEP3** Press the [TV] button. The Component LED will blink twice to confirm the programming.

**To return to original state:**

If you wish to restore the CBL volume control in CBL mode, repeat the above steps but press [CBL] in **STEP3**.

## K. Programming a 'Macro' button.

If your remote model has custom-programmable Macro buttons available, they can be programmed to act as a 'Macro' or Favorite Channel button in CABLE mode. This allows you to program up to five 2-digit channels, four 3-digit channels or three 4-digit channels that can be accessed with one button press.

- STEP1** Press the [CBL] button to select the CBL mode.
- STEP2** Press the [MACRO] button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.
- STEP3** Enter the 2, 3 or 4-digit code for the channel you want programmed first (for example, 007) using the Number Pad, then press the [STOP] button. Then enter the code for the next channel (for example, 050), then press the [STOP] button. Repeat this process for the third channel. The [CBL] button will blink once for each channel entered.
- STEP4** Press the [CH ▲] button to store the channels that were selected. The [CBL] button will blink twice to confirm the storage of commands.

**To access the programmed channels, press the [MACRO] button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.**

## L. Low Battery Warning

When the batteries are low and need to be replaced with fresh batteries, the Component LED lights will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

## M. Memory Lock System

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

## N. Record Your Component Set-up Codes

TV Set-up Code Number:   
VCR Set-up Code Number:   
DVD Set-up Code Number:   
AUX Set-up Code Number:

For additional information about your remote control, go to [www.universalsremote.com](http://www.universalsremote.com)

## 6 Set-up Code Tables

| CBL-CABLE Converters |                                     |
|----------------------|-------------------------------------|
| Manufacturer/Brand   | Set-Up Code Number                  |
| SCIENTIFIC ATLANTA   | 001 003 041 042 045 046             |
| PIONEER              | 001 103 034 051 063 076 105         |
| PACE                 | 001 005 002                         |
| SAMSUNG              | 001 030                             |
| MOTOROLA             | 002 111 148                         |
| DIGEO                | 153                                 |
| GENERAL INSTRUMENT   | 005 103 104                         |
| HAMLIN               | 049 050 055                         |
| HITACHI              | 103 055                             |
| JERROLD              | 005 004 103 005 003 008 009 010 069 |
| MAGNAVOX             | 010 012                             |
| MEMOREX              | 052                                 |
| MOXI                 | 111 252 153                         |
| NEFUSION             | 192                                 |
| PANASONIC            | 044 047                             |
| PHILIPS              | 006 012 013 020 085                 |
| PULSAR               | 052                                 |
| RCA                  | 047                                 |
| REGAL                | 049 050                             |
| REGENCY              | 057                                 |
| SKY                  | 230 204                             |
| SONY                 | 108                                 |
| SPRUCER              | 047                                 |
| TELENET              | 354                                 |
| TOCOM                | 039 040 056                         |
| TOSHIBA              | 052                                 |
| VIEWSTAR             | 012 015                             |
| ZENITH               | 052 060 093 100                     |

| TV                 |   |
|--------------------|---|
| Manufacturer/Brand | Set-Up Code Number                      |
| A MARK             | 112 143                                 |
| ABEX               | 025                                     |
| ACCURIAN           | 036                                     |
| ADMIRAL            | 072 251 333                             |
| ADVENT             | 247 388                                 |
| ADVENTURA          | 002                                     |
| AIKO               | 103                                     |
| AKAI               | 116 146 248 404 405 473 475 323 387 391 |
| ALBATRON           | 017                                     |
| ALERON             | 028                                     |
| AMERICA ACTION     | 043                                     |
| AMPRO              | 073                                     |
| AMSTRAD            | 052                                     |
| ANAM               | 043 054 056 080 112                     |
| AOC                | 116 363 112 058                         |
| APEX               | 572                                     |
| APEX DIGITAL       | 006                                     |
| AQUAVISION         | 573 574                                 |
| ASTAR              | 477                                     |
| AUDIOVOX           | 076 454 388                             |
| AVENTURA           | 052                                     |
| AVION              | 441                                     |
| AXION              | 039                                     |
| BELCOR             | 116                                     |
| BELL&HOWELL        | 333 072                                 |
| BENQ               | 423 600                                 |
| BOXLIGHT           | 266                                     |
| BRADFORD           | 043                                     |
| BROCKWOOD          | 116                                     |
| BROKSONIC          | 238                                     |
| BYDESIGN           | 031 032                                 |
| CANDLE             | 116 002 003 363                         |
| CAPEHART           | 058                                     |
| CARY AUDIO DESIGN  | 266                                     |
| CELEBRITY          | 001                                     |

| TV                 |   |
|--------------------|---|
| Manufacturer/Brand | Set-Up Code Number  |
| CENTURION          | 116   |
| CETRONIC           | 043   |
| CHANGHONG          | 247   |
| CITIZEN            | 116 002 003 363 043 258 103 143                                     |
| CLARION            | 043   |
| CLASSIC            | 043   |
| CLP CLASSIC        | 333   |
| COLORTIME          | 116   |
| CONCERTO           | 363   |
| CONICERGE          | 073   |
| CONTEC             | 043 050 051   |
| CORNEA             | 116   |
| CORONADO           | 143   |
| CRAIG              | 043 054   |
| CROSLLEY           | 164   |
| CROWN              | 043 143   |
| CURTIS MATHES      | 116 258 363 143   |
| CXC                | 043   |
| CYBERHOME          | 015   |
| DAEWOO             | 363 016 043 044 076 103 114 125 127 143                             |
| DAYTRON            | 363 143   |
| DELL               | 320 164 363   |
| DIGITAL PROJECTION | 570   |
| DIMENSIA           | 333   |
| DREAMVISION        | 235   |
| DUKANE             | 011 025   |
| DUMONT             | 116 073   |
| DURABRAND          | 096 052   |
| DWIN               | 257   |
| DYNASTY            | 043   |
| DYNEX              | 400   |
| EIKI               | 187   |
| ELECTROBRAND       | 001   |
| ELECTROGRAPH       | 466   |
| ELECTROHOME        | 143 024 076 196   |
| ELEKTRA            | 072   |
| ELEMENT            | 363 494 526   |
| EMERSON            | 028 048 043 155 005 116 363 047 050 051 076 096 143 153 154 052 514 |
| ENVISION           | 116   |
| EPSON              | 324 590   |
| ESA                | 323   |
| FISHER             | 007 057   |
| FUJITSU            | 246 198 410   |
| FUNAI              | 028 043 052   |
| FUTURETECH         | 043   |
| GATEWAY            | 242 268   |
| GE                 | 073 116 008 009 034 056 074 155 333 363                             |
| GEM                | 391   |
| GIBRALTER          | 116 073   |
| GO VIDEO           | 026   |
| GOLDSTAR           | 113 116 102 363 106 112 127 143                                     |
| GRUNPY             | 028 043   |
| HAIER              | 363 501   |
| HALL MARK          | 363   |
| HAINNSPREE         | 349 381   |
| HARLEY DAVIDSON    | 028   |
| HARVARD            | 043   |
| HAVERMY            | 081   |
| HELLO KITTY        | 076   |
| HIMITSU            | 043   |
| HISENSE            | 419 442   |
| HITACHI            | 011 166 009 010 012 023 075 143 158 072 363 250 587                 |
| HP                 | 378 316 327 421   |
| HUMAX              | 518   |
| HUNDAL             | 337 338   |
| ILO                | 472 399   |
| INFINITY           | 164   |
| INFOCUS            | 333 230 547 548 470 532 564 595                                     |

| TV                 |   |
|--------------------|---|
| Manufacturer/Brand | Set-Up Code Number  |
| INITIAL            | 035 282   |
| INSIGNIA           | 350 400 052 164 403 454 457                                 |
| INTEQ              | 073   |
| JANEL              | 002   |
| JBL                | 164   |
| JCB                | 001   |
| JCPENNEY           | 024 116 008 009 030 065 258 143 333 363                     |
| JENSEN             | 013   |
| JVC                | 038 034 001 083 199 210 533 581                             |
| KAWASHO            | 116 001   |
| KEC                | 043   |
| KENWOOD            | 116 001   |
| KLEGG              | 466   |
| KLOSS              | 002 059   |
| KMC                | 143   |
| KNOLL SYSTEMS      | 230   |
| KONKA              | 457   |
| KREISEN            | 530   |
| KTV                | 043 116 143 154   |
| KURAZAI            | 072   |
| LG                 | 363 113 116 102 106 112 127 143 569 284                     |
| LITEON             | 268   |
| LODGENET           | 072   |
| LOEWE              | 164   |
| LOGIK              | 072   |
| LUXMAN             | 363   |
| LXI                | 166 007 138 052 251 333 164                                 |
| MAGNAVOX           | 164 059 116 003 060 061 363 127 022 333 094 226 390 467 431 |
| MAJESTIC           | 333   |

**TV**

| Manufacturer/Brand | Set-Up Code Number                                  |
|--------------------|---|
| PIONEER            | 234 135 025 018 023 116 393 272 520 582             |
| POLAROID           | 388 323 328 353 354 355 356 494 387 391 505 506 508 |
| PORTLAND           | 363 143   |
| PRINCETON          | 004   |
| PRISM              | 034   |
| PROSCAN            | 333   |
| PROTON             | 363 112 058 143 171 172 033 528                     |
| PROTRON            | 392 398 498 499 500                                 |
| PROVIEW            | 494   |
| PROX               | 572   |
| PULSAR             | 116 073   |
| QUASAR             | 034 056   |
| RADIO SHACK        | 019 363 143 043 127                                 |
| RCA                | 333 065 116 363 024 056 152 023 074 161 588         |
| REALISTIC          | 007 019 043 047                                     |
| REVOLUTION HD      | 466   |
| RUNCO              | 182 073 395 416 072 342                             |
| SAMPO              | 116 058 363 242                                     |
| SAMSUNG            | 258 050 089 105 363 127 143 333 228 229             |
| SAMSUX             | 116   |
| SAISEI             | 076   |
| SANSUI             | 096 400   |
| SANYO              | 166 007 020 053 057 082 187 511 266                 |
| SCPTRE             | 276   |
| SCOTCH             | 116   |
| SCOTT              | 028 043 048 143 363 497                             |
| SEARS              | 030 363 007 028 057 143 094 333 082 166 138         |
| SELECO             | 205 011   |
| SHARP              | 251 019 014 028 029 363 022 143 175 308             |
| SHENG CHIA         | 081   |
| SHERWOOD           | 349   |
| SHOGUN             | 116   |
| SIGNATURE          | 072   |
| SIMPSON            | 003   |
| SONY               | 001   |
| SOUNDDESIGN        | 028 363 003 043                                     |
| SOVA               | 041   |
| SOYO               | 528 033   |
| SPECTRICON         | 112   |
| SPECTRONIQ         | 499 500   |
| SQUAREVIEW         | 052   |
| SSS                | 363 043   |
| STARLITE           | 043   |
| SUPERSCAN          | 052 081   |
| SUPRA              | 116   |
| SUPRE MACY         | 002   |
| SUPREME            | 001   |
| SVA                | 328   |
| SYLVANIA           | 116 003 052 059 060 164 044 333 127 514 593         |
| SYMPHONIC          | 052   |
| SYNTAX OLEVIA      | 432 363 333   |
| TANDY              | 251   |
| TATUNG             | 056   |
| TECHNICS           | 034 080   |
| TECHNOL ACE        | 028   |
| TECHVIEW           | 045 557   |
| TECHWOOD           | 363   |
| TELEFUNKEN         | 037 046   |
| TELERENT           | 072   |
| TERA               | 172   |
| THOMSON            | 049 055   |
| TMK                | 363   |
| TNCI               | 073   |
| TOSHIBA            | 138 030 007 040 258 325 230                         |
| TOTEVISION         | 143   |

**TV**

| Manufacturer/Brand | Set-Up Code Number                              |
|--------------------|---|
| TRUTECH            | 529   |
| TVS                | 096   |
| UNIVERSAL          | 008 009   |
| VECTOR             | 038   |
| VIDEO CONCEPTS     | 146   |
| VIDIKRON           | 174 164 188 192 342                             |
| VIDTECH            | 363   |
| VIEWSONIC          | 242 389   |
| VIKING             | 002   |
| VIORE              | 472 592   |
| VISCO              | 526   |
| VITO               | 363   |
| VIZIO              | 386 387   |
| WARDS              | 363 008 009 019 028 060 061 072 074 143 164 034 |
| WAYCON             | 015   |
| WESTINGHOUSE       | 076 276 435 001                                 |
| WINBOOK            | 339   |
| YAMAHA             | 116 363 370                                     |
| YORK               | 363   |
| YUPTERU            | 043   |
| ZENITH             | 363 073 072 095 103                             |
| ZONDA              | 112   |

**TV-LCD & Plasma TVs**

| Manufacturer/Brand | Set-Up Code Number          |
|--------------------|-----------------------------|
| ACCURIAN           | 036                         |
| ADVENT             | 247 388                     |
| AKAI               | 404 405 473 475 323 387 391 |
| AOC                | 116 363                     |
| APEX               | 572                         |
| APEX DIGITAL       | 006                         |
| AQUAVISION         | 573 574                     |
| ASTAR              | 477                         |
| AUDIOVOX           | 454 388 076                 |
| AVION              | 441                         |
| AXION              | 039                         |
| BENQ               | 600                         |
| CHANGHONG          | 247                         |
| CYBERHOME          | 015                         |
| DAEWOO             | 076 363                     |
| DELL               | 320 164 363                 |
| DURABRAND          | 052                         |
| DWIN               | 257                         |
| DYNEX              | 400                         |
| ELECTROGRAPH       | 466                         |
| ELEMENT            | 363 494 526                 |
| EMERSON            | 514 363 076 052             |
| ESA                | 323                         |
| FUJITSU            | 246 198                     |
| FUNAI              | 052                         |
| GATEWAY            | 242 268                     |
| GO VIDEO           | 026                         |
| HAIER              | 363 501                     |
| HANNSPREE          | 349 381                     |
| HISENSE            | 419 442                     |
| HITACHI            | 011 363                     |
| HP                 | 378 316 327 421             |
| HUMAX              | 518                         |
| HYUNDAI            | 337 338                     |
| ILO                | 472                         |
| INFOCUS            | 547 470                     |
| INITIAL            | 035 282                     |
| INSIGNIA           | 350 400 052 164 403 454 457 |
| JVC                | 038 210 581                 |
| KLEGG              | 466                         |
| KONKA              | 457                         |
| KREISEN            | 530                         |
| LG                 | 363 569 113 116 284         |

**TV-LCD & Plasma TVs**

| Manufacturer/Brand | Set-Up Code Number                      |
|--------------------|---|
| LITEON             | 268                                     |
| LOWE               | 164                                     |
| MAGNAVOX           | 164 363 226 390 467 431                 |
| MARANTZ            | 116 164 281                             |
| MAXENT             | 242                                     |
| MINTEK             | 362                                     |
| MITSUBISHI         | 124 363                                 |
| NEC                | 272 262 575                             |
| NIKO               | 527                                     |
| NORCENT            | 390                                     |
| NORWOOD MICRO      | 027                                     |
| NUVISION           | 351 567                                 |
| OLEVIA             | 432 363 333                             |
| PANASONIC          | 080 164 208 552 524                     |
| PHILIPS            | 164 363 431 161 594                     |
| PIONEER            | 234 135 393 272 520 582                 |
| POLAROID           | 388 323 328 353 356 494 387 391 505 506 |
| PRINCETON          | 004                                     |
| PROTON             | 033 528                                 |
| PROTRON            | 392 398 498 499 500                     |
| PROVIEW            | 494                                     |
| PROX               | 572                                     |
| RCA                | 333 363 161 588                         |
| REVOLUTION HD      | 466                                     |
| RUNCO              | 395 416                                 |
| SAMPO              | 363 242                                 |
| SAMSUNG            | 258 228 229                             |
| SANSUI             | 096 400                                 |
| SANYO              | 166 007                                 |
| SELECO             | 276                                     |
| SHARP              | 251 363                                 |
| SHERWOOD           | 349                                     |
| SONY               | 001                                     |
| SOVA               | 041                                     |
| SOYO               | 528 033                                 |
| SPECTRONIQ         | 499 500                                 |
| SVA                | 328                                     |
| SYLVANIA           | 052 164 333 514                         |
| SYMPHONIC          | 052                                     |
| SYNTAX OLEVIA      | 432 363 333                             |
| TATUNG             | 056                                     |
| TECHVIEW           | 045 557                                 |
| TOSHIBA            | 138 258 325                             |
| TRUTECH            | 529                                     |
| VIEWSONIC          | 242 389                                 |
| VIORE              | 472 592                                 |
| VISCO              | 526                                     |
| VITO               | 363                                     |
| VIZIO              | 386 387                                 |
| WESTINGHOUSE       | 076 276 435 001                         |
| WINBOOK            | 339                                     |
| YAMAHA             | 116 363                                 |
| ZENITH             | 363 073 072                             |

**TV-Projection TVs**

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|--------------------|
| AKAI               | 404 405 473 475    |
| DAEWOO             | 076                |
| EPSON              | 324                |
| HITACHI            | 011                |
| HP                 | 378                |
| INFOCUS            | 333 548            |
| JVC                | 038                |
| LG                 | 363                |
| LOEWE              | 164                |
| MAGNAVOX           | 164 333            |
| MITSUBISHI         | 109                |
| OPTOMA             | 265                |
| PANASONIC          | 080 524            |

**TV-Projection TVs**

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|--------------------|
| PHILIPS            | 164 431            |
| RCA                | 164                |
| SAMSUNG            | 258                |
| SANYO              | 166 007 187        |
| SHARP              | 251                |
| SONY               | 001                |
| TOSHIBA            | 138                |
| ZENITH             | 363 073 072        |

**TV-Projectors**

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|--------------------|
| BENQ               | 423                |
| BOXLIGHT           | 266                |
| DIGITAL PROJECTION | 570                |
| DREAMVISION        | 235                |
| EPSON              | 590                |
| FUJITSU            | 410                |
| HITACHI            | 250                |
| INFOCUS            | 230 532 564 595    |
| JVC                | 199 533            |
| KNOLL SYSTEMS      | 572                |
| MARANTZ            | 281 562 584        |
| MITSUBISHI         | 348                |
| NEC                | 236 281            |
| OPTOMA             | 249                |
| PANASONIC          | 359                |
| RUNCO              | 342 182            |
| SANYO              | 511 266            |
| SELECO             | 205                |
| SHARP              | 308                |
| SIM2               | 205                |
| TOSHIBA            | 230                |
| VIDIKRON           | 342 174 188 192    |
| YAMAHA             | 370                |

**VCR**

| Manufacturer/Brand | Set-Up Code Number  |
|--------------------|---|
| ADMIRAL            | 025 053   |
| ADVENTURA          | 034   |
| AIKO               | 117   |
| AIWA               | 034 161   |
| AKAI               | 016 146 043 124 125   |
| AMERICA ACTION     | 117   |
| AMERICAN HIGH      | 145   |
| AMPRO              | 072   |
| ANAM               | 145   |
| ASHA               | 102   |
| AUDIO DYNAMICS     | 012 039 043   |
| AUDIOVOX           | 101   |
| BEAUMARK           | 102   |
| PHILIPS            | 067 034 101 071 145   |
| PILOT              | 101   |
| PIONEER            | 021 013 048   |
| PORTLAND           | 108   |
| PROFFTRONIC        | 102   |
| PROTEC             | 024   |
| PULSAR             | 072   |
| COLT               | 024   |
| CRAIG              | 003 022 102   |
| CURTIS MATHES      | 145   |
| CYBERNEX           | 102   |
| DAEWOO             | 111 116 117 005 010 108 110 120                             |
| DAYTRON            | 108   |
| DBX                | 012 039 043   |
| DYNATECH           | 034 053   |
| ELECTROPHONE       | 059   |
| ELECTROPHONIC      | 101   |
| EMERSON            | 006 029 035 017 025 034 036 037 101 129 131 153 162 116 145 |
| FISHER             | 003 010 008 009   |

**VCR**

| Manufacturer/Brand | Set-Up Code Number                  |
|--------------------|-------------------------------------|
| FUJI               | 145                                 |
| FUNAI              | 034                                 |
| GARRARD            | 034                                 |
| GE                 | 072 144 147 145                     |
| GO VIDEO           | 132 136 155 115 102                 |
| GOLDSTAR           | 101 114 013 012 123                 |
| BROKSONIC          | 034                                 |
| HARLEY DAVIDSON    | 034                                 |
| HARMAN KARDON      | 012                                 |
| HARWOOD            | 024                                 |
| HITACHI            | 026 150 034 043 160 013             |
| HQ                 | 034                                 |
| INSTANTREPLAY      | 145                                 |
| JCL                | 145                                 |
| JCPENNEY           | 012 013 015 101 102                 |
| JENSEN             | 043                                 |
| JVC                | 048 043 130 150 012 145             |
| KEC                | 101                                 |
| KENWOOD            | 048 034                             |
| KLH                | 024                                 |
| KODAK              | 101 145                             |
| LG                 | 101 114 013 012 123                 |
| LLOYD              | 034                                 |
| LOGIK              | 024                                 |
| LXI                | 034 003 009 017                     |
| MAGIN              | 102                                 |
| MAGNAVOX           | 067 034 164 145                     |
| MARANTZ            | 067 012 145                         |
| MARTA              | 101                                 |
| MATSUSHITA         | 145                                 |
| MEI                | 145                                 |
| MEMOREX            | 101 003 010 034 053 072 102 139 145 |
| MGA                | 059                                 |
| MGN TECHNOLOGY     | 102                                 |
| MINOLTA            | 013                                 |
| MITSUBISHI         | 059 061 151 013 051                 |
| MOTOROLA           | 053 145                             |
| ITC                | 034 102                             |
| MULTITECH          | 024 034                             |
| NEC                | 012 039 043 048                     |
| NIKKO              | 101                                 |
| NOBLEX             | 102                                 |
| NORDMENDE          | 043                                 |
| OLYMPUS            | 145                                 |
| OPTIMUS            | 101                                 |
| OPTONICA           | 053                                 |
| ORION              | 025                                 |
| PANASONIC          | 070 145 163 167                     |
| PENTAX             | 013 145                             |
| PHILCO             | 034 067 145                         |
| PHILIPS            | 067 034 101 071 145                 |
| PILLOT             | 101                                 |
| PIONEER            | 021 013 048                         |
| PORTLAND           | 108                                 |
| PROFFTRONIC        | 102                                 |
| PROTEC             | 024                                 |
| PULSAR             | 072                                 |
| QUARTZ             | 002                                 |
| QUASAR             | 145                                 |
| RADIO SHACK        | 123                                 |
| RADIX              | 101                                 |
| RANDEX             | 101                                 |
| RCA                | 144 147 145 013 034 102             |
| REALISTIC          | 003 008 010 034 053 101 145 102     |
| RICO               | 058                                 |
| RUNCO              | 148                                 |
| SAMSUNG            | 102 113 115 120 144 147 125         |
| SANKY              | 053                                 |
| SANSUI             | 022 043 048                         |
| SANYO              | 003 010 102                         |

**VCR**

| Manufacturer/Brand | Set-Up Code Number                  |
|--------------------|-------------------------------------|
| SCOTT              | 017 037 120 129 131                 |
| SEARS              | 003 008 010 013 101 009 017 073 112 |
| SHARP              | 053 165 145                         |
| SHINTOM            | 024                                 |
| SHOGUN             | 102                                 |
| SIGNATURE          | 034                                 |
| SINGER             | 024                                 |
| SONY               | 001 057 058 003 053 154 145         |
| SOUNDDESIGN        | 034                                 |
| STS                | 013                                 |
| SYLVANIA           | 034 059 067 145                     |
| SYMPHONIC          | 034                                 |
| TANDY              | 010 034                             |
| TATUNG             | 039 043                             |
| TEAC               | 034 039 043                         |
| TECHNICS           | 070 145                             |
| TEKNIKA            | 019 034 101 145                     |
| THOMAS             | 034                                 |
| TMK                | 006                                 |
| TOSHIBA            | 131 008 059 013 120                 |
| TOTEVISION         | 101 102                             |
| UNITECH            | 102                                 |
| VECTOR RESEARCH    | 012                                 |
| VICTOR             | 048                                 |
| VIDEO CONCEPTS     | 012 034                             |
| VIDEOSONIC         | 102                                 |
| VILLAIN            | 034                                 |
| WARDS              | 003 013 017 024 034 053 131 145 102 |
| WESTINGHOUSE       | 024 025                             |
| XR-1000            | 024 034 145                         |
| YAMAHA             | 012 034 039 043                     |
| ZENITH             | 072 080 056 048 101 034 058         |

**VCR-TV/VCR Combos**

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|--------------------|
| AMERICA ACTION     | 117                |
| DAEWOO             | 005 117            |
| EMERSON            | 153                |
| FUNAI              | 034                |
| GOLDSTAR           | 101 123            |
| HARLEY DAVIDSON    | 034                |
| HITACHI            | 034                |
| JATON              | 046                |
| JCPENNEY           | 101                |
| LG                 | 101 123            |
| LLOYD              | 034                |
| MAGNAVOX           | 034 067            |
| MEMOREX            | 101                |
| PANASONIC          | 070 167            |
| PHILIPS            | 034 067            |
| RADIO SHACK        | 123                |
| RCA                | 034 144            |
| SEARS              | 101                |
| KOSS               | 047 058 059        |
| SONY               | 057 154            |
| SYLVANIA           | 067                |
| SYMPHONIC          | 034                |
| THOMAS             | 034                |
| ZENITH             | 034                |

**DVD**

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|--------------------|
| ACCURIAN           | 003 268            |
| ADCOM              | 157                |
| ADVENT             | 005                |
| AIWA               | 146                |
| AKAI               | 281                |
| ALLEGRO            | 091                |
| ALPINE             | 098                |
| AMW                | 006 007            |

**DVD**

| Manufacturer/Brand    | Set-Up Code Number  |
|-----------------------|---------------------|
| APEX DIGITAL          | 087 111 115         |
| ARCAM                 | 122                 |
| ASPIRE DIGITAL        | 008 009             |
| AUDIOVOX              | 003 010 014 015 149 |
| BEL CANTO DESIGN      | 016                 |
| BLAUPUNKT             | 111                 |
| BROKSONIC             | 130                 |
| BUFFALO               | 264                 |
| CALIFORNIA AUDIO LABS | 021 124             |
| CAMBRIDGE AUDIO       | 323 333             |
| CARY AUDIO DESIGN     | 174 266             |
| CENTRIOS              | 019                 |
| CINEVISION            | 091                 |
| CITIZEN               | 020                 |
| COBY                  | 260                 |
| CYBERHOME             | 271                 |
| DAEWOO                | 132                 |
| DELON                 | 080 173 138 329     |
| DIAMOND VISION        | 037 038 039         |
| DISNEY                | 040 096             |
| DURABRAND             | 091                 |
| DVD 2000              | 017                 |
| EMERSON               | 091 143             |
| ENTERPRISE            | 074                 |
| ESA                   | 022 143             |
| FISHER                | 147                 |
| VILLAIN               | 143                 |
| FUNAI                 | 222                 |
| GATEWAY               | 222                 |
| GE                    | 027                 |
| GO VIDEO              | 137 091 220 221 222 |
| GOLDSTAR              | 091                 |
| GPX                   | 044 045             |
| GRADIENTE             | 021                 |
| GREENHILL             |                     |