

Design and specifications are subject to change without notice. (7)N31810-01DC Rev. 0.0001

Honeywell

HD73 Series

Operation Manual

Vandal-Resistant Dome Camera

Need Help? Call 1.800.736.CCTV for sales, service and customer support. www.honeywellvideo.com

READ AND KEEP THIS OPERATION MANUAL.

digital DESIGN

Main Menu - LENS

1) LENS setup
 Press LEFT or RIGHT button in LENS on Main Menu to select the mode to MANUAL. Press VIDEO or DC.

Setting Mode: DC

2) DC LENS setup
 Press MENU button in DC to display the screen on the right side.
 Press LEFT or RIGHT button to change BRIGHTNESS (LEVEL) value.
 Press MENU button to return to the previous screen.

LENS DC BRIGHTNESS ON

16

Menu [SHUTTER] - SHUTTER AUTO

1) SHUTTER setup (for LENS MANUAL)
 Press LEFT or RIGHT button in SHUTTER to select the mode to AUTO. Press FLK or FIXD.

Setting Mode: FIXED

SHUTTER AUTO BRIGHTNESS ON

17

Main Menu - LANGUAGE

1) LANGUAGE setup
 Press MENU button in LANGUAGE to display the screen on the right side.
 Press LEFT or RIGHT button to change the language mode you wish to operate in.

Setup CAMERA ID OFF DC FLK FIXD
 LENS ON OFF
 SHUTTER AUTO OFF
 WHITE BAL. ADJUST OFF
 FUNCTION ADJUST OFF
 MOTION OFF
 PRIVACY OFF
 BLC OFF
 AGC OFF
 GAMMA OFF
 MIRROR OFF
 MIRROR OFF

2) ENGLISH 3) Korean 4) Chinese 5) Chinese 2 6) Japanese

32

Main Menu - RESET

1) RESET
 Press MENU button. The screen on the bottom appears.
 Press YES or NO.
 Press YES to reset your camera to default factory condition.

SETUP CAMERA ID OFF DC FLK FIXD
 LENS ON OFF
 SHUTTER AUTO OFF
 WHITE BAL. ADJUST OFF
 FUNCTION ADJUST OFF
 MOTION OFF
 PRIVACY OFF
 BLC OFF
 AGC OFF
 GAMMA OFF
 MIRROR OFF
 MIRROR OFF

LOAD DEFAULT YES NO

33

User Information

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION! TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Explanation of Test Symbols

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of an unshielded "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (warning) instructions in the literature accompanying the appliance.

THE GRAPHIC SYMBOLS WITH SUPPLEMENTAL MARKING ARE ON THE BOTTOM OF THE SYSTEM.

WARNING TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE!

2

INFORMATION

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING

The manufacturer cautions you not to open the equipment.
 CAUTION: To prevent electric shock and risk of fire hazard:
 • Do NOT use power sources except for that specified.
 • Do NOT expose the appliance to rain or moisture.

This installation should be made by a qualified service person and should abide to all local codes.

3

Menu [SHUTTER] - FIXED Mode Setup

1) FIXED setup (MANUAL, DC, VIDEO LENS)
 Press MENU button in FIXED to display the screen on the right side.
 Press LEFT or RIGHT button in SHUTTER, Camera set in (FIXD), (LWB) - (1100, 000) (PR) - (100 - 1100, 000) range.

SHUTTER FIXED SHUTTER M: 100

18

Menu [WHITE BAL.] - WHITE BALANCE Mode Setup

1) WHITE BAL. setup
 Press LEFT or RIGHT button in WHITE BAL. press LEFT, RIGHT button to select the mode you wish to provide AWB or AWB + FLK or AWB + FIXD.

AWB FIXED AWB FIXED MODE 1

2) FIXED setup
 Can set from MODE 1 to MODE 4.

3) MANUAL setup
 As shown on the lower right picture, set Focus and Blue color value temperature.
 Press MENU button in RETURN to set from setup mode.

AWB MANUAL AWB 110 BLD 200

19

9. SPECIFICATIONS

MODEL	HDT3	HDT3X
Signal System	NTSC	PAL
Image Sensor	1/3" Interline Transfer 1/3 inch Super HAD CCD	
Effective Pixels	768(H) x 480(V)	720(H) x 480(V)
Video Output	Composite: 1.0Vp-p, 75Ω, Unbalanced	
Sync. System	Internal Sync	
Luminance Gain Ratio	More than 50dB (AGC OFF)	
Horizontal Resolution	350 TV Lines	
Min. Illumination (F1.2)	0.3 Lux(COORR. AGC ON), 0.1 Lux(IR LED)	
Lens	DC Auto IRIS Varifocal (F=3.8-8.5mm)	
Focus	Electric Shutter	1.00-1100.00K / Manual 1.00-100.000
White Balance	ATW (1.800K-10.000K) / AWB / Fixed / Manual	
Camera ID	ON / OFF	
Language	English / Korean / Chinese 1 / Chinese 2 / Japanese	

BLC AGC	ON / OFF (Level Adjustable)
Day & Night	Auto (ON)
Privacy	ON / OFF (4 Programmable Zones)
Mirror	ON / OFF (Adjustable)
Gamma	User / 0.5 - 1.0 (Adjustable)
Motion Detection	ON / OFF (8 Programmable Zones)
Contrast	0 - 255 (Level Adjustable)
Sharpness	0 - 31 (Level Adjustable)
Applicable Lens	DC Iris
Supply Voltage	12VDC (10V-15V)
Power Consumption	Max. 4.5W / 300mA
Operating Temperature	-10°C ~ +50°C (Recommendation: -5°C ~ +40°C)
Storage Temperature	-20°C ~ +60°C
Dome Size (Ø)	100 mm
Weight	Approx. 844g

34

10. TROUBLESHOOTING

If you have trouble operating your camera, refer to the following table. If the problem is not resolved by you to solve the problem, contact an authorized technician.

Problem	Solutions
Nothing appears on the screen.	• Check that the power cord and line connection between the camera and monitor are connected properly. • Check that you have properly connected VIDEO cable to the camera VIDEO output jack.
The image on the screen is dark.	• Is lens stained with dirt? Clean your lens with soft, clean cloth. • Set the monitor to proper condition. • If the camera is exposed to too strong light, change the camera position. • Adjust the lens focus properly.
The image on the screen is blurry.	• Adjust the central feature of the monitor. • If you have an interlaced device, set the TV to 750i properly. • Adjust DC Level on the OSD menu.
The camera is not working properly, and the picture of the camera is dim.	• Check that you have properly connected the camera to an appropriate power source.
The image on the screen flickers.	• Is the camera hanging to direct sunlight or fluorescent lighting? Change the camera position.

36

Contents

Thank you for purchasing the COLOR VIDEO CAMERA.

Before using this camera, please read this operation manual carefully to obtain the best result and keep this manual for future reference.

1. SAFETY INSTRUCTIONS	5	6. CONNECTIONS	10
2. PRECAUTIONS	6	7. NAME AND FUNCTIONS	11
3. FEATURES	7	8. OPERATING CAMERA	12
4. COMPOSITION	8	9. SPECIFICATIONS	34
5. INSTALLATION	9	10. TROUBLESHOOTING	36

4

1. SAFETY INSTRUCTIONS

Read Instructions
 Read all of the safety and operating instructions before using the product.

Retention Instructions
 Save this instruction for later use.

Cleaning
 Wipe the appliance from wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Water and Moisture
 Do not use this product near water or moisture. (For example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.)

Installation
 Do not place this product on an unstable cart, stand, or table. The product may fall causing serious injury to a child or adult, and damage to the product. Use only with a cart or stand recommended by the manufacturer, or sold with the product. Mounting should follow the manufacturer's instructions, and should use a mounting accessory recommended by manufacturer.

Power source
 This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

5

Main Menu - FUNCTION

1) FUNCTION setup
 Press MENU button in FUNCTION to show the OSD display on the right.

2) Select item using UP, DOWN button.

3) Set details using LEFT, RIGHT button.

4) Click "Return" to go to MAIN SETUP

FUNCTION BLC AGC OFF DC FLK FIXD
 PRIVACY ON OFF
 SHUTTER AUTO OFF
 MOTION OFF
 MIRROR OFF
 RETURN

20

Menu [FUNCTION] - BLC 1

1) BLC SETUP MODE
 Press UP/DOWN button to move to BLC SETUP MODE screen.

2) BLC AREA / setup
 Use UP/DOWN, LEFT, RIGHT button to move the AREA setup position.

3) Set or release BLC AREA using MENU button.

Press MENU button in RETURN to return to FUNCTION MODE.

BLC SETUP BLC AREA 1

21

10. TROUBLESHOOTING

If you have trouble operating your camera, refer to the following table. If the problem is not resolved by you to solve the problem, contact an authorized technician.

Problem	Solutions
Nothing appears on the screen.	• Check that the power cord and line connection between the camera and monitor are connected properly. • Check that you have properly connected VIDEO cable to the camera VIDEO output jack.
The image on the screen is dark.	• Is lens stained with dirt? Clean your lens with soft, clean cloth. • Set the monitor to proper condition. • If the camera is exposed to too strong light, change the camera position. • Adjust the lens focus properly.
The image on the screen is blurry.	• Adjust the central feature of the monitor. • If you have an interlaced device, set the TV to 750i properly. • Adjust DC Level on the OSD menu.
The camera is not working properly, and the picture of the camera is dim.	• Check that you have properly connected the camera to an appropriate power source.
The image on the screen flickers.	• Is the camera hanging to direct sunlight or fluorescent lighting? Change the camera position.

36

Memo

37

2. PRECAUTIONS

Handling

- Do not disassemble the camera and never touch parts inside the camera.
- Do not drop the camera or subject to shocks and vibrations to avoid possible damage.
- When attaching or removing the lens, handle with care in order to that moisture and dust do not enter the camera.

Installation and storage

- Do not point the camera at the sun. This could damage the camera whether it's operating or not.
- Do not install the camera where the temperature could exceed the allowable range.
- Use the ambient temperature is less than 60°C. Installation reserved for long term continuous operation.
- Avoid installing in a humid or dusty place.
- Avoid installing in places where there are strong magnetic fields and electric signals.
- Avoid installing in places where the camera would be subject to strong vibrations.
- Never expose the camera to rain and water.

6

3. FEATURES

- High Sensitivity 1/3 inch Super HAD CCD
- Min. Illumination (F1.2, 30 IRE): 0.3 Lux (Color) / 0.1 Lux (IR LED On)
- Day & Night (ICR)
- OSD (On Screen Display)
- High Performance Menus For Functions
 - Privacy Zone Selectable (4 Programmable Zone)
 - Motion Detection Selectable (84 Programmable Zone)
 - Sharpness Enhanced Adjustable
 - Rickleness Selectable
 - Gamma Enhanced Selectable
 - BLC Zone Selectable (84 Programmable Zone)

7

Menu [FUNCTION] - BLC 2

1) BLC AREA MODE
 Exit from BLC AREA MODE to move to BLC SETUP MODE screen.

2) BLC OSD description
 ALL CLEAR - Clear all set AREA
 ALL SET - Set all 84 BLC AREA
 RETURN - Return to BLC AREA setup mode.

EXIT - Save AREA and return to BLC SETUP MODE.

BLC AREA 1

22

Menu [FUNCTION] - BLC 3

1) BLC RATIO setup (BLC LEVEL value setup)
 Exit from BLC AREA MODE to move to BLC RATIO.

2) Use LEFT, RIGHT button to change BLC LEVEL value (0-63) (0:MIN, 63:MAX)

3) Press MENU button in RETURN to move to FUNCTION MODE.

BLC SETUP BLC AREA 1

23

10. TROUBLESHOOTING

If you have trouble operating your camera, refer to the following table. If the problem is not resolved by you to solve the problem, contact an authorized technician.

Problem	Solutions
Nothing appears on the screen.	• Check that the power cord and line connection between the camera and monitor are connected properly. • Check that you have properly connected VIDEO cable to the camera VIDEO output jack.
The image on the screen is dark.	• Is lens stained with dirt? Clean your lens with soft, clean cloth. • Set the monitor to proper condition. • If the camera is exposed to too strong light, change the camera position. • Adjust the lens focus properly.
The image on the screen is blurry.	• Adjust the central feature of the monitor. • If you have an interlaced device, set the TV to 750i properly. • Adjust DC Level on the OSD menu.
The camera is not working properly, and the picture of the camera is dim.	• Check that you have properly connected the camera to an appropriate power source.
The image on the screen flickers.	• Is the camera hanging to direct sunlight or fluorescent lighting? Change the camera position.

36

Memo

37

4. COMPOSITION

8

5. INSTALLATION

- Stick the guide pattern on the wall or ceiling.
- Drill four holes according to the guide pattern then insert anchors into the drilled holes.
- Draw out power / video wires to the connecting places.
- Fixed the camera to a ceiling using four screws.
- Adjust desired focus and scene by turning and moving the 3-axis camera bracket by hand.
- Put the dome cover on the base.
- Fix the dome cover on the base by L-Wrench.

9

Menu [FUNCTION] - AGC

1) AGC setup
 AGC default setting ON.

Press MENU button in ON to display the screen on the right side.

Use LEFT, RIGHT button to adjust AGC GAIN value (0-255) (MIN, 255:MAX)

Press MENU button in RETURN to return to the previous screen.

AGC CONTROL AGC GAIN 000

24

Menu [FUNCTION] - PRIVACY

1) PRIVACY setup
 Default setting OFF - Use LEFT/RIGHT button. Change setup to ON.

After ON / mode setup, 4 AREA groups are configured as displayed on the right-side picture.

Press MENU button. Control of each area is displayed.

2) PRIVACY details setup
 Select AREA SEL - PRIVACY 0-3.
 AREA STATE - 0 - 3 AREA ON/OFF
 LEFT - Change left portion of each AREA size.
 RIGHT - Change right portion of each AREA size.
 TOP - Change top portion of each AREA size.
 BOTTOM - Change bottom portion of each AREA size.
 COLOR - Change color of the AREA (16 COLOR)

FUNCTION BLC AGC OFF DC FLK FIXD
 PRIVACY ON OFF
 SHUTTER AUTO OFF
 MOTION OFF
 MIRROR OFF
 RETURN

PRIVACY AREA SEL AREA 0
 LEFT ON OFF
 RIGHT ON OFF
 TOP ON OFF
 BOTTOM ON OFF
 COLOR 001
 RETURN

25

6. CONNECTION

10

7. NAME AND FUNCTIONS

11

Menu [FUNCTION] - MIRROR

1) MIRROR setup
 MIRROR default setting OFF
 On setting - Use LEFT, RIGHT button.
 Left and Right side is switched as shown on the picture.

FUNCTION BLC AGC OFF DC FLK FIXD
 PRIVACY ON OFF
 MIRROR OFF OFF
 MOTION OFF
 RETURN

26

Menu [FUNCTION] - GAMMA

1) GAMMA setup (DEFAULT 0.45)
 In FUNCTION MODE, use UP/DOWN button to select GAMMA.
 Press MENU button to set and release AREA.
 Press LEFT, RIGHT button to adjust GAMMA value (0.05 - 1.0) (USER - 0.05 - 0.10 - 0.15 - 1.0)

FUNCTION BLC AGC OFF DC FLK FIXD
 PRIVACY ON OFF
 SHUTTER AUTO OFF
 GAMMA 0.45
 MOTION OFF
 RETURN

27

8. OPERATING CAMERA

Setting up the Menu

Push the Joy stick for one second, and the OSD appears on the screen. Move the Joystick up, down, left & right to control the OSD functions.

SETUP
 Push and hold MENU button 1 second to access the setup mode.
 Select the status using the joystick. (up, down, left, right)

SETUP CAMERA ID OFF DC FLK FIXD
 LENS ON OFF
 SHUTTER AUTO OFF
 WHITE BAL. ADJUST OFF
 FUNCTION ADJUST OFF
 MOTION OFF
 PRIVACY OFF
 BLC OFF
 AGC OFF
 GAMMA OFF
 MIRROR OFF
 MIRROR OFF
 RETURN

12

Main Menu - CAMERA ID

1) CAMERA ID setup (default setting OFF)
 Press MENU key in ON / mode.
 Press DC (SETUP MODE)

Press MENU key in CAMERA ID.

Character is changed each time UP/DOWN is pressed. (Can input up to 63 letters)

Press MENU button in to exit from ID setup mode

Press MENU button in to correct and erase the chosen entry.

ID SETUP CAMERA ID A C POSITION RETURN

13

Menu [FUNCTION] - MOTION

1) MOTION DETECTION setup
 DEFAULT value OFF
 In ON / mode, press MENU button.
 Quickly MOTION detect.

2) AREA / setup
 In AREA / press MENU button. (see p.20)

3) MOTION TH. Setup
 Set motion sensitivity (0.0001 - 255.0001)

4) MOTION TRACE setup
 ON / OFF
 Setting value can be adjusted using LEFT or RIGHT button.

FUNCTION BLC AGC OFF DC FLK FIXD
 PRIVACY ON OFF
 SHUTTER AUTO OFF
 GAMMA 0.45
 MOTION OFF
 RETURN

MOTION AREA / MOTION TH. 001 MOTION TRACE OFF RETURN

28

Menu [FUNCTION] - MOTION AREA 1

1) MOTION AREA setup
 Use UP/DOWN, LEFT, RIGHT button to move AREA AREA position.

2) Use MENU button to set and release AREA

3) Press MENU button for more than 1 second to move to MOTION AREA MODE

2) MOTION AREA MODE
 After "Exit" from MOTION AREA MODE

MOTION AREA

29

Main Menu - SETUP

Press MENU button, then SETUP mode is activated.
 MAIN SETUP menu is displayed on the monitor.

2) Select OSD item using UP, DOWN button.

3) Set details using LEFT, RIGHT button.

4) Select "Exit" and then press the MENU button to finish the SETUP (Save and Exit)

SETUP CAMERA ID OFF DC FLK FIXD
 LENS ON OFF
 SHUTTER AUTO OFF
 WHITE BAL. ADJUST OFF
 FUNCTION ADJUST OFF
 MOTION OFF
 PRIVACY OFF
 BLC OFF
 AGC OFF
 GAMMA OFF
 MIRROR OFF
 MIRROR OFF
 RETURN

14

Main Menu - CAMERA ID

1) CAMERA ID setup (default setting OFF)
 Press MENU key in ON / mode.
 Press DC (SETUP MODE)

Press MENU key in CAMERA ID.

Character is changed each time UP/DOWN is pressed. (Can input up to 63 letters)

Press MENU button in to exit from ID setup mode

Press MENU button in to correct and erase the chosen entry.

ID SETUP CAMERA ID A C POSITION RETURN

2) POSITION setup. Press POSITION /
 Move the character using UP, DOWN, LEFT, RIGHT button.
 Press MENU button to confirm selection of the character.
 Press Return to go to previous screen. ID is displayed by pressing EXIT on MAIN MENU.

15

Menu [FUNCTION] - MOTION AREA 2

1) MOTION OSD description
 ALL CLEAR - Release all set AREA
 ALL SET - Set all 84 MOTION AREA
 RETURN - Return to MOTION AREA Setup Mode.
 EXIT - Save AREA and return to MOTION SETUP MODE.

30

Main Menu - ADJUST

1) ADJUST setup
 Press MENU button in ADJUST.
 Move to screen on the right side.

2) CONTRAST setup
 Adjust Y gain value (0-255)

3) SHARPNESS setup
 Adjust aperture value (0-31)

4) CR_GAIN setup
 Adjust COLOR CR_GAIN value (0-255)

5) CR_GAM setup
 Adjust COLOR CR_GAM value (0-255)

ADJUST CONTRAST 000 SHARPNESS 12 CR_GAIN 000 CR_GAM 000

31