


 You must be fully aware of all the distinctive features and precautions related to this camera before installing it.

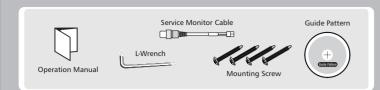


INSTALLATION:

- Stick the guide pattern on the wall or ceiling.
- 2 Drill four holes according to the guide pattern then insert anchors into the drilled holes.
- 3 Draw out power / video wires to the connecting places.
- Fix the camera to a celling using four screws.
- Adjust desired focus and scene by turning and moving the 3-axis camera bracket by hand.

 Put the dome cover over the base.
- 7 Fix the dome cover on the base by L-Wrench.


//////,Ceiling///////

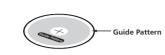






| DIMENSIONS(mm):

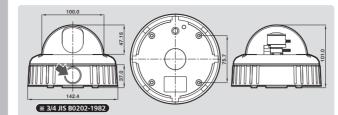

| SPECIFICATIONS:

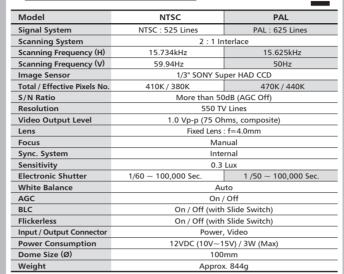

Need Help?
Call 1.800.796.CCTV for sales, service and customer support.
www.honeywellvideo.com

Honeywell

HD51 Series

Operation Manual

- 1/3" Sony Super HAD CCD
- High Resolution:550 TV Lines
- 4 9mm DC Vari-focal Auto Iris
- Auto White Balance
- AGC, BLC, Flickerless On/Off
- Extra Video Output for Installer
- 3-Axis Camera Construction
- Vandal-Resistant Dome Housing
- Diameter of Bubble: 100mm





READ AND KEEP THIS OPERATION MANUAL

PRECAUTIONS:

Do not install the camera in extreme temperature conditions. Do use the camera under conditions where temperatures are within -20°C to 45°C.


Be especially careful with ventilation under high temperatures.

- Do not disassemble the camera.

 There are no user-serviceable parts inside it.
- Do not drop the camera or subject them to physical shocks. It can cause malfunctions to occur.
- Note
 When this camera is installed near
 wireless communication devices
 that emits strong electromagnetic
 field, irregularity such as noise on
 the monitor may appear.

NAME AND FUNCTION:

Vari-focal Lens Type

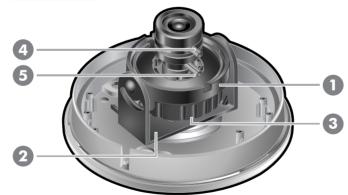

- 1 Tilt rotation: Adjusting the vertical angle.
- 2 Pan rotation: Adjusting the horizontal angle.
- 3 Horizontal rotation: Adjusting the horizontal position of the screen.

 Design and specifications are subject to change without notice.


0.05/23

Rev

Built-in 3-axis camera bracket makes it much easier to rotate in any direction.

CAMERA SET-UP:

♦ Vari-focal Lens Type

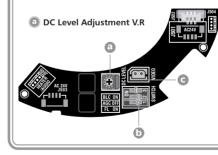

- **b** Function Selection Switch:
- •FL(Flickerless) ON/OFF
- AGC(Auto Gain Control) ON/OFF
- BLC(Back Light Compensation)
 ON/OFF
- © Service Monitor Connecter: Use service monitor connector to set camera angle & focus when installing.

| TROUBLESHOOTING:

If you have trouble operating your camera, refer to the following.

If the guidelines do not enable you to solve the problem, contact an authorized technician.


- The image does not appear on the screen.
- Check the power source for the monitor and camera and ensure that the voltage and polarity are properly connected and being supplied correctly.
- The image on the screen is dim.
- Check if the lens is stained. If dirty, clean the lens with a soft, clean cloth.
 Adjust the Back Focus of the lens again.
- The camera does not work properly, the surface of the camera case is hot, and a black line appears on the screen.
 - Check if you have connected the camera to a proper power source and If there is no problem with the power, turn the unit off immediately and seek assistance from
- The screen blinks a lot.
- Check if the camera is pointed toward the sun or a fluorescent lamp.
- fluorescent lamp.

 Adjust the angle or location of the camera if too much light is coming into the screen.

our Customer Service department

CONNECTION:

- Connecting to Monitor and Power
- **⇒** 12VDC Power Type

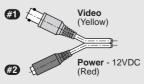

Video Output
GND

 Θ — \mathfrak{E}

• The wire is polarized. • Use 12VDC == power source.

Focus handle: Focus (Far or Near)

5 Zoom handle: Zoom (Tele or Wide)

Camera Lay-out

ı	No.	Function	Terminal Color	Remark
	#1	Video Output	Yellow	1.0 Vp-p
	#2	Power Input	Red	12VDC, Max 3W/ 250mA