

# TOPCOM® Orion



## USER GUIDE

# TOPCOM<sup>®</sup>

## Orion

**DEAR CUSTOMER,**  
Congratulations with the purchase of your Orion !

**NL** De in deze handleiding beschreven mogelijkheden worden gepubliceerd onder voorbehoud van wijzigingen  
**FR** Les possibilités décrites dans ce manuel sont publiées sous réserve de modifications.  
**E** The features described in this manual are published with reservation to modifications.  
**D** Die in dieser Bedienungsanleitung umschriebenen Möglichkeiten, werden vorbehaltlich Änderungen publiziert.



 
**NL** Dit TOPCOM produkt voldoet aan de laagspanningsrichtlijn, 73/23/EEC en aan de elektromagnetische compatibiliteit EMC 89/336/EEC.  
**FR** Ce produit TOPCOM est conforme aux normes de basse tension 73/23/EEC et est compatible avec les normes de la compatibilité magnétique EMC 89/336/EEC.  
**E** This TOPCOM product meets the low voltage directive 73/23/EEC and the electromagnetic compatibility EMC directive 89/336/EEC.  
**D** Dieses TOPCOM Produkt entspricht der Niederspannungsrichtlinie 73/23/EEC und der EMVG (Elektromagnetische Verträglichkeit) Richtlinie 89/336/EEC.

<b>1</b>	<b>THE DIFFERENT PHONE ELEMENTS</b>	<b>2</b>
<b>2</b>	<b>INSTALLATION</b>	<b>3</b>
<b>3</b>	<b>WALL MOUNTABLE</b>	<b>3</b>
<b>4</b>	<b>SETTING THE RING VOLUME</b>	<b>4</b>
<b>5</b>	<b>OPERATION</b>	<b>4</b>
5.1	Last number redial	4
5.2	Flash function	4
5.3	Pause button (redial)	4
5.4	Memory numbers	4
5.4.1	To save memory numbers	5
5.5	To call a memory number	6
5.6	Dialling in semi-handsfree mode	6
5.7	On hold (music on hold)	7
5.8	Timer	7
5.9	Memory control	7
<b>6</b>	<b>WARRANTY</b>	<b>8</b>

# TOPCOM® Orion

## 1 THE DIFFERENT PHONE ELEMENTS

- 1 Coil cord (receiver)
- 2 Loudspeaker
- 3 Hook (to hang up the receiver of a wall unit)
- 4 Hook switch
- 5 Telephone line
- 6 LCD display
- 7 Control button
- 8 Timer button
- 9 Indirect memory numbers (2-touch)
- 10 Recall button (to call memory numbers)
- 11 Direct memory numbers (1-touch)
- 12 Store button (to store memory numbers)
- 13 Numerical buttons
- 14 Hold button
- 15 Semi-handsfree button (only speaker)
- 16 Semi-handsfree indicator
- 17 On Hold indicator
- 18 Flash button (Transfer button)
- 19 Redial-/Pause button
- 20 Volume switch (semi-handsfree mode)
- 21 Ring volume switch (HI-LO)
- 22 Tone/pulse switch

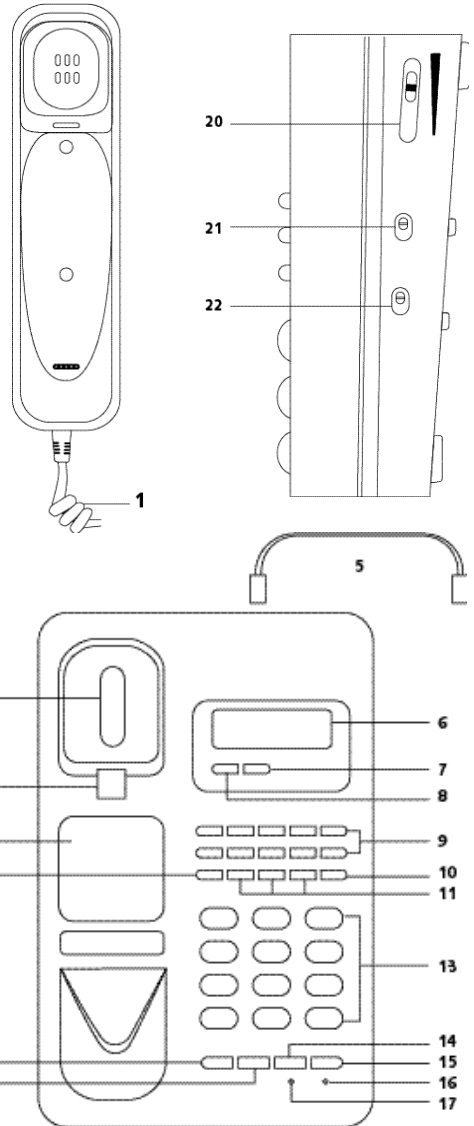

# TOPCOM® Orion

## 2 INSTALLATION


- Plug one end of the phone cable into the telephone line wall socket and the other end into the back of the unit.
- Connect the coil cord from the receiver into the side of the phone .

**ATTENTION** : It depends on your telephone line whether the unit has to be placed on tone or pulse. We advise you to put the phone on 'tone'.



## 3 WALL MOUNTABLE

To fix the unit to the wall you have to take the following steps :

1. To mount the unit to the wall, you will need a plate with two protruding ends.
2. Put the hook (1) into the base unit (figure 1).

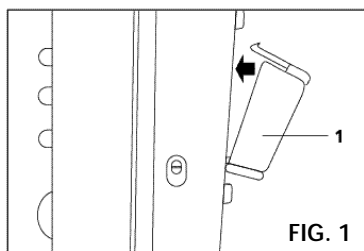

3. You can now mount the phone to the wall by hitching it onto the holder (figure 2).
4. To prevent the receiver from sliding down, you have to pull up the little hook and turn it 180°C (figure 3).

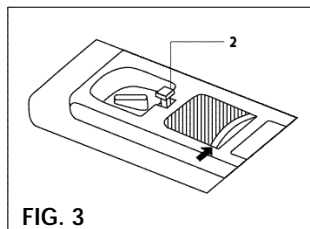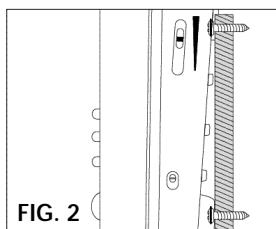

### 4 SETTING THE RING VOLUME

The ring volume can be set by means of the ring volume switch on the side of the phone.

### 5 OPERATION

#### 5.1 Last number redial

The last number dialled is saved. If you wish to redial this number, pick up the receiver and press the Redial button. The last number dialled (max. 32 digits) will be redialled automatically.

**Note :**

- The last number dialled remains in the memory until you dial a new number.
- The last number dialled will only be repeated when the procedure in question is carried out.

#### 5.2 Flash function

By pressing the Flash button you can transfer calls to another phone connected to the telephone exchange. This function also offers you the possibility to use special phone services like the comfort service.

#### 5.3 Pause button (redial)

By pressing the Pause button once, you add a 4 second pause after having pressed the digit that precedes the Pause button. You can press the Flash button repeatedly if 4 seconds are not sufficient. It is not possible to begin a number with a pause. You press the Pause button there where you want to add a pause. Also a number, saved in the memory, can contain a pause. (Each pause takes up the same space as a digit).

#### 5.4 Memory numbers

The Orion is equipped with 3 direct memory numbers (M1, M2 and M3) for which you have to press only 1 button. The phone also has 10 indirect memory numbers; to call them you have to press 2 buttons.

Every memory location offers space to 16 digits, the Pause button included.

### **5.4.1 To save memory numbers**

#### ***Saving indirect memory numbers (2 touch) :***

1. Pick up the receiver or press the Semi-handsfree button to take the line.
2. Press the "STORE" button.
3. Enter the telephone number that you wish to save in the memory.
4. Press the "STORE" button again.
5. Enter the desired memory location (numerical buttons 0-9).

#### ***Saving direct memory numbers (1 touch) :***

1. Pick up the receiver or press the Semi-handsfree button to take the line.
2. Press the "STORE" button.
3. Enter the telephone number that you wish to save in the memory.
4. Press the "STORE" button again.
5. Enter the desired memory location (M1, M2 or M3).

#### ***Example***

1. To save an indirect memory number :  
telephone number: [1] [2] [3] [4] [5] [6] [7]  
[STORE] [1] [2] [3] [4] [5] [6] [7] [STORE] [1]
2. To save a direct memory number :  
telephone number: [1] [2] [3] [4] [5] [6] [7]  
[STORE] [1] [2] [3] [4] [5] [6] [7] [STORE] [M1]
3. To save a telephone number with a pause :  
indirect memory number: [3]  
external line number [0]  
telephone number: [1] [2] [3] [4] [5] [6] [7]  
[STORE] [0] [pause] [1] [2] [3] [4] [5] [6] [7] [STORE] [3]

### **5.5 To call a memory number**

#### ***To call a direct memory number :***

1. Pick up the receiver or activate the semi-handsfree mode to take the line.
2. Press the desired memory button (M1, M2 or M3). The unit will automatically dial the telephone number.

#### ***To call an indirect memory number :***

1. Pick up the receiver or activate the semi-handsfree mode to take the line.
2. Press the Recall button.
3. Press the desired memory button (0-9). The unit will automatically dial the telephone number.

### **5.6 Dialling in semi-handsfree mode**

1. Press the Semi-handsfree button. The Semi-handsfree indicator starts to burn.
2. Adjust the volume by means of the volume switch for the semi-handsfree mode.
3. Wait until you hear the dial tone and enter the desired telephone number. The number is shown on the display.
4. Wait until the called person answers and then pick up the receiver. The semi-handsfree indicator stops burning.
5. When the phone call has ended, put down the receiver.

When your call is not being answered, you free the telephone line by pressing the Semi-handsfree button twice. When you hear the dial tone again, press the Redial button and the number will be redialled automatically.



### 5.7 On hold (music on hold)

1. If you want to put a call on hold, press the Hold button, the On Hold indicator lights up.
2. When a call has been put on hold, the speaker is activated to check the line. The waiting correspondent will hear some music. The microphone is deactivated
3. Put the receiver down when this function is activated.
4. When you want to continue the call, pick up the receiver again.

### 5.8 Timer

When you are on the phone, press the Timer button to register the duration of the call (maximum registration time 59 minutes and 59 seconds). If you pick up the receiver and press the Timer button first, the duration of the last call will be displayed. When you press the Timer button once more, the unit returns to zero and starts counting. When you press the Flash button, the timer will stop and the information shown on the display, will be erased.

### 5.9. Memory control

The content of each memory number can be checked.

1. Pick up the receiver and press the Semi-handsfree button to take the line.
2. Press the Control button : the symbol 'C' is shown on the display.
3. Enter the desired memory number (direct or indirect) : the first 10 digits of the memory number are displayed. After that you press a random button (except for the Flash button) and the remaining 6 digits appear on the display.
4. When the timer is activated, the phone will return to timer mode after 5 seconds; the timer will restart counting.

# TOPCOM® Orion

## 6 WARRANTY

**Warranty:** 1 year

Ask your dealer for your free swop warranty.

**Attention :** Do not forget to include your purchase invoice when you return the defect device.

**TOPCOM<sup>®</sup>**

it's nice talking to you