

**Fisher-Price®**

**IncrediBlock™**



**C5523**

Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three "C" (LR14) **alkaline** batteries (not included).

Adult assembly is required. Tool required for battery installation:  
Phillips screwdriver (not included).

 
 
**Questions? We'd like to hear from you!**

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**,  
8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD  
equipment, please call 1-800-382-7470. Or, write to:  
Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.



[www.fisher-price.com](http://www.fisher-price.com)

# Battery Installation

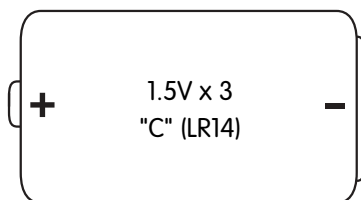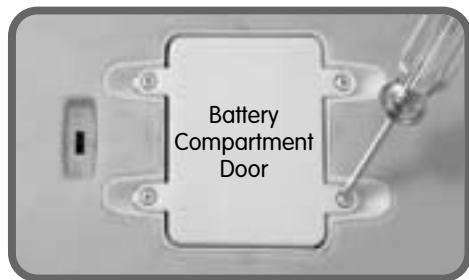

Shown Actual Size

- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "C" (LR14) **alkaline** batteries.

*Hint: We recommend using **alkaline** batteries for longer life.*

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds, or motions from this toy become faint or stop, it's time for an adult to change the batteries!

# Battery Safety Information

**Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:**

 
- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the battery compartment door.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.





# Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse this toy.

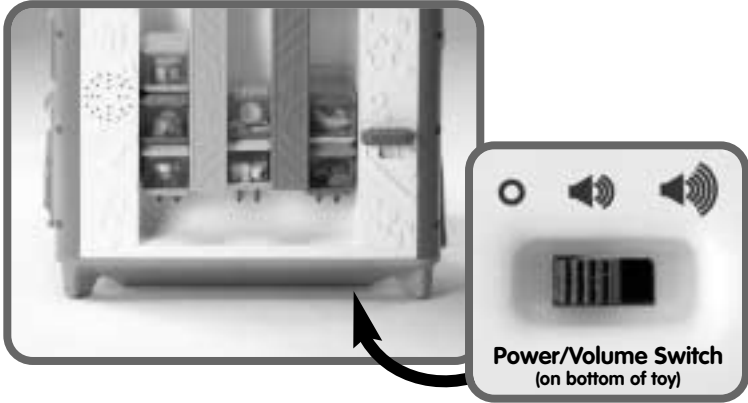
Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.  
© 2004 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

# Five Sides of Busy Play!



 - Locate the power/volume switch on the bottom of the toy.
- Slide the switch to the desired position: off , on with low volume  or on with high volume .
- When your child is finished playing with the toy, slide the power/volume switch to the off  position.

## Spin & Learn

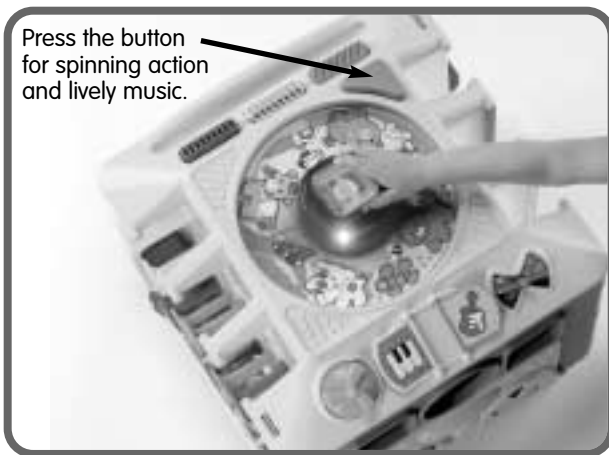


- Place any of the eight special blocks upright in the center of the carousel and press down. Hear about what's inside of each block followed by a fun sound effect!

**Note:** The block recognition feature only works with the eight blocks included with this toy. Using other Peek-a-Blocks™ produces a sound effect.

- Press the action button to hear a fun tune and see the carousel spin around with flashing lights.

# Five Sides of Busy Play!
 
## Stack & Spill

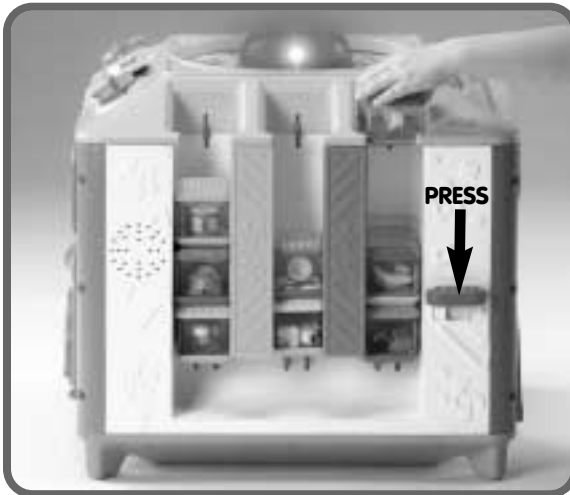

- Drop blocks into each of the three channels to hear a song or a fun sound effect.
- Press the lever and watch the blocks spill out!


## Drop & Tumble



 - Drop the blocks through the top and watch them tumble through the side.

# Five Sides of Busy Play!

## Sort & Store

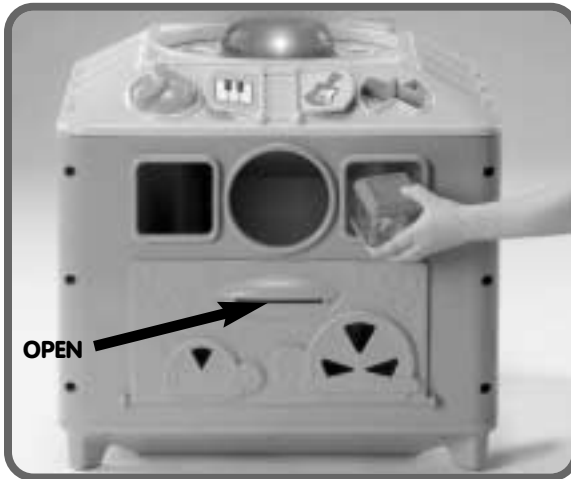

- Baby can drop the blocks through the openings near the top.
- Store up to 30 Peek-a-Blocks inside the large compartment.


## Plug & Play



 - This side features bold patterns, fun animals and a large mirror.
- Plug blocks into either of the square openings.

# Decoration

- Apply the labels as shown in the illustration.
- For best results, wash your hands before applying the labels and make sure the areas to which the labels will be applied are clean and dry. Avoid repositioning a label once it has been applied.

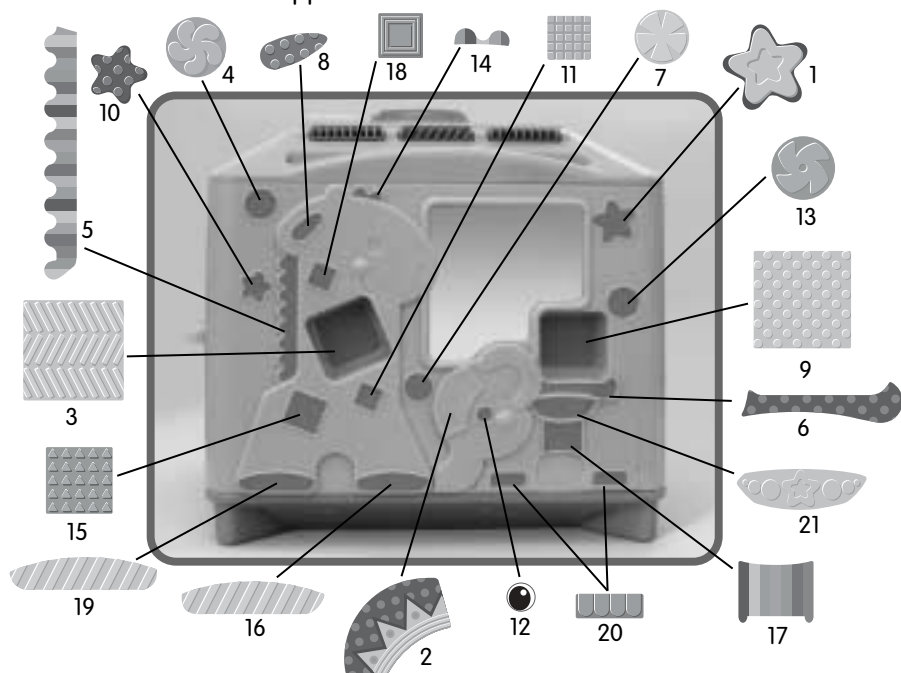

## FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### For countries outside the United States:

**CANADA:** Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**GREAT BRITAIN:** Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

**AUSTRALIA:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

**NEW ZEALAND:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.