


# Installing Your Multifunction to Your Network for the First Time PIXMA MG3520

Windows OS Wireless Setup Using the USB Cable

## Preparing to Connect My Multifunction To My Network

#### **Network Requirements**


Before connecting the machine to the network, make sure that configuration of the computer and access point or router is complete, and that the computer is connected to the network.

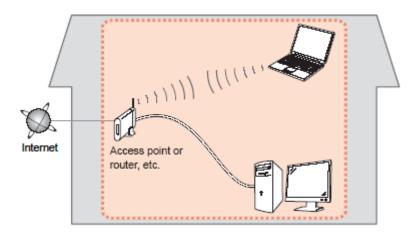

#### **Wireless Connection**

Before connecting the machine to the network, the computer needs to be connected to the network. Make sure that configuration of the computer and access point or router is complete.

### Preparing to Connect My Multifunction To My Network

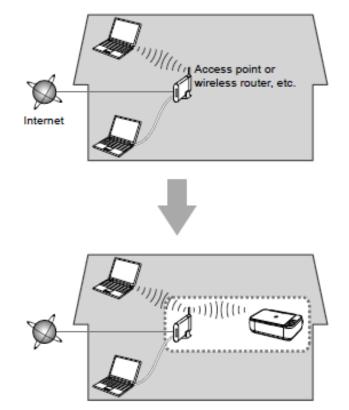



An "Ad-hoc connection," which establishes a direct connection to the computer over a wireless connection without using an access point, is not supported.

#### **Notes on Network Connection**

- The configuration, router functions, setup procedures and security settings of the network device vary depending on your system environment. For details, refer to your device's instruction manual or contact its manufacturer.
- In an office setup, consult your network administrator
- If you connect to a network that is not protected with security measures, there is a risk of disclosing data such as your personal information to a third party.
- Place the machine and computer on the same network segment.

#### **Software Installation**

To use the machine by connecting it to a computer, software including the drivers needs to be copied (installed) to the computer's hard disk. Installation time varies depending on the computer environment or the number of application software to be installed.

#### IMPORTANT

- Log on as the administrator (or a member of the Administrators group).
- Quit all running applications before installation.
- Do not switch users during the installation process.
- Internet connection may be required during the installation. Connection fees may apply. Consult the internet service provider.
- It may be necessary to restart your computer during the installation process. Follow the on-screen instructions and do not remove the Setup CD-ROM during restarting. The installation resumes once your computer has restarted.

• If the firewall function of your security software is turned on, a warning message may appear that Canon software is attempting to access the network. If such a warning message appears, set the security software to always allow access.

To begin setup of your PIXMA MG3520 on your wireless network, insert the Setup CD-ROM\* in your computer.




The setup program will start automatically. The setup instructions presented in this document describe the "**Wireless Setup Using the USB Cable**", whereby a USB cable is temporarily connected between the printer and computer during setup. This setup method is used if your computer's operating system is Windows XP or the pronter is not detected using other methods.

\*If you don't have or cannot use the Setup CD-ROM, follow the steps below to start the setup.

- <u>Download the software</u> (click the link to download)
- Double-click the downloaded .exe file (Win-mg3500-1\_0-ucd.exe)


If the User Account Control dialog box appears during the setup, click Yes or Continue.

#### Click Next on the initial screen

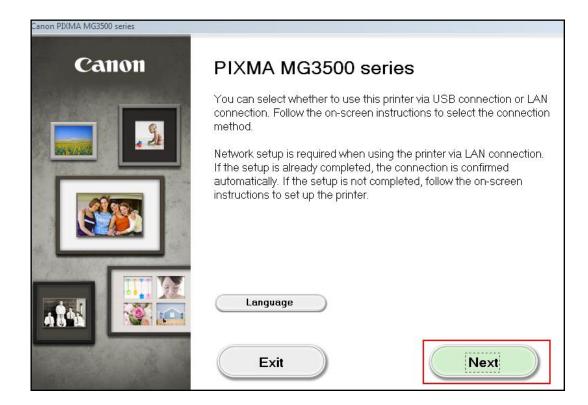

On the **Connection Method Selection** screen (1-1) select **Wireless Connection**, then select **Connect to the network** on the **Printer Setup** screen (2-1).

1-1 Connection Method Selection	<u> </u>
Select a method to connect the printer.	
Wireless Connection	
Select this option when using the printer with your computer via Wi-Fi (without using a cable), or when sharing the printer with other computers. An access point or wireless router) is required.	
USB Connection	
Select this option when using the printer by connecting it to the computer with a JSB cable. After software installation, the procedure to connect your computer with the printer appears. Click "USB Connection," then wait until the next screen appears.	
	Ŧ

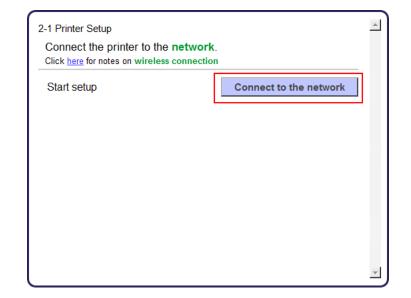

Continue to follow on-screen instructions.

Select Other setup on the Setup Procedure Selection screen (3-1).

Connect to WPS-compatible Acco Point	ess WPS
Connect Directly from Computer of Vireless Connection	Cableless setup
ableless setup may take some time. Inte navailable during setup.	ernet connection may become temporarily
ableless setup is not available on Wind	ows XP. Perform setup with another connection
nethod.	

### If the Install .NET Framework screen appears, Click Yes




Continue following on-screen instructions. On the **Software Installation List**, select \*software to install and click **Next**.

\***MP Drivers** is required and cannot be deselected. We recommend installing **My Image Garden** and **Quick Menu** to take full advantage of the printer's features.


Software Installation List				
he selected software will be installed. Make sur ick [Next].	e that the software you want to	install is selected, and the		
Image: MP Drivers	260 MB	Drive C: 186056 MB free		
User's Manual	10 MB	space		
☑ My Printer	14 MB			
☑ My Image Garden	680 MB	Total used space: 1064		
ZQuick Menu	40 MB	МВ		
ZEasy-WebPrint EX	60 MB			
□×PS Driver	130 MB			
		Select All		
		Clear All		

Continue following on-screen instructions.


When the Check Printer Settings dialog box appears, check the Set up the network connection via USB checkbox and click Next.

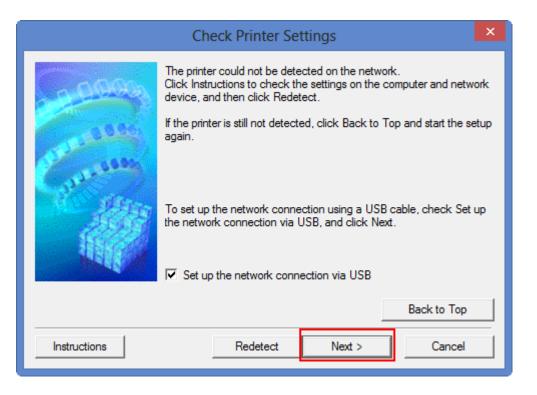

Connect a USB cable between the computer and printer. When the printer has been detected, the window shown below closes automatically.

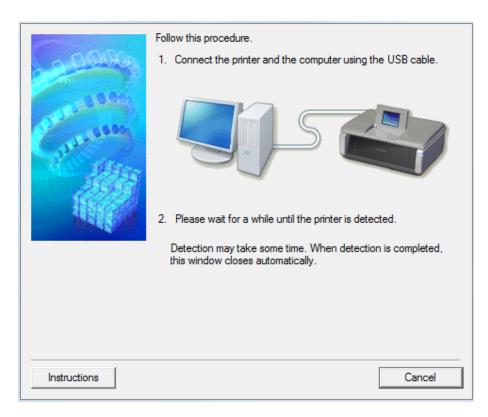

Connect a USB cable between the computer and printer. When the printer has been detected, the window shown below closes automatically.

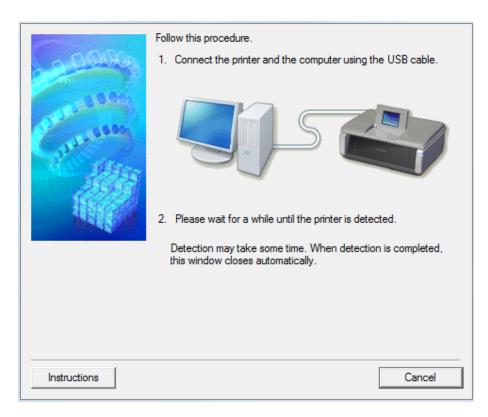

If the **Detected Access Points List\*** appears, select the one you wish to connect to, enter the network key and click **connect**.

\*This screen normally appears if you have multiple access points or multiple access points exist in your immediate area. For details on how to check the Access Point name/network name (SSID) and network key, refer to the manual supplied with your access point or contact its manufacturer.

Detected Access Points	List					
0000	Select th	ne access p	point for th	ne printer to conn	ect to, and click Con	nect.
	Detecte	d Access P	oints:			
0000	Stre	Enc	Access Pr	oint Name (SSID)		
	Tal Tal		letwork let2	1		
Same and the second	Tal	WPA2 N	et3			
2015	Tal	WPA 4				
62.22	Tal Tal	WPA2 A				
		WPA2 M	ly Netwo	JIK		
					Network Information	Refresh
To connect to this ad	ccess poin	it, enter the	network	key, and then cli	ck Connect.	
		N	letwork K	ey:		
			AE	CD123456		
					WEF	P Key Number
For the network key, If you need to config Setup.				manually to con		
Help	Manu	ial Setup		< Back	Connect	Cancel


If the Confirm Connection Access Point\* screen appears, verify the information then click Yes

\*This screen normally appears when you have only one access point



Continue following on-screen instructions.

When the **Setup Completion** dialog box appears, click **Complete**.

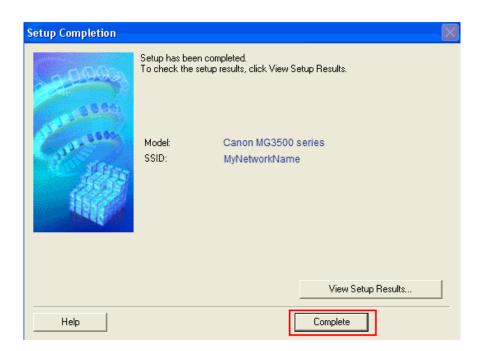

At this point, setup of the printer and network is complete. Continue to follow any remaining on-screen instructions to finish and exit the setup program.