

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block the ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the car/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

DISC FORMATS

This unit can play

- DVDs (8cm/12cm disc)
- Audio CDs (8cm/12cm disc)
- CD-R CD-RW Compatible

Region Management Information

Region Management Information: This unit is designed and manufactured to respond to the Region Management Information that is encoded on DVDs. If the region number printed on the DVD does not correspond to the region number of this unit, it cannot play that disc.

The region number of this unit is 1.

Disc Function or Operation that is Not Available

When the **S** symbol appears on the screen, it indicates that the function or operation attempted is not available at that time. This occurs because the DVD manufacturer determines the specific functions of DVDs. Certain functions may not be available on some DVDs. Be sure to read the documentation provided with the DVD.

Icons Used on DVDs

- Sample Icons
- Language selections for audio
 - Language selections for subtitles
 - Screen aspect ratio
 - Multiple camera angles
 - Region code indicator

Title, Chapter and Tracks

- DVDs are divided into "titles" and "chapters". If the disc has more than one movie on it, each movie would be a separate "title". "Chapters" are sections of titles.
- Audio CDs are divided into "tracks". A "track" is usually one song on an Audio CD.

Notes on Unauthorized Discs

You may not be able to play some DVDs on this unit, particularly if they were purchased from outside your geographic area made for business purposes.

SOUND SYSTEM

Dolby Digital

Dolby Digital is a technology developed by Dolby Laboratories. Soundtracks encoded in Dolby Digital can reproduce from one to 5.1 discrete channels of excellent quality audio.

The unit automatically recognizes the Dolby Digital bitstream and provides a downmix suitable for two-channel listening. An additional Dolby Digital decoder is required for reproduction of the discrete multi-channel soundtracks available on many DVDs.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



ACCESSORIES

 
Please check and identify the supplied accessories.

- To order accessories visit website <http://www.RCAav.com>
- Remote Control (with battery).....x 2
- AC Power Adapter.....x 2
- Car Power Adapter.....x 1
- Car Power Splitter.....x 1
- Mounting Strap.....x 2
- Audio/Video Cable.....x 1

REMOTE CONTROL


Using the Remote Control

- Point the remote control at the REMOTE SENSOR located on the unit. The remote controls are color-coded. Use the remote control with the player that has the color mark corresponding to the button color of the remote control.
- When using this unit in very bright light, the infrared REMOTE SENSOR may not work properly.
- The maximum effective distance for remote operation is about 16 feet (5 meters).

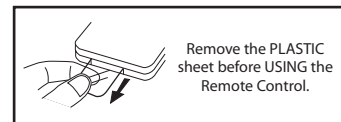

TO CHANGE REMOTE BATTERY

 - Open the battery door.
- Insert one CR2025 (3V) size battery.



BATTERY REPLACEMENT

 
When the battery becomes weak, the operating distance of the remote control will be greatly reduced and you will need to replace the battery.

Note: If the remote control is not going to be used for a long time, remove the battery.

- WARNING:** Do not dispose of the battery in a fire or it may leak and/or explode.
- WARNING:** Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

CONTROL REFERENCE GUIDE


Remote Control

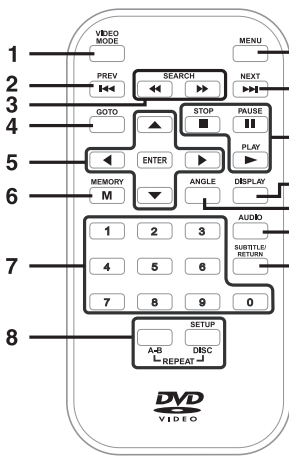

- VIDEO MODE Button**
Adjusts Brightness, Contrast, Color or View Mode of the LCD screen.
- PREV Button**
Goes back to current or previous chapters/tracks.
- SEARCH Buttons**
Fast reverse playback.
Fast forward playback.
- GOTO Button**
Skips directly to a location on a DVD or a CD.
- Cursor (V, A, P) Buttons**
Use to move between selections on a menu screen and adjust certain settings.
- ENTER Button**
Confirms selections on a menu screen.
- MEMORY Button**
Shows status information on the screen.
- STOP Button**
In STOP mode, sets titles/chapters in a favorite order.
- Number (0 - 9) Buttons**
Use when creating programs and locating a title/chapter or specific time.
- REPEAT A-B Button**
Performs point-to-point repeat playback on a DVD or CD.
- REPEAT DISC Button**
Repeats a DVD chapter or title.
Repeats a CD track or the entire disc.
- SETUP Button**
Opens and closes the SETUP menu while in stop mode.
- SUBTITLE Button**
Selects one of the subtitle languages programmed on a DVD (if available).
- RETURN Button**
Returns to normal operation after using the SETUP menu of a DVD.
- AUDIO Button**
Selects one of the audio sound tracks programmed on a DVD or select the audio output mode on an Audio CD.
- ANGLE Button**
Switches between multiple camera angles when the DVD you are playing has been programmed with multiple camera angles.
- DISPLAY Button**
Shows status information on the screen.
- STOP Button**
Stops playing a disc.
- PLAY Button**
Starts or resumes playback of a disc.
- PAUSE Button**
Pauses playback of a disc. Each time you press the PAUSE button the picture advances one frame on a DVD. Press the PLAY button to resume playback.
- NEXT Button**
Advances chapters/tracks.
- MENU Button**
Opens and closes the DVD menu.

IMPORTANT NOTE:
The included remote controls have different color keys to identify which unit they operate. The remote control with GREEN keys operates the unit which has GREEN mark on the front of the unit. The remote control with BLUE keys operates the unit which has BLUE mark on the front of the unit.

 Unit

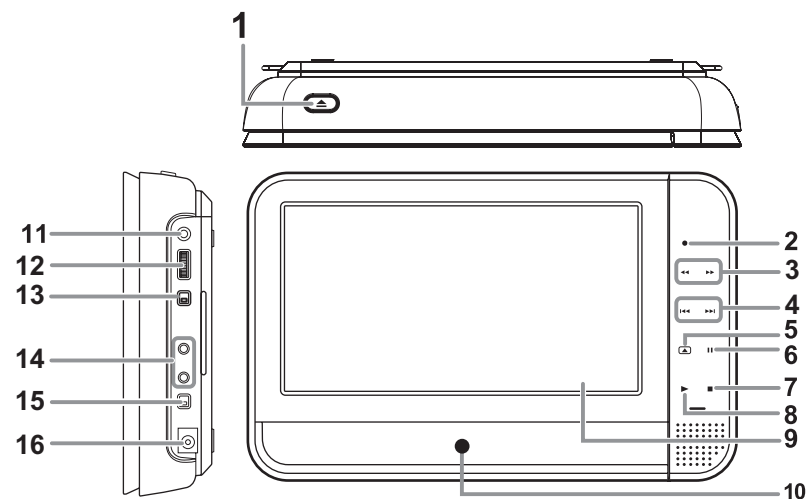


- Button**
Press the button to open the front panel, press the inside disc switch to open the disc door.
- STANDBY / ON Indicator**
When the STANDBY / ON switch is slid to STANDBY position, the red light will illuminate.
- SEARCH Button**
Performs fast reverse playback.
- PREV Button**
Goes back to current or previous chapters/tracks.
- Flip Button**
Flips the screen image.
- PAUSE Button**
Pauses playback of a disc. Each time you press the PAUSE button the picture advances one frame on a DVD. Press the PLAY button to resume playback.
- STOP Button**
Stops playing a disc.
- PLAY Button**
Starts or resumes playback of a disc.
- LCD Screen**
- Remote Sensor**
Receives the remote control signal.
- Headphone Jack**
- VOLUME Control**
Adjusts the volume.
- Standby/On Switch**
- AUDIO / VIDEO IN / OUT Jacks**
- AV IN / DVD Switch**
- DC IN 9V-12V Jack**

POWER SUPPLY

A. Using the AC Power Adapter

 
The supplied AC power adapter operates on AC 100-120V ~50/60Hz.

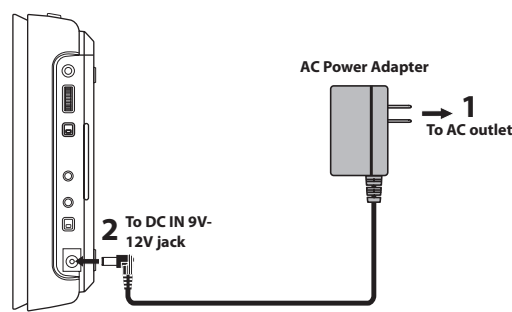


- Caution:**
 - The AC power adapter included with this unit is for its use only. Do not use it with other equipment.
 - When the unit is not going to be used for long time, disconnect the AC power adapter from the AC power outlet.
 - When the AC power adapter is plugged in, the apparatus is not completely disconnected from the main power supply, even when the power is turned off.
- Warning:**
The AC power adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the AC power adapter should be disconnected from the mains socket outlet completely.

B. Using the Car Power Adapter

 The 12V car power adapter allows the unit to be used with vehicles that have a 12V, negative ground electrical system.

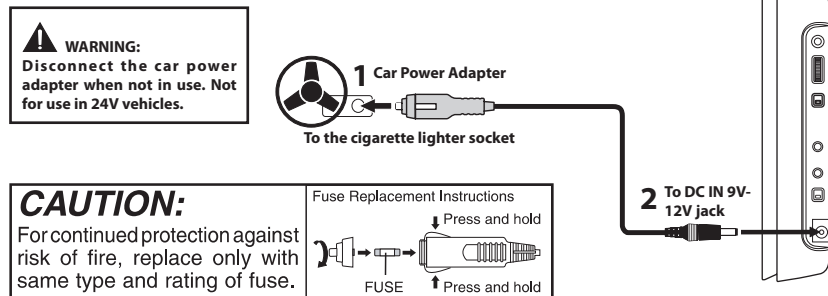


 CAUTION: For continued protection against risk of fire, replace only with same type and rating of fuse.



C. Using the Car Power Splitter

 The 12V car power splitter allows the units to be used with vehicles that have a 12V, negative ground electrical system.

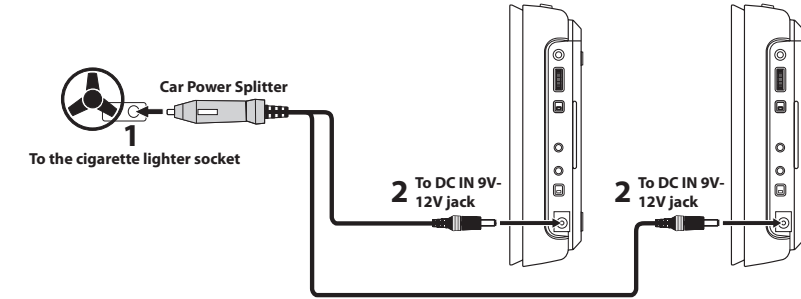

- Caution:**
 - Use the provided 12V car power adapter/splitter only. Use with other car power adapters/splitters could damage the unit.
 - The 12V car power adapter/splitter included with this unit are for its use only. Do not use them with other equipment.
 - In the interest of traffic safety, do not operate this unit or view videos while driving a vehicle.
 - Make sure the unit is securely fastened to prevent it from falling or flying through the air in the event of an accident.
 - If the inside of the cigarette lighter socket is dirty with ashes or dust, the plug section may become hot due to poor contact. Be sure to clean the cigarette lighter socket before use.
 - After use, disconnect the 12V car power adapter/splitter from both the unit and cigarette lighter socket.

 
Turning on the Unit

- Slide the STANDBY / ON switch on the top of the unit to the ON position.
- The DVD logo (start-up picture) will appear on the screen.
- After use, slide the STANDBY / ON switch to the STANDBY (power off) position.

CONNECTIONS

A. Connecting both Units to Watch one DVD

You can watch the same DVD on the both units at the same time.

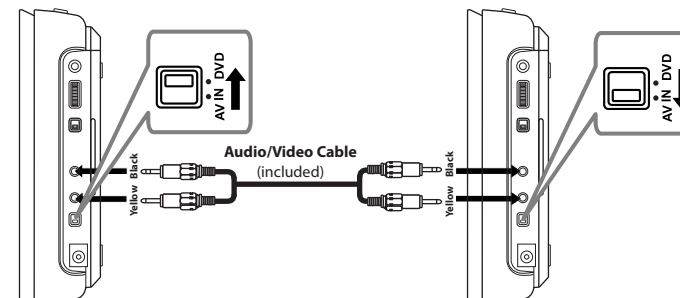


Watching the same DVD on both units

- Turn on the units. Slide the AV IN / DVD switch on the unit in which the DVD disc is loaded to DVD position. (Control DVD playback with this unit and its remote control.)
- Slide the AV IN / DVD switch on the other unit to AV IN position.

B. Using Headphones / Earphones

 
- Turn down the volume before connecting, and then adjust the level.
- When headphones/earphones are connected, no sound will be emitted from the unit's speaker.

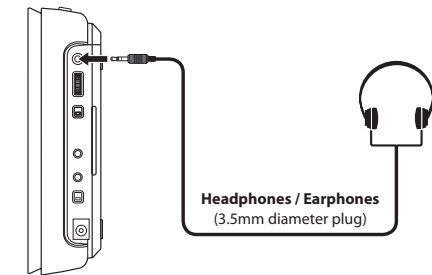

Caution: Avoid listening to sound at levels which may be harmful to your ears.


FOR DESKTOP USE

 You can flip up the display for desk-top or table-top viewing.

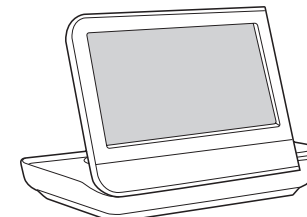


INSTALLING IN A VEHICLE

 Use the supplied mounting straps to install the units on the back of the vehicle's headrests. Tightly wrap the mounting straps around the headrest.

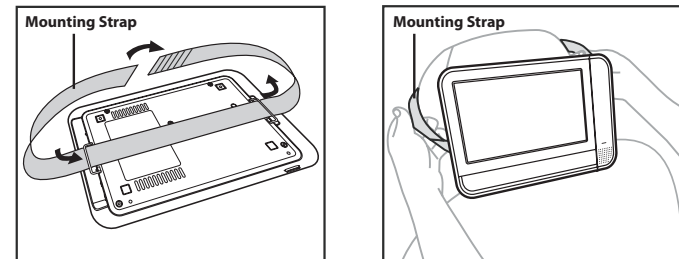

INSTALLATION GUIDE

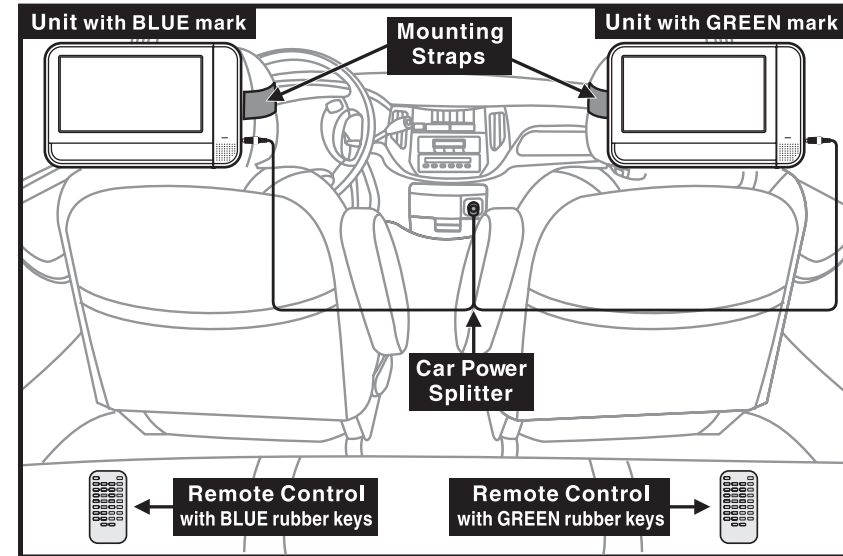 

- SAFETY WARNING!**
 - This unit should never be used by the vehicle's driver or left unsecured in the vehicle while driving.
 - If this unit is being used in your vehicle, be sure that it is secured or held safely, and does not obstruct any safety device, including air bags or seat belts.
 - All passengers should wear seat belts when using this unit in a moving vehicle.
 - If in doubt, please contact your vehicle manufacturer for further advice.

LIMITED WARRANTY

AVC MULTIMEDIA ("AVC") makes the following limited warranty. This limited warranty extends to the original consumer purchaser and is limited to non-commercial use of the product.

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at AVC's sole discretion.

During a period of one year from the effective warranty date, AVC will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States, you must first call our Customer Support Center at 1-800-506-5746 or 1-877-252-6873, during the hours listed in the box below. The determination of service will be made by AVC Customer Support. PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the AVC service facility you must use the original carton box and packing material or an equivalent as designated by AVC.

LIMITED WARRANTY

Your Responsibility

- You must retain the original sale receipt to provide proof of purchase.
- These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.
- Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of AVC, or to products or parts thereof which have had the serial number removed or changed.

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at 1-800-506-5746, 1-877-252-6873 or www.RCAav.com
Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm, Saturday: 9am-NOON Eastern time.
Important: You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above. With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall AVC be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time when action must be commenced to enforce any obligation of AVC arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please visit our web site at www.RCAav.com

Important: Also keep your "Bill of Sale" as proof of purchase.

Model no. Product name.....
Type of set
Serial no. Invoice no.
Date purchased..... Dealer name

FOR SERVICE AND REPAIR, PLEASE VISIT www.RCAav.com



PLAYING A DISC Basic playback

 
This owner's manual explains the basic instructions for operating this unit. Some DVDs are produced in a manner that allows specific or limited operation during playback. Therefore, this unit may not respond to all operating commands. THIS IS NOT A DEFECT. Please refer to the instructions accompanying the specific DVD in question for more information about the options available on that DVD.

"" may appear on the screen during operation. A "" means that the desired operation is not permitted by the unit or disc.

Playing a Disc

- Slide the **STANDBY / ON** switch on the top of the unit to the ON position. See **CUSTOMIZING THE FUNCTION SETTINGS** before proceeding to step 2.
- Press the button to open the front panel, press the inside disc switch to open the disc door.
- Hold the disc by its sides and carefully place it onto the spindle with the label side facing up, pushing gently until you hear a "click".
- Gently push the disc door closed. It takes a short while for your unit to load the disc. After loading, for most DVDs, the unit will automatically start playing or take you to the main menu.
- If the unit does not automatically start playing the DVD, press the **▶ PLAY** button.

Press here to open



Pausing Playback (Still Mode)

Press the **II PAUSE** button. To resume normal playback, press the **▶ PLAY** button. Each time you press the **II PAUSE** button, the picture advances one frame on a DVD.

Stopping Playback

Press the **■ STOP** button at the location where you want to interrupt playback. To resume playback at the position where the disc was stopped, press the **▶ PLAY** button.

If you press the **■ STOP** button twice, the unit's memory will be cleared and pressing the **▶ PLAY** button will reset the disc to the beginning.

Fast Forward / Fast Reverse

1. Press the **SEARCH** or **◀ SEARCH** button when a disc is playing. Each time you press the **SEARCH** or **◀ SEARCH** button, the playback speed changes in the following sequence:



- Press the **▶ PLAY** button when you reach the desired point to resume normal playback.

- Notes:**
- The DVD player mutes sound and subtitles during reverse and forward scan of DVDs.
 - The fast playback speed may differ depending on the disc.

Skip (Forward / Reverse)

- Press the **▶▶ NEXT** button to advance chapters/tracks.
- Press the **◀◀ PREV** button to go back to current or previous chapters/tracks.
- For Audio CDs, use the number buttons on the remote control to jump directly to the desired track.

Audio Selection

On some DVDs, the sound is recorded in two or more formats. Follow the directions below to select the preferred language and sound system.

- While a DVD is playing, press the **AUDIO** button to show the current audio format number. 2/4 D 2 Ch Eng
- Press the **AUDIO** button repeatedly to select the desired audio format.

- Notes:**
- If only one audio format is recorded on the DVD, the number does not change.
 - Some DVDs allow you to change audio selections via the disc menu only. If this is the case, press the **MENU** button and choose the appropriate language on the disc menu.
 - You can select different audio channels (Stereo, Left or Right) on an Audio CD by pressing the **AUDIO** button repeatedly.

Subtitle Selection

 
- While a DVD is playing, press the **SUBTITLE** button to display the current language setting, as shown in 1/4 Eng
- Press the **SUBTITLE** button repeatedly to select the desired subtitle language. You can turn subtitles off by pressing the **SUBTITLE** button repeatedly until Off is displayed.

- Notes:**
- Some DVDs are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
 - During some scenes, the subtitles may not appear immediately after you select your desired scene.
 - The number of subtitle languages recorded differs depending on the disc. If only one language is recorded, the language does not change.
 - This function can only be used for discs on which subtitles have been recorded in multiple languages.
 - Some DVDs allow you to change subtitles via the disc menu only. If this is the case, press the **MENU** button and choose the appropriate subtitle on the disc menu.

Angle Selection

Some DVDs contain scenes which have been shot from a number of different angles. For these discs, the same scene can be viewed from each of these different angles.

- While you are playing a DVD with different angles recorded, press the **ANGLE** button to view the number of current angles available.
- Press the **ANGLE** button repeatedly to change the scene to the next recorded angle.
- After approx. two seconds, playback will continue from the new angle selected.
- If no button is pressed within 10 seconds, playback continues without changing the current angle.

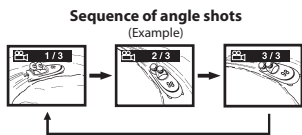

- Notes:**
- This function can only be used for discs on which scenes shot from multiple angles have been recorded.
 - If only one angle is recorded, " 1/1" is displayed.

Display Function

While the disc is playing, press the **DISPLAY** button repeatedly to display information on operation status.

Elapsed Time: Elapsed time from the beginning of the title which is currently playing.

Remain Time: Remaining time of the title which is currently playing.

Angle 1/3

Title 1/3 Chapter 1/5

Audio 2/4 D 2 Ch Eng

Subtitle 1/4 Eng

Angle 1/3

Angle 1/3

Angle 1/3

Angle 1/3

Angle 1/3

Angle 1/3

Angle 1/3

Angle 1/3

REPEAT PLAYBACK

You can play a specific title or chapter repeatedly. (Title repeat, chapter repeat, A-B repeat)

Repeating a Chapter
1. While the DVD is playing, press the **REPEAT DISC** button until the "**Repeat Chapter**" indicator displays on the screen. The current chapter is played repeatedly.

Repeating a Title
2. While the DVD is playing, press the **REPEAT DISC** button until the "**Repeat Title**" indicator displays on the screen. The current title is played repeatedly.

To Resume Normal Playback
3. While the DVD is playing, press the **REPEAT DISC** button until the "**Repeat Off**" indicator displays on the screen.

Repeating a Single Track
1. While the CD disc is playing, press the **REPEAT DISC** button until the "**Repeat single**" indicator displays on the screen. The current track is played repeatedly.

Repeating a Whole Disc
2. While the CD disc is playing, press the **REPEAT DISC** button until the "**Repeat all**" indicator displays on the screen. The whole disc is played repeatedly.

To Resume Normal Playback
3. Press the **REPEAT DISC** button until the "**Repeat off**" indicator displays on the screen.

Repeating a Specific Section
You can play a specific section repeatedly.

- While the disc is playing, press the **REPEAT A-B** button at the beginning of the section ("**Rep A-B**" is displayed) you want to play repeatedly.
- Press the **REPEAT A-B** button again at the end of the section ("**Rep A-B**" is displayed).
- The unit will immediately begin replaying your selection.

To Resume Normal Playback
4. While the disc is playing, press the **REPEAT A-B** button until the "**RepAB Off**" indicator displays on the screen.

- Notes:**
- Some discs may not permit A-B repeat operation.
 - You can not set the A-B repeat function for a segment that includes multiple camera angles.
 - You can specify a segment only within the current title or track.
 - There may be a slight difference between point A and the location where playback actually resumes depending on the disc.

LOCATING A DESIRED SECTION

Locating a Specific Title
If a DVD contains title numbers, you can locate a specific title by directly selecting its title number.

- Press the **GOTO** button.
- Press the corresponding number button(s) for the title you want.
- Press the **ENTER** button to confirm. Playback starts from the selected section.

Locating a Specific Chapter
If you know the chapter number for the chapter that you want to play, you can locate it by directly selecting that number.

- Press the **GOTO** button.
- Press **▲** or **▼** button to display Chapter and press the corresponding number button(s) for the chapter you want.
- Press the **ENTER** button to confirm. Playback starts from the selected section.

Locating a Specific Time
You can move to a specific location by entering its corresponding time (hours, minutes, seconds).

- Press the **GOTO** button.
- Press **▲** or **▼** button to display Time and press the corresponding number buttons for the setting point you want.
- Press the **ENTER** button to confirm. Playback starts from the selected section.

Notes:

- If the numbers you entered is not permitted by the DVD, after you press the **ENTER** button, it will restore to "--:--". You should re-enter correct numbers.
- Some discs may not respond to this process.
- Some scenes may not be located as precisely as you specified.
- This method for accessing specific locations is available only within the current title of the DVD.

DVD PROGRAMMABLE MEMORY

Playing Titles/Chapters in a Favorite Order
You can combine your favorite titles/chapters and play them in the order you determine.

- When a DVD is stopped, press the **MEMORY** button, the right display appears.
- Select the items in the order you want by pressing the number buttons. Each time you press the Cursor buttons (**▼**, **▲**, **◀**, **▶**), the space is highlighted. Highlight where you want to enter, then press the corresponding number buttons.
- Press the Cursor buttons (**▼**, **▲**, **◀**, **▶**) to move the highlighted bar to Play Memory, then press the **ENTER** button. The DVD player starts memory playback.
- To resume normal playback from memory playback
 - When a DVD is stopped, press the **MEMORY** button.
 - Press the Cursor buttons (**▼**, **▲**, **◀**, **▶**) to move the highlighted bar to "Clear All", then press the **ENTER** button. All the input programs will be cleared.
 - Press the **▶ PLAY** button to resume normal playback.

Notes:

- If the title or chapter numbers you entered is not permitted by the DVD, after you press the **ENTER** button, it will restore to "--:--". You should re-enter the correct numbers.
- Some discs may not permit memory playback operation.
- If you select repeat during memory playback, the DVD player repeats the current memory playback.
- If you press the **MEMORY** button while the display appears on the TV screen, the display disappears.
- The programmed selections will be cleared when you open the disc tray or turn off the DVD player.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.

Notes:

- You can press the **II PAUSE** button to freeze the picture, and press the **▶ PLAY** button to resume slide show.
- You can press the **■ STOP** button to quit playback.
- You can press the **◀◀ PREV** or **▶▶ NEXT** button to change the picture. Press the **◀◀ PREV** button to view the previous picture. Press the **▶▶ NEXT** button to view the next picture.
- You can press the **ANGLE** button on the remote control to rotate the direction of the picture by 90°.
- Some discs may not permit this operation.