



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SHARP R-9H73. You'll find the answers to all your questions on the SHARP R-9H73 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SHARP R-9H73
User guide SHARP R-9H73
Operating instructions SHARP R-9H73
Instructions for use SHARP R-9H73
Instruction manual SHARP R-9H73

SHARP HIGH SPEED CONVECTION MICROWAVE OVEN OPERATION MANUAL

Carousel®

MODEL

R-90GC

CONTENTS

- Precautions to Avoid Possible Exposure to Excessive Microwave Energy Inside Front Cover
- For Customer Assistance ... Inside Front Cover
- Consumer Limited Warranty 1
- Product Information Card 1
- Important Safety Instructions 2
- Unpacking and Installation Instructions... 3
- Grounding Instructions 4
- Information You Need to Know 5-8
- Part Names 9-10
- Before Operating 11
- Manual Cooking 11-14
- Automatic Cooking 15-27
 - Speed Cooking 15-22
 - Microwave Options 23-27
- Other Convenient Features 28-30
- Cleaning and Care 31
- Service Call Check 32
- Specifications 32

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN.



[Your user manual SHARP R-9H73](#)

Manual abstract:

b. Stir the liquid both before and halfway through heating it. c. Do not use straight-sided containers with narrow necks. Use a wide-mouthed container. d. After heating, allow the container to stand in the microwave oven at least for 20 seconds before removing the container. e. Use extreme care when inserting a spoon or other utensil into the container. If the oven light fails, consult a SHARP AUTHORIZED SERVICER.

Do not operate any heating or cooking appliance beneath this appliance, except a properly installed electric wall oven listed on page 3. Do not mount unit over or near any portion of a heating or cooking appliance, except a properly installed electric wall oven listed on page 3. Do not mount over a sink. Do not store anything directly on top of the appliance surface when the appliance is in operation. TIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" on inside front cover.

3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" on page 4. 4.

Install or locate this appliance only in accordance with the provided installation instructions. 5. Some products such as whole eggs and sealed containers --for example, closed glass jars -- are able to explode and should not be heated in this oven. 6. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use. 7. As with any appliance, close supervision is necessary when used by children.

8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. 9. This appliance should be serviced only by qualified service personnel. Contact nearest Sharp Authorized Servicer for examination, repair or adjustment. 10. Do not cover or block any openings on the appliance. 11. Do not store or use this appliance outdoors. Do not use this product near water--for example, near a kitchen sink, in a wet basement, near a swimming pool or similar locations.

12. Do not immerse cord or plug in water. 13. Keep cord away from heated surfaces. 14.

Do not let cord hang over edge of table or counter. 15. See door surface cleaning instructions on page 31. 16. To reduce the risk of fire in the oven cavity: a. Do not overcook food. Carefully attend appliance when paper, plastic or other combustible materials are placed inside the oven to facilitate cooking. 17. 18. 19. 20. 21. 22. SAVE THESE INSTRUCTIONS 2 U N P A C K I N G A N D I N S T A L L A T I O N I N S T R U C T I O N S Unpacking and Examining Your Oven Remove: 1. all packing materials from inside the oven cavity; however, DO NOT REMOVE THE WAVEGUIDE COVER, which is located on the right cavity wall.

Read enclosures and SAVE the Operation Manual, Sharp High Speed Convection Microwave Oven Cookbook and Touch Guide. Safety door latches Waveguide cover Choosing a Location for Your Oven You will use your oven frequently so plan its location for ease of use. The oven must be placed on a countertop which is a minimum of 36 inches from the floor. Allow at least 2 inches on the sides, top and at the rear of the oven for air circulation. Be sure to position oven so that the rear cannot be touched inadvertently. Your oven can be built into a cabinet or wall by itself or above a specific electric wall oven using Sharp's Built-in Kit listed below. It cannot be built in above conventional gas or electric ranges or any other wall ovens. Sharp's Built-in kits RK-90S30 Applicable Electric Wall Ovens G.E. DCS VIKING DCS VIKING JTP18S0D1SS DCS-WO-130SS VESO105SS DCS-WO-127SS VESO176SS RK-90S27 Door seals and sealing surfaces Door hinges 2.

the feature sticker, if there is one, from the outside of the door. Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surfaces, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact your dealer or SHARP AUTHORIZED SERVICER. Note for Sharp's Built-in kits: Select the Built-in kit RK-90S27 or RK-90S30 depending on the desired finished width. The RK90S27 is for a 27 inch and the RK-90S30 is for a 30 inch finished width.



[Your user manual](#)
[SHARP R-9H73](#)