

LCD/Blu-ray Disc Combo TV Software Update Procedure

This document describes the procedure to update the software for LCD/Blu-ray Disc Combo TV:

LT-42B300

> Tools Required

In preparing for the software update, you must meet the following requirements:

- Access to a PC capable of extracting ZIP archive files
- Access to a PC capable of writing one of the following formats DVD-RW / DVD-R / CD-RW / CD-R (*Only for Blu-ray Player's Software Updating*)

For Blu-ray Player's Software Update

> Step 1 Check the Blu-ray Player's Current Software Version

1. Turn on the unit
2. Press [SETUP] to display the main menu
3. Use [Cursor ▲/▼] to select "BLU-RAY", then press [ENTER]
4. Use [Cursor ▲/▼] to select "BD Loader", then press [ENTER]
5. Use [Cursor ▲/▼] to select "Settings", then press [ENTER]
6. Use [Cursor ▲/▼] to select "Software Upgrade", then press [ENTER]
7. Use [Cursor ▲/▼] to select "Current Version", then press [ENTER]

The Blu-ray Player's current software version will be shown on your TV screen



> Step 2 Download the Latest Software for Blu-ray Player

1. Visit firmware.jvc.com
2. Download the update software for the Blu-ray Player
3. Save the downloaded file to your desktop

> Step 3 Unzip and Burn the Contents

Once you have downloaded the correct software for your LCD/Blu-ray combo TV, extract the ZIP file and burn it to a disc

**Note: This procedure will vary depending on the operating system and software you are using
Please refer to the software manufacturer's instructions**

> Step 4 Install the Software Update for the Blu-ray Player

Once you have created a software update disc, follow the procedure below to update the software on the unit

Note: Only Blu-ray settings will be reset to default during update process

1. Turn on the unit
2. Press [SETUP] to display the main menu
3. Use [Cursor ▲/▼] to select "BLU-RAY", then press [ENTER]
4. Use [Cursor ▲/▼] to select "BD Loader", then press [ENTER]
5. Use [Cursor ▲/▼] to select "Settings", then press [ENTER]
6. Use [Cursor ▲/▼] to select "Software Upgrade", then press [ENTER]
7. Use [Cursor ▲/▼] to select "Disc Upgrade", then press [ENTER]
8. Use [Cursor ▲/▼] to select "Yes", then press [ENTER]



9. Insert the software update disc created in Step 3 into the disc slot of the Blu-ray Player
The unit will begin to load the disc automatically



Note: If the disc does not load or you receive the error message, check your disc and try again.
Acceptable discformats are DVD-RW / DVD-R / CD-RW / CD-R.

10. After a brief delay, the “Current Version” and “Insert Version” of Blu-ray Player’s software will be shown on the TV screen
Use [Cursor ◀ / ▶] to select “Yes”, then press [ENTER]
The unit will begin to read the disc




Note: If the latest Software Version is already installed, a message will appear indicating this
Press [BACK] to exit the software update

11. After a brief delay, the update process will begin automatically
DO NOT TURN OFF THE UNIT AT THIS TIME



12. After the software update has completed successfully, the "Finish" message will be shown at the bottom right of the TV screen

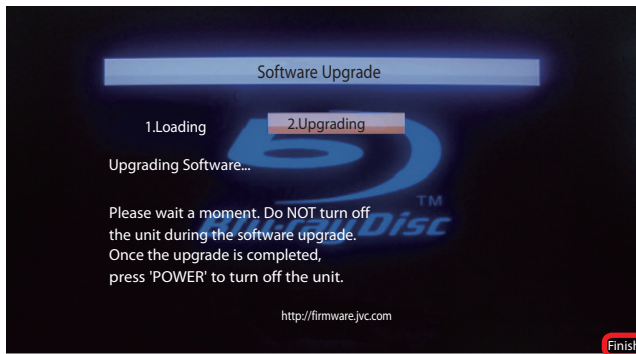

13. Turn off the LCD/Blu-ray Combo TV and wait 30 seconds
14. Turn on the LCD/Blu-ray Combo TV. The software update disc will be ejected automatically
The Blu-ray Player's software update is now complete