

# TOSHIBA



## DVD VIDEO PLAYER **SD-330ESB**

*OWNER'S MANUAL*



Introduction **2**

Connections **18**

Basic playback **26**

Advanced playback **34**

Function setup **58**

Others **70**



# SAFETY PRECAUTIONS

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

**CAUTION:** This Digital Video Disc Player employs a Laser System. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible and invisible laser radiation when open and interlocks defeated. DO NOT STARE INTO BEAM.



In the spaces provided below, record the Model and Serial No. located on the rear panel of your DVD video player.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

Retain this information for future reference.

The following information applies only to the model for U.K.

## General Information

If the socket outlets in your home are not suitable for the plug supplied with this unit, the plug must be cut off and an appropriate one fitted.

The plug severed from this mains lead must be destroyed as it is hazardous if inserted into a live socket.

### IMPORTANT

*The wires in this mains lead are coloured in accordance with the following code:*

*BLUE: NEUTRAL*

*BROWN: LIVE*

*As the colours of the wires in the mains lead of this unit may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:*

*The wire that is coloured blue must be connected to the terminal in the plug which is marked with the letter N or coloured black.*


*The wire that is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.*

Do not connect either wire to the earth terminal which is marked by the letter E or by the safety earth symbol  $\perp$  or coloured green or green-and-yellow.

Use a 5A fuse which is approved by ASTA or BSI to BS1362. Always replace the fuse cover after changing the fuse.

## Location of the required label

The rating plate and the safety caution are on the rear of the unit.

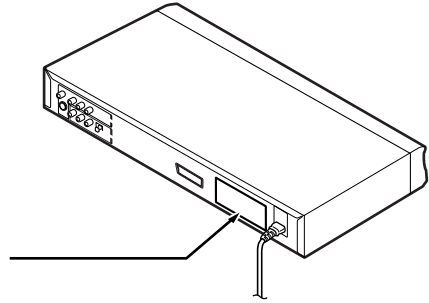

# IMPORTANT SAFETY INSTRUCTIONS

---

**CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

**DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
  
10. Only use attachments/accessories specified by the manufacturer.
  
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



12. Unplug this apparatus during lightning storms or when unused for long periods of time.

# IMPORTANT SAFETY INSTRUCTIONS

---

13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## ADDITIONAL SAFETY INSTRUCTIONS

---

14. When you use headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.

15. Do not overload wall outlets; extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

16. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

17. Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.

- 
18. Do not place a heavy object on or step on the apparatus. The object may fall, causing serious personal injury and serious damage to the apparatus.
  
  19. Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and apparatus malfunction.

## Precautions

### Notes on handling

- When shipping the DVD video player, the original shipping carton and packing materials come in handy. For maximum protection, repack the unit as it was originally packed at the factory.
- Do not use volatile liquids, such as insect spray, near the DVD video player. Do not leave rubber or plastic products in contact with the DVD video player for a long time. They will leave marks on the finish.
- The top and rear panels of the DVD video player may become warm after a long period of use. This is not a malfunction.
- When the DVD video player is not in use, be sure to remove the disc and turn off the power.
- If you do not use the DVD video player for a long period, the unit may not function properly in the future. Turn on and use the DVD video player occasionally.

### Notes on locating

- Place the DVD video player on a level surface. Do not use it on a shaky or unstable surface such as a wobbling table or inclined stand. The loaded disc may come off the proper position and cause damage to the DVD video player.
- When you place this DVD video player near a TV, radio, or VTR, the playback picture may become poor and the sound may be distorted. In this case, place the DVD video player away from the TV, radio, or VTR.

### Notes on cleaning

Use a soft, dry cloth for cleaning.

- For stubborn dirt, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry.  
Do not use any type of solvent, such as thinner and benzine, as they may damage the surface of the DVD video player.
- If you use a chemical saturated cloth to clean the unit, follow that product's instructions.


### To obtain a clear picture

The DVD video player is a high technology, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality becomes poor. To obtain a clear picture, we recommend regular inspection and maintenance (cleaning or parts replacement) every 1,000 hours of use depending on the operating environment. For details, contact your nearest dealer.

### Notes on moisture condensation


#### Moisture condensation damages the DVD video player. Please read the following carefully.

Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD video player.

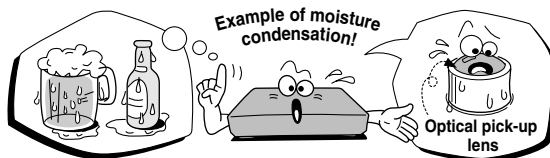


#### Moisture condensation occurs during the following cases.

- When you bring the DVD video player directly from a cold place to a warm place.
- When you use the DVD video player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
- In summer, when you use the DVD video player in a hot and humid place just after you move the unit from an air conditioned room.
- When you use the DVD video player in a humid place.

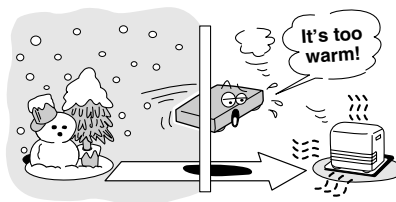

#### Do not use the DVD video player when moisture condensation may occur.


If you use the DVD video player in such a situation, it may damage discs and internal parts. Remove the disc, connect the power cord of the DVD video player to the wall outlet, turn on the DVD video player, and leave it for two or three hours. After two or three hours, the DVD video player will have warmed up and evaporated any moisture. Keep the DVD video player connected to the wall outlet and moisture condensation will seldom occur.

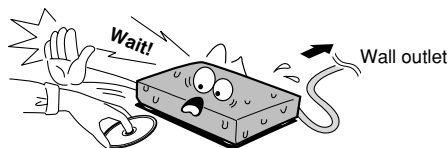



## On handling discs

- Do not touch the playback side of the disc.

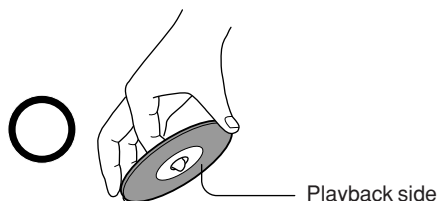


- Do not attach paper or tape to discs.



## On cleaning discs

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the center outwards with a soft cloth. Always keep the disc clean.

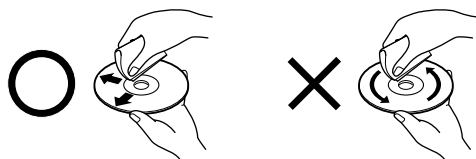

- If you cannot wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray for vinyl LPs. It may damage the disc.


## On storing discs

- Do not store discs in a place subject to direct sunlight or near heat sources.
- Do not store discs in places subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing objects on discs outside of their case may cause warping.

## Structure of disc contents

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs and audio CDs are divided into tracks.

DVD video disc

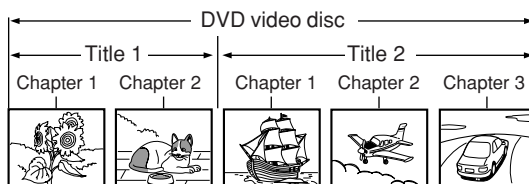

VIDEO CD/audio CD



Each title, chapter or track is assigned a number, which is called "title number", "chapter number" or "track number" respectively.

There may be discs that do not have these numbers.

## Notes on copyright

It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public, and rent copyrighted material without permission.

DVD video discs are copy protected, and any recordings made from these discs will be distorted.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.



# Notes on Discs (continued)

## About this owner's manual

This owner's manual explains the basic instructions of this DVD video player. Some DVD video discs are produced in a manner that allows specific or limited operation during playback. As such, the DVD video player may not respond to all operating commands. This is not a defect in the DVD video player. Refer to instruction notes of discs.

"Ⓢ" may appear on the TV screen during operation. A "Ⓢ" means that the operation is not permitted by the DVD video player or the disc.

## Notes on region numbers

The region number of this DVD video player is 2. If region numbers, which stand for their playable area, are printed on your DVD video disc and you do not find  or , disc playback will not be allowed by the player. (In this case, the DVD video player will display a message on-screen.)

## On VIDEO CDs

This DVD video player supports VIDEO CDs equipped with the PBC (Version 2.0) function. (PBC is the abbreviation of Playback Control.) You can enjoy two playback variations depending on types of discs.

- VIDEO CD not equipped with PBC function (Version 1.1)**  
 Sound and movie can be played on this DVD video player in the same way as an audio CD.
- VIDEO CD equipped with PBC function (Version 2.0)**  
 In addition to operation of a VIDEO CD not equipped with the PBC function, you can enjoy playback of interactive software with search function by using the menu displayed on the TV screen (Menu Playback). Some of the functions described in this owner's manual may not work with some discs.

## Playable discs

This DVD video player can play the following discs.

	Disc Mark	Contents	Disc Size	Maximum playback time
DVD video disc		Audio + video (moving pictures)	12 cm	Approx. 4 hours (single sided disc)
				Approx. 8 hours (double sided disc)
			8 cm	Approx. 80 minutes (single sided disc)
				Approx. 160 minutes (double sided disc)
VIDEO CD		Audio + video (moving pictures)	12 cm	Approx. 74 minutes
			8 cm	Approx. 20 minutes
Audio CD		Audio	12 cm	Approx. 74 minutes
			8 cm (CD single)	Approx. 20 minutes

The following discs are also available.

- DVD-R discs of DVD video format
- CD-R/CD-RW discs of CD-DA format

Some of these discs may be incompatible.

- You cannot play discs other than those listed above.
- You cannot play DVD-RAM discs or non-standardized discs, etc., even if they may be labeled as above.
- This DVD video player uses the PAL/NTSC colour system, and cannot play DVD video discs recorded in any other colour system (SECAM, etc.).

# Table of Contents

## Introduction

- **SAFETY PRECAUTIONS** ..... 2
- **IMPORTANT SAFETY INSTRUCTIONS** ... 4
- **Precautions** ..... 8
- **Notes on Discs** ..... 9
  - Notes on region numbers ..... 10
- **Table of Contents** ..... 11
- **Identification of Controls** ..... 12
  - Front panel ..... 12
  - Rear panel ..... 12
  - DVD display ..... 13
  - Remote control ..... 14
  - Loading batteries ..... 15
  - Operating with the remote control ..... 15

## Connections

- **Connecting to a TV** ..... 18
  - Connecting to a TV  
(Using the SCART socket) ..... 18
  - Connecting to a TV  
(Using the component video jacks) ..... 18
  - Connecting to a TV  
(Using the phono type jacks) ..... 19
- **Connecting to Optional Equipment** ..... 20
  - Connecting to an amplifier equipped with a  
Dolby Digital decoder ..... 21
  - Connecting to an amplifier equipped with  
Dolby Surround Pro Logic ..... 21
  - Connecting to an amplifier equipped with a  
DTS decoder ..... 22
  - Connecting to an amplifier equipped with an  
MPEG2 audio decoder ..... 22
  - Connecting to an amplifier equipped with a  
digital audio input ..... 23

## Basic playback

- **Playing a Disc** ..... 26
  - Basic playback ..... 26
- **Variable Speed Playback** ..... 28
  - Playing in fast reverse or fast forward  
directions ..... 28
  - Playing frame by frame ..... 28
  - Playing in slow-motion ..... 29
  - Resuming playback from the same location ... 29
- **Locating a Desired Section** ..... 30
  - Locating a title using the top menu ..... 30
  - Locating a desired section by entering the  
corresponding number ..... 31
  - Locating a specific chapter or track ..... 31

## Advanced playback

- **Accessing a Specific Location Directly** ... 34
  - Entering the time of the desired location ..... 34
- **Playing Repeatedly** ..... 35
  - Repeating a title, chapter, or track ..... 35
  - Repeating a specific segment ..... 35
- **Playing in a Favorite Order** ..... 36
  - Setting titles, chapters, or tracks in a favorite  
order ..... 36
- **Playing in Random Order** ..... 37
  - Playing titles, chapters or tracks in random  
order ..... 37
- **Zooming a Picture** ..... 38
  - Zooming a picture ..... 38
- **Selecting the Picture Enhancement  
(E.P.M.)** ..... 39
  - Selecting the picture enhancement ..... 39
- **Selecting the Sound Enhancement  
(E.A.M.)** ..... 40
  - Selecting the sound enhancement ..... 40
- **Selecting the Camera Angle** ..... 41
  - Changing the camera angle ..... 41
- **Selecting Subtitles** ..... 42
  - Selecting a subtitle language ..... 42
- **Selecting a Language** ..... 43
  - Selecting a playback audio setting ..... 43
- **Operating in the On-screen Display Mode** ... 44
  - Operating in the on-screen display mode ..... 44
- **Playing MP3/WMA Files** ..... 46
  - Playing MP3/WMA files ..... 46
- **Viewing JPEG Files** ..... 48
  - Starting from a thumbnail view ..... 48
  - Viewing a single image ..... 51
  - Playing slide show ..... 53
  - Selecting a folder ..... 54

## Function setup

- **Customizing the Function Settings** ..... 58
  - Setting procedure ..... 58
  - Setting details ..... 60
- **Table of Languages** ..... 67


## Others

- **Before Calling Service Personnel** ..... 70
- **Specifications** ..... 71


# Identification of Controls

See the page in   for details.

## Front panel


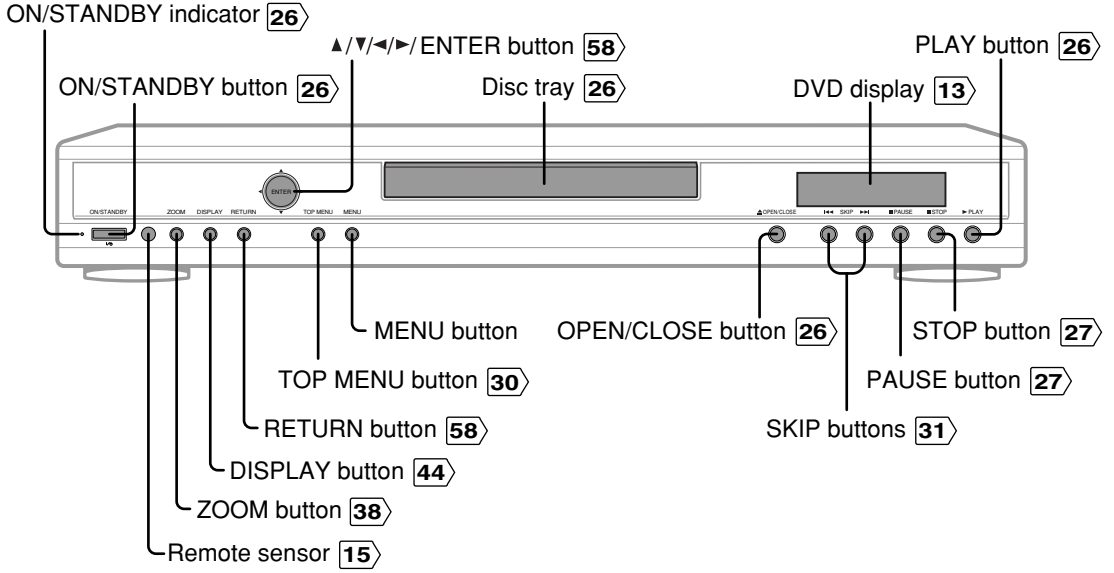


## Rear panel

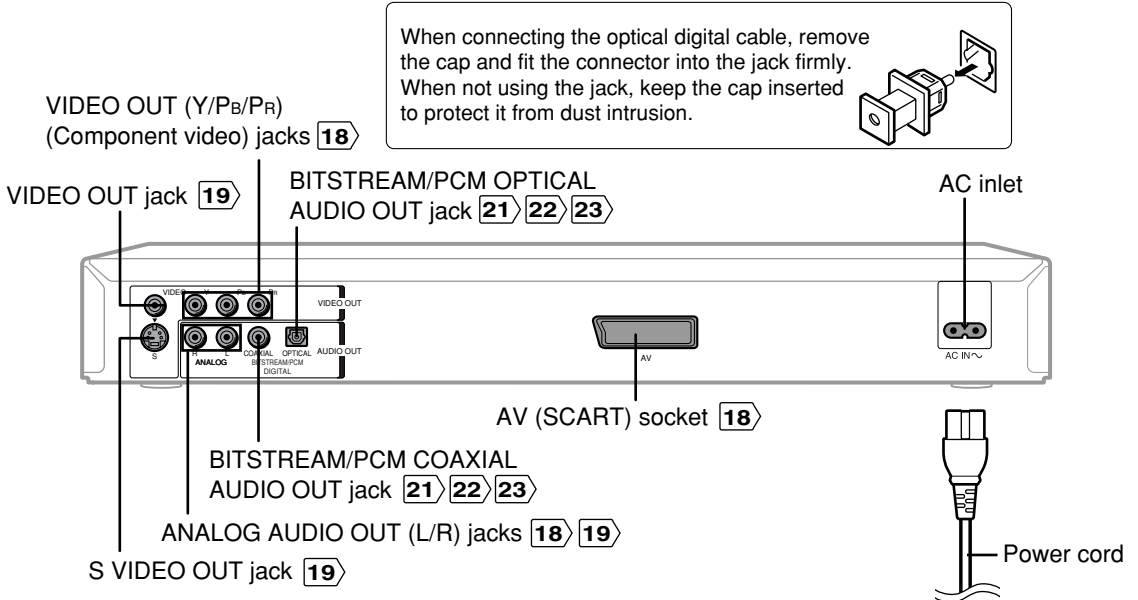

 
 

## DVD display

■ Pressing of the FL DIM button on the remote control changes the brightness of the display.

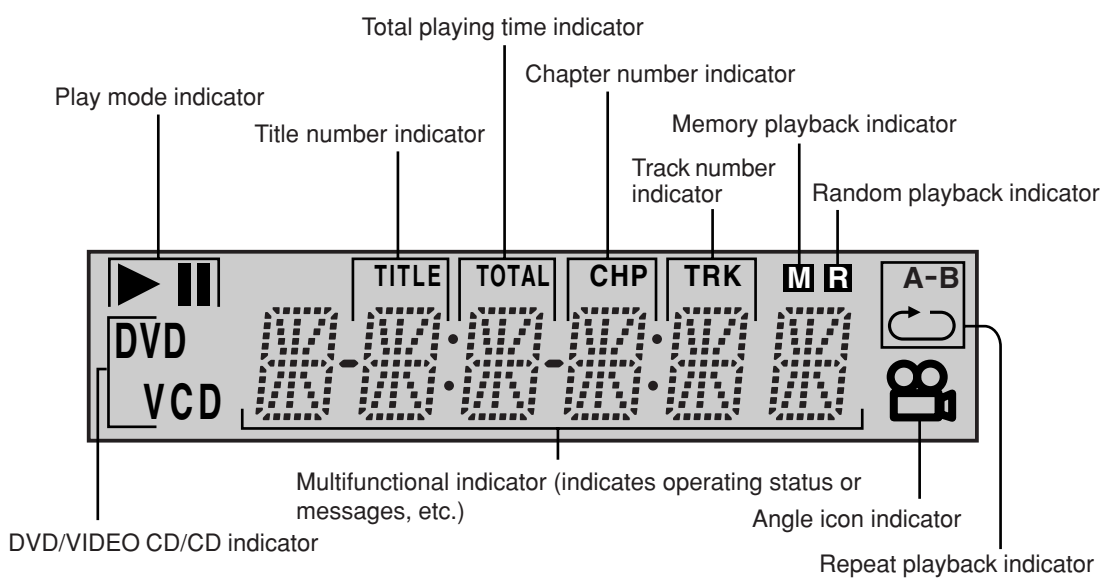


■ When you start playback, the elapsed time indicators appear. Pressing the FL SELECT button switches them to the title/chapter/track number indicators. Some discs may not permit this operation.

The indicators vary depending on the kinds of discs you play.

DVD video disc	VIDEO CD	Audio CD
<ul style="list-style-type: none"> <li>During playback:</li> </ul> <p>Example</p>  <p><b>Playing chapter 3 of title 2</b></p> <p>Some discs may not display chapter numbers or elapsed time.</p>	<ul style="list-style-type: none"> <li>During playback:</li> </ul> <p>Example</p>  <p><b>Playing track 6</b></p> <p>Some discs may not display track numbers or elapsed time.</p>	<ul style="list-style-type: none"> <li>During playback:</li> </ul> <p>Example</p>  <p><b>Playing track 6</b></p>

# Identification of Controls (continued)

The instructions in this manual describe the functions on the remote control. See the page in   for details.

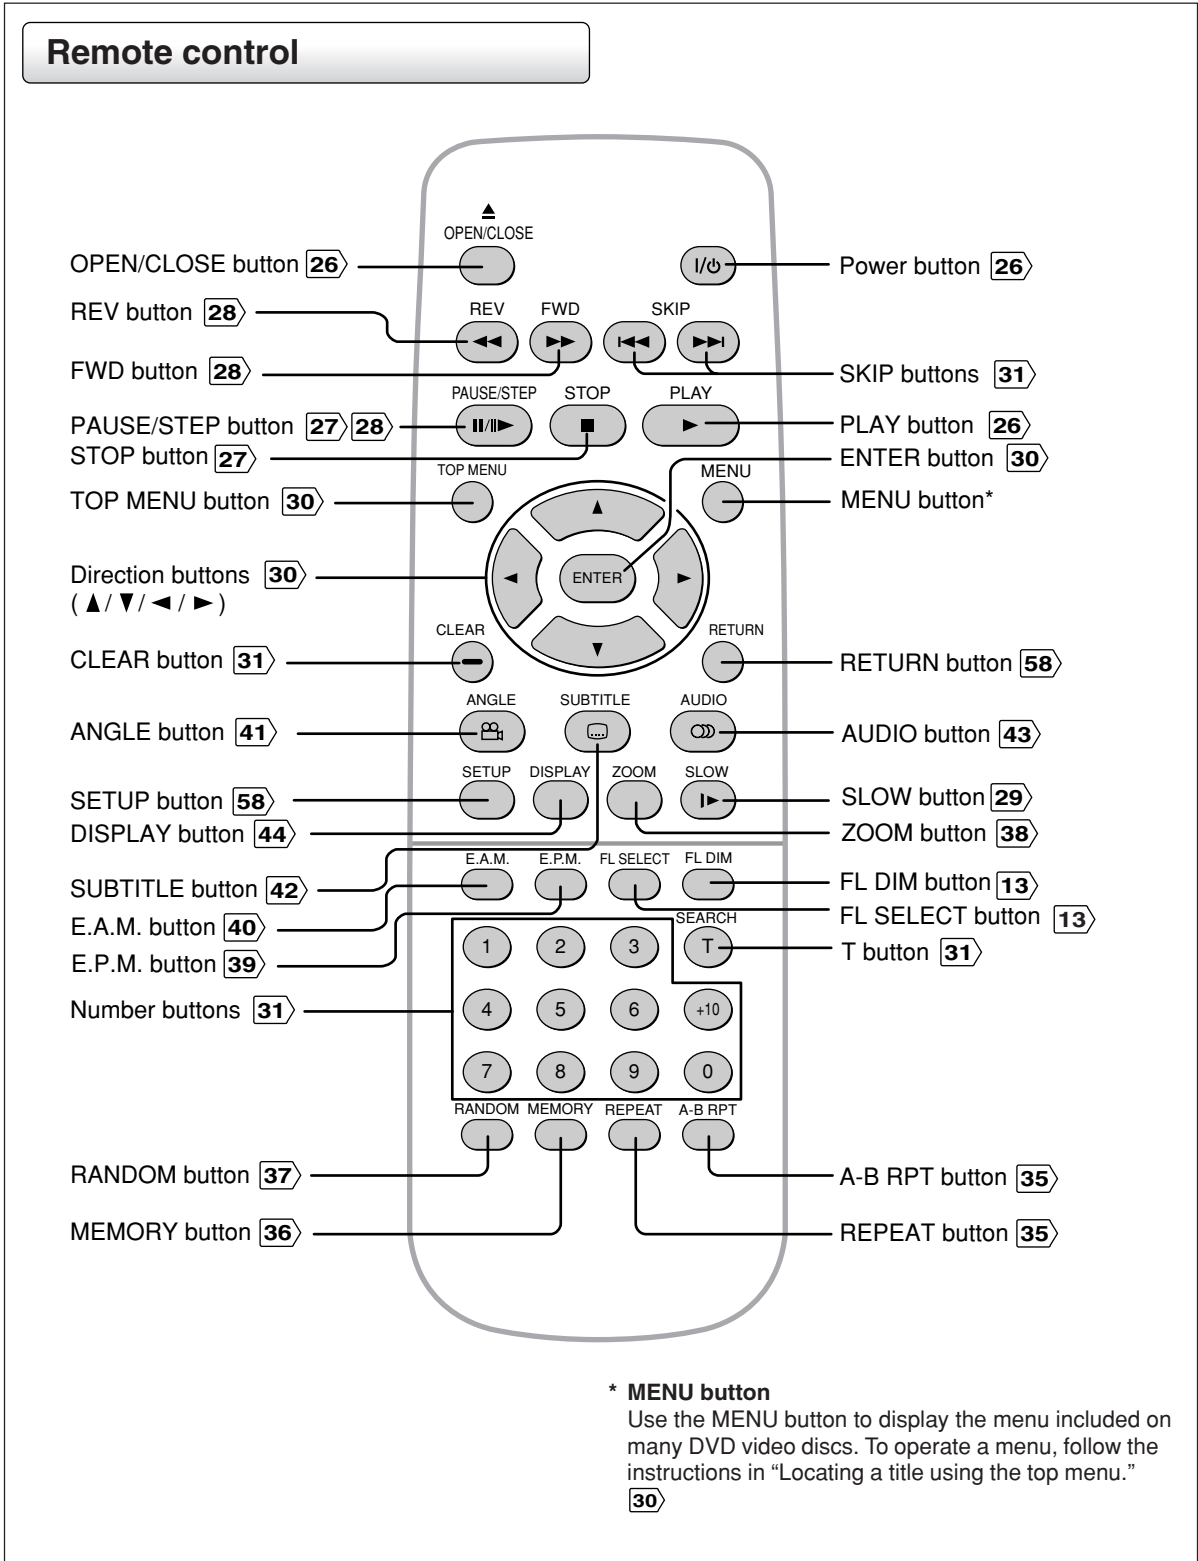


## ■ About the illustrations of the battery compartment

There are two types of battery compartment in the supplied remote controls. (This does not mean a difference in performance between the two.)


Refer to either illustration depending on the actual remote control.

### Loading batteries

#### 1 Open the cover.

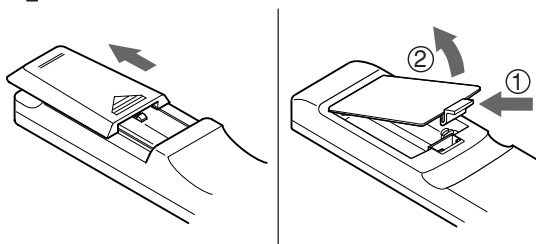

#### 2 Insert batteries (R6 size).

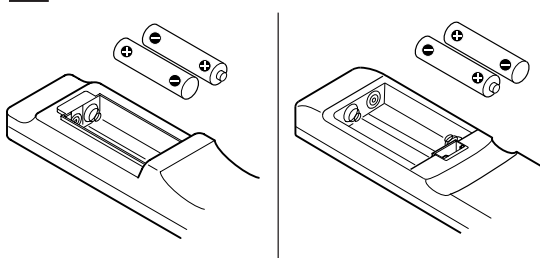

Make sure to match the + and – on the batteries to the marks inside the battery compartment.

#### 3 Close the cover.


#### Notes on batteries

Improper use of batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions below.

- Do not insert batteries into the remote control in the wrong direction.
- Do not charge, heat, open, or short-circuit the batteries. Do not throw batteries into a fire.
- Do not leave dead or exhausted batteries in the remote control.
- Do not use different types of batteries together, or mix old and new batteries.
- If you do not use the remote control for a long period of time, remove the batteries to avoid possible damage from battery corrosion.
- If the remote control does not function correctly or if the operating range becomes reduced, replace all batteries with new ones.
- If battery leakage occurs, wipe the battery liquid from the battery compartment, then insert new batteries.

### Operating with the remote control

#### Point the remote control at the remote sensor and press the buttons.

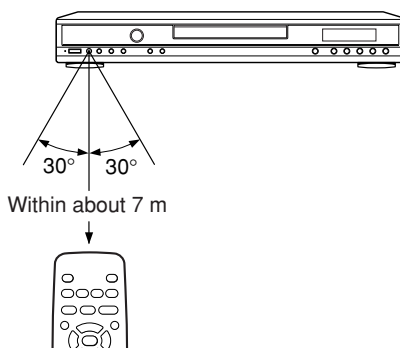

Distance: About 7 m from the front of the remote sensor

Angle: About 30° in each direction of the front of the remote sensor

\* Do not expose the remote sensor of the DVD video player to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the DVD video player via the remote control.

#### Notes on the remote control

- Direct the remote control at the remote sensor of the DVD video player.
- Do not drop or give the remote control a shock.
- Do not leave the remote control near an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Do not open the remote control.





# Connections

Read this chapter first to make all necessary preparations.

- **Connecting to a TV  
(Using the SCART socket)**
- **Connecting to a TV  
(Using the component video jacks)**
- **Connecting to a TV  
(Using the phono type jacks)**
- **Connecting to an amplifier  
equipped with a Dolby Digital  
decoder**
- **Connecting to an amplifier  
equipped with Dolby Surround  
Pro Logic**
- **Connecting to an amplifier  
equipped with a DTS decoder**
- **Connecting to an amplifier  
equipped with an MPEG2 audio  
decoder**
- **Connecting to an amplifier  
equipped with a digital audio  
input**

# Connecting to a TV


Connect the DVD video player to your TV.

For details of output sound, see **43**.

Connect the DVD video player directly to your TV. If you connect the DVD video player to a VTR, TV/VTR combination or video selector, the playback picture may be distorted as DVD video discs are copy protected.

## Connecting to a TV (Using the SCART socket)


- Normal TV
- TV compatible with S video signals
- RGB monitor

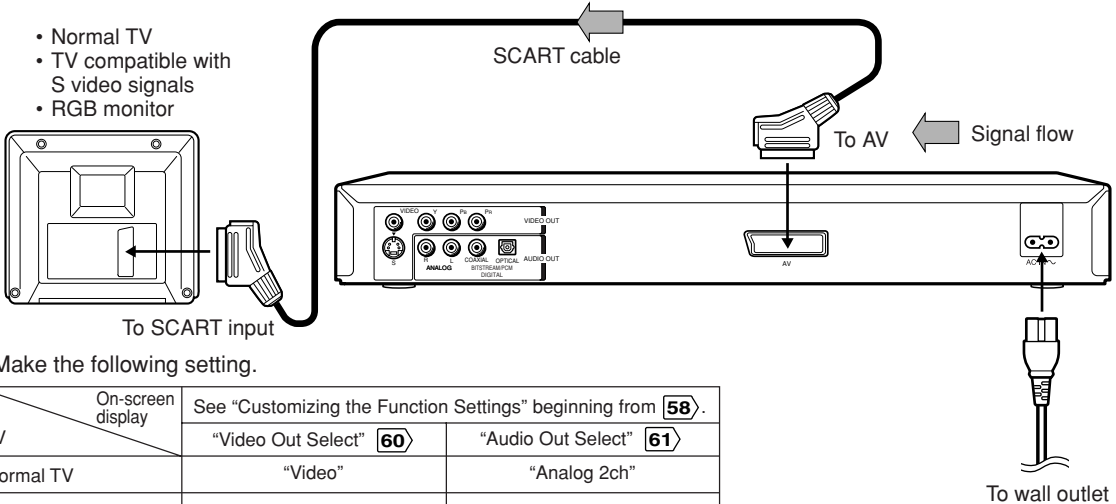

- Make the following setting.

On-screen display	See "Customizing the Function Settings" beginning from <b>58</b> .	
TV	"Video Out Select" <b>60</b>	"Audio Out Select" <b>61</b>
Normal TV	"Video"	"Analog 2ch"
TV compatible with S video signals	"S Video"	"Analog 2ch"
RGB monitor	"RGB"	"Analog 2ch"

## Connecting to a TV (Using the component video jacks)

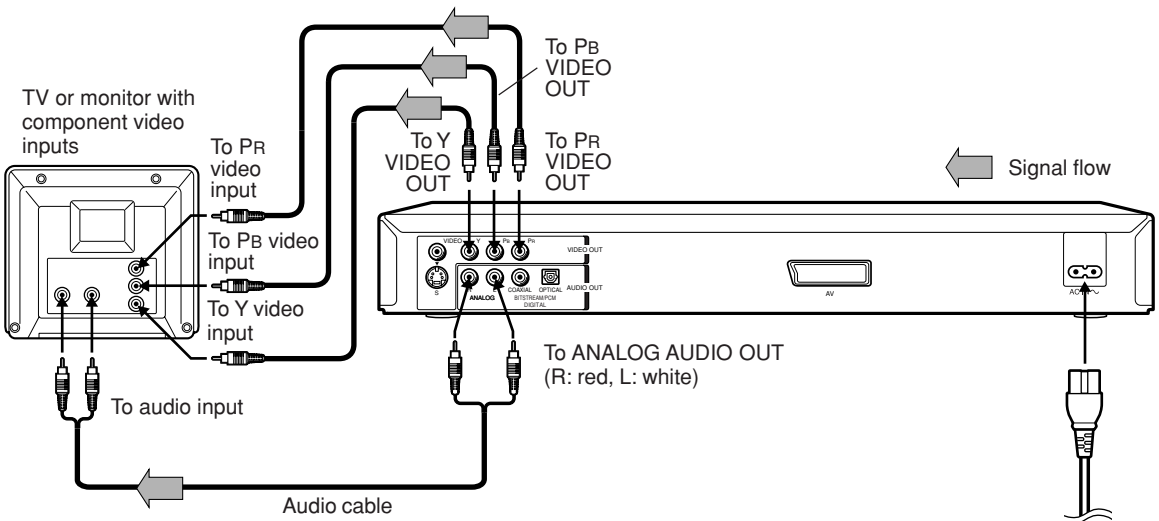

- Make the following setting.



On-screen display	See "Customizing the Function Settings" beginning from <b>58</b> .	
TV	"Video Out Select" <b>60</b>	"Audio Out Select" <b>61</b>
TV or monitor with component video inputs	"Video" or "S Video"	"Analog 2ch"

### Component video outputs/inputs

Some TVs or monitors are equipped with component video inputs. Connecting to these inputs allows you to enjoy higher quality picture playback. Actual labels for component video inputs may vary depending on the TV manufacturer. (ex. Y, R-Y, B-Y or Y, CB, CR) In some TVs or monitors, the colour levels of the playback picture may be reduced slightly or the tint may change. In such a case, adjust the TV or monitor for optimum performance.

## Connecting to a TV (Using the phono type jacks)

■ Select the connection type depending on the TV. (TV equipped with an S video input / Normal TV)

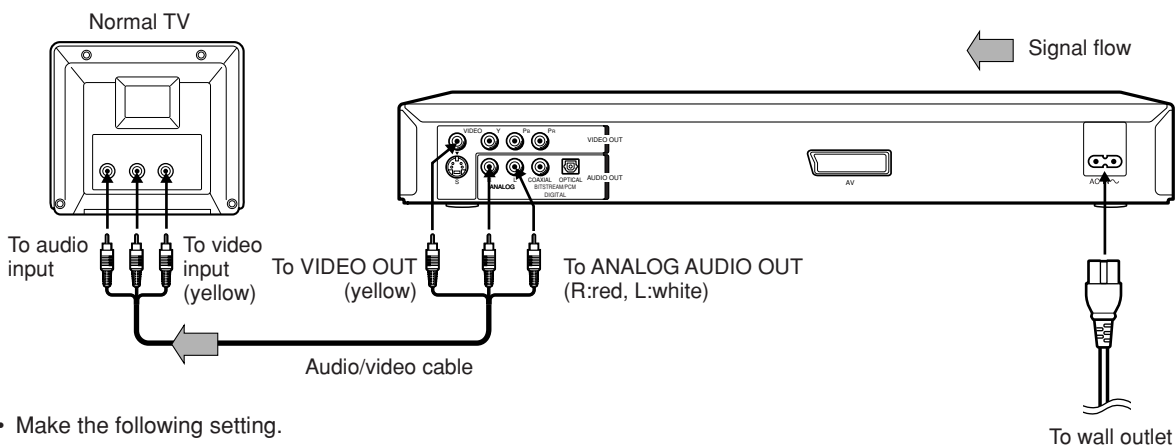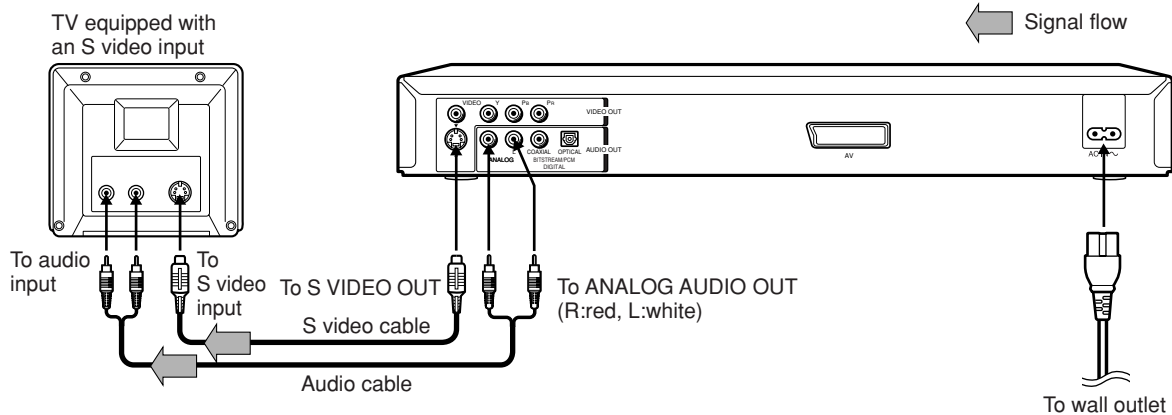

• Make the following setting.

TV	On-screen display	See "Customizing the Function Settings" beginning from <b>58</b> .	
		"Video Out Select" <b>60</b>	"Audio Out Select" <b>61</b>
TV equipped with an S video input		"Video" or "S Video"	"Analog 2ch"
Normal TV		No need to set.	"Analog 2ch"


### Notes

- Refer to the owner's manual of the connected equipment as well.
- When you connect the DVD video player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- If you place the DVD video player near a tuner or radio, the radio broadcast sound might be distorted. In this case, place the DVD video player away from the tuner and radio.
- The output sound of the DVD video player has a wide dynamic range. Be sure to adjust the receiver's volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the amplifier before you connect or disconnect the DVD video player's power cord. If you leave the amplifier power on, the speakers may be damaged.
- If your television set has one audio input, connect the DVD video player to a Y cable adapter (not supplied) and then connect to your TV.

## Connecting to Optional Equipment

You can enjoy high quality dynamic sounds by connecting the DVD video player to optional audio equipment.

- For connection to your TV, see “Connecting to a TV” [18](#) [19](#).
- For details of output sound, see [43](#).
- This section uses the following reference marks.

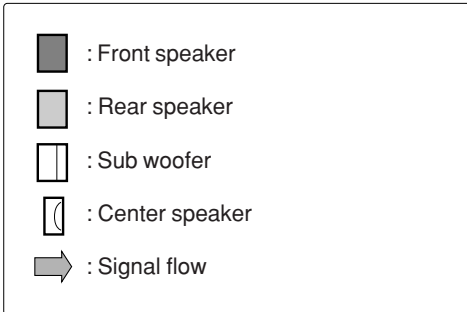

### Notes

- DO NOT connect the BITSTREAM/PCM AUDIO OUT jack of the DVD video player to the AC-3 RF input of a Dolby Digital Receiver. This input on your A/V Receiver is reserved for Laserdisc use only and is incompatible with the BITSTREAM/PCM AUDIO OUT jack of the DVD video player.
- Connect the BITSTREAM/PCM AUDIO OUT jack of the DVD video player to the “OPTICAL” or “COAXIAL” input of a Receiver or Processor.
- Refer to the owner’s manual of the connected equipment as well.
- When you connect the DVD video player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.
- The output sound of the DVD video player has a wide dynamic range. Be sure to adjust the receiver’s volume to a moderate listening level. Otherwise, the speakers may be damaged by a sudden high volume sound.
- Turn off the amplifier before you connect or disconnect the DVD video player’s power cord. If you leave the amplifier power on, the speakers may be damaged.


### Warning

- When you are connecting (via the BITSTREAM/PCM AUDIO OUT jack) an AV decoder that does not have Dolby Digital, Digital Theater Systems (DTS) or MPEG2 decoding function, be sure to set “Audio Out Select” to “PCM” from the on-screen displays [58](#) [61](#). Otherwise, high volume sound may damage your hearing as well as the speakers.
- When playing DTS-encoded discs (audio CDs), excessive noise may be output from the analog stereo jacks. To avoid possible damage to the audio system, you should take proper precautions when the ANALOG AUDIO OUT (L/R) jacks of the DVD video player are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the BITSTREAM/PCM AUDIO OUT jack of the DVD video player.

## Connecting to an amplifier equipped with a Dolby Digital decoder

### Dolby Digital

Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home. You can enjoy motion picture and live concert DVD video discs with this dynamic realistic sound by connecting the DVD video player to a 6 channel amplifier equipped with a Dolby Digital decoder or Dolby Digital processor. If you have a Dolby Surround Pro Logic decoder, you will obtain the full benefit of Pro Logic from the same DVD movies that provide full 5.1-channel Dolby Digital soundtracks, as well as from titles with the Dolby Surround mark.

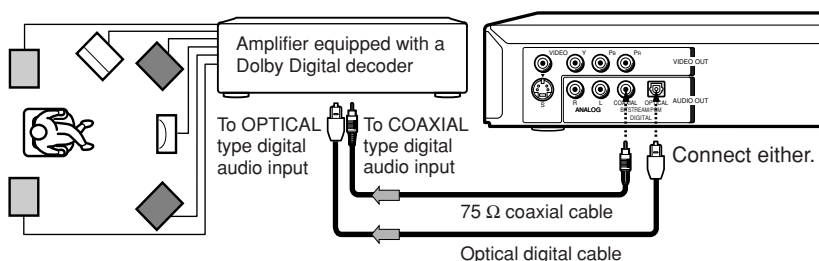

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

- Use DVD video discs encoded via the Dolby Digital recording system.
- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	<b>58</b> <b>61</b>
Recording system		<b>43</b>

## Connecting to an amplifier equipped with Dolby Surround Pro Logic

### Dolby Surround Pro Logic


You can enjoy the dynamic realistic sound of Dolby Surround Pro Logic by connecting an amplifier and speaker system (right and left front speakers, a center speaker, and one or two rear speakers).

#### ▪ With an amplifier equipped with Dolby Digital

Connect the equipment the same way as described in "Connecting to an amplifier equipped with a Dolby Digital decoder." Refer to that amplifier's owner's manual and set the amplifier so you can enjoy Dolby Surround Pro Logic sound.

#### ▪ With an amplifier not equipped with Dolby Digital

Connect the equipment as follows.

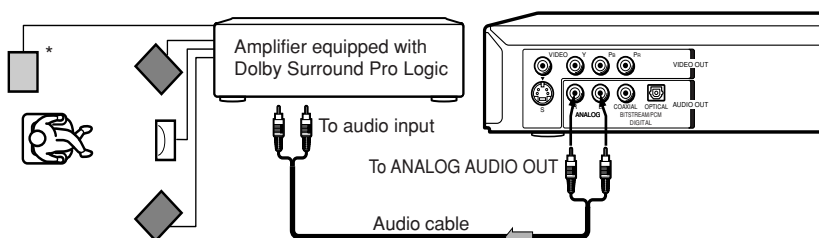

- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Analog 2ch"	<b>58</b> <b>61</b>

**Be sure to set "Audio Out Select" to "Analog 2ch" when you enjoy sounds of Dolby Surround Pro Logic using this connection.**

\* Connect one or two rear speakers. The output sound from the rear speakers will be monaural even if you connect two rear speakers.


# Connecting to Optional Equipment (continued)

## Connecting to an amplifier equipped with a DTS decoder

### Digital Theater Systems (DTS)

DTS is a high quality surround technology used in theaters and now available for home use, on DVD video discs or audio CDs.

If you have a DTS decoder or processor, you can obtain the full benefit of 5.1 channel DTS encoded sound tracks on DVD video discs or audio CDs.

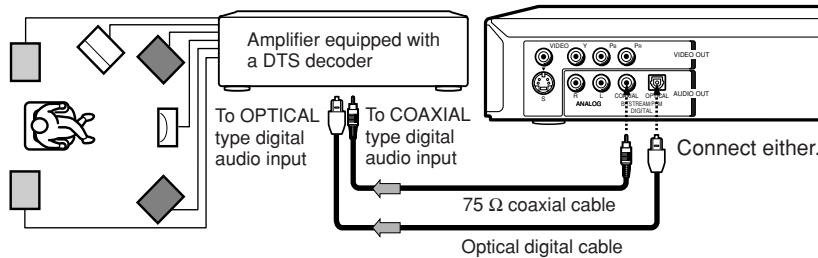

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.


- Use DVD video discs or audio CDs encoded via the DTS recording system.
- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	<b>58</b> <b>61</b>
Recording system	DTS	<b>43</b>

## Connecting to an amplifier equipped with an MPEG2 audio decoder

### MPEG2 sound

You can enjoy motion picture and live concert DVD video discs with dynamic realistic sound by connecting an amplifier equipped with an MPEG2 audio decoder or MPEG2 audio processor.

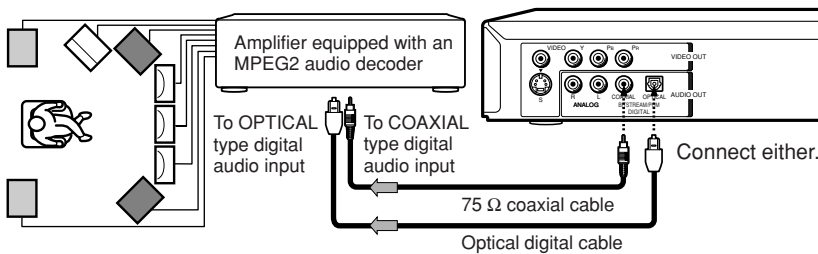

- Use DVD video discs encoded via the MPEG2 recording system.
- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"Bitstream"	<b>58</b> <b>61</b>
Recording system	MPEG2	<b>43</b>


## Connecting to an amplifier equipped with a digital audio input

### 2 channel digital stereo

You can enjoy the dynamic sound of 2 channel digital stereo by connecting an amplifier equipped with a digital audio input and speaker system (right and left front speakers).

- Make the following setting.

On-screen display	Select:	Page
"Audio Out Select"	"PCM"	<b>58</b> <b>61</b>

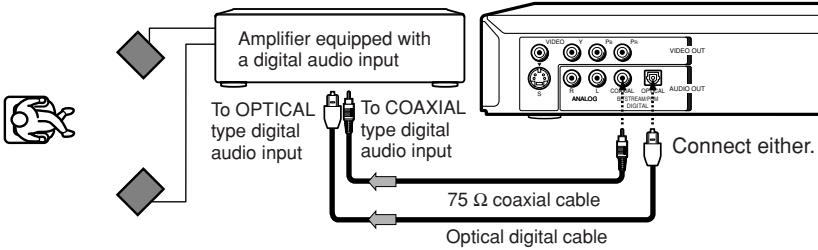







# **Basic playback**


Begin your operation.

- **Playing a Disc**
- **Variable Speed Playback**
- **Locating a Desired Section**

# Playing a Disc

This section shows you the basics on how to play a disc.

**CAUTION**  
Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.

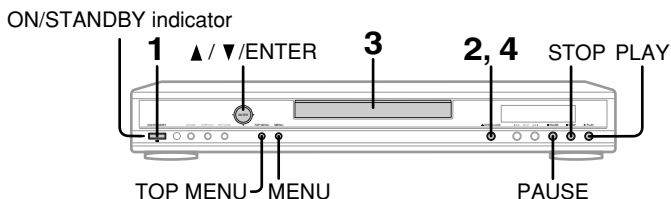


## DVD VCD CD Basic playback

### Preparations


- When you want to view a disc, turn on the TV and select the video input connected to the DVD video player.
- When you want to enjoy the sound of discs from the audio system, turn on the audio system and select the input connected to the DVD video player.

### 1 Press the power button (ON/STANDBY).


 The DVD video player turns on and the colour of the ON/STANDBY indicator changes from red (standby) to green (on).

**When the DVD video player is turned on for the first time, a message appears. Press ENTER, and make the proper settings before proceeding to step 2. [66](#)**

### 2 Press OPEN/CLOSE.

 The disc tray opens.


### 3 Place the disc on the disc tray.

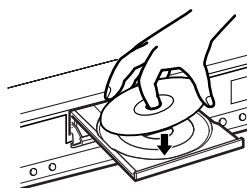

With the playback side down

- There are two different disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the DVD video player to malfunction.
- Do not place a disc which is unplayable in this DVD video player.

### 4 Press OPEN/CLOSE to close the disc tray.

  Playback starts.

If you insert a DVD video disc that contains a top menu, a menu may appear. See "Locating a title using the top menu." [30](#)

- You may need to press the TOP MENU or MENU button to display disc menu (depending on the actual DVD video disc.)


### Note

For resuming playback, see [29](#).

### ■ To start playback in the stop mode

Press **PLAY**.



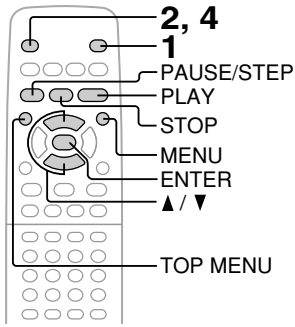

■ **To obtain a higher quality picture**

Occasionally, some picture noise not usually visible during a normal broadcast may appear on the TV screen while playing a DVD video disc because the high resolution pictures on these discs include a lot of information. While the amount of noise depends on the TV you use with this DVD video player, you should generally reduce the sharpness adjustment on your TV when viewing DVD video discs.

■ **About DVD VCD CD**

The DVD VCD CD icons on the heading bar show the playable discs for the function described under that heading.

DVD : You can use this function with DVD video discs.

VCD : You can use this function with VIDEO CDs.

CD : You can use this function with audio CDs.

■ **To pause playback (still mode)**

Press **PAUSE/STEP** during playback.



To resume normal playback, press the **PLAY** button.

- Sound is muted during still mode.

■ **To stop playback**

Press **STOP**.



■ **About the screen saver**


If you pause a picture of a DVD video disc and leave it still for a long while, the screen saver of the DVD video player automatically appears (when "Screen Saver" is set to "On" [63]). To turn off the screen saver, press the **PLAY** button.

■ **Automatic Power Off function**


If the DVD video player is stopped, or the screen saver is engaged for approximately 20 minutes, the DVD video player will automatically turn itself off.

■ **To remove the disc**

 Press **OPEN/CLOSE**.



Remove the disc after the disc tray opens completely.

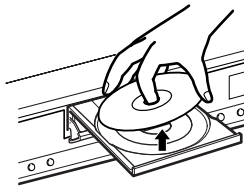


Be sure to press the **OPEN/CLOSE** button to close the disc tray after you remove the disc.

**Notes**

- Do not move the DVD video player during playback. Doing so may damage the disc.
- Use the **OPEN/CLOSE** button to open and close the disc tray. Do not push the disc tray while it is moving. Doing so may cause the DVD video player to malfunction.
- Do not push up on the disc tray or put any objects other than discs on the disc tray. Doing so may cause the DVD video player to malfunction.
- In many instances, a menu screen will appear after playback of a movie is completed. Prolonged display of an on-screen menu may damage your television set, permanently etching that image onto its screen. To avoid this, be sure to press the **STOP** button on your remote control once the movie is completed.

## Variable Speed Playback

You can play discs at various speeds, and resume playback from the location where you stopped playback.

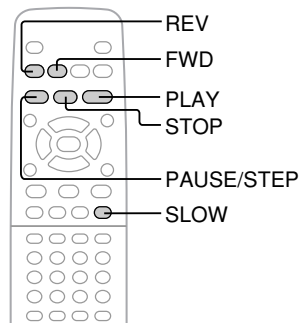

### DVD VCD CD Playing in fast reverse or fast forward directions

**Press REV or FWD during playback.**



REV: Fast reverse playback  
FWD: Fast forward playback

Each time you press the REV or FWD button, the playback speed changes.

■ **To resume normal playback**

Press **PLAY**.



**Notes**

- The DVD video player mutes sound and omits subtitles during reverse and forward scan of DVD video discs. However, the DVD video player plays sound during fast forward or fast reverse play of audio CDs.
- The playback speed may differ depending on the disc.

### DVD VCD Playing frame by frame

**Press PAUSE/STEP during still playback.**



Each time you press the PAUSE/STEP button, the picture advances one frame.

■ **To resume normal playback**

Press **PLAY**.



**Note**

The sound is muted during frame by frame playback.



## Playing in slow-motion

### Press SLOW during playback.



Each time you press the SLOW button, the slow-motion speed changes.

### ■ To resume normal playback

Press **PLAY**.



#### Note

The sound is muted during slow-motion playback.



## Resuming playback from the same location

### 1 Press STOP at the location where you want to interrupt playback.



The DVD video player memorizes the location where playback is stopped.

### 2 Press PLAY.



The DVD video player resumes playback from the location where you stopped playback.

### ■ To start playback from the beginning regardless of the location where you stopped playback


1 Press **STOP** twice.




The DVD video player's memory is cleared.

2 Press **PLAY**.



 Playback starts from the beginning of the current title.


 Playback starts from the beginning of the disc.

- If you want to return to the beginning of a DVD video disc, open and close the disc tray once with the OPEN/CLOSE button before pressing the PLAY button.



#### Notes

- The DVD video player's memory is also cleared when:
  - you change the parental lock setting **[64]** or select a disc menu language **[62]**.
  - you play a PBC-featured VIDEO CD while "PBC" **[65]** is set to "On".
  - you open the disc tray.
- There may be a difference in the location where playback resumes depending on the disc.
- Settings you changed using the on-screen displays while the DVD video player keeps a location in the memory may function only after the memory is cleared.

# Locating a Desired Section

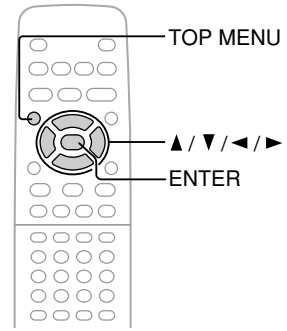

Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs and audio CDs are divided into tracks. You can quickly locate any specific title, chapter, or track.

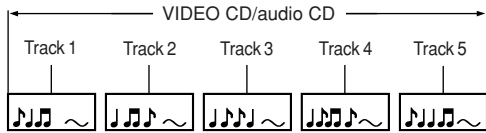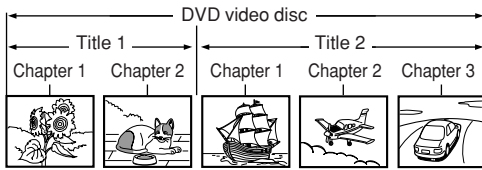


## DVD Locating a title using the top menu

**1** Press TOP MENU.

TOP MENU The top menu appears on the TV screen.




**2** Press ▲/▼/◀/▶ to select the title you want.

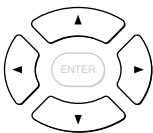

If the titles in the top menu are assigned a number, you can directly locate a specific title by pressing its designated number with the number buttons.


**3** Press ENTER.

Playback starts from chapter 1 of the selected title.

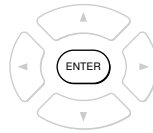

**Notes**

- The instructions above describe basic procedures which may vary depending on the contents of the DVD video disc. If different instructions appear on the TV screen, follow those instructions.
- If you display the top menu during playback and press the TOP MENU button again without selecting any title, the DVD video player may resume playback from the point where you first pressed the TOP MENU button (depending on the actual DVD video disc.)
- This method of locating a title is available only on a disc that contains a top menu.
- Instruction notes of discs may refer to the button that displays the top menu as TITLE button.

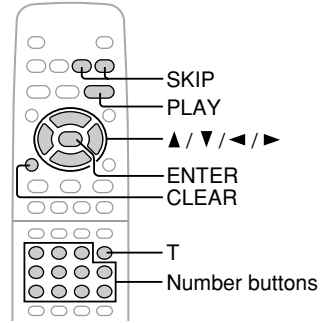


**DVD VCD CD** **Locating a desired section by entering the corresponding number**

**1 Press T.**


If you are using a VIDEO CD/audio CD, skip step 2, then at step 3, enter the number for the track you want using the number buttons.



**2 Press </> to select a section you want to locate.**

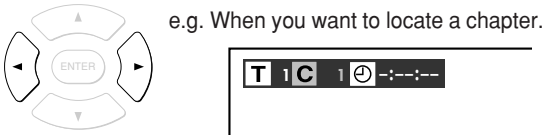


**3 Press ▲/▼ to enter a number of the section.**

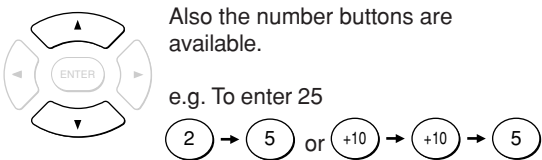

**4 Repeat steps 2 and 3 if necessary.**

**5 Press PLAY or ENTER.**

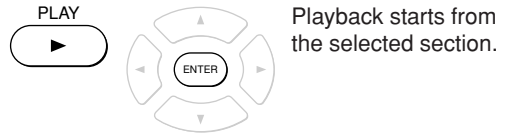

**Notes**


- Pressing the CLEAR button resets the numbers. To clear the display, press the T button several times.
- This method of locating a title is available only on a disc that contains title numbers.

Basic playback

**DVD VCD CD** **Locating a specific chapter or track**

**Press SKIP <<< or >>> repeatedly to display the chapter or track number you want.**

Playback starts from the selected chapter or track.

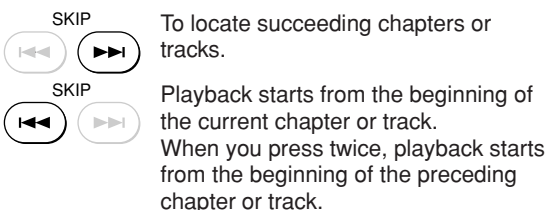

**Notes**

- Some titles may not display chapter numbers.
- If you press and hold the SKIP <<< or >>> button on the front panel during playback, the DVD video player performs fast reverse or fast forward playback. You can vary the speed by pressing the button repeatedly. To locate chapters or tracks during fast reverse or fast forward playback, first press the PLAY button to resume normal playback, then use the SKIP <<< or >>> button.
- When you set "Title Stop" to "Off" [65], you can access chapters in another title. If you go back to the preceding title by pressing the SKIP <<< button, the DVD video player locates the first chapter of the title. When "Title Stop" is set to "On," you can access chapters only within the current title.






# **Advanced playback**

Customizing the performance of your DVD video player.

- **Accessing a Specific Location Directly**
- **Playing Repeatedly**
- **Playing in a Favorite Order**
- **Playing in Random Order**
- **Zooming a Picture**
- **Selecting the Picture Enhancement (E.P.M.)**
- **Selecting the Sound Enhancement (E.A.M.)**
- **Selecting the Camera Angle**
- **Selecting Subtitles**
- **Selecting a Language**
- **Operating in the On-screen Display Mode**
- **Playing MP3/WMA Files**
- **Viewing JPEG Files**

# Accessing a Specific Location Directly

You can access a specific location by entering its corresponding time (hours, minutes, seconds).

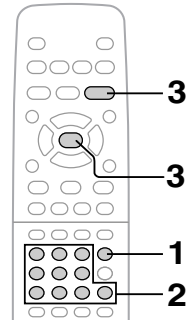


## DVD VCD CD Entering the time of the desired location

### 1 Press T several times.




You may have to press further depending on the disc. Press the button repeatedly until the clock icon is highlighted.

 e.g.




### 2 Press the number buttons to enter the time.

 e.g.



### 3 Press PLAY or ENTER.

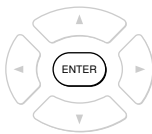



Playback starts from the desired location.

#### Notes

- Some discs may not respond to this process.
- Some scenes may not be located precisely as you specified.
- This method for accessing specific locations is available only within the current title of the DVD video disc or within the current track of the VIDEO CD/audio CD.

# Playing Repeatedly

You can play a specific title, chapter, track, or segment repeatedly. (Title repeat, chapter/track repeat, A-B repeat)

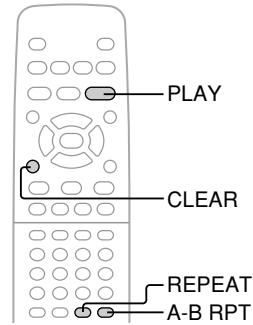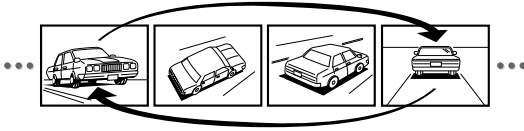


## Repeating a title, chapter, or track

### 1 Press REPEAT.



Each time you press the REPEAT button, the repeat mode changes as follows.

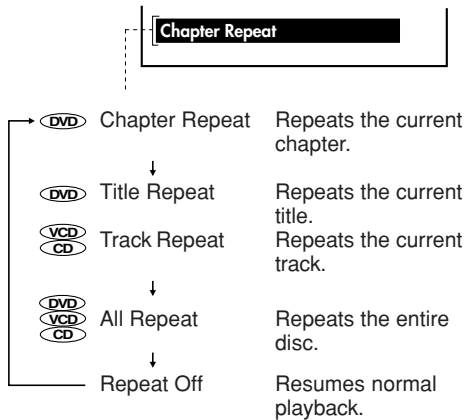

### 2 Press PLAY.



The DVD video player starts repeat playback. Press the PLAY button within about 5 seconds after you press the REPEAT button.

#### ■ To resume normal playback

Press **CLEAR**.



#### Note

Some discs may not permit repeat operation.

## Repeating a specific segment

### 1 Press A-B RPT at the beginning of the segment (point A) you want to play repeatedly.



### 2 Press A-B RPT again at the end of the segment (point B).

 


The DVD video player automatically returns to point A and starts repeat playback of the selected segment (A-B).



#### ■ To resume normal playback

Press **CLEAR** or **A-B RPT**.




#### Notes

- Some discs may not permit A-B repeat operation.
- You cannot set the A-B repeat function for a segment that includes multiple camera angles **(41)**.
- You can specify a segment only within the current title or track (VIDEO CD).
- There may be a slight difference between point A and the location where playback actually resumes depending on the disc.

## Playing in a Favorite Order

You can combine your favorite titles, chapters, or tracks and play them in the order you determine. You can program up to 30 selections into the memory. (Memory playback)

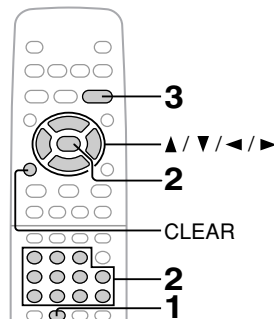

### DVD VCD CD Setting titles, chapters, or tracks in a favorite order

#### 1 Insert a disc and press MEMORY during stop.



The following display appears.

e.g.

1 T:-- CT:--
2 T:-- CT:--
3 T:-- CT:--
4 T:-- CT:--
5 T:-- CT:--
6 T:-- CT:--
7 T:-- CT:--

T: Title number  
CT: Chapter number  
or track number

#### 2 Select the items in the order you want by pressing the number buttons, then ENTER for each item.

Each time you press the ◀/▶ button, the spaces of "T" and "CT" are highlighted in turn. Highlight where you want to enter, then press the corresponding number buttons.

To select another chapter in the same title, you do not need to select the title number.

To select tracks from a VIDEO CD/audio CD in order, press the **number buttons** for the track, then press the **ENTER** button for each selection you want.

#### 3 Press PLAY while the display appears on the TV screen.



The DVD video player starts memory playback.

#### ■ To change the programmed selections

- 1 While the display appears on the TV screen, press ▲/▼/◀/▶ to move the highlighted bar to the item you want to change.
- 2 Change the selection following the instructions in step 2.

#### ■ To cancel the programmed selections

- 1 While the display appears on the TV screen, press ▲/▼ to move the highlighted bar to the item you want to cancel.
- 2 Press **CLEAR**.

#### ■ To resume normal playback from memory playback

Press **CLEAR**.



The memory playback indicator disappears.

#### ■ To program during playback


If you press the **MEMORY** button during playback, a programming display appears. Follow steps 2 and 3.

#### Notes

- Some discs may not permit memory playback operation.
- If you press the REPEAT button during memory playback, the DVD video player repeats the current memory playback.
- If you press the MEMORY or RETURN button while the display appears on the TV screen, the display disappears.
- The programmed selections will be cleared when you turn off the DVD video player.

# Playing in Random Order

You can play titles, chapters within a title, or tracks in random order.  
(Random playback)

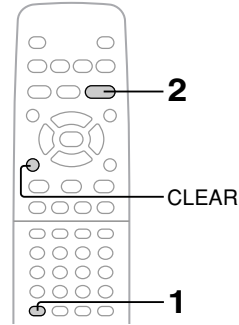


## Playing titles, chapters or tracks in random order

### 1 Press RANDOM.



Each time you press the RANDOM button, the random playback mode changes as follows.

Chapter Random

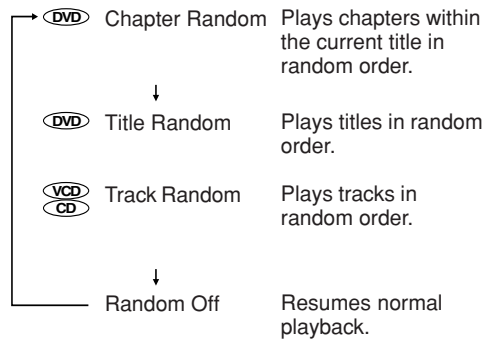

If you press the RANDOM button during playback, the DVD video player automatically starts random playback after finishing the current title, chapter or track.

### ■ To resume normal playback

Press CLEAR.



#### Notes

- Some discs may not permit random playback operation.
- You cannot use the random playback function in conjunction with the memory playback function.


 
### 2 Press PLAY.



The DVD video player starts random playback. Press the PLAY button within about 5 seconds after you press the RANDOM button.

# Zooming a Picture

You can magnify areas within a picture.

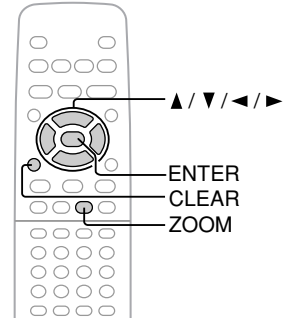


## DVD Zooming a picture

### Press ZOOM during normal, slow or still playback.




The DVD video player enters the zoom playback mode and displays the icon.

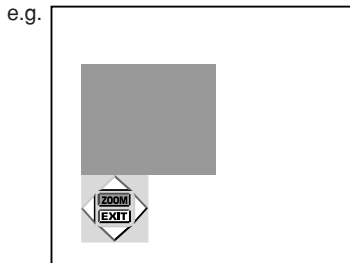

**ZOOM** : As you repeatedly press the ENTER (or ZOOM) button while "ZOOM" is selected, the magnification level changes. Variation of the levels includes reducing.

**EXIT** : If you press the ENTER button while "EXIT" is selected, you can turn off the icon, keeping the current magnification level.

You can shift the highlight within the icon by the ▲ / ▼ / ◀ / ▶ buttons.

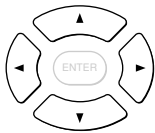

If you press and hold the ▲ / ▼ / ◀ / ▶ buttons, the zoom point shifts.



Pressing the CLEAR button restores the zoom point to the center of the picture.

### To resume normal playback

While "ZOOM" is selected, press ZOOM repeatedly to turn off the icon.

Picture restores the size when the icon disappears.



- The ENTER button cannot cancel zoom playback if you have turned off the icon by selecting "EXIT." To restore normal picture size, press the ZOOM button to display the icon, then further press the ZOOM button until the icon turns off.


### Notes

- Some discs may not respond to zoom feature.
- During some scenes, the buttons may not work as described.
- Zooming does not work on subtitles or menus included on DVD video discs.
- While the icon is displayed, the ▲ / ▼ / ◀ / ▶ buttons cannot work on menus included on DVD video discs. If you want to view the menus, turn off the icon.
- The magnification level varies depending on the picture size you select. **60**

# Selecting the Picture Enhancement (E.P.M.\*)

You can easily switch the picture enhancement to your preference.

\*E.P.M.: Enhanced Picture Mode

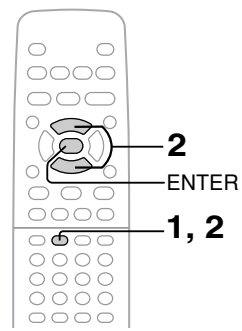


## DVD VCD CD Selecting the picture enhancement


### 1 Press E.P.M.



The picture enhancement selection appears.

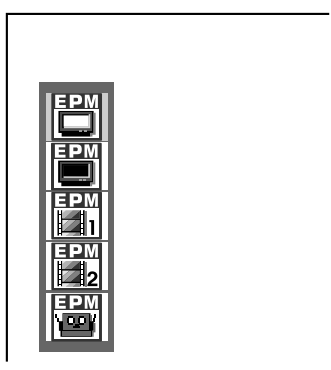

### ■ To turn off the picture enhancement selection Press ENTER.

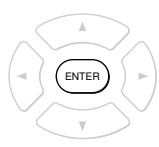

Alternatively leave the DVD video player unoperated for about 5 seconds after having made the selection.

#### Note

Actual effects to pictures may vary depending on the TV. Make the selection to your preference.

### 2 Select the picture enhancement by pressing E.P.M. or ▲ / ▼.

Each time you press the button, the picture enhancement changes.



Light:  
Brighter than in "Normal".



Normal:  
Standard black level.



Movie1:  
To raise brightness to clarify details.



Movie2:  
To deepen colours.




Animation:  
To raise contrast enhancing colours.

# Selecting the Sound Enhancement (E.A.M.\*)

You can easily switch the sound enhancement to your preference.

\*E.A.M.: Enhanced Audio Mode

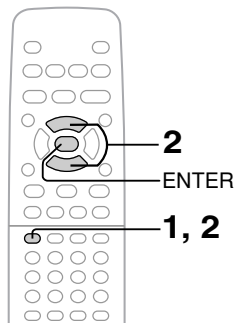


## DVD Selecting the sound enhancement

### 1 Press E.A.M.



The sound enhancement selection appears.

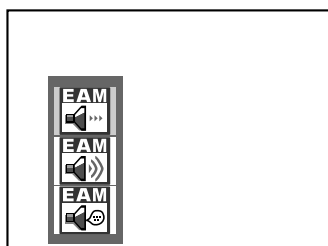

### 2 Select the sound enhancement by pressing E.A.M. or ▲ / ▼.

Each time you press the button, the sound enhancement changes.



Normal:  
Normal sound.



3D\*:  
To obtain expansive virtual surround sound effects from just two speakers.




Dialogue\*:  
To control dynamic range to make dialogues easier to hear.

- To use this enhancement on sounds output from the BITSTREAM/PCM AUDIO OUT jack, be sure to set "Audio Out Select" to "PCM". **[61]**

\* Effective only during playback of Dolby Digital recorded discs.

### To exit the audio enhancement selection

Press ENTER.

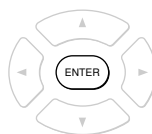

Alternatively leave the DVD video player unoperated for about 5 seconds after having made the selection.

### Notes


 
- Actual effects to sounds may vary depending on the speakers. Make the selection to your preference.
- Actual effects to sounds may vary depending on the disc.
- When the DVD video player is connected to an amplifier equipped with Dolby Surround Pro Logic, select "Normal". Otherwise, Dolby Surround Pro Logic may function differently than usual.
- Selecting "Dialogue" disables "Dynamic Range Control" function **[61]**.

Manufactured under license from QSound Labs, Inc. U.S. patent Nos. 5,105,462, 5,208,860 and 5,440,638 and various foreign counterpart. Copyright QSound Labs, Inc. 1998-2002. QXpander™ is a trademark of QSound Labs, Inc. All rights reserved.



## Selecting the Camera Angle

If the scene was recorded from multiple angles, you can easily change the camera angle of the scene you are watching.

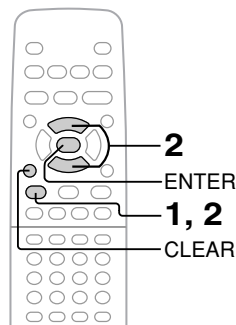

### DVD Changing the camera angle

#### 1 Press ANGLE while playing a scene recorded with multiple angles.



While playing a scene recorded with multiple angles, the angle icon (📷) flashes in the DVD display. Press the ANGLE button while the angle icon is flashing.


e.g.



#### 2 Press ANGLE or ▲ / ▼ while the angle number is displayed on the TV screen.



Each time you press the ANGLE button, the camera angle changes.

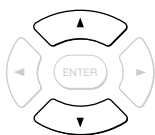

You can change the camera angle directly by pressing the number buttons corresponding to its angle number instead of using the ▲ / ▼ buttons.


To turn off the display, press the CLEAR or ENTER button.

#### Notes

- You can change the camera angle during still playback. The camera angle changes to the new setting when you resume normal playback.
- If you pause a picture immediately after changing a camera angle, the resumed playback picture may not display the new camera angle.

# Selecting Subtitles

You can display subtitles on the TV screen and select a subtitle language from those included on the DVD video disc.

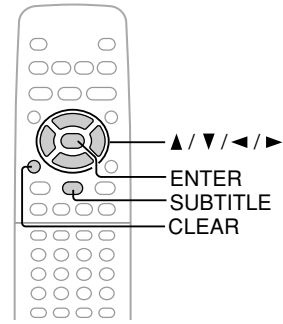

## DVD Selecting a subtitle language

### 1 Press SUBTITLE during playback.

**SUBTITLE** The current subtitle setting is displayed.




e.g.



The abbreviation of the language appears instead of the language name. Refer to the list of languages and their abbreviations. **67**

### 2 Press SUBTITLE or ▲ / ▼ while the subtitle setting is displayed on the TV screen.

**SUBTITLE** Each time you press the SUBTITLE button, the subtitle languages included on the DVD video disc change.

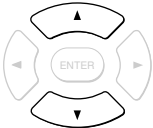


To turn off the subtitle setting display, press the CLEAR or ENTER button.

### To turn subtitles on or off

1 Press **SUBTITLE** during playback.



2 Press **◀ / ▶** while the subtitle setting is displayed on the TV screen, to select "On" or "Off."

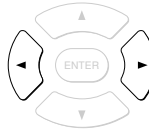

### Notes


 
- Some DVD video discs are set to display subtitles automatically, and you cannot turn them off even if you set the subtitle function to off.
- During some scenes, the subtitles may not appear immediately after you select "On."
- Some DVD video discs will allow you to make subtitle selections and turn subtitles on or off only via the disc menu.

### Notes

- When you turn on the DVD video player or replace a disc, the player returns to the initial default setting **62**.
- When you select a subtitle language which is not included on the disc, the DVD video player plays a prior language programmed on the disc.
- During some scenes, the subtitles may not appear immediately after you change the subtitle language.

# Selecting a Language

You can select a preferred language and sound recording system from those included on the DVD video disc.

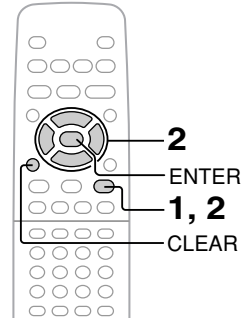

## DVD VCD Selecting a playback audio setting

### 1 Press AUDIO during playback.



The current audio setting is displayed.

e.g.




The abbreviation of the language appears instead of the language name. Refer to the list of languages and their abbreviations. **[67]**

### 2 Press AUDIO or ▲/▼ while the audio setting is displayed on the TV screen.



Each time you press the AUDIO button, the audio settings included on the DVD video disc change.

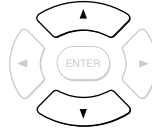

If you press the ◀/▶ buttons, you can select output sound format. **[61]**

To turn off the audio setting display, press the CLEAR or ENTER button.

### ■ Selecting sound channels of VIDEO CDs

You can switch left and right channels by pressing the **AUDIO** button repeatedly during playback.



### Notes

- When you turn on the DVD video player or replace a disc, player returns to the initial default setting **[62]**.  
If you select a sound track which is not included on the disc, the DVD video player plays a prior sound track programmed on the disc.
- Some discs allow you to change audio selections only via the disc menu. If this is the case, press the MENU button and choose the appropriate language from the selections on the disc menu.


### ■ Output sound conversion table (sampling frequency/quantization bit)

Discs	Recording system	Audio selection from the menu <b>[58]</b> <b>[61]</b> and output jacks on the rear panel					
		"Bitstream"		"Analog 2ch"		"PCM"	
		BITSTREAM/PCM jack	ANALOG AUDIO OUT jacks	BITSTREAM/PCM jack	ANALOG AUDIO OUT jacks	BITSTREAM/PCM jack	ANALOG AUDIO OUT jacks
DVD video disc	Dolby Digital	Bitstream	48 kHz/20 bit	Bitstream	48 kHz/16 bit	48 kHz/16 bit	48 kHz/20 bit
	Linear PCM	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit
		48 kHz/20 bit	48 kHz/16 bit	48 kHz/20 bit	48 kHz/16 bit	48 kHz/20 bit	48 kHz/16 bit
		48 kHz/24 bit	48 kHz/16 bit	48 kHz/24 bit	48 kHz/16 bit	48 kHz/24 bit	48 kHz/16 bit
		96 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	—	96 kHz/16 bit	48 kHz/16 bit
		96 kHz/20 bit	48 kHz/16 bit	48 kHz/20 bit	—	96 kHz/20 bit	48 kHz/16 bit
	96 kHz/24 bit	48 kHz/16 bit	48 kHz/24 bit	—	96 kHz/24 bit	48 kHz/16 bit	
DTS	Bitstream	—	Bitstream	—	—	—	
MPEG1, MPEG2	Bitstream	48 kHz/16 bit	Bitstream	48 kHz/16 bit	48 kHz/16 bit	48 kHz/16 bit	
VIDEO CD	MPEG1	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit
Audio CD	Linear PCM 44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit	44.1 kHz/16 bit
	DTS	Bitstream	(Noise)	Bitstream	(Noise)	Bitstream	(Noise)

■ : 3D sound enhancement can function.

# Operating in the On-screen Display Mode

When you turn on the on-screen display, you can view information on operational status and access features and settings.

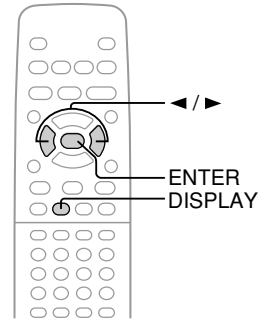

## DVD VCD CD Operating in the on-screen display mode


### Press DISPLAY.



The following display appears. Each time you press the DISPLAY button, the on-screen display changes as follows.

See the pages in for details on the features.

e.g. When playing a DVD video disc

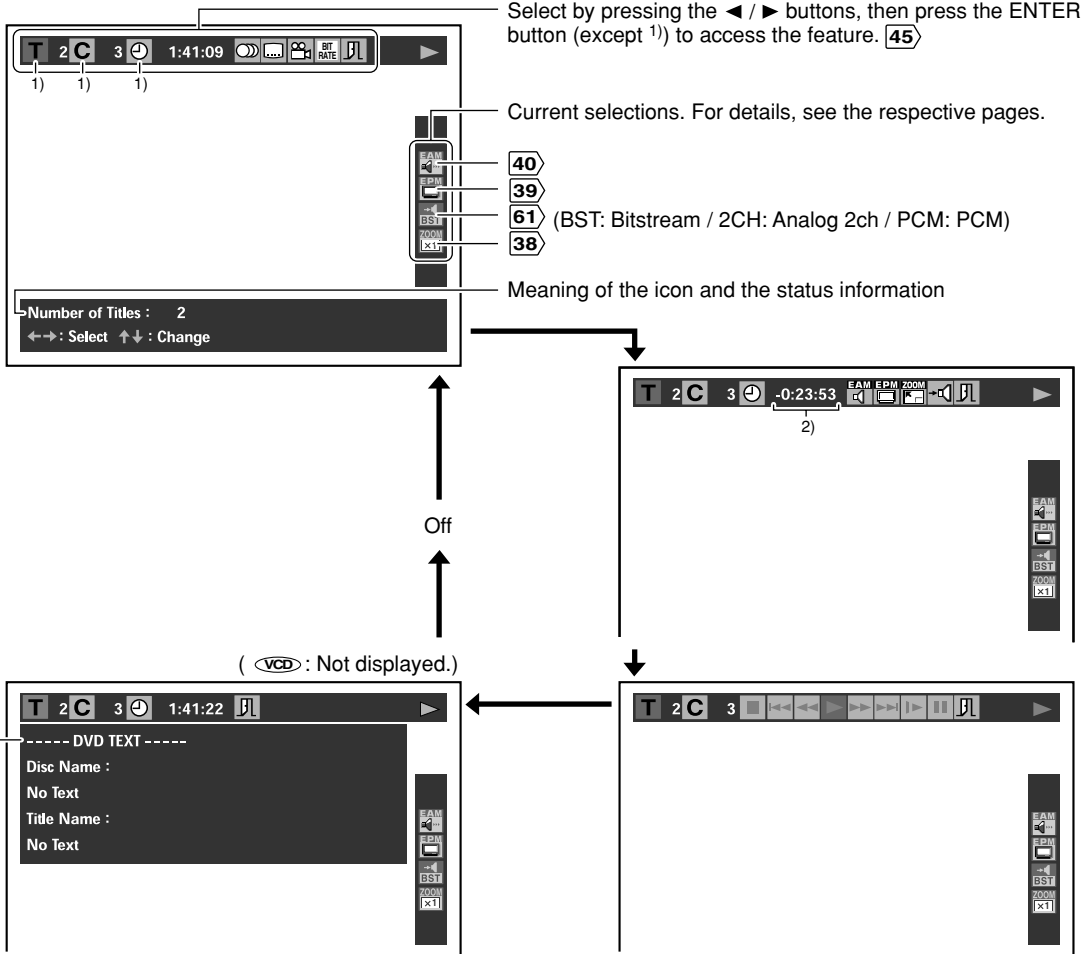


Displays DVD-Text data (or CD-Text data when playing an audio CD) if included on the disc. (Some letters may not be displayed properly depending on the disc.)


## ■ Features


(<sup>1</sup>): There is no need to press the ENTER button.)


**T**<sup>1</sup>): Title number (Track number)  
Locate a title or track using the number buttons. **31**

**C**<sup>1</sup>): Chapter number  
Locate a chapter using the number buttons. **31**

<sup>1</sup>): Elapsed time of the current title / remaining time of the current title (<sup>2</sup>)  
To enter the time to locate a desired location. **34**

 : Audio setting **43**


 : Subtitle setting **42**

 : Angle setting **41**

**BIT RATE** : Bit rate (Mbit/s)  
Amount of picture, sound and subtitle data in the DVD video disc transferred per second. The larger the value is, the more data processed, but this does not necessarily insure better picture quality.

**To keep the bit rate display on-screen:**  
Press the ▲ / ▼ buttons to select “Bit Rate On” then press the ENTER button.


e.g.

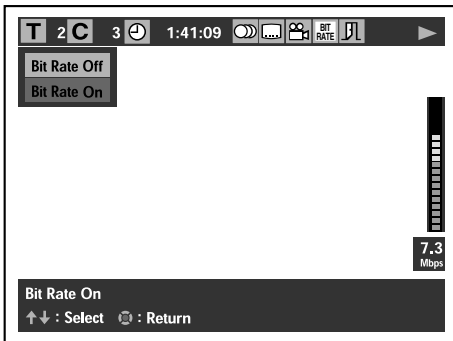


To turn it off, select “Bit Rate Off.”


The following operations also select “Bit Rate Off”.


- Opening the disc tray.
- Turning the power off.


 : To turn off the display.


 : E.A.M. (Enhanced Audio Mode) setting **40**


 : E.P.M. (Enhanced Picture Mode) setting **39**


 : To zoom a picture. **38**


 : “Audio Out Select” setting **61**


 : To stop playback. **27**


 : Playback starts from the beginning of the current chapter or track. **31**


 : Fast reverse playback **28**

 : To start playback. **26**

 : Fast forward playback **28**


 : To locate succeeding chapters or tracks. **31**

 : To begin slow motion playback. **29**

 : To pause playback. **27**

## Playing MP3/WMA Files

You can play MP3/WMA files that have been recorded on a CD-R or CD-ROM on the DVD video player.

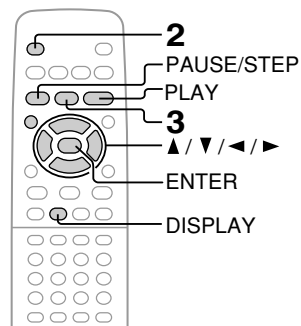


### Playing MP3/WMA files

#### ■ Preparations

- Make sure that a disc you want to play is compatible with this DVD video player. [47]
- Set "Priority Contents" to "Audio" from the on-screen display. [65]

#### 1 Place a CD that contains MP3/WMA files on the disc tray.
 
#### 2 Press OPEN/CLOSE to load the disc.




#### 3 To stop playback, press STOP.



#### ■ To pause playback

 Press **PAUSE/STEP** during playback.



#### ■ Selecting a track (file) in the disc

- 1 Press **DISPLAY**.
- 2 Select the "📀" icon using ◀/▶ then press **ENTER**.  
A list of tracks appears.
- 3 Press ▲/▼/◀/▶ to select a track you want to play.  
(Pressing ◀/▶ turns the pages.)  
The current track being played is highlighted in green.
- 4 Press **ENTER** to begin playback of the selected track.

#### Notes

- You can select a track also by designating a track number. Press the T button, and press the ▲/▼ buttons to select a track number, then press the ENTER button.
- To turn off the on-screen display, press the DISPLAY button several times.
- Letters of a file/folder name overflowing the given space are not displayed.

#### Notes

- An interval between a WMA file and an MP3 file will be longer than that for two files of the same format.
- WMA files may take a longer time to begin.
- Some discs may not permit this operation.
- WMA tracks copy-protected cannot be played.
- The BITSTREAM/PCM jack outputs MP3/WMA sounds in the linear PCM format regardless of the current "Audio Out Select" selection [61].
- If you stop playback by pressing the STOP button, and then press the PLAY button, playback will start from the beginning of the track.
- The SKIP [31], REPEAT [35] and RANDOM [37] functions are also available.

## ■ Playable files

MP3/WMA disc compatibility with this player is limited as follows:

- Playable discs: CD-ROM, CD-R (650MB / 74 min. only)  
CD-RW is not recommendable.
- Sampling frequency: 44.1 kHz only
- Bit rate: WMA: 48 kbps - 192 kbps (CBR)  
MP3: 32 kbps - 320 kbps (CBR)
- CD physical format: Mode 1, Mode 2 XA Form 1
- File system: ISO9660 Level 1, 2 or Joliet
- File name: A file name should be in alphabet and numerals only, and must incorporate "MP3" or "WMA" extension.  
e.g. "\*\*\*\*\*.MP3", "\*\*\*\*\*.WMA"
- Total number of folders: Less than 256
- Total number of files: Less than 1000
- WMA codec version: V7 or V8 (Stereo sound only)

This DVD video player requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3/WMA files). Given the fact that technology in this area is still maturing, Toshiba cannot guarantee that all genre of recordable discs will produce optimal playback quality. The technical criteria set out in this owner's manual are meant as a guide only.

 
Customers should also note that permission is required in order to download MP3 files and music from the internet. Toshiba has no right to grant such permission. Permission should always be sought from the copyright owner.

Microsoft, Windows Media, and the Windows Logo are trademarks or registered trademarks of Microsoft Corporation in both the United States and other countries.




# Viewing JPEG Files

You can play JPEG files that have been recorded on a CD-R on the DVD video player. You can select a preferred view: a page of 6 thumbnail images, a single image view, and slide show of a selected folder. Also, rotating, enlarging and shifting of each image can be possible.



Thumbnail view

 

Single image view



Slide show

## Starting from a thumbnail view

### ■ Preparations

 
- Prepare a disc that contains JPEG files you want to view. [55]
- Set "Priority Contents" to "Photo" from the on-screen display. [65]
- Make your TV shape conform to the 4:3 picture size. Only 4:3 pictures can be played regardless of the function settings via the on-screen displays of the DVD video player. If the TV is adjusted to other sizes, e.g. "WIDE," images will appear to be horizontally expanded. For details, refer to the owner's manual of your TV.

### 1 Press OPEN/CLOSE to open the disc tray.



### 2 Place a disc that contains JPEG files on the disc tray.

### 3 Press OPEN/CLOSE.



After completion of reading, the DVD video player enters either of the following modes, and provides the respective displays, depending on the condition of the disc contents. Proceed to steps described below.

A thumbnail view appears.  
(Automatic mode)

e.g.




Number of a current selection / Number of images to play

Proceed to step 4 on [49].


A list of folders in the disc appears.  
(Selection mode)

e.g.

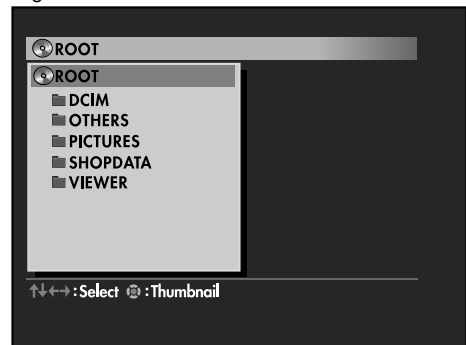


Refer to [54], "Selecting a folder."



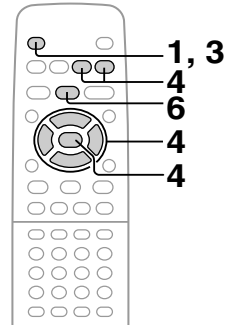

**4 Turn the page if necessary.**  
 Press ▲/▼/◀/▶ to select the last image of 6, then press ▶.  
 (Press ▲/▼/◀/▶ to select the first image of 6, then press ◀.)

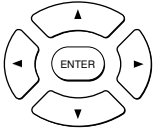


Selecting [▶] (or [◀]) then pressing the ENTER button also turns the pages.

Alternatively,  
**Press SKIP.**



▶▶: To view the succeeding 6 images.  
 ◀◀: To view the previous 6 images.

The page changes as follows:

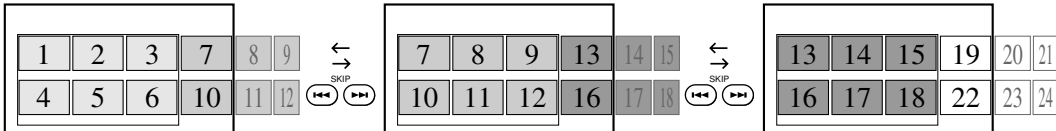

**5 Select the viewing options at your preference.**  
 - Viewing a single image: See [51].  
 - Playing slide show: See [53].

**6 To quit the JPEG playback, press STOP.**




- If you press the PLAY button after pressing the STOP button, you can return to the thumbnail view.
- Pressing the OPEN/CLOSE button to open the disc tray can also quit the playback.

**Notes**

- If you display a thumbnail view from the automatic mode and leave it unattended for approximately 20 seconds, slide show starts automatically.
- When "Screen Saver" is set to "On" [63], a thumbnail view which is unattended for about 10 minutes automatically changes to slide show.
- Some files may not display their own entire images depending on the size.


# Viewing JPEG Files (continued)

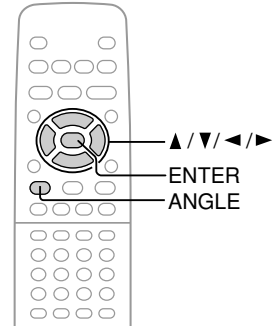


## Starting from a thumbnail view

### ■ To reverse the order

Some cameras may have given the first file number (e.g. 01) always to the latest photo. When you play such files, reverse the order of images. You can view them in order of time.

Press ▲ / ▼ / ◀ / ▶ to select “” then press ENTER.

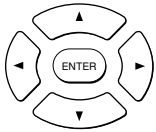


#### Note


The order of images will be restored when you open the disc tray or turn the power off.

### ■ To display a folder list

1 Press ▲ repeatedly to select the header.

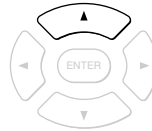

2 Press ENTER.

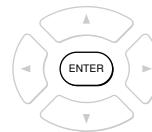


A folder list appears.

You can select a folder to play. For details, see page [54](#).

### ■ To set an image rotation on a thumbnail view

1 Select an image by pressing ▲ / ▼ / ◀ / ▶.

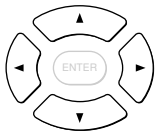


2 Press ANGLE repeatedly.



Each time you press the ANGLE button, you can set a rotation of the image in 90° increment. An icon indicates the current setting. The image will be rotated after you exit the thumbnail bearing the icon.


#### Note

Quitting the JPEG playback restores a rotated image to its original posture.

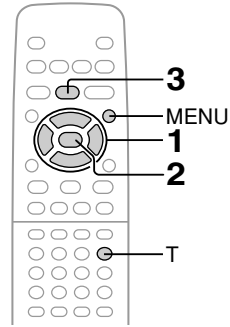


## Viewing a single image

**1** On a thumbnail view, select an image by pressing ▲/▼/◀/▶.

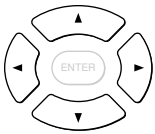

**2** Press ENTER.

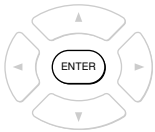

The selected image is displayed.

**3** To quit the JPEG playback, press STOP.



- If you press the PLAY button after pressing the STOP button, slide show [53] starts.
- Pressing the OPEN/CLOSE button to open the disc tray can also quit the playback.

### Notes

- Some files may not display their own entire image depending on the size.
- When "Screen Saver" is set to "On" [63], a single image which is unattended for about 10 minutes automatically changes to slide show.

### ■ To confirm a photo number

Press T.




### Notes


- To turn it off, press the T button.
- You can locate an image by entering its number. While displaying a photo number, press the number buttons to enter a number then press the ENTER button. Slide show will start from the located image.

### ■ To change the image

To view the succeeding image, press ▶ or ENTER.

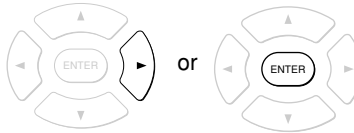

To view the previous image, press ◀.

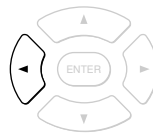

### Notes


- Change of images will be reversed if you reverse the order of images.
- You can view the succeeding image also by pressing the PAUSE/STEP or SKIP ►► button.

### ■ To reverse the order


1 Press MENU.



 The following menu appears for about 5 seconds.  
e.g.




2 Press ▲/▼ to select "Reverse" then press ENTER.

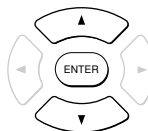

### Note

Whenever you change the order, the first or last of images to be played will be located.

# Viewing JPEG Files (continued)

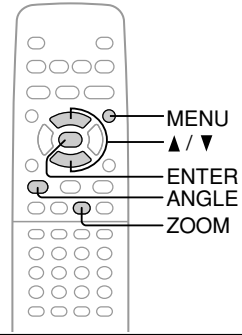

## Viewing a single image

### ■ To magnify an image

Press **ZOOM** repeatedly.



Each time you press the ZOOM button, the magnification level changes as follows:

- “Zoom Off” (The icon and monitor scope appear.) →
- “Zoom1” → “Zoom2” → “Zoom3” (Maximum) →
- “Shrink” → Original size (The icon and monitor scope disappear.)

#### Notes

- To turn off the icon and monitor scope, press the ▲/▼/◀/▶ buttons to select “EXIT” in the icon, then press the ENTER button.
- While changing the magnification level, you can shift the image. Press and hold the ▲/▼/◀/▶ buttons.
- Exiting an image cancels the current selection of the magnification level.

### ■ To rotate an image

Press **ANGLE** repeatedly.



The image rotates by clockwise 90°.

#### Notes

- If you rotate an image of which magnification level is changed, the size of the image is restored momentarily.
- Quitting the JPEG playback restores a rotated image to its original posture.
- The DVD video player may redo displaying an image if you rotate it.

 
### ■ To display a folder list

1 Press **MENU**.




The following menu appears for about 5 seconds.

e.g.



2 Press ▲/▼ to select “List” then press **ENTER**.

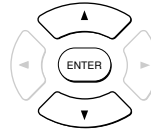

A folder list appears.


You can select a folder to play. For details, see page [54](#).


### ■ To return to the thumbnail view

1 Press **MENU**.



2 Press ▲/▼ to select “Thumbnail” then press **ENTER**.

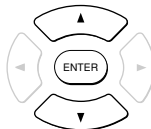

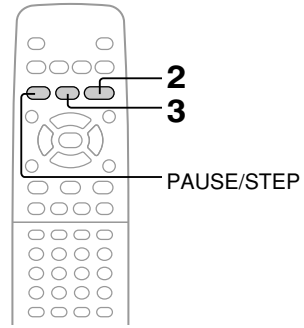

## Playing slide show

### 1 On a thumbnail view, select an image from which you want to start slide show.

You can skip this step. Slide show will start from a photograph currently selected.

### 2 Press PLAY.



Slide show starts.

### 3 To quit the JPEG playback, press STOP.



- If you press the PLAY button after pressing the STOP button, the slide show resumes.
- Pressing the OPEN/CLOSE button to open the disc tray can also quit the playback.

#### ■ To confirm a photo number

See [51](#).

#### ■ To magnify an image

See [52](#).

#### Note

Slide show pauses if you press the ZOOM button.

#### ■ To rotate an image

See [52](#).

#### ■ To display a folder list

See [52](#).

#### ■ To return to the thumbnail view


See [52](#).

#### ■ To view a single image (To pause slide show)

Press PAUSE/STEP.




# Viewing JPEG Files (continued)

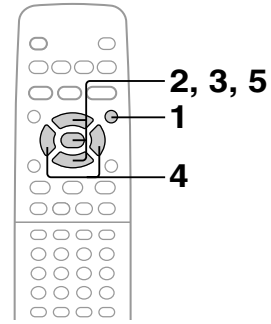

## Selecting a folder


You can designate a folder to play.

**1** On a single image view or during slide show, press MENU.

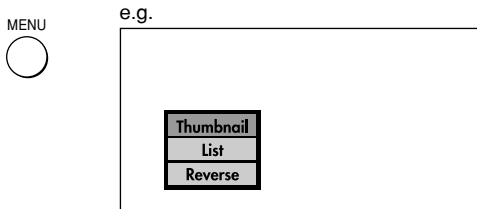


To display a folder list also from a thumbnail view, follow the procedure on [50], and skip to step 3.

**2** Press ▲/▼ to select “List” then press ENTER.

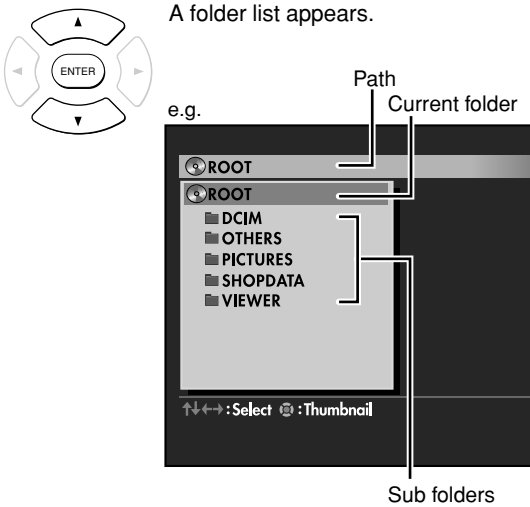


**4** Press ◀/▶ to select a folder.

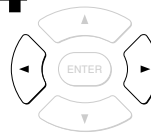

- ▶ : If you press this button while selecting a sub folder, you can view the contents of the folder.
  - Sub folders will appear if contained in the selected folder.
  - If the selected folder contains a file to view, a thumbnail image of the file will appear in the background.
- ◀ : If you press this button while selecting a current folder, you can go back to the previous folder.

**5** After thumbnails appear in the background, press ENTER.

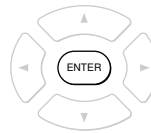

The thumbnail view of the current folder appears. For operations of thumbnail view, see [49].

**Notes**

- The first thumbnail view provided by the automatic mode may not return once you display a folder list. You can retrieve it if you load the disc again.
- Letters of a folder/path name overflowing the given space are not displayed.

## JPEG files compatibility

Discs whose compatibility with this DVD video player has been confirmed by TOSHIBA are as follows. Many of these discs, when loaded, will make the DVD video player enter the automatic mode **48** to play a prescribed folder in the disc. To play other folders, display a folder list and select a folder.

CANON QuickCD  
FUJICOLOR CD  
Kodak Picture CD  
NORITSU QSS CD

JPEG disc compatibility with this DVD video player is limited as follows:

- Playable discs: CD-ROM, CD-R (650MB / 74 min. only)  
CD-RW is not recommendable.
- CD physical format: Mode 1, Mode 2 XA Form 1
- File system: ISO9660 Level 1, 2 or Joliet
- File name: A file name should be in alphabet and numerals only, and must incorporate "JPG" extension.  
e.g. "\*\*\*\*\*.JPG"
- Total number of folders: Less than 256
- Total number of files: Less than 1000

Some files may not display their own entire image depending on the size.





# Function Setup


---

You can change the default settings to customize performance to your preference.

- **Customizing the Function Settings**
- **Table of Languages**

# Customizing the Function Settings

You can change the default settings to customize performance to your preference.

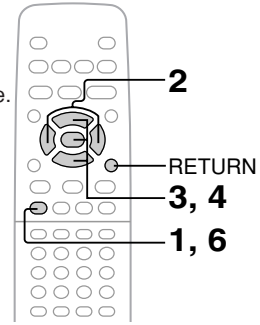


**DVD**  
**VCD**  
**CD**

## Setting procedure

### 1 Press SETUP during stop.




The following on-screen display appears.

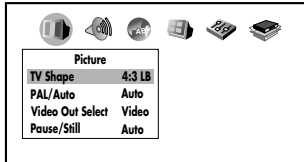

### 2 Press ◀/▶ to select a symbol for the setting you want to change.

(See the next page.)

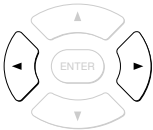

Picture performance settings



Output sound settings



Language settings



Display settings




Operational settings




Initial settings

### 3 Press ▲/▼ to select the setting you want to change, then press ENTER.

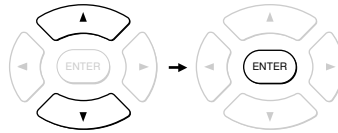

### 4 Change the selection by ▲/▼ or other buttons, by referring to the corresponding pages (60 - ), then press ENTER.

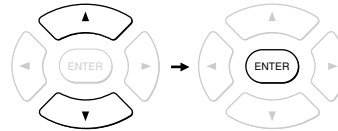

### 5 Repeat steps 3 and 4 to change other settings.

To select another operation, go back to step 2.

### 6 Press SETUP.



The on-screen display disappears.




 






 








 



 




 



 



#### ■ To return to the previous display

Press RETURN.




#### Notes

- The on-screen display disappears when you press the SETUP button.
- The SETUP button can function even during normal playback, however some operations may be inaccessible, and a message will appear. In this case, try again after playback is stopped.

Setting		Details	Page	
	TV Shape		To select a picture size according to the aspect ratio of your TV.	60
	PAL/Auto	 	To select the video system of a disc.	60
	Video Out Select	 	To select the video output type corresponding to your TV system	60
	Pause/Still		To select the resolution of still pictures. (Field/Frame)	60
	Audio Out Select	  	To select an output sound format corresponding to your system connection.	61
	Dynamic Range Control		To turn on or off a function that makes faint sounds easier to hear even if you lower the volume during late hours playback.	61
	Karaoke Vocal		To turn on or off the vocal output during DVD KARAOKE disc playback.	61
	On-Screen Language	  	To select a preferred language for on-screen displays.	62
	Disc Menu Language		To select a preferred language for disc menus.	62
	Audio Language		To select a preferred language for the sound track.	62
	Subtitle Language		To select a preferred language for subtitles.	62
	On-Screen Displays	  	To turn on or de-activate the operational status display on the TV screen.	63
	Background	  	To select the background colour or background picture.	63
	Screen Saver		To turn the screen saver on or off.	63
	Parental Lock		To turn the parental lock function on or off.	64
	Title Stop		To turn on or off a feature that automatically stops playback after a title has been viewed.	65
	PBC		To use the menu screen when playing a PBC-controllable VIDEO CD.	65
	Priority Contents		To select the playback priority between JPEG (picture) files and MP3/WMA (audio) files.	65
	On-Screen Language TV Shape Audio Out Select	  	To install the initial system setting.	66

# Customizing the Function Settings (continued)

## Setting details

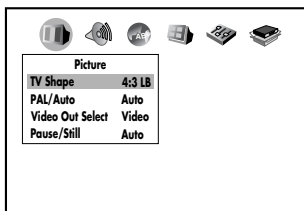

### TV Shape DVD

**4:3 Letterbox:** Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture.



**4:3 Normal:** Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Either or both sides of the picture are cut off.



**16:9 Widescreen:** Select when a 16:9 wide TV is connected.

#### Notes

- The displayable picture size is preset on the DVD video disc. Therefore, the playback picture of some DVD video discs may not conform to the picture size you select.
- When you play DVD video discs recorded in the 4:3 picture size only, the playback picture always appears in the 4:3 picture size regardless of the TV shape setting.
- If you select "16:9 Widescreen" and you own a 4:3 TV set, the DVD playback picture will be horizontally distorted during playback. Images will appear to be horizontally compressed. Always be sure that your TV shape conforms to the actual TV in use.

### PAL/Auto DVD VCD

**PAL:** To play a PAL disc. Connect a PAL TV to view a picture.

**Auto:** The DVD video player automatically identifies PAL or NTSC video system of a disc. Connect a multisystem TV (PAL/NTSC compatible) to view a picture.

A playback picture may be distorted when detected a signal change between PAL and NTSC on the disc.

### Video Out Select DVD VCD

**Video:** Select when connected to a normal TV. **18**

**S Video:** Select when connected to a TV compatible with S video signals. **18 19**

**RGB:** Select when connected to an RGB monitor. **18**


#### Notes

- When you connect a TV equipped with the component video inputs, select "Video" or "S Video". **18**
- If the on-screen display disappears immediately after you select "RGB", you can restore it by connecting the DVD player using the VIDEO OUT (yellow) jack.

### Pause/Still DVD

**Auto:** For normal use. Still and fast motion images can be paused.

**Frame:** The resolution of still pictures is improved, so that you can make a motionless picture more clearer when you pause it.

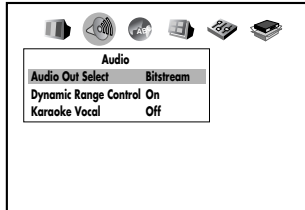

### Audio Out Select (DVD) (VCD) (CD)

Select the output sound format corresponding to your system connection.

For details of sound recording systems, see [43](#).

**Bitstream:** Select when connected to an amplifier equipped with a Dolby Digital, DTS, MPEG1 or MPEG2 decoder. [21](#) [22](#)  
The DVD video player outputs digital audio information in the bitstream format when you play a DVD video disc recorded on the Dolby Digital, DTS, MPEG1 or MPEG2 recording system.

**Analog 2ch:** Select when connected to a TV, or Dolby Surround Pro Logic or stereo system via the analog audio jacks. [18](#) [19](#) [21](#)

**PCM:** Select when connected to a 2 channel digital stereo amplifier. [23](#)  
The DVD video player outputs sounds in the PCM 2ch format when you play a DVD video disc recorded on the Dolby Digital, MPEG1 or MPEG2 recording system.

### Dynamic Range Control (DVD)

Off: Full dynamic range is maintained.

On: Dynamic range is reduced.

#### Notes

- This function works only during playback of Dolby Digital recorded discs.
- The level of Dynamic Range Reduction may differ depending on the DVD video disc.

### Karaoke Vocal (DVD)

Off: The primary vocal is not output.


On: The primary vocal is output when it is recorded on the disc.

#### Notes

- The vocal output feature is used during playback of Dolby Digital (multi-channel) recorded DVD KARAOKE discs. This feature allows you to turn off vocal audio tracks, or restore them for background accompaniment.
- When playing KARAOKE, connect appropriate audio equipment such as an amplifier to the DVD video player.

# Customizing the Function Settings (continued)

## Setting details

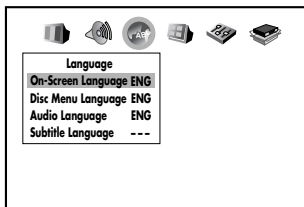

### On-Screen Language (DVD VCD CD)


English: To view on-screen displays in English.  
 Français: To view on-screen displays in French.  
 Deutsch: To view on-screen displays in German.  
 Español: To view on-screen displays in Spanish.  
 Italiano: To view on-screen displays in Italian.

### Disc Menu Language (DVD)

English: To display disc menus in English.  
 French: To display disc menus in French.  
 German: To display disc menus in German.  
 Spanish: To display disc menus in Spanish.  
 Italian: To display disc menus in Italian.  
 Others: To make a further choice.

After pressing the ENTER button, follow steps 1) - 4) below.

- 1) Obtain the abbreviation of the preferred language from the list **67**.
- 2) Select the first character by pressing the ▲ / ▼ buttons.
- 3) Press the ◀ / ▶ buttons to shift and select the second character by pressing the ▲ / ▼ buttons.

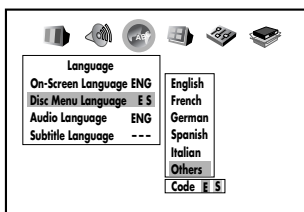

- 4) Press the ENTER button.

#### Note


Some DVD video discs may not include your pre-selected language. In this case, the DVD video player automatically displays disc menus consistent with the disc's initial language setting.

### Audio Language (DVD)

English: To play sound tracks in English.  
 French: To play sound tracks in French.  
 German: To play sound tracks in German.  
 Spanish: To play sound tracks in Spanish.  
 Italian: To play sound tracks in Italian.  
 Others: To make a further choice.

After pressing the ENTER button, follow steps 1) - 4) below.

- 1) Obtain the abbreviation of the preferred language from the list **67**.
- 2) Select the first character by pressing the ▲ / ▼ buttons.
- 3) Press the ◀ / ▶ buttons to shift and select the second character by pressing the ▲ / ▼ buttons.

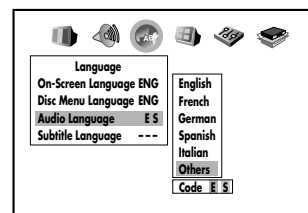

- 4) Press the ENTER button.

#### Note

Some DVD video discs may be played in a different language than you selected. A prior language may be programmed on the disc.


### Subtitle Language (DVD)

English: To display subtitles in English.  
 French: To display subtitles in French.  
 German: To display subtitles in German.  
 Spanish: To display subtitles in Spanish.  
 Italian: To display subtitles in Italian.  
 No Subtitle: To disable subtitles.  
 Others: To make a further choice.

After pressing the ENTER button, follow steps 1) - 4) below.

- 1) Obtain the abbreviation of the preferred language from the list **67**.
- 2) Select the first character by pressing the ▲ / ▼ buttons.


- 3) Press the ◀/▶ buttons to shift and select the second character by pressing the ▲/▼ buttons.

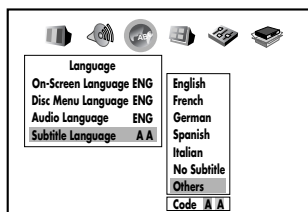

- 4) Press the ENTER button.

#### Notes

- Some DVD video discs may be set to display subtitles in a different language than you selected. A prior subtitle language may be programmed on the disc.
- Some DVD video discs allow you to change subtitle selections only via the disc menu. If this is the case, press the MENU button and choose the appropriate subtitle language from the selection on the disc menu.

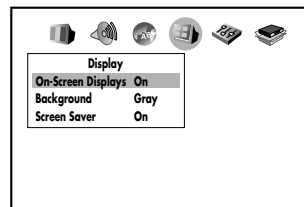

### On-Screen Displays DVD VCD CD

Off: Operational modes (e.g. "□□", "▶▶") are not displayed.

On: Operational modes (e.g. "□□", "▶▶") are displayed on-screen.

### Background DVD VCD CD

Blue: Blue background.

Gray: Gray background.

Picture: To use the picture which appears when you turn on the DVD video player as a background.

Jacket: To use the jacket picture included on some discs as a background. If it is not included, a gray background will be substituted.



### Screen Saver DVD

Off: The screen saver is disengaged.

On: The screen saver operates.

# Customizing the Function Settings (continued)

## Setting details

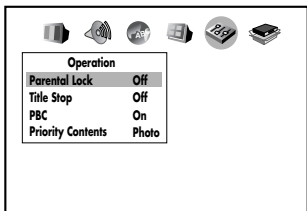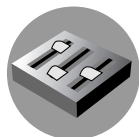


### Parental Lock DVD

DVD video discs equipped with the parental lock function are rated according to their content. The contents allowed by a parental lock level and the way a DVD video disc can be controlled may vary from disc to disc. For example, if the disc allowed you could edit out violent scenes unsuitable for children and replace them with more suitable scenes, or lock out playback of the disc altogether.

- DVD video discs may or may not respond to the parental lock settings. This is not a defect in the DVD video player. Make sure this function works with your DVD video discs.

- Off:** The parental lock feature does not function. After pressing the ENTER button, follow step 1) below.
- On:** To activate the parental lock feature or change the settings. After pressing the ENTER button, follow steps 1) - 3) below.

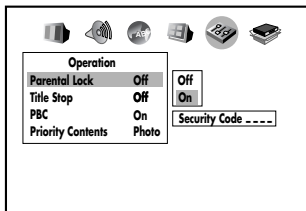


- 1) Press the number buttons to create a personal 4-digit security code, then press the ENTER button.  
If you make a mistake before pressing the ENTER button, press the CLEAR button and enter your 4-digit security code again.
- 2) Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list below.

Country/Area	Code
AUSTRALIA	AU
BELGIUM	BE
CANADA	CA
CHINA	CN
CHINA HONG KONG	HK
DENMARK	DK
FINLAND	FI
FRANCE	FR
GERMANY	DE
INDONESIA	ID
ITALY	IT
JAPAN	JP
MALAYSIA	MY
NETHERLANDS	NL
NORWAY	NO
PHILIPPINES	PH
RUSSIAN FEDERATION	RU
SINGAPORE	SG
SPAIN	ES
SWEDEN	SE
SWITZERLAND	CH
TAIWAN	TW
THAILAND	TH
UNITED KINGDOM	GB
UNITED STATES	US

- a) Select the first character by pressing the ▲ / ▼ buttons.
- b) Press the ◀ / ▶ buttons to shift and select the second character by pressing the ▲ / ▼ buttons.
- c) Press the ENTER button.



- 3) Press the ▲ / ▼ buttons to select the parental lock level, then press the ENTER button.

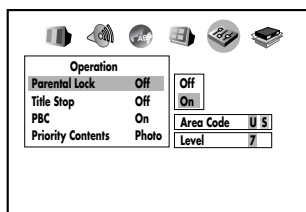

You cannot play DVD video discs rated higher than the level you selected unless you cancel the parental lock function.

For example, when you select level 7, discs rated higher than level 7 are locked out and cannot be played.

The parental lock level is equivalent to the following USA movie ratings.

- Level 7: NC-17
- Level 6: R
- Level 4: PG 13
- Level 3: PG
- Level 1: G


The parental lock levels for other countries/areas than U.S. are included for future use. Check the appropriate parental lock level when you buy a DVD video disc equipped with the parental lock feature in the future.

#### ■ To change the parental lock level

 Follow steps 1) - 3).

#### ■ To change your 4-digit security code

- 1) After selecting "On" or "Off," press the STOP button four times, then press the ENTER button.



The 4-digit security code is cleared.

- 2) Press the number buttons to create a new 4-digit security code.  
3) Press the ENTER button.

### Title Stop

Off: The DVD video player continues after playback of a title is completed.

On: The DVD video player stops after playback of a title is completed.

### PBC

Off: When playing a VIDEO CD without using the menu.

On: To use the menu when playing a PBC-featured VIDEO CD.

### Priority Contents

To select the playback priority between JPEG (picture) files and MP3/WMA (audio) files.

Photo: JPEG files take priority over MP3/WMA files.



Audio: MP3/WMA files take priority over JPEG files.

#### Note

If this selection does not correspond to disc contents, the DVD video player will take a longer time to start playback of the disc.


# Customizing the Function Settings (continued)

## Setting details

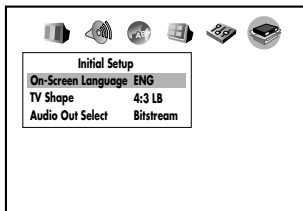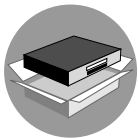


### Initial Setup DVD VCD CD

- 1) Press the **▲** / **▼** buttons to select "On-Screen Language," and press the **ENTER** button.

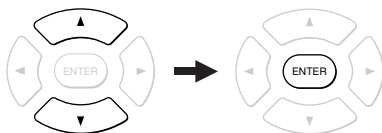

- 2) Select a language pressing the **▲** / **▼** buttons, and press the **ENTER** button.

See page [62](#), "On-Screen Language."

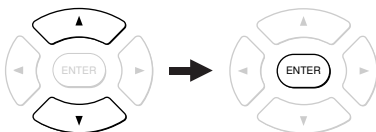

- 3) Make your selection in the same manner as step 1) then step 2).

See page [60](#), "TV Shape."

See page [61](#), "Audio Out Select."

# Table of Languages

**Table of languages and their abbreviations**

Abbreviation	Language	Abbreviation	Language	Abbreviation	Language
---	No alternate language	GN	Guarani	PT	Portuguese
CHI (ZH)	Chinese	GU	Gujarati	QU	Quechua
DUT (NL)	Dutch	HA	Hausa	RM	Rhaeto-Romance
ENG (EN)	English	HI	Hindi	RN	Kirundi
FRE (FR)	French	HR	Croatian	RO	Rumanian
GER (DE)	German	HU	Hungarian	RU	Russian
ITA (IT)	Italian	HY	Armenian	RW	Kinyarwanda
JPN (JA)	Japanese	IA	Interlingua	SA	Sanskrit
KOR (KO)	Korean	IE	Interlingue	SD	Sindhi
MAY (MS)	Malay	IK	Inupiak	SG	Sango
SPA (ES)	Spanish	IN	Indonesian	SH	Serbo-Croatian
AA	Afar	IS	Icelandic	SI	Singhalese
AB	Abkhazian	IW	Hebrew	SK	Slovak
AF	Afrikaans	JI	Yiddish	SL	Slovenian
AM	Amharic	JW	Javanese	SM	Samoan
AR	Arabic	KA	Georgian	SN	Shona
AS	Assamese	KK	Kazakh	SO	Somali
AY	Aymara	KL	Greenlandic	SQ	Albanian
AZ	Azerbaijani	KM	Cambodian	SR	Serbian
BA	Bashkir	KN	Kannada	SS	Siswati
BE	Belorussian	KS	Kashmiri	ST	Sesotho
BG	Bulgarian	KU	Kurdish	SU	Sundanese
BH	Bihari	KY	Kirghiz	SV	Swedish
BI	Bislama	LA	Latin	SW	Swahili
BN	Bengali, Bangla	LN	Lingala	TA	Tamil
BO	Tibetan	LO	Laotian	TE	Telugu
BR	Breton	LT	Lithuanian	TG	Tajik
CA	Catalan	LV	Latvian, Lettish	TH	Thai
CO	Corsican	MG	Malagasy	TI	Tigrinya
CS	Czech	MI	Maori	TK	Turkmen
CY	Welsh	MK	Macedonian	TL	Tagalog
DA	Danish	ML	Malayalam	TN	Setswana
DZ	Bhutani	MN	Mongolian	TO	Tongan
EL	Greek	MO	Moldavian	TR	Turkish
EO	Esperanto	MR	Marathi	TS	Tsonga
ET	Estonian	MT	Maltese	TT	Tatar
EU	Basque	MY	Burmese	TW	Twi
FA	Persian	NA	Nauru	UK	Ukrainian
FI	Finnish	NE	Nepali	UR	Urdu
FJ	Fiji	NO	Norwegian	UZ	Uzbek
FO	Faroese	OC	Occitan	VI	Vietnamese
FY	Frisian	OM	(Afan) Oromo	VO	Volapük
GA	Irish	OR	Oriya	WO	Wolof
GD	Scottish Gaelic	PA	Panjabi	XH	Xhosa
GL	Galician	PL	Polish	YO	Yoruba
		PS	Pashto, Pushto	ZU	Zulu



# Others

- Before Calling Service Personnel
- Specifications

## Before Calling Service Personnel

Check the following guide for the possible cause of a problem before contacting service.

### Symptoms and correction

Symptom	Cause	Correction	Page
No power.	<ul style="list-style-type: none"> <li>The power plug is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the power plug securely into the wall outlet.</li> </ul>	<b>18, 19</b>
The DVD video player turned off by itself.	<ul style="list-style-type: none"> <li>The automatic power off function turned the unit off.</li> </ul>	<ul style="list-style-type: none"> <li>Press the PLAY button.</li> </ul>	<b>27</b>
No picture.	<ul style="list-style-type: none"> <li>The TV is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the DVD video player appears on the TV screen.</li> </ul>	<b>26</b>
	<ul style="list-style-type: none"> <li>The video cable is not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the video cable securely into the appropriate jacks.</li> </ul>	<b>18, 19</b>
No sound.	<ul style="list-style-type: none"> <li>The equipment connected with the audio cable is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the correct input mode of the audio receiver so you can listen to the sound from the DVD video player.</li> </ul>	<b>26</b>
	<ul style="list-style-type: none"> <li>The audio cable is not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the audio cable securely into the appropriate jacks.</li> </ul>	<b>18 – 23</b>
	<ul style="list-style-type: none"> <li>The audio receiver or TV is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the equipment connected with the audio cable.</li> </ul>	<b>26</b>
	<ul style="list-style-type: none"> <li>The setting of output sound format is incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>Select the proper audio setting.</li> </ul>	<b>43, 58 61</b>
The playback picture has occasional distortion.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Eject the disc and clean it.</li> </ul>	<b>9</b>
	<ul style="list-style-type: none"> <li>It is in fast forward or fast reverse playback.</li> </ul>	<ul style="list-style-type: none"> <li>Sometimes a small amount of picture distortion may appear. This is not a malfunction.</li> </ul>	–
Brightness is unstable or noises are present in the playback pictures.	<ul style="list-style-type: none"> <li>The effect of copy protection.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the DVD video player directly to the TV. Avoid connecting the DVD video player to a VTR or TV/VTR combination.</li> </ul>	<b>18</b>
The DVD video player does not start playback.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc.</li> </ul>	<b>26</b>
	<ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type and colour system.)</li> </ul>	<b>10</b>
	<ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc with the playback side down.</li> </ul>	<b>26</b>
	<ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc correctly inside the guide on the disc tray.</li> </ul>	<b>26</b>
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>	<b>9</b>
	<ul style="list-style-type: none"> <li>The parental lock function is set.</li> </ul>	<ul style="list-style-type: none"> <li>Cancel the parental lock function or change the parental lock level.</li> </ul>	<b>58, 64</b>
Playback does not follow the course of the disc's program.	<ul style="list-style-type: none"> <li>It is in the mode of repeat playback, memory playback, etc.</li> </ul>	<ul style="list-style-type: none"> <li>These operations may prevent a proper progress of the contents.</li> </ul>	–
Buttons do not work.	<ul style="list-style-type: none"> <li>Power supply fluctuations or other abnormalities such as static electricity may interrupt correct operations.</li> </ul>	<ul style="list-style-type: none"> <li>Press and hold the ON/STANDBY button on the front panel for more than about 3 seconds. The DVD video player turns off. Press the button again to turn it on. If the buttons still do not work, disconnect the power plug and insert it into the wall outlet again.</li> </ul>	–
The remote control does not work properly.	<ul style="list-style-type: none"> <li>The remote control is not pointed at the remote sensor of the DVD video player.</li> </ul>	<ul style="list-style-type: none"> <li>Point the remote control at the remote sensor of the DVD video player.</li> </ul>	<b>15</b>
	<ul style="list-style-type: none"> <li>The remote control is too far from the DVD video player.</li> </ul>	<ul style="list-style-type: none"> <li>Operate the remote control within about 7 m.</li> </ul>	<b>15</b>
	<ul style="list-style-type: none"> <li>The batteries in the remote control are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the batteries with new ones.</li> </ul>	<b>15</b>

## DVD video player / outputs / supplied accessories

### DVD Video Player

Power supply	100-240 V AC, 50/60 Hz
Power consumption	15 W
Mass	2.2 kg
External dimensions	430 × 60 × 216 mm (W/H/D)
Signal system	PAL/3.58 NTSC
Laser	Semiconductor laser, wavelength 650/780 nm
Frequency range	DVD linear sound : 48 kHz sampling 4 Hz to 22 kHz 96 kHz sampling 4 Hz to 44 kHz
Signal-to-noise ratio	More than 112 dB
Audio dynamic range	More than 102 dB
Harmonic distortion	Less than 0.002 %
Wow and flutter	Below measurable level (less than ±0.001 % (W.PEAK))
Operating conditions	Temperature: 5 °C to 35 °C, Operation status: Horizontal

### Outputs

Video output (SCART)	1.0 V (p-p), 75 Ω, SCART socket × 1
Video output (phono type)	1.0 V (p-p), 75 Ω, negative sync., pin jack × 1
S video output	(Y) 1.0 V (p-p), 75 Ω, negative sync., Mini DIN 4-pin × 1 (C) 0.3 V (p-p), 75 Ω
Component video output	(Y) 1.0 V (p-p), 75 Ω, negative sync., pin jack × 1 (P <sub>B</sub> )/(P <sub>R</sub> ) 0.7 V (p-p), 75 Ω, pin jack × 2
Audio output (SCART)	2.0V (rms), 680 Ω, SCART socket × 1
Audio output (BITSTREAM/PCM OPTICAL)	Optical connector × 1
Audio output (BITSTREAM/PCM COAXIAL)	0.5V (p-p), 75 Ω, pin jack × 1
Audio output (ANALOG AUDIO OUT)	2.0 V (rms), 680 Ω, pin jacks (L, R) × 1

### Supplied Accessories

Remote control (SE-R0049) .....	1
Batteries (R6) .....	2
Power cord .....	1

- Designs and specifications are subject to change without notice.

**TOSHIBA**

Printed in China