


Example of a starting Serial # SU30060210000001			
SU30	06	0210	000001
Model #	Plant #	Year/month	Serial Number

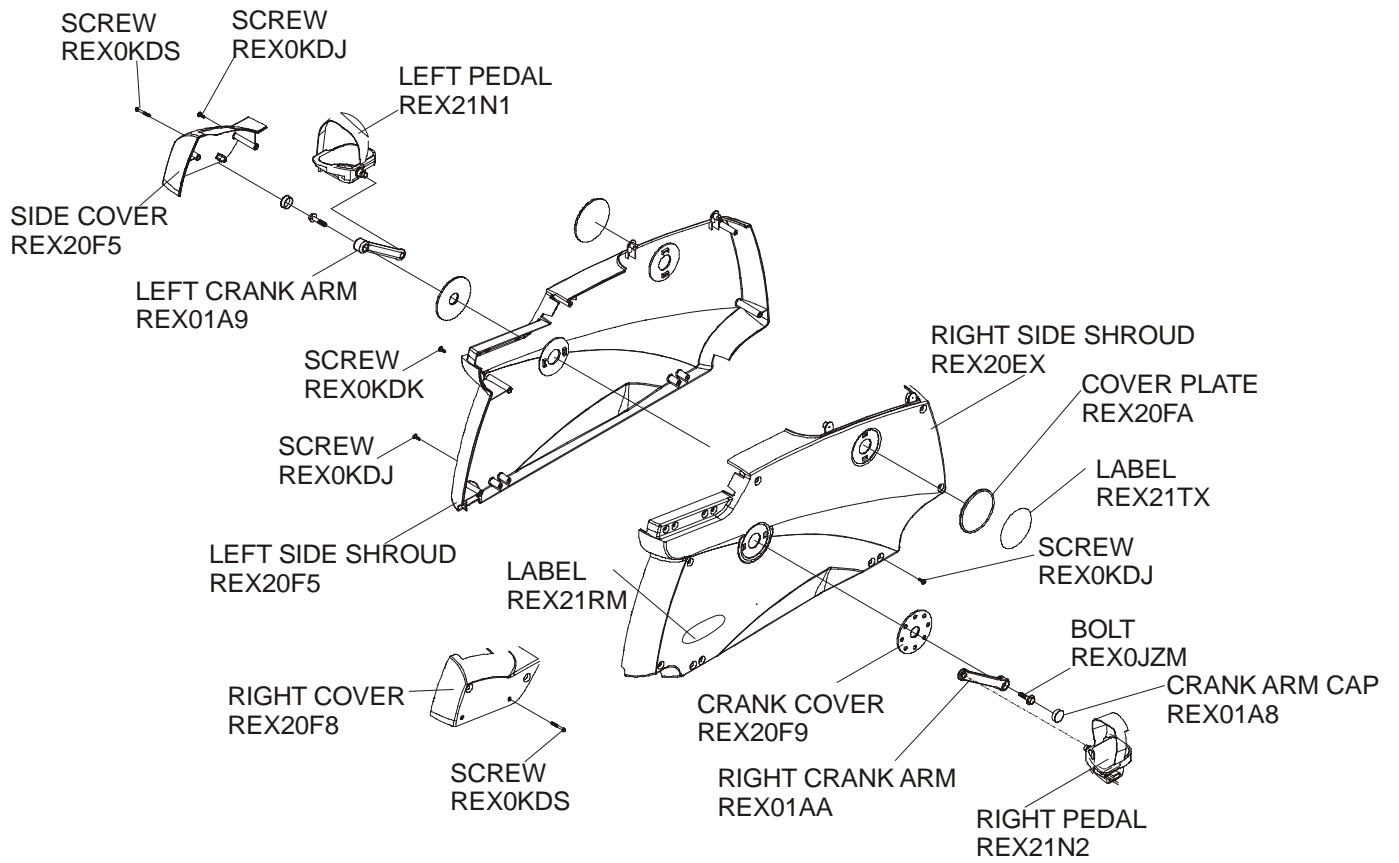

REX22D5
Console Assembly

