IR(H/I

user manual

00

00

(O AUDIO IN

If your product operates on batteries

A. Do not mix old and new batteries.

adhere to the following precautions:

B. Do not mix alkaline, standard (carbon-zinc)

b) both this analite, standard (carbot-zirc), or rechargeable (NiCd, NiMH, etc) batteries.
 C. Any battery may leak electrolyte or explode

to charge a battery not intended to

if disposed of in fire or an attempt is made

be recharged. D. Discard leaky batteries immediately. Leaking

personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state/provincial

batteries can cause skin burns or other

E. Battery shall not be exposed to excessive

heat such as sunshine, fire or the like

and local regulations.

Ô

It is important to read this instruction book prior to using your new product for the first time.

two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RTD316W

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Rules. Operation is subject to the followin

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does causeharmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interferebce by one or more of the following measures

· Reorient or relocate the receiving

radio/TV technician for help

antenna. · Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

> This Home Theater has MT. earned the ENERGY STAR.

disconnect device shall remain

Other important use and cleaning

information at the end of the booklet.

Connecting the antennas

_White

The AM and FM antennas connect to the

AM and FM terminals on the system's back

panel. They must be hooked up in order to

2. Press down on the Antennas tab to open

3. Make sure the white wire on the AM loop

antenna is inserted into the AM loop

terminal and the other wire is inserted

Connecting to your TV (VIDEO)

₩1B= →)@

Red (_____ ●) ●

→® ®

nto the ground loop terminal

FM75 Ω

receive clear reception.

1. Uncoil the AM Antenna wire.

AM Loop Antenna

the terminal.

Method 2

Method 1

readily operable.

Important Safety Instructions

Additional safety information Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. Always leave sufficient space around the


RCЛ

product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings Do not place lighted candles, cigarettes, cigars, etc. on the product. Connect power cord only to AC power source as marked on the product. · Care should be taken so that objects do not

fall into the product. Do not attempt to disassemble the cabinet This product does not contain customer

Connections and Setup

serviceable components

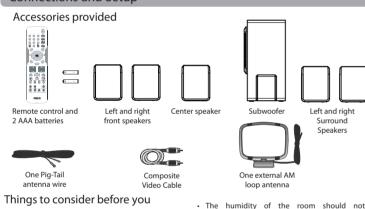

connect · Ensure that the mains supply in your house complies with that indicated on the identification sticker located on the back of your unit Install your unit horizontally, away from any source of hear (fireplace) or appliances creating strong magnetic or electric fields. The components of this unit are sensitive to heat. The maximum ambient temperature should not exceed 35°C/95°F. Leave enough space around the unit to allow adequate ventilation: 10 cm/4 inches on either side and above the top, and 5 cm/2 inches at

Connections and Setup

Better surround placement

Location If possible, place surround speakers to either side of the listening area, not behind it.

 
No adjacent walls Surround speakers can go on stands facing each other to approximate sidewall mounting (A), or to the sides or rear of the viewing area, aimed upwards; they can go right on the floor, or preferably, a few feet off the floor

such as on end tables (B)

tray is empty.

FCC Information This device complies with Part 15 of the FCC

Ventilation ou must adequately ventilate the product. Make sure there is adequate space around the unit to provide proper air flow for ventilation. See diagram.



This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

For your safety The AC power plug is polarized (one blade is wider than the other and only fits into AC @1 power outlets one way. If the plug won't go into the outlet completely turn the plug over and

try to insert it the other If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

Removing the power plug is the only way to completely remove power from your product. Make sure the power plug remains easily accessible

Note:

 
This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this player cannot play the disc. The Region number for this DVD player is Region 1.

Connections and Setup

Antenna

- Where the mains plug or an appliance Method 2 coupler is used as a disconnect device, the Component video jacks (Pr, Pb, Y) The component video jacks are color-coded
 - green, blue and red. Additional component video cables (not supplied) are required to provide best picture ality. They are usually color-coded green, blue and red.

· Connect the component video OUT jacks on the receiver to the component video IN jacks on your TV so the video content goes from the receiver to the screen.




that all the cables have been inserted properly into the jacks.


If your component has only one input for audio (mono), connect it to the left (white L/Mono) audio jack on the TV and don't nnect the right audio part of the cable

Connecting to your TV (via HDMI

 input)



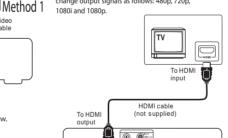



Overview of Controls

(OK)

 \triangleright

STOP

ANGLE ZOOM

RЕЛ

O

PAUSE

SUBTITLE

•...•

REV

SLOW

AUDIO

ON+OFF

(U)

Video cable (vellow) is supplied for the

connection for good picture quality.

Remote functions in DVD/CD mode

AUDIO IN - Selects the FRONT AUDIO IN mode

Selects the TUNER and selects between FM/AM

ON•OFF – Switches the unit on and off DVD - Selects the DVD mode

FCC Information



THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

CAUTION: TO REDUCE THE RISK OF FLECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USERSERVICEABLE PARTS INSIDE. RÉFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DVD copy protection

or even impossible. This product

Reverse engineering or disassembly

Using AUDIO IN jacks

AUDIO IN mode.

is prohibited.

mp3 players.

In accordance with the DVD standard, your

DVD player is equipped with a Copy

Protection system, which can be switched on

and off by the DVD disc itself, in order to

make any recording of the relevant DVD disc

onto a videotape of very poor picture quality,

incorporates copyright protection technology

that is protected by method claims of certain

U.S. patents and other intellectual property

ights owned by Macrovision Corporatio

and other rights owners. Use of this copyright

by Macrovision Corporation, and is intended

for home use only unless otherwise authorized by Macrovision Corporation

Connect the Ø3.5mm AUDIO IN jacks on the front

panel of the unit to the headphone output of

• Ø3.5mm to Ø3.5mm audio cables (not included)

· Press either SOURCE on the main unit or

AUDIO IN on the remote control to select

· To listen to the audio input from the connected

AUDIO IN on the remote control to select the

AUDIO IN jack for mp3

for auxillary equippment such

Suggest using Ø3.5mm

player and AUX IN jacks

as DVD, VCR or PC.

component, press SOURCE on the main unit or

rotection technology must be author

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

WARNING: MAINS PLUG IS USED AS DISCONNECT DEVICE AND IT SHOULD REMAIN READILY OPERABLE DURING INTENDED USE. IN ORDER TO DISCONNECT THE MAINS PLUG FROM MAINS COMPLETELY. THE MAINS PLUG SHOULD BE DISCONNECTED FROM THE MAINS SOCKET OUTLET COMPLETELY

Service information This product should be serviced only by those specially trained in appropriate servicing techniques.

Main plug is used as the disconnect device, it shall remain operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

Caution Invisible laser radiation when open. Avoid

the laser beam.

 
exposure to beam. Class 1 laser product. This system must be opened only by qualified

Connections and Setup

 Refer to the owner's manual of the connected TV as well · When using HDMI cable, do not connect to other analog video outputs. Connecting AUDIO from external

technicians to prevent accidents caused by

sources such as TV (Aux-In) Using AUX jack Connect the AUX jacks from the unit to the



Connecting the speakers

Speaker wires are color-coded to match the terminals. Connect the speaker wire from the back of each speaker to the corresponding color terminal at the back of the unit. Press down the tab to oper

the terminal and insert the wire. Release the tab to lock wire in the terminal or Black St r Black Strip r Black or Black Str Subwoof SR SL ST Note: When c ecting the speakers, make sure the polarities ("+" speaker wire to "+" on the rece For example, red wire to red terminal on the receiver) of speaker wires and terminals match. If the cords are reversed, the sound will be distorted. Do not let the speaker wires touch each other, it will damage the speaker Overview of Controls

Playing Discs - Basic Functions

Compatible discs DVD, DVD-R, DVD-RW, DVD+R, DVD+RW CD, CD-R, CD-RW Compatible formats

Important Information

Important battery information · Do not mix different types of batteries or new and old batteries. Do not use rechargeable batteries. In order to avoid any risk of explosion

specified herein may result in hazardous radiation exposure. Do not observe the polarities indicated inside the open covers and do not repair yourself. Refer servicing to qualified personnel. battery compartment. Replace only with the type of batteries specified. Do not dispose of them in a fire or recharge the To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. No objects filled with If you are not using the remote control for a long period of time, remove liquids, such as vases, should be placed

CAUTION

This product utilizes a laser. Use of

controls or adjustments or perfor of procedures other than those

s Class B digital apparatus complie

Let appareil numérique de la class B est conforme à la norme du NMB-003

reduce the risk of fire or electric shock, do

not expose this product to rain or moisture. No

objects filled with liquids, such a vases, should be

Do not defeat the safety purpose of the polarized or

The wide blade or the third prong is provided for

Protect the power cord from being walked on or pinched particularly at plugs,

convenience receptacles, and the point

Use only with the cart, stand, tripod, bracket,

combination to avoid injury from tip-over.

or when unused for long periods of time.

Unplug this apparatus during lightning storms

Refer all servicing to qualified service personnel

or objects have fallen into the apparatus, the

apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled

or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus

where they exit from the apparatus

grounding-type plug. A polarized plug has two blades

with one wider than the other. A grounding type plug has two blades and a third grounding prong.

your safety. If the provided plug does not fit into your outlet, consult an electrician for electrician for replacement of the obsolete outlet.

on the apparatus.

WARNING

th Canadian ICES-003.

ed on the apparatus

Please respect the environment and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer whether they are subject to special recycling and if they will accept them for disposal.

the bat

Illustrations contained in this document are tation only.

CLASS 1 LASER PRODUCT APPAREIL À LASER DE CLASSE ' PRODUCTO LASER DE CLASE 1

Important Safety Instructions Please read and save for

future reference Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

 Read these instructions Keep these instructions
Heed all warnings. Follow all instructions.

 Do not use this apparatus near water Clean only with dry cloth Do not block any ventilation openings

Install in accordance with the

manufacturer's instructions. • Do not install near any heat sources such as radiators, heat registers, stoves, or other

apparatus (including amplifiers) that produce heat · Only use attachments/accesso

 
specified by the manufacture

Connections and Setup

U)

Positioning speakers

Front speaker placement For best results, follow the speaker placement below



tion to duplicate the soundtrack mixer's

The three front speakers should be as close as

possible to the same height. This often

requires placing the center speaker directly

Angle

1. Left, Right (Front Speakers) Front speakers carry primarily music and sound effects.

Place the left and right speakers to form a 45-degree angle with your favorite viewing In surround mode, the center speaker carries most of the dialog as well as music and perspective.

4

Courtesy Dolby Laboratories

It should be set between the left and right

speakers 3. Surround (Rear Speakers) The surround speakers' overall sound balance should be as close as possible to the front on top (A) or beneath (B) the TV set. speakers. Proper placement is vital to

establish an evenly distributed sound field

4. Subwoofer A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.).



Note: Front, Center speakers ded with this unit are magnetically shielded to protect your TV set. It is not recommended to place the surround speakers and subwoofer near the TV set.

Basic playback operations

Variable slow motion Press SLOW button on the remote in play mode. 2. Each time the SLOW button is pressed, the speed of slow-motion playback changes in the following sequence:



user interaction, the unit switches off

chapter, and time display information.

automatically.

camera angle.

select an icon

Play mode

The Info Menu

from the beginning, press STOP twice. If the unit is left in STOP mode for more than 5 minutes

without any user interaction, a screen saver is activated. At the end of 30 minutes without any

1. Press INFO on the remote while a disc is playing to display the info menu. The first banner shows title,

2. Press INFO again for audio language, subtitles, and

3. Press INFO a third time for play mode, bookmark and

5. Use the up/down buttons to scroll through the options

4. Use the right/left arrow buttons on the remote to

AUDIO OUT jacks on VCR, TV, Set Top Box or S.

Heigh If space permits, install surround speakers 2-3 feet above viewers. This helps to minimize localization effects.

Aimina

Aim surround speakers straight across the room, not down at viewers, to help create a nore open, spacious surround sound field






Alternative Surround Placement Rear wall

rear wall mounting is the only choice, aim the speakers at each other (A), towards the front (B) or towards the sidewalls (C, D). Experiment with placement until sounds seem to surround you, rather than come from behind you.

Overview of Controls : Front panel controls

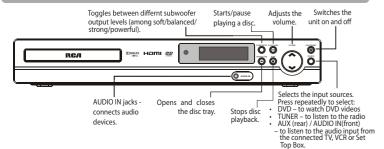



Test tone/Channel balance

exceed 75%. If you have to use the unit outdoors, do not expose it to rain or

splashing water. The apparatus should not

be exposed to dripping or splashing and no objects filled with liquids, such as vases,

condensation disappear on its own before

turning the unit on again. Before moving the unit, make sure the disc

 
should be placed on the apparatus.

Moving the unit from a cold place to a warm one can cause condensation on some components inside the unit. Let the

Channel balance Your receiver is equipped with a test signal generator for balancing the channels. As the signal "travels" from channel to channel, adjust the level controls until each channel plays at the same loudness level.

Level adjustment and surround channel level expectation Even though you adjust the surround channel

to be as loud as the others on the test signal on actual program material the surround channel is adjust the surround level; program producers use surround for subtle atm and ambience, and only rarely for special effects



- OK Confirms your selection $\land \lor \lt > -$ To navigate through the menus. The left and right arrows also tune the radio frequency in the tuner mode
- MUTE Mutes and restores the sound.
- SETUP Enters Setup menu
- RETURN In DVD mode, returns to the previous menu
- VOL +/- Adjusts the sound volume
- CH +/ ₩, CH -/ ₩ Directly accesses the next or previous chapte (DVD) or track (CD). Selects programmed stations in TUNER mode
- REV Starts reverse accelerated play
- PLAY Starts playing a disc
- FWD Starts forward accelerated play
- SLOW Select SLOW motion function
- STOP Stops playback.
- PAUSE Freezes frame, accesses frame advance
- AUDIO Accesses the audio function
- ANGLE Accesses the camera angle function for DVD disc
- ZOOM Accesses the Zoom function
- SUBTITLE Selects the subtitle languages or tunrs subtitle off (if available)
- HDMI Changes video output signals (480p, 720p, 1080i or 1080p)
- SUBWOOFER Selects among subwoofer output levels (soft/balance/strong/powerful).

level settings. Adjusts the value using DVD, JPEG CD, WMA

RANDOM – Turns on/off random playback on CDDA/

EQ . LEVEL – Toggles channels for different channel

SURROUND - Changes the Surround sound setting.

Remote control functions in tuner

TUNER - Selects the TUNER and switch between

VOL+/- - Adjusts the sound volume

MUTE - Mutes and Restores the sound.

frequencies

CH+/- - Selects programmed stations

for Tuner (FM)

. that is highlighted.

Insert 2 "AAA"("UM-4"/"R03")

AUDIO - Selects between Stereo and Mono mode

Using remote control to navigate

Use $\land \lor \lt >$ and OK on the remote control to navigate

the Info Display that appears during playback, or a disc's

Use $\land \lor \lt \lt$ on the remote to move through on-screen

menus in the direction of the arrow button (e.g., to move

right, press >). The arrow buttons are used to highlight an

control prior to

through the on-screen displays (the DVD player's men

through the on-screen menus

MEMORY - Stores a station

TUNER +/- - Tunes down and up the radio

select between Dolby ProLogic and

STEREO modes. (Refer to details on

Dolby Digital and Dolby ProLogic.)

wma/jpeg discs.

REPEAT – Accesses the repeat function.

VOL +/-

mode

FM/AN

Regional coding

In DVD mode, press the button to select Your unit has been designed to process between Dolby Digital and Stereo mode (Dolby ProLogic is available if the input is Dolby 2ch). In the AUX IN / AUDIO IN regional management information stored on DVD discs. The regional code for your unit mode (analog input), press the button to is 1. Discs that have a different regioinal code will not play.

Operating the DVD receiver

1. Turn on your television set. 2. Press ON•OFF on the remote or ON/ STANDBY located on the unit's front panel. Press DVD on the remote control.

Loading disc

- 1. Press ≜ on the front panel to open the disc
- trav. 2. Place a disc onto the disc tray with the label side up.
- 3. Press ≜ again to close the disc tray.

Playback

witch the unit and the TV set on. 1. After loading a disc, playback starts automatically, or the disc menu appears If the disc menu appears, select the Play option to begin playback 2. Press STOP to stop playback.

Accelerated play While the disc is playing, press REVERSE or FORWARD one or more times to vary the speed and direction of the accelerated play. Press PLAY to resume normal playback.

option. Once highlighted, press OK to select the option While the disc is playing, press PAUSE once for freeze frame. Press PLAY to resume normal playback.

> Frame advance 1. Press PAUSE twice. "Step" is displayed. 2. Each time you press PAUSE button, the picture advances one frame. 3. Press PLAY to resume normal playback

SF 1/2→SF 1/3→ SF 1/4→ SF 1/5 PLAY ← SF 1/7 ← SF 1/6

3. Press PLAY to resume normal playback.

Changing chapter/track While the disc is playing, press the CH+/-button to go immediately to the next or previous chapter, or to the next or previous track.

Zoom

1. While a disc is playing, press ZOOM until you reach the zoom size you want. The ZOOM button toggles through 2x, 3x, 4x and then zooms out to 1/2x, 1/3x and 1/4x, then returns to normal playback. 2. Move from one area to another (pan) using the arrow buttons. 3. To turn ZOOM off, press ZOOM unitil you get to the ZOOM OFF option.

Setup menu — Press SETUP to access

ST INVALID KEY will be displayed if the function you select is not available

DVD Info Display Title Chapte TT 1/10 CH 1/16 2 00:13:07 Subtitles Camera an))1/3ENG □□5.1CH □1/2 ENG □1FF PLAYMODE 🔗 BOOKMARK 🕘 SLEEP CD Info Display Time display Track CD TRK 1/10 ↓ CX ④ 00:13:07

Bookmark

PLAYMODE OBOOKMARK

Sleep time

SLEEP SLEEP

Types of menus • Disc menu — The appearance and contents of this menu varies according to the type of disc you have inserted. It is separate from the Setup menu.

• Info menu — The unit's Info menu appears at the top of the screen while the disc is plaving. Press INFO on the remote to switch the Info menu on or off. TT 1/10 CH 1/16 (00:13:07

this menu.

The Info Menu

Title/chapter (DVD)/track (audio CD)

To directly access a title, chapter (DVD) or a track (audio CD), press INFO, press OK. Select the Title(TT), Track(TRK) or Chapter(CH) icon and enter a number directly with the numeric buttons. Press OK again to confirm

Note: Many discs only have

Time display

To access the Time Display, press INFO on the remote. Press the up/down buttons repeatedly to display: DVD: Chapter elapsed time, Chapte remaining time, Title elapsed time and Title remaining time.

Audio CD: Track elapsed time, track remaining time, disc elapsed time, disc remaining time

To directly access a location on the disc which does not correspond to the start of a title or chapter, press INFO once and press OK, highlight the Time Display icon using the arrow buttons, then enter a time with the number buttons (hh:mm:ss) and press OK.

S Note: Time display function may not be available on all discs.

WMA Files and jpeg Files

During the slide show you can use the left/right button to rotate the picture, the

up arrow button to rotate the image vertically, the down arrow button to rotate the image horizontally. Use the ZOOM button to magnify the picture. Use the CH- button to go back to the previous picture or the CH+ button to go to the next one, and the STOP button to interrupt the slide show and display the

5. Press INFO to display the Info menu during playback.mp3/WMA file: with the disc playing, press INFO two times and select the Play Mode icon using the left/right arrow buttons. Press the up/down arrow button to select a play mode (Standard, Random, Program, Repeat Folder, Repeat Disc and Repeat Track), and press OK. 6. When the unit has played all the files, the music or slide show stops and the disc's contents are displayed again. 7. Press STOP to end playback.

S Notes: WMA files and jpeg files could not playback simultaneously. The time taken for the contents of the disc to be displayed varies according to the size and number of jpeg files on the disc. If nothing is displayed after a few minutes, the file sizes may be too large. Reduce the files' resolution and writ

Before inserting a disc, make sure it is compatible with the unit.

another disc.

Additional Information

Compatible Formats

In order to ensure playback, discs must n with DVD or CD standards. This unit may not play some recordings or files due to differences in recording formats, software used and disc types

The Setup Menu

Audio (DVD)

audio formats.

plavback:

Some discs have several audio tracks used for

To change the language or audio format during

2. Use the left/right arrow buttons to select the

Audio icon, or press the AUDIO button on the remote control.

3. Choose a language or an audio format with the

This option is only available if the disc offers

dialog languages or audio formats. When

language of the disc being played. When

in the Language Setup menu.

Subtitles (DVD)

Subtitles as follows:

you change the dialog language using the Info menu, it only changes the dialog

you eject the disc or switch off the unit, the

Subtitles are turned off by default. Turn on

1. While the disc is playing, press INFO twice,

then select the Subtitles icon using the left/right arrow buttons.

arrow buttons. 3. To turn subtitles off, select the Off option

subtitles using the Info menu, it only applies

to the disc currently being played. When you

subtitles will default to the subtitle language

2. Select a language using the up/down

or press SUBTITLE on the remote

When you change the language of the

eject the disc and switch off the unit, the

you selected in the Languages menu.

This function may not be available

on all discs.

language will revert to the one you selected

different languages or different

. Press the INFO button twice.

Default There are four options in the main setup This option allows you to return the unit's settings to the original factory settings. Any menu: General Setup, Language Setup, Audio Setup and Video Setup. changes you have made to the unit's settings will be reverted back to the original settings

Press SETUP to bring up the main menu. Select one of the menu icons across the top of the screen using the left/right arrow buttons. IMPORTANT!

Once Progressive Scan has been activated, an mage will only be visible on a progressive scan TV or monitor. If you choose this option and you don't have a progressive scan TV or monitor, you may get a picture with incorrect color or no color

The Setup Menu

Language Setup

Player M

ow buttons

down arrow buttons

arrow buttons and press OK.

change the Audio language during

playback, press INFO twice for DVD and use

the left/right arrow buttons to highlight the

Press the up/down arrow buttons or AUDIO

on the remote control to select audio language

Do not record copyright-protected mp3

files. "Securized" files are encrypted and

code protected to prevent illegal copying

Additional Information

language choices.

Player Menu

OK.

Audio

Audio icon

menus.

right. Press SETUP if you want to exit setup. **General Setup**

The menu's options are displayed on the left side of the screen. Press the right arrow

button to move to the option's choices on the

ldeo IDMI S∉ TV Typ€

Video

Progressive Function provides high quality pictures with less flickering. Turn or Progressive Scan if you used the Component Video jacks of the unit to connect a TV or monitor compatible with a progressive scan signal. Select P-Scan YPbPr and press OK to activate

Progressive Scan.

HDMI Setup This lets you select the resolution of the player's output according to the connected Supported HD JPEG mode: 480p, 720p, 1080i and 1080p.

TV Type

Depending on the format of the DVD disc, you can choose the picture format (aspect ratio) best suited to the format of your TV screen:

- 4:3 PS: reproduces a 4:3 picture without distortion 4:3 LB: gives best reproduction of pictures recorded in this format (i.e. with horizontal bands at the top and bottom of the screen)
- or in 16:9. • 16.9 (widescreen): reproduces 16.9 format films in full on a 16x9 screen

However, depending on the condition of the

CD-writer, computer and the disc used, you

The Info Menu

Camera angle (DVD)

specific scenes.

WMA/jpeg)

right arrow buttons.

for DVD.

an option.

Some discs offer different camera angles for

. To change the camera angle, press the

2. Choose the angle with the up/down

If the disc was recorded using a single

Play mode (all discs except

1. While the disc is playing, press the INFO

2. Select the Play Mode icon using the left/

3. Use the up/down arrow buttons to select

DVD play modes: standard, program, A-B

Program play mode is only available if a

program list has been created (see below). Repeat mode is only available with discs

that display elapsed time and remaining time. To repeat a sequence between

ption, and then follow the instructions

Audio CD play modes: standard, introscan,

random, program, repeat A-B, repeat disc, repeat track.

4. To stop repeat playback, select the Play Mode icon and use the up/down arrow

buttons to choose the Standard option

points A and B, choose the A-B repeat

for entering the two points.

repeat, title repeat, chapter repeat.

button twice for CD and three times

camera angle, this function is not available.

ANGLE button on the remote or press the

INFO button twice and select the Camera angle icon with the left/right buttons.

Creating a Program List for Program Play Mode (Audio CDs and DVD discs)

To use program play mode, you must first create a program list.

. To create a program list, press the INFO button twice for CD and three times for DVD Highlight the Play Mode option and press the up arrow to select the Program option. 2. Press OK. The Program screen is displayed. 3. The first spot in the list is highlighted. Use the number buttons on the remote to enter a track number. As for DVD discs: T stands for Title while C stands for Chapter. As for Audio CDs: T stands for Track. 4. Use the arrow buttons to move to the next spot in the list. Enter the next track number. 5. Continue entering tracks until you have completed your list. 6. Highlight the Play option at the bottom of

the screen and press OK or press PLAY to start playback. The program list will play in the order you programmed it.

Creating a program List for program play mode (WMA CDs)

To use program play mode with a WMA disc you must first create a program list. You can program up to 16 songs. 1. To create a program list, press the INFO button twice. Highlight the Play Mode

option and press the down arrow to select the Program option. 2. Press OK. The Program screen is displayed. 3. The F stands for Folder, and the T stands for Track. Highlight the space below the Folder indicator (F) and use the number buttons to enter the desired folder number.
 Use the arrow buttons to move to the space beneath the Track indicator (T). Use the number buttons to enter the track number 5. Repeat steps 3 and 4 until you have completed your list. 6. Highlight the Play option at the bottom of the screen and press OK or press PLAY to

start playback. The program list will play in the order you programmed it.

Night Mode

The Info Menu

INFO display.

Sleep

To stop program play, press STOP or select

Standard from the Play Mode option in the

If you want to cancel the list, repeat steps 1

times for DVD. Select Sleep icon with the

2. Select one of the available options using

the OK button : Off. 30, 60, 90 or 120 minutes.

Note: This function is not available

in AUX/AUDIO IN/TUNER mode.

This option plays the first ten seconds of

each track on a CD. 1. Press the INFO button twice, then select

the Playmode icon with the left/right

2. Press the up/down arrow buttons to select

the INTRO option and press OK to start

Bookmark (DVD and audio CD)

times for DVD. Select the Bookmark icor

A menu is displayed with five bookmarks. 2. The first bookmark space is highlighted.

Press OK to set the bookmark. The book

3. To start playback from a bookmark, press

available with discs whose elapsed time or remaining time appears in

You can use this function to control the

different sound levels via dynamic compression.

It improves the quality of the sound track at a

low volume, and quiets the loudest sounds. You can

Basic settings have been preset for the

speakers included with your unit. However, to

suit the acoustic conditions in your listening

room and to make the sound more effective,

you may need to delay the signal coming from

compensates for center or surround speakers

that are closer to the listening position than

1. Highlight a distance option using the up/

2. Press the right arrow button to move to the

3. Press the up/down arrow buttons to adjust

This function is used to test the speaker setting. A

short noise comes successively from each speaker

1. Select the Video icon in the main menu

2. Select a menu option using the up/down

Slide Time The Slide Time option lets you select the

amount of time a picture is displayed in a slide

show. The choices are 5 seconds, 10 seconds, or

using the left/right arrow buttons.

arrow buttons and press OK.

delay

some of the speakers. Channel

choose between Quiet Moderate or Off

4. To delete a bookmark, highlight it and

mark is saved and is indicated by the

number 1. You can set up to five

the PLAY button on the remote

Note: This function is only available with at

the Info menu

The Setup Menu

Distance

the front speakers.

down arrow buttons

default distance.

Video Setup

the distance

Test Tone

Center (CT Distance)

Surround (SL/SR Distance)

bookmarks on a disc.

press CLEAR

with the left/right buttons, and press OK.

3. Press STOP to stop Introscan, and press

PLAY to resume normal playback

1. Press INFO twice for CD and three

and 2 to select CLEAR and press OK.

1. Press INFO twice for CD and three

left/right arrow buttons.

Introscan (CD)

arrow buttons.

IntroScan.

Select the subtitle language using up/dowr arrow buttons and press OK. To change the language of the subtitles during playback, press INFO twice for DVD and use the left/right arrow buttons to highlight the Subtitle icon. Press the up/down arrow buttons or the SUBTITLE button on the

 
remote to select a subtitle language.

Subtitles

Disc Menu To change the language of the disc menus, select the language using the up/down arrow

buttons and press OK. The language you select will only be displayed With this menu, you can set the language for unit menus, dialog, subtitles and the disc if the disc is programmed with that language.

If you chose "English" during initial set-up, any menus generated by the disc are in ST English, and so is the language of the dialogs (if this language is available on the disc). Notes If the selected language is not available on a disc, the disc's language will be used 1 instead.



Audio Setup

 Select the Language Setup icon in the main menu using the left/right You can adapt your unit to other equipment and access specific functions with the Audio 2. Select one of the options using the up/ Setup menu 1. Select the Audio Setup icon in the main menu using the left/right 3. Press the right arrow button to move to the arrow buttons. 2. Select an option using the up/down arrow 4. Use the up/down arrow buttons to highlight the language of your choice and press OK buttons. Press the right arrow to move to the option's choices. Select the language of player menus and press 7 Select the dialog language using up/down

Manufactured under license

"Dolby", "Pro Logic", and the

from Dolby Laboratories

double-D symbol are

Laboratories

The Pro Logic mode uses the built-in circuit to

play both stereo and Dolby Pro Logic program

You can use this mode with any stereo program

source (such as VCR/TV) to enjoy multi-channel

The Dolby Digital mode lets you enjoy full

Surround. This unit is equipped with Dolby

steer the Left, Center, Right and Mono Surround

channel audio signals and uses all five speakers to

trademarks of Dolby

Sound Enhancement Systems

This receiver is equipped with several built-in

sound enhancement systems.

DOLBY.

Dolby Prologic

Dolby Digital

DIGITAL

source, such as TV and VCR

Additional Information

15 seconds

AM Tuner Section: **Technical Specifications:**

The unit has a built-in tuner that allows for FM radio function. The AM loop antenna allows for AM radio function.

Radio

- Manual tuning 1. Connect the FM antenna and the AM loop antenna at the back of the unit. Rotate the AM loop for better reception. 2. Press TUNER. 3. Tune a station by pressing TUNER+/repeatedly until the desired station is found. Alternatively, you can press and hold the same buttons down for about one second to activate the automatic search function. In this mode the unit will automatically tune frequencies until it finds a station 4. Repeat step 3 to tune to another
- radio station. 5. Press TUNER to toggle between FM and AM.

Storing radio stations

The unit can store up to 30 radio stations in its memory. You can enter every single radio station yourself or the unit can store all available radio stations automatically in ascending order.

Automatic preset programming

1. Press TUNER to enter the Tuner mode 2. Press and hold TUNER for two seconds to start automatic preset programming. 3. Radio frequencies will be browsed and radio stations stored automatically. When all the available radio stations are stored or all 30 memory locations are full, the auto preset programming function will stop

Manual preset

1. Tune to a radio station (see "Manual tuning" for details). Press MEMORY. While the Program Preset number is still flashing, input your desired preset number using the numeric buttons then press MEMORY to store it. Retrieving preset stations 1. Press TUNER to enter the Tuner mode.

 Press CH +/- to search up or down for the preset stations or directly press the numeric buttons.

Additional Information

Troubleshooting

The unit does not switch on. Make sure it is plugged in. Press the ON•OFF button on the remote control or the ON/STANDBY button on the front of the unit

The device switches off spontaneously The deivces switches off automatically when it is in STOP mode for more than 30 minutes without any user intervention

- Switch it on again. It might be impossible to read the disc.
- Insert the disc with the printed side facing up.
- Check that the disc can actually be played by this device . Check that the disc's regional code
- matches the unit's regional code. This unit's regional code is 1. Clean the disc.
- There is no picture.
- Check you have switched on the TV set.Check the connections
- · Select the AV input assigned to the unit on the TV.
- Replace the HDMI cable with a better one Bad HDMI cable can cause data lost.
- Press HDMI key on remote handset several times to toggle among different HD OUTPUT
- The picture is of poor quality (with snow
- or lines) · Check the connections
- There is no sound or the sound is of
- poor quality. Check the connections Make sure the speakers are connected. Make sure the MUTE function is not on
- No surround sound. Check the speaker configuration in the Setup menu (See Positioning speaker or Audio Setup).

oonse: 2kHz +/-3dB, 400Hz ref.

AUDIO IN/ AUX IN

TV, VCR or Set Top Box can be connected to AUX input jacks at the back of the unit or AUDIO IN at the front panel so that sound from the auxiliary component comes into the unit and out through the speakers.

Connecting auxiliary components Refer to "Connecting to external audio sources " for details on connecting the auxiliary components to the unit.

Selecting AUDIO IN/AUX IN mode

Press either SOURCE on the main unit or AUX / AUDIO IN on the remote control to select AUX IN or AUDIO IN mode Sound output in Aux-In mode

 You may change the surround setting by pressing SURROUND to select between Dolby ProLogic and Stereo modes.

If the auxiliary audio signal is mono, there is no output from speakers in either Dolby ProLogic or Stereo mode.

3. Select a folder using the up/down arrow

buttons on the remote, then press the left

arrow button to move to the music/picture

icons at the bottom of the screen. Use the

left/right arrow buttons to select either

subfolders contained in the same folder

The unit then plays the contents of the

folders at the same level as the folder

containing the file selected at the start

with the jpeg file you have selected, ther displays all the jpeg files in the same

subfolders located in the same folder. You

ipeg file: the unit starts the slide show

folder, then all the ipeg files in the

can set the amount of time a picture

remains on the screen in the General Setup menu.

· This unit is for domestic use only and must

protected by copyright legislation, without

the rights, contravenes current legislation.

constitutes or could constitute a violation

Use a soft, dry, clean cloth, Regularly dust

Using solvents, abrasive or alcohol-based

unit, unplug it immediately and have it

• Handle your discs with care. Hold the disc

with your fingers at the edges or through

· Insert the disc with the label facing up (for

· Place the disc properly into the tray in the

Use a soft cloth to clean discs if necessary

Always put discs back in their cases after

Do not close the tray with two discs in it

always wiping from the centre to

use and store in a vertical position

or with a disc not sitting correctly in

Do not play cracked, chipped or warped

· Do not move the unit when a disc is

Do not scratch discs or store them in

humidity or high temperatures.

interference during playback

places exposed to direct sunlight, high

anti-static liquids or any other solvent for

with a soft damp (water only) cloth from

the centre to the edge, avoiding circular

motions, which could cause scratches and

cleaning discs. When cleaning, wipe gently

Do not use aerosol cleaners, benzene,

discs nor try to repair them with adhesive

checked by an authorized servicer or

the vents at the back or sides.

products risks damaging the unit.

If an object or liquid enters inside the

the explicit permission of the holder of

Copying or downloading music files for

sale or any other business purpose

of copyright law.

service center.

the hole.

the edge.

the holder.

tape or glue.

being played.

Do not write on a disc.

Handling and caring for discs

a single-sided disc).

allotted holder.

Cleaning

not be used for industrial purposes

Total or partial copying of recordings

music or picture mode.

WMA Files and jpeg Files

Playing WMA files or displaying jpeg files

compressed files.

Radio

Ö

Tips:

When the FM station broadcasts Stereo sound is found, ST is displayed.

When you manually tune into a weak

FM station, press AUDIO on remote

mode. This will reduce the

background noise.

antenna away from th

more efficient search.

A weak signal can affect the

"Automatic preset programming" function's efficiency. Adjust the

nna for better reception and a

control to switch from Stereo to Mond

If there is any interference, change the antenna's position until ideal sound reception is obtained. TV and other

electronic devices could be the cause

of interference, so try to position the

WMA is an audio file format which compresses recorded music. The main advantage of the mp3/WMA format is that

4. Press the up arrow button to move to the file list on the right side of the screen. Use CD-quality music tracks can be stored on a personal computer in user friendly the up/down arrow buttons to select a file. Press OK or PLAY to start playback • WMA file: the unit begins playing Jpeg files are image files. Make sure that the selected file, then all the files and

they have a resolution of less than 2 megapixels. 1. Open the disc tray. 2. Place the disc with the printed side facing

up and close the disc tray. The folders on the disc will be listed in numerical order on the left side of the screen. When you highlight a folder, then press OK button. The list of songs or pictures in the folder are listed in numerical

Additional Information

change them.

or interrupted.

subtitles.

correct one.

I can't find my file in the WMA/jpeg listing. • Make sure the filename is valid

order on the right side of the screen.

The remote control does not work or works only intermittently. Check that batteries are inserted or

· Aim the remote control at the unit. The

infrared beam must not be blocked

configured to control the device you are

· Check that the DVD disc provides subtitles

• The disc menu language has not been set

If your unit has been stored in a cool place

for any length of time, during a journey for example, wait for about 2 hours

The openings located on the top and

During thunderstorms, we recommend

that you isolate the unit from the

bottom are for ventilation and must not

electrical supply so that it is not damaged

by electrical or electromagnetic surges.

This unit is designed for continuous use Switching off the unit to standby mode

supply. To completely isolate the

connected to the electrical supply.

· Do not attempt to look inside the unit

through the disk tray opening or any

other opening. You may be electrocuted

1) You must retain the original sale receipt to provide proof of purchase.

www.1800customersupport.com/RCA

· If you notice any burning or smoke

any risk of electrocution.

or exposed to laser radiation.

Limited Warranty

Your Responsibility

Out of Warranty

does not disconnect it from the mains

equipment, remove the plug from the

mains jack as some components remain

disconnect the unit immediately to avoid

Refer to the section on how to display

Check that the remote control is

The disc menu language is not the

• The language of your choice is not

available on the disc

Precautions

before using it.

be obstructed.

trying to operate with it.

The subtitles do not appear

DVD-Video

Digital video discs - 12 cm, single or double sided, single or dual layer DVDs are high density optical discs on which high quality picture and audio are recorded by means of digital signals.

DVD-R,DVD-RW, DVD+R, DVD+RW

Most DVD-R and DVD+R (one recording only), DVD-RW and DVD+RW discs (rewritable), depending on the DVD writer and discs used. สม Recordings using DVD-R and DVD-RW discs must be made in Video DVD mode. Recordings using DVD+RW discs must be made in accordance with the specifications for DVD+RW discs with a 4.7 GB capacity.

Peccedable

Audio CD:

Audio CDs (12 cm).

CD-R, CD-RW

Most CD-R (one recording only) and CD-RW discs (rewritable).

CD-Rs written during a multisession recording can be played, provided that the session has ended before the disc is played

(depending on the write software)

may find that not all discs will play. When playing a CD-R disc, it is normal for the unit to take up to 60 seconds to recognize the disc before starting to play.

If the disc is not recognized after a period of 120 seconds, remove the disc, and insert it again

Do not use its full capacity.CD-Rs should be preferably used instead of CD-RWs (rewritable CDs) as, in certain cases. CD-RW playback may be faulty.

Use reliable, good-quality CD write software. Close all other applications on the computer to ensure reliable CD-R disc recording.

CD-R and CD-RW discs containing audio files in mp3 format. For CD R WMA discs, please follow all the recommendations for CD-R, along with the comments below: • Your mp3 files should be ISO 9660 or JOLIET

format. ISO 9660 format and Joliet WMA files are compatible with Microsoft's DOS and Windows, as well as with Apple Mac. WMA filenames should not exceed 8 characters, and should end with the ".wma" extension. General name format: Title.wma

When composing your title, use 10 characters or or less, no spaces, and avoid the use of special

characters including (. , /, \setminus , =, +). The total number of files on a disc should be less than 400.

Use a decompression transfer rate of at least 128 kB/sec (kilobytes/second) when recording WMA files. Sound quality with WMA files basically depends on the rate of

compression/ decompression you choose. Obtaining audio CD quality sound requires

an analog/digital sampling rate, that is

conversion to WMA format, of at least 128

higher rates, such as 192 kB/sec or more,

only rarely produces even better sound quality. Conversely, files with sampling

rates below 128 kB/sec. will not be played

 
CD-R and CD-RW with jpeg files. Certain jpeg files, including progressive jpeg files, cannot be read by this unit.

MPORTANT! dations do not The above recom

guarantee that the unit will play mp3 ecordings, or as an assurance of sound quality. Certain technologies and methods for WMA file recording on CD-Rs prevent optimal playback of these files on your unit (i.e. degraded sound quality and in some cases, inability of the unit to read the file).

The total number of files and folders on the disc should be less than 650. Make sure that files have the ".jpg" extension. Files without the ".jpg" extension will not be able to be read by the unit -- even though the files are shown as jpeg images on your computer.


WMA files CD-R and CD-RW discs containing audio files in WMA





 format. Please follow all the endations for CD-R above.





Digital 5.1-channel so that you can enjoy enhanced full digital surround sound. Different from Dolby Pro Logic in that only four channels (Front Left, Front Right, Centre and Rear) are used, the new system provides stereo separation of the rear speakers (Rear-Right, Rear-Left). Adding the to the 5 channels the subwoofer channel for bass sounds (counted as 0.1 channel) results in 5.1 channels (or 6 Channels) that bring you the most sophisticated Dolby Digital sound enjoyment.

Amplifier Section: RMS Output Power: Dolby Digital Mode with 10% Total Harmonic Distortion Rear Channels: 32 Watts/channel (1kH, 4Ω)

Front and Center Channel: 32 Watts per channel (1kHz, 4Ω) Subwoofer Channel: 40 Watts (100Hz, 3Ω) Total RMS Output Power, Dolby Digital mode: 200 Watts

Muting Attenuation: 70 dB Frequency Response: 200Hz – 20KHz/3dB, 1KHz ref. Subwoofer Frequency Respons 20Hz – 200Hz/-3dB, 100Hz ref. Signal to Noise Ratio: 70 dB (Dolby Digital)

Limited Warranty (U.S.)

AVC MULTIMEDIA("AVC") makes the following limited warranty. This limited warranty extend to the original consumer purchaser and is limited to non-commercial use of the product.

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmaship for a period of one year from the date of their original retain purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at AVC 'ssole discretion

During a period of one year from the effective warranty date, AVC will provide, when needed borto repair a manufacturing defect at its designated Service Center. To obtain warranty the Untied States, you must first call our Customer Support Center at **1-800-506-5746 or** 1-877-252-6873, during the hours listed in the box on the right. The determination of service will be made by AVC Customer Support. PLEASE DONOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

Packaging and Shipping Instruction

When you send the product to the AVC service facility you must use the original carton box and packing material or an equivalent as designated by AVC

Usable Sensitivity: 3000uV/m @ S/N 20dB Canada. Signal to Noise: 38dB 3) Warranties extend only to defects in material or workmanship, and do not extend to any product IF Rejection: 35dB or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of AVC, or to

FM Tuner Section: Frequency Response: 15kHz +/-3dB, 1kHz ref. Ouietina: 24dB Signal to Noise: 62dB(stereo) / 65dB(mono) IF Rejection: 70dB

Dimensions (H x W x D mm) : Unit: 66 x 430 x 240 Front Speakers: 112 x 88.4 x 88.2 Center Speaker: 112 x 88.4 x 88.2 Rear Speakers: 112 x 88.4 x 88.2 . Subwoofer: 307 x 145.1 x 255

Hours: Monday–Thursday: 9am–7pm, Friday: 9am–5pm, Saturday: 9am–NOON Eastern time. Important: You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center. All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above

ese warranties are effective only if the product is purchased and operated in the U.S.A. or

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at 1-800-506-5746, 1-877-252-6873 or

products or parts thereof which have had the serial number removed or changed.

With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall AVC be liable for consequential or incidental damages.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of AVC arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, wher an action may be brought, or the exclusion or limitation of incidental or consequential damages, so the above provisions may not apply to you.

For more information on other products and services, please visit our web site at www.1800customersupport.com/RCA

Important: Also keep your "Bill of Sale" as proof of purchase

Modelno.	Product name
Type of set	
	Invoice no.
Date purchased	Dealer name
FOR SERVICE AND REPAIR, PLEASE VISIT	www.1800customersupport.com/RCA
Specifications and external appearance are subject to change without notice.	

properly.

kB/sec. Choosing