2400W HEAVY DUTY BLOWER VACUUM/MULCHER WITH METAL MPELLER BLV800DA INSTRUCTION MANUAL



Black	Magenta	Code: BLV8000A IM			
Cyan	Yellow	Date: 070518	Edition: 04	Op: GM	
1本处所有显示的颜色打印包装资料。Print artwork using ALL inks shown here.					

Contents

Introduction	3
Environmental protection	3
Description of symbols	3
Specifications	3
Safety instructions	4
Additional safety rules for garden vacs	5
Unpacking	6
Contents	6
Know your product	7
Preparation of the blower vac prior to use	8
Extending the telescopic blower vac tube	8
To fit the collection bag	8
To remove the collection bag	9
Shoulder strap	9
Patio head	9
Operation of the blower vac	9
Extension cord support	9
Selecting the blowing operation	10
Selecting the vacuum operation	10
Important notes when using the	
blower/vacuum selector lever	10
To empty the collection bag	10
Tips for using your blower vac	10
Maintenance and storage information	11
Power cord maintenance	11

Warranty Power Tools

Whilst every effort is made to ensure your complete satisfaction with this tool, occasionally, due to the mass manufacturing techniques, a tool may not live up to our required level of performance and you may need the assistance of our service department.

This product is warranted for a 2-year period for home domestic use from the date of the original purchase. If found to be defective in materials or workmanship, the tool or the offending faulty component will be repaired or replaced free of charge with another of the same item. A small freight charge may apply. Proof of purchase is essential. We reserve the right to reject any claim where the purchase cannot be verified.

This warranty does not include damage or defects to the tool caused by or resulting from abuse, accidents, alterations or commercial or business use. It also does not cover any bonus items or included accessories. Only the power tool is covered under this warranty.

With continuing product development, changes may have occurred which render the product received slightly different to that shown in this instruction manual.

Please ensure that you store your receipt in a safe place.

Conditions apply to the above warranty. For full details of the warranty terms and conditions please refer to our website – www.gmcompany.com

For prompt service we suggest you log your service request online - www.gmcservice.com.au, should you not have access to the internet, please contact our service department on 1300 880 001 (Australia) or 0800 445 721 (New Zealand).

Introduction

Your new GMC power tool will more than satisfy your expectations. It has been manufactured under stringent GMC Quality Standards to meet superior performance criteria.

You will find your new tool easy and safe to operate, and, with proper care, it will give you many years of dependable service.

CAUTION. Carefully read through this entire Instruction Manual before using your new GMC Power Tool. Take special care to heed the Cautions and Warnings.

Your GMC power tool has many features that will make your job faster and easier. Safety, performance, and dependability have been given top priority in the development of this tool, making it easy to maintain and operate.

Environmental protection



Recycle unwanted materials instead of disposing of them as waste. All tools, hoses and packaging should be sorted, taken to the local recycling centre and disposed of in an environmentally safe way.

Specifications

Voltage:	230–240 Vac ~ 50Hz
Input Power:	2400W
Speed:	13000 min ⁻¹
Air Speed:	250 km/h
Collection Bag Capacity:	45 Litre
Mulching Ratio:	10:1
Insulation:	Double insulated
Tool Weight	4.2kg

Description of symbols

The rating plate on your tool may show symbols. These represent important information about the product or instructions on its use.



Wear hearing protection. Wear eye protection. Wear breathing protection.



Double insulated for additional protection.



N380

Conforms to relevant standards for electromagnetic compatibility.



Warning.



Read the instruction manual carefully



WARNING. Do not use in the rain, or leave outside while it is raining.



WARNING. Keep spectators away. Beware of objects being flung out.



WARNING. Remove the plug from the wall socket before carrying out any kind of maintenance



WARNING. Rotating blades. WARNING. Do not put hands or feet under the cover of the machine when it is running

Safety instructions

WARNING. Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. The term "power tool" in all of the warnings below refers to your mainsoperated (corded) power tool or battery-operated (cordless) power tool.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

Save these instructions

Work area

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an outdoor extension cord suitable for outdoor use.
 Use of a cord suitable for outdoor use reduces the risk of electric shock.

Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool.
 Do not use a power tool while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as a dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off-position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the tool on. A wrench or a key that is left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities ensure that these are connected and properly used. Use of these devices can reduce dust-related hazards.

Power tool use and care

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could result in a hazardous situation.

Service

 Have your power tool serviced by qualified repair personnel using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

Additional safety rules for garden vacs

- Always wear adequate protective clothing when operating the tool to avoid injuries to face, eyes, hands, feet, head or hearing. Use safety glasses or a face shield, high boots or sturdy shoes, long trousers, work gloves, a hard hat and earmuffs.
- Do not start the tool when it is upside down or when it is not in the operating position.
- Switch the motor off and remove the plug when the tool is not being used, left unattended, being cleaned, being moved from one place to another or when the extension cord is entangled or damaged.
- Do not operate the tool near people, especially children or pets. Turn it off if they get too close. Maintain a safe distance of at least 5m from other people when using the tool.
- The operator is responsible for accidents or hazards occurring to other people or their property.
- Do not handle the plug or the tool with wet hands and do not use the tool in the rain.
- Use only outdoor rated extension leads that are so marked. Keep the extension cord away from heat, oil and sharp edges.
- Ensure that the extension lead is secured in a manner that prevents it from disconnecting from the plug whilst in use.
- Keep all the air intakes and the vacuum inlet free of dust, lint, hair and other material that may cause a reduction in air flow.
- · Keep a balanced and stable stance while using the tool.
- Do not switch on the tool in enclosed or poorly ventilated spaces or in the presence of inflammable and/or explosive substances such as liquids, gasses and powders.

- Do not get distracted and always concentrate on what you are doing. Use common sense. Never operate the tool when you are tired, sick or under the influence of alcohol or other drugs.
- Do not operate this appliance with long loose hair or loose fitting jewellery. Tie long loose hair back and remove loose fitting jewellery.
- Do not allow the garden vac to pick up any burning or smouldering materials like ashes, cigarette butts etc.
- Do not attempt to pick up breakable objects like glass, plastics, china etc.
- Do not use in vacuum operation without the collection bag fitted.
- · Do not use the garden vac on gravel surfaces.
- Only operate the tool during broad daylight or with adequate artificial light.
- When the tool is not in use, store it in a dry place and out of reach of children.
- After use, disconnect the tool from the power supply and check for damage. If you have the slightest doubts, contact an authorised service centre.
- Only use the tool according to the instructions given in this manual.
- · Check regularly that the screws are tight.
- Use only spare parts and accessories recommended by the manufacturer.
- Do not try to repair the tool or access internal parts. Contact authorised service centres only.

Unpacking

Due to modern mass production techniques, it is unlikely that your GMC Power Tool is faulty or that a part is missing. If you find anything wrong, do not operate the tool until the parts have been replaced or the fault has been rectified. Failure to do so could result in serious personal injury.

Contents

Collection bag Tube fixing screw and cover (x 2) Shoulder strap Patio head

Know your product

- 1. On/Off trigger switch
- 2. Blower/vacuum selector lever
- 3. Rear handle
- 4. Front handle
- 5. Collection bag
- 6. Cord support
- 7. Lower shaft locking screw location
- 8. Shoulder strap attachment location
- 9. Patio head
- 10. Housing
- 11. Shoulder strap
- 12a. Blow/vac tube upper
- 12b. Blow/vac tube -lower
- 13. Collection bag locking clips
- 14a. Bag retaining clip upper
- 14b. Bag retaining clip lower

12b







Preparation of the blower vac prior to use

The BLV8000A blower vac requires some assembly prior to use for the first time. This includes extending of the teloscopic blower vac tube, fitting of the collection bag and fitting of the shoulder strap to the housing.

Extending the telescopic blower vac tube

WARNING. The Blower Vacuum must be fully assembled with the blower tubes fully extended and secured in place before use.

1. Firmly take hold of the blow/vac tube - lower (12b) and extend it out fully until the arrow on the lower tube is clearly visible.



- Two screws are supplied for securing the tube in place. With the blow/vac tube

 lower (12b) completely lowered and the arrow visible. Insert the two fixing screws into the holes in the blow/vac tube - upper (12a) and through into the blow/vac tube - lower (12b). Secure tight with a screwdriver (not supplied).
- 3. Lightly tap the plastic caps on top of the fixing screws to prevent from tamper.







To fit the collection bag

WARNING. Never operate the vacuum without the collection bag attached.

Note. Always make sure the bag zipper is closed when the unit is in use.

For use as a vacuum, the collection bag (5) must be fitted.

To fit the collection bag, turn the blower vac upside down so the vacuum outlet is exposed.

 Place the bag connector over the vacuum outlet and push the two collection bag locking clips (13) inwards to secure the collection bag firmly in place.

 Fit the top collection bag strap onto the bag retaining clip

 upper (14a) and the lower collection bag strap onto the bag retaining clip - lower (14b).







To remove the collection bag

- 1. Unhook the collection bag straps from the upper and lower bag retaining clips (14a & 14b).
- Push the two collection bag locking clips (13) inwards and pull the collection bag out and away from the housing (10) of the blower vacuum.

Shoulder strap

Your BLV8000A blower vac is supplied with a shoulder strap to improve user comfort during use. The strap assembly

can be fitted or removed from the top of the housing via the metal buckle on the end of the strap.

 To fit the shoulder strap (11), simply open the buckle on the strap and fit it through the hole provided on the housing of the blower/vac.



Patio Head

1. To install the patio head simply push the patio head onto the blow/vac tube - lower (12b) until it locks in place.



Operation of the blower vac

Prior to using the blower vac, ensure you have read and understood this instruction manual.

Ensure you are wearing suitable clothing and also safety equipment like safety glasses, ear protection and a mask if necessary.

Ensure the attachments to the blower vac are correctly fitted and adjusted.

Be aware of other people and animals in the area where you are to be operating the blower vac.

Turning the blower vac ON

- Plug the power cord into an approved electrical extension cord, and turn the extension cord on.
- Ensuring the blower/vac is directed in a safe direction, squeeze the trigger switch and the blower/vac will start.



Be sure to be holding the blower vac firmly on start up.

Turning the blower vac OFF

To turn the blower vac "OFF", release the trigger switch.

IMPORTANT. After you have turned the blower vac off, do not leave the product until the blower vac has been fully disconnected from the electrical supply.

Extension cord support

WARNING. A damaged extension cord can cause electric shock or risk of fire. Please inspect the extension cord periodically. The appliance shall not be used if the extension cord is damaged, it must be replaced before operation. Use an extension cord suitable for outdoor with a maximum length of 30m.

During use of the blower vac, the extension cord will continually be pulled as you move from one area to another.

An extension cord support has been provided on the housing of the blower vac to assist in preventing the electrical connection between the extension cord and blower vac plug being forced apart.

Note. The support is for the extension cord, and not the cable from the blower vac.

- To fit the extension cord to the support, make a tight loop in the extension cord, approximately 300mm from the socket on the extension cord.
- 2. Fit the loop into the cord support (6)located on the power cord of the blower/vac.
- 3. Push the loop all the way through the cord support (6) by approximately 25mm.





Selecting the blowing operation

1. Move the selector lever (2) down. You will hear a loud click as it goes into place.

Note. When the blow operation is selected, air is drawn up through the large blow/vac tube and then expelled at a much higher velocity in the lower cavity below the blow/vac tube.



IMPORTANT. Ensure when the blow operation is selected the blower/vac is pointed, directed and used in a safe manner. Do not direct the air flow from this blower vac directly or indirectly towards another person.

Selecting the vacuum operation

1. Push the selector lever (2) up. You will hear a loud click as it goes into place.

Note. When the vacuum operation is selected, air and debris are drawn up through the large vac tube, and forced through the metal mulching impeller. The debris is mulched



and then blown down into the collection bag.

IMPORTANT. Always ensure the collection bag is correctly attached as per the "Fitting the collection bag" section in this manual.

Important notes when using the blower/ vacuum selector lever

Do not force the lever. The lever should move with very little resistance. If the lever is difficult to move, disconnect the power supply, remove the collection bag and ensure debris, dirt or mud has not jammed the lever.

When selecting either of the operations, ensure the selector lever is fully in one position or the other, not half way.

To empty the collection bag

It is not necessary to remove the collection bag from the blower vac when the bag needs to be emptied.

The rear of the bag is fitted with a full length zip.

Simply open the zip and empty the contents.

Ensure to close the zip prior to operating the blower vac.

Tips for using your blower vac

The following points may assist you in the operation of the blower vac.

- Always try and vacuum dry leaves, cuttings or general garden debris.
- Wet material is difficult to mulch and also can cause the blower vac to clog.
- If the leaves etc. are damp, then use the blower vac in blow selection to pile the leaves etc. into one area, vac and mulch the leaves when dry.
- Avoid using the vac on areas where there are stones, or other hard objects. These objects will damage the impeller of the blower vac.
- It is also advisable not to allow the blower vac to pick up soil. Soil generally contains moisture and when combined with other garden debris can clog the blower vac.
- The blower vac is not a garbage disposal unit. Do not attempt to mulch any material other than general garden debris.
- For better performance and comfort, it is recommended the collection bag is emptied when it becomes approximately half full. This reduces the weight and also allows the vac operation to perform at its highest level.

Maintenance and storage information

Prior to cleaning or any maintenance, always ensure the power plug has been removed from the electrical power supply.

When you have finished using the blower vac, always check to make sure the product is clean and free of dirt and debris. This is important around the selector lever flap which is just inside the round outlet. To check this area, remove the collection bag and ensure this area inside the outlet tube is free of debris and dirt.

Operate the selector lever backwards and forwards to ensure correct operation.

Do not hose or submerge any part of the blower vac.

Do not use solvents to clean the blower vac.

Store the blower vac in a dry place, and out of reach of children.

Power cord maintenance

If the supply cord needs replacing, the task must be carried out by the manufacturer, the manufacturer's agent, or an authorised service centre in order to avoid a safety hazard.

GMC customer assist

Receipt Your Here

If your product needs repairing, replacing, technical service or you simply need help or advice, please contact us on our Customer Assist Line 1300 880 001 (Australia) or 0800 445 721 (New Zealand).

For prompt service we suggest you log your service request online at www.gmcservice.com.au. Should you not have access to the Internet, please contact our service department on 1300 880 001 (Australia) or 0800 445 721 (New Zealand). 7am – 7pm, 7days a week (AEST).

Please note that if repair or replacement is required, you must provide a valid original purchase receipt.

You will need the following details at hand to log your service request;

- Personal details: First & Last name, address, pick up address, contact phone numbers, email address
- Product details: Product number, date of purchase, retailer bought from, State & postcode, receipt number, reason for the request, copy of official purchase receipt

Attach your purchase receipt and save with this Manual for future reference.

Please refer to our website www.gmcompany.com for full GMC warranty Terms and Conditions.

