 
## SONY

### **KLV-32M1**

## **Quick Setup Guide**

Please follow the steps to setup your TV:



Checking the Supplied Accessories

**Connecting Your TV** (See reverse side)

If your product is not working properly DO NOT RETURN TO THE STORE. For service and technical assistance Call our Customer Information Service Center (Toll Free):

1-800-222-SONY (7669) for US residents 1-877-899-SONY (7669) for Canadian residents.


Sony Corporation © 2004 Printed in Japan



Remote control (RM-Y1107) (1) and size AA batteries (2)

75-ohm coaxial cable (1)


AC power cord (1)

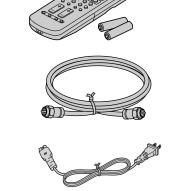

- Clamp screws (2)
- Operating Instructions (1)
- Quick Setup Guide (1)
- Warranty Card (1)

## Inserting Batteries into the Remote Control

 Insert two size AA batteries (supplied) by matching the **⊕** and **⊕** on the batteries to the diagram inside the remote control's battery compartment.



# 2 Connecting Your TV

**Running Initial** 

Setup

• Review the following chart to determine which diagram to use to connect the components in your system:

or these co	omponents	i 			See re side	verse
Cable/Antenna	Or Satellite Receiver	o o vcr	Sony Dream Syst	em		A
Cable/Antenna	Or Satellite Receiver	o o vcr	<b>DVD</b> Player			В
Cable/Antenna	Or Satellite Receiver	o o vcr	<b>DVD</b> Player	AV Receiver		С
Cable/Antenna	Cable Box	o o vcr	<b>DVD</b> Player	Satellite Receiver		D
Cable/Antenna	Or Satellite Receiver	o o vcr	<b>DVD</b> Player	AV Receiver	Digital Recorder	E
Cable/Antenna	HD Cable Box	o o vcr	<b>DVD</b> Player			F

- See the "Cables Required" chart that appears with the diagram to determine which cables you'll need. You may need to purchase extra accessories, such as cables and splitters, depending on the components you plan to connect.
- Turn off and unplug all components before making connections. • If you are connecting a digital cable box, you'll need a special bidirectional splitter that's compatible with your cable box. Contact your cable provider for details.

### Making Video Connections


Your TV includes several types of video inputs. Use the inputs that are available on your components that provide the best video performance, as described below.

Best Video Performance

2-179-084-11(2)

Programming

the Remote Control

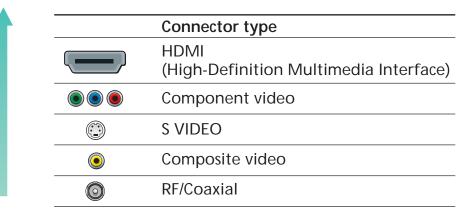

### **Additional Connections**

For best audio performance, connect your digital audio components using either digital optical or digital coaxial audio connections. Depending on which components are in your system, you may need to complete additional connections. For example, if you have a satellite receiver, you'll need to connect the satellite antenna. If you have an AV receiver, you'll need to connect speakers.

### Note

The connection diagrams shown in the reverse side are recommendations only; other possible solutions may exist. Connections that include an AV receiver can often be very complex, so check your AV receiver's instruction manual for additional details.

## 3 Running Initial Setup

- **1** Press (b) (Power) on the TV. The Auto Setup menu automatically appears on the screen when you turn on the TV for the first time.
- **2** Press CH+ on the remote control or on the drop-down panel of your TV to perform Auto Program.

To open the drop-down panel of your TV, push up the panel door just under the "▲ PUSH-OPEN" mark until you hear a click, then the panel door will open.

When all the receivable channels are stored, the "Channel Skip/ Add" menu appears.

Auto Program is set to scan cable TV channels by default. To watch VHF/UHF channels with an antenna, see "To watch VHF/UHF channels with an antenna" in the operating instructions.

If you need to perform Auto Program again

- 1 Press MENU.
- 2 Press **★**/**♦** to select ( (Channel), then press ( ).
- 3 Press **↑**/**♦** to select "Auto Program," then press ⊕.
- 4 Press -.

"Auto Program" appears and the TV starts scanning and presetting channels automatically. When all the receivable channels are stored, the "Channel Skip/Add" menu appears. Using this menu, you can start skipping unwanted channels (see "To skip channels" in the operating instructions).

**5** Press MENU to exit the menu screen.

## Programming the **Remote Control**

The remote control is preset to operate Sony brand video equipment.


Sony Equipment	Programmable Code Number
DVD/VCR	601 (Sony Dream System)
SAT/Cable	801 (Sony Satellite Receiver)

If you have video equipment other than Sony brand that you want to control with the TV's remote control, use the following procedures to program the remote control.

#### Note

The equipment must have infrared (IR) remote capability in order to be used with this

Using the code list below, find the three-digit code number for the manufacturer of your equipment. (If more than one code number is listed, use the number listed first.)

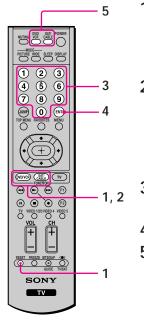

**DVD Changers** 

Manufacturer Code

DVD/VCR Combo Units

**HDD/DVD Combo Units** 

Manufacturer Code

5.1ch DVD AV System

Manufacturer Code

Manufacturer Code

Manufacturer Code

301, 302, 303

**AV Receivers** 

**VCRs** 

Manufacturer Code

- 1 Press the DVD/VCR (FUNCTION) and RESET buttons simultaneously, or press the SAT/CABLE (FUNCTION) and RESET buttons simultaneously. DVD/VCR and SAT/CABLE buttons flash.
  - Press the function button you want to program. To program a cable box or a satellite receiver Press SAT/CABLE (FUNCTION). To program video equipment
- Enter the three-digit manufacturer's code number using the 0-9 buttons.

Press DVD/VCR (FUNCTION)

- **4** Press ENT (enter).
- **5** To check if the code number works, aim the TV's remote control at the equipment and press DVD/ VCR and/or SAT/CABLE (POWER) that corresponds with that equipment. If it responds, the programming is completed. If not, try using the other codes listed for that manufacturer.

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.

Manufacturer's Codes		Manufacturer Code		Manufacturer	Code
		Aiwa*	338, 344	Scott	312, 313, 321, 335,
DVD Players		Audio Dynamic	314, 337		323, 324, 325, 326
Manufacturer	Code	Broksonic	319, 317	Sharp	327, 328
Sony	751	Canon	309, 308	Signature 2000 (M.Ward	) 338, 327
General Electric	755	Citizen	332	SV 2000	338
Hitachi	758	Craig	302, 332	Sylvania	308, 309, 338, 310
JVC	756	Curtis Mathes	304, 338, 309	Symphonic	338
Magnavox	757	Daewoo	341, 312, 309	Tashiro	332
Mitsubishi	761	DBX	314, 336, 337	Tatung	314, 336, 337
Panasonic	753	Dimensia	304	Teac	314, 336, 338, 337
Philips	757	Emerson	merson 319, 320, 316, 317,		309, 308
Pioneer	752		318, 341	Toshiba	312, 311
RCA/PROSCAN	755	Fisher	330, 335	Wards	327, 328, 335, 331,
		Funai	338		332
Samsung	758	General Electric	329, 304, 309	Yamaha	314, 330, 336, 337
Toshiba	754	Go Video	322, 339, 340	Zenith	331
Zenith	760	Goldstar	332		

309, 305, 304, 330 314, 336, 337 314, 336, 337, 345, 346, 347

332, 305, 330, 335,

308, 309, 310

309, 335

305, 304 323, 324, 325, 326

314, 336, 337

308, 309, 306, 307

308, 309, 306

304, 305, 308, 309

311, 312, 313, 310,

309, 330, 328, 335, 324, 338

322, 313, 321

305, 304

308, 309

LXI (SEARS)

Memorex

Minolta

## Manufacturer Code

Sony	230
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold, G.I.	201, 202, 203, 204, 205, 206, 207, 208, 218, 222
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
7enith	212, 213

Manufacturer	Code
Sony	801
Dish Network	810
Echostar	810
General Electric	802
Hitachi	805
Hughes	804
Mitsubishi	809
Panasonic	803
RCA/PROSCAN	802, 808
Tooleiloo	00/ 007

If an Aiwa VCR does not work even though you enter the code for Aiwa, enter the code for Sony instead.

