



BIONAIRE®

TOWER fan

MODEL BT40
BT40RC

Read instructions before operating. Retain for future reference.

Instruction Leaflet



INFO-LINE

If after having read this leaflet, you have any questions
or comments on your fan,
call **1-800-253-2764** in North America.

MODEL BT40RC SHOWN

FAN SAFETY

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.


When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1) Read all instructions before using the appliance.
- 2) To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
- 3) Keep the cord out of heavy traffic areas. DO NOT let the cord hang over the edge of a table or counter. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiators, stoves, or heaters.
- 4) To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- 5) Close supervision is necessary when any appliance is used by or near children, or by disabled people.
- 6) Always unplug the fan before moving it, putting on or taking off parts, cleaning, or whenever the fan is not in use. Be sure to pull by the plug and not the cord.
- 7) Avoid contact with moving parts. DO NOT operate without fan grills properly in place.
- 8) DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
- 9) DO NOT operate in the presence of explosive and/or flammable fumes.
- 10) Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by Bionaire® may cause hazards.
- 11) DO NOT use outdoors.
- 12) Always use on a dry, level surface.
- 13) Keep unit away from heated surfaces and open flames.
- 14) WARNING: To reduce the risk of fire or electric shock, DO NOT use this fan with any solid-state speed control device.
- 15) DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.




THIS PRODUCT IS EQUIPPED WITH A POLARIZED AC (Alternating Current) PLUG (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet.

DO NOT DEFEAT THE SAFETY PURPOSE OF THIS POLARIZED PLUG IN ANY WAY.

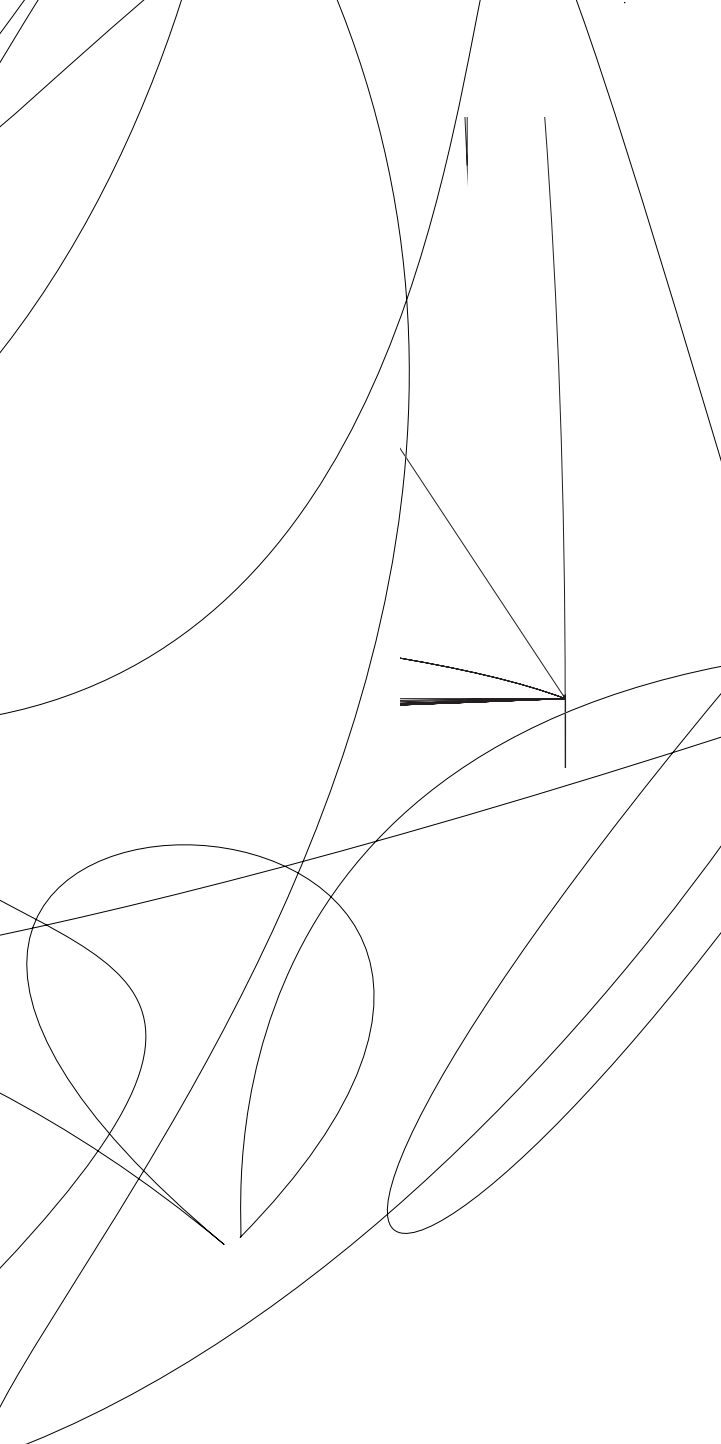

OPERATING INSTRUCTIONS

(FOR REMOTE VERSION)

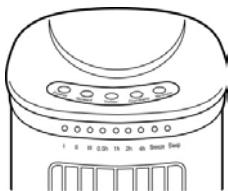

Step 1: Insert 2 AAA batteries into the back of the remote control.

Remote Control: Your remote control requires 2 AAA batteries for operation. To install the batteries, simply depress the back of the remote with your thumb on the spot marked OPEN. Insert batteries according to the diagram shown inside. Replace cover.

Step 2: Set the fan on a dry level surface.

Step 3: Plug cord into any standard 120V AC outlet.

Step 4: To turn the fan on press the POWER button on the remote control or on the control panel.

Step 5: The speed is adjustable by pushing either the speed button on the remote control, or on the SPEED button on the control panel. Push this button once for LOW, again for MEDIUM, and a third time for HIGH. Push a fourth time to repeat the sequence. To turn the fan OFF, push the OFF button on the remote control, or on the control panel.

Step 6: To oscillate the fan head, push the button marked OSCILLATE on the remote, or OSCILLATE on the control panel. Push a second time to stop oscillation.

Step 7: This fan comes equipped with a 15 level speed-setting timer. The first time you press the TIMER button it will be set for a 1/2 hour. From there you can change the TIMER by pressing the button which will increase one half hour at a time, with the maximum time being 7.5 hours.

Step 8: For a natural breeze movement, push the button marked BREEZE on the remote control or BREEZE on the control panel. This will vary the fan speeds faster and slower. By pressing the BREEZE button a second time, you activate the SLEEP setting. This function will be random for the first few hours, but will eventually slow the fan speed down, and when used in conjunction with the timer settings, will ultimately turn the fan off.

Note: The time can be used in conjunction with several other functions. For example: SLEEP + 4HR. TIMER causes the fan to gradually slow down over 4 hours and eventually turn off.

OPERATING INSTRUCTIONS

(FOR NON-REMOTE VERSION)


Step 1: Set the fan on a dry, level surface.

Step 2: Plug cord into any standard 120V AC outlet.

Step 3: Speed Control Instructions

- A.) To turn the fan on and have it run continuously, make sure that the TIMER knob is pointed towards on, and that one of the 3 speed control buttons (I for Low, II for Medium, and III for High) are pressed down. To turn the fan off in this mode simply press the button marked OFF.
- B.) To turn the fan on and use the TIMER, make sure that the TIMER knob is set towards the time that you desire, and that one of the 3 speed buttons (I for Low, II for Medium, and III for High) are pressed down. See Step 4 for timer use. To turn the fan off in this mode, either press the button marked off, or turn the TIMER knob to the position marked off.

Step 4: This fan comes equipped with a 120-minute speed-setting timer. Turn the TIMER knob clockwise to your desired time setting. Once set, the fan will run until the timer reaches the OFF position.

Step 5: To oscillate the fan head, push the button marked OSCILLATE . To stop oscillation, press the button again.

CLEANING/MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your Bonaire® Tower Fan. Please remember:

- Always unplug the fan before cleaning.
- Clean the fan with a soft cloth moistened with a mild soap solution.
- Do not allow water to drip on or into the fan motor housing.
- Do not use any of the following as a cleaner: gasoline, thinner, benzene.
- We also recommend the periodic cleaning of this fan by lightly running a vacuum cleaner nozzle over the fan grill to remove any dust or dirt that may have accumulated inside or on the unit.

FAN STORAGE INSTRUCTIONS

In the off-season, it is important to keep your fan in a safe, dry location.

- We recommend using the original (or appropriately sized) box.
- Please remember to protect the fan from dust or moisture.

FAN SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please call 1-800-253-2764 number to speak with a consumer service representative.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.





 **BIONAIRE®**

428-0312