

Radio / CD

# Dakota DJ50 Modena CD50 Sylt CD50

Operating instructions



 **BLAUPUNKT**

---

Bitte aufklappen  
Open here  
Ouvrir s.v.p.  
Aprite la pagina  
Hier openslaan a.u.b.  
Öppna  
Por favor, abrir  
Favor abrir



- ①  button to unlock release panel
- ② Volume control
- ③ ON button, switches the unit on/off, mute
- ④ **RDS** button, switches the RDS convenience features on/off  
Selects display for variable text
- ⑤ **BND** button, selects the FM memory bank and the MW and LW wavebands (the Sylt CD50 does not include MW/LW radio)  
**TS**, starts the TravelStore function
- ⑥ Display
- ⑦  button, displays the time  
**DIS** button, changes display contents
- ⑧ **MENU** button, accesses the menu for basic settings
- ⑨  button, opens the flip release panel
- ⑩ Cursor button block
- ⑪ **OK** button, confirms menu selections and starts the SCAN function
- ⑫ **EQ** button, adjusts the equalizer
- ⑬ **AUD** button, adjusts bass, treble, balance and fader  
**LD**, switches the Loudness function on/off
- ⑭ **1 to 6** station buttons
- ⑮ **TRAF** button, switches traffic information standby on/off
- ⑯ **CD•C** button, switches sound source between radio, CD and CD changer (if connected)

# CONTENTS

---

<b>Important information</b> .....	<b>27</b>	Audible fast forward/reverse (CUE/REVIEW) .....	37
Traffic safety .....	27	Playing tracks in random order (MIX) .....	37
Installation .....	27	Scanning tracks (SCAN) .....	37
Accessories .....	27	Repeating individual tracks (REPEAT) .....	38
Guarantee .....	27	Interrupting playback (PAUSE) .....	38
International telephone information ..	27	Switching the display mode .....	38
<b>Removable front panel</b> .....	<b>28</b>	Traffic radio information during CD playback .....	38
Theft protection system .....	28	<b>CD changer operation</b> .....	<b>39</b>
Removing the operating panel .....	28	Starting CD changer operation .....	39
Replacing the operating panel .....	28	Selecting CDs .....	39
<b>Switching the car audio system on/off</b> .....	<b>29</b>	Selecting tracks .....	39
<b>Volume control</b> .....	<b>30</b>	Audible fast forward/reverse (CUE/REVIEW) .....	39
Adjusting the power-on volume .....	30	Switching the display mode .....	39
Mute .....	30	Repeating individual tracks or entire CDs (REPEAT) .....	39
Mute during telephone operation ..	30	Playing tracks in random order (MIX) .....	39
Adjusting the volume of the beep ..	31	Scanning all of the tracks on all of the CDs (SCAN) .....	40
<b>Radio operation</b> .....	<b>31</b>	Interrupting playback (PAUSE) .....	40
Switching to the radio mode .....	31	<b>Clock</b> .....	<b>40</b>
Special RDS functions (AF, REG) ..	31	<b>Adjusting the tone and balance/fader</b> .....	<b>42</b>
Selecting wavebands/memory banks .....	32	<b>Switching Loudness on/off</b> ....	<b>42</b>
Tuning into radio stations .....	32	<b>Equalizer</b> .....	<b>43</b>
Adjusting seek tuning sensitivity .....	33	Notes on making the settings .....	43
Storing radio stations .....	33	Adjusting the equalizer .....	43
Storing radio stations automatically (TravelStore) .....	33	Assistance in setting your equaliser ..	44
Recalling stored radio stations .....	33	Adjusting the spectrometer .....	44
Scanning the radio stations within reception range (SCAN) .....	33	<b>External audio sources</b> .....	<b>45</b>
Adjusting the scan time .....	34	<b>Specifications</b> .....	<b>45</b>
Program Type (PTY) .....	34	<b>Installation instructions</b> .....	<b>171</b>
Optimising radio reception .....	35		
Selecting the display of variable text ..	35		
<b>Traffic information reception</b> .	<b>36</b>		
<b>CD player operation</b> .....	<b>37</b>		
Starting CD player operation .....	37		
Selecting tracks .....	37		

## Important information

Before you use your car audio system for the first time, please take the time to read the instruction manual carefully and make yourself familiar with the audio equipment. Keep this manual handy in your car for future reference.

### Traffic safety

 Traffic safety is always the top priority. Do not attempt to operate your car audio system unless the traffic conditions permit. Familiarize yourself with the equipment before you start driving.

Always make sure that you are still able to hear any warning signals coming from outside the vehicle, such as police or fire engine sirens, at all times.

As a result, please always select a moderate volume for playing your car audio system while you are driving.

### Installation

If you would like to install your new car stereo yourself or add other audio components to the existing ones, then please read the instructions on installation and connection at the end of this manual carefully.

### Accessories

Use only Blaupunkt-approved accessories.

### Remote control unit

The optionally available RC 08 infrared remote control unit allows you to conveniently operate the most important system functions from the steering wheel.

### Amplifiers

All Blaupunkt amplifiers can be used.

### CD changers

The following CD changers can be connected directly: CDC A 06, CDC A 08, CDC A 072 and IDC A 09.

The CDC A 05 and CDC A 071 can be connected with an adapter cable (Blaupunkt no. 7 607 889 093).

### Guarantee

The scope of the guarantee is determined by the laws in the country where the unit is purchased.

Regardless of the legal guarantee regulations, Blaupunkt affords a 12-month guarantee.

If you have any questions about the guarantee, please contact your authorised Blaupunkt dealer. Your cash register receipt is a valid guarantee coupon.

### International telephone information

Have you got any questions on the operation of this equipment or do you require more information?

Give us a call!

You will find the international telephone and fax numbers on the last page of this manual.

# REMOVABLE FRONT PANEL

## Removable front panel

### Theft protection system

To prevent your car audio system from being stolen, it has been equipped with a removable front panel (flip release panel). Without the front panel, the car audio system is useless to thieves.

Protect your car audio system against theft and take the operating panel with you each time you leave the vehicle. Never leave the release panel in the car, even if it is well hidden. The panel has been designed so that it is easy to remove.


#### **Notes:**

- Do not drop the release panel.
- Do not expose the release panel to direct sunlight or other heat sources.
- Store the release panel in the case supplied.

### Removing the operating panel

⇒ Press  ①.

The release panel will unlock.

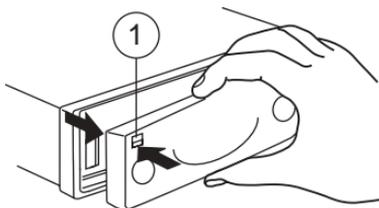


⇒ First pull the operating panel forward and then slide it to the left to remove it.

- When you remove the operating panel, the car audio system will automatically switch off.
- All of the settings will remain stored.
- A CD inserted into the car audio system will remain in place.

### Replacing the operating panel

- ⇒ Slide the operating panel into the guides from left to right.
- ⇒ Press the left-hand side of the panel onto the car audio system until it locks into place.

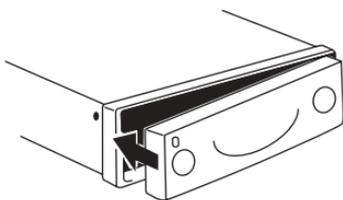

#### **Note:**

- While replacing the panel, be careful not to press on the display.

If the car audio system was on when you removed the panel, it will automatically switch back on using the same settings when you replace it (radio, CD player or CD changer).

## Switching the car audio system on/off

The car audio system can be switched on/off in a number of ways.

### Switching the car audio system on/off with the ignition

If the car audio system has been connected to your vehicle ignition, it is possible to switch it on and off with the ignition.

You can also switch the car audio system on when the ignition is switched off.

- ⇨ Press down and hold ③ until the car audio system switches on.

#### Note:

To prevent the car battery from running down, the radio will switch off again automatically after one hour.

### Switching the car audio system on/off with the removable front panel

- ⇨ Remove the release panel.

The car audio system will switch off.

- ⇨ Replace the release panel.

The car audio system will switch on again. The last settings used (radio, CD player or CD changer) will be activated.

### Switching the car audio system on/off by pressing ③

- ⇨ Press ③ to switch the car audio system on.
- ⇨ Press ③ for longer than 2 seconds to switch the car audio system off again.

The system will then switch off.

### Switching the car audio system on by inserting a CD

If the system is switched off and there is no CD in the CD player,

- ⇨ press  ⑨.

The flip release panel will open.

- ⇨ Insert the CD into the CD player with the label facing upwards until you feel resistance. Do not use force.

The CD will be pulled automatically into the CD player.

Do not attempt to assist or prevent this process.

- ⇨ Press the operating panel closed gently until you feel it click into place.

The audio system will switch on. CD playback will begin.

# VOLUME CONTROL

## Volume control

The car audio system volume can be adjusted to levels from 0 (off) to 66 (maximum).

- ⇒ To increase the volume, turn the volume control knob (2) to the right.
- ⇒ To decrease the volume, turn the volume control knob (2) to the left.

## Adjusting the power-on volume

It is possible to adjust the volume at which the car audio system switches on.

- ⇒ Press **MENU** (8).
- ⇒ Press **Y** (10) repeatedly until "ON VOLUME" appears in the display.
- ⇒ Press **<>** (10) to adjust the volume.

If you adjust this setting to "0", the car audio system will switch on at the volume used before it was switched off.



### Warning of serious injury

If the power-on volume is set to the maximum level, it may be extremely loud when the car audio system is switched on.

If the power-on volume is set to 0 and the car audio system was played at maximum volume before it was switched off, it may be extremely loud when the car audio system is switched back on. This could result in serious injury to your ears!

- ⇒ Once you have selected the desired settings, press **MENU** (8) or **OK** (11).

## Mute

You can reduce the volume of the car audio system immediately (mute).

- ⇒ Press (3) briefly.

"MUTE" will appear in the display.

## Selecting the mute level

It is possible to select the mute level.

- ⇒ Press **MENU** (8).
- ⇒ Press **Y** (10) repeatedly until "MUTE LEVEL" appears in the display.
- ⇒ Press **<>** (10) to select the mute level.
- ⇒ Once you have made your selection, press **MENU** (8) or **OK** (11).

## Mute during telephone operation

If your car audio system has been equipped with a mobile telephone, it will automatically switch to mute when you use the phone. This will not work unless the mobile phone is connected to the car audio system as described in the installation instructions.

If a traffic announcement is received while the phone is in use and traffic information priority has been activated, you will hear the traffic announcement. For more information, refer to the section on "Traffic information reception".

The car audio system will be muted to the mute level selected.

### Adjusting the volume of the beep

For a number of functions you will hear a beep if you press a key for longer than 2 seconds, e.g. if you want to store a radio station on a station preset. You can adjust the volume level of this beep.

- ⇒ Press **MENU** (8).
- ⇒ Press **V** (10) repeatedly until "BEEP" appears in the display.
- ⇒ Press **<>** (10) to adjust the volume. "0" means the beep volume is off, "9" means the beep volume is adjusted to the maximum volume.
- ⇒ Once you have adjusted the settings, press **MENU** **MENU** (8) or **OK** (11).

### Radio operation

This car audio system has been equipped with an RDS radio receiver. Many FM radio stations now transmit the RDS signal, which contains such other information as the station name and the program type (PTY) along with the regular station programming.

As soon as the car radio receiver detects the station name, it will appear in the display. It is also possible to display the program type. For more information, refer to the section on "Program Type (PTY)".

### Switching to the radio mode

If you are currently using the CD player or CD changer,

- ⇒ press **CD•C** (16) repeatedly until "RADIO" appears in the display.

### Special RDS functions (AF, REG)

The special RDS functions for AF (Alternate Frequency) and REG (REGional) improve the performance of your car radio.

- AF. If this RDS function is activated, the car radio continuously searches in the background for the frequency with the best reception for the station you have tuned into.
- REG. A number of radio stations broadcast different regional programming at different times of the day. Use REG to prevent your car radio from tuning into alternate frequencies which might have different programming.

# RADIO OPERATION

## Note:

It is necessary to activate/deactivate REG in the menu.

## Switching REG on/off

- ⇨ Press **MENU** (8).
- ⇨ Press **▼** (10) repeatedly until "REG" appears in the display. "OFF" or "ON" will appear next to "REG".
- ⇨ Press **◀** or **▶** (10) to switch REG off or on.
- ⇨ Press **MENU** (8) or **OK** (11).

## Switching RDS functions on/off

- ⇨ To take advantage of the RDS functions for AF and REG, press **RDS** (4).

When the RDS functions have been activated, "RDS" will light up as a symbol in the display. When you activate the functions, "REG ON" or "REG OFF" will appear briefly in the display.

## Selecting wavebands/memory banks

Using this car audio system, you can tune into radio stations on the FM, MW and LW (AM) wavebands. There are three memory banks for the FM waveband and one memory bank each for MW and LW (the Sylt CD50 does not include MW/LW radio).

You can store six stations in each of these memory banks.

- ⇨ To switch between the different FM memory banks or wavebands, press **BND / TS** (5).

## Tuning into radio stations

You can tune into radio stations in a number of different ways.

## Automatic seek tuning

- ⇨ Press **▼** or **▲** (10).

The radio will tune into the next available station within reception range.

## Manual station selection

You can also tune into radio stations manually.

- ⇨ Press **◀** or **▶** (10).

## Note:

You cannot use manual tuning unless the RDS functions are deactivated.

## Paging through the broadcasting network (for FM only)

If a radio broadcasting network has more than one station, you can page through the "station network".

- ⇨ Press **◀** or **▶** (10) to tune into the next station in the network.

## Note:

To take advantage of this function, you must have activated the RDS functions.

It is only possible to tune into those stations which have been received once before already. To do this, use the SCAN or TravelStore function.

## Adjusting seek tuning sensitivity

It is also possible to adjust the sensitivity of the seek tuning function to tune the radio into stations with strong reception signals only, or to those with weaker reception signals as well.

- ⇒ Press **MENU** (8).
- ⇒ Press **Y** (10) repeatedly until "SENS" appears in the display.
- ⇒ Press **▶** (10).

The currently selected setting will appear in the display. "SENS HI6" indicates the highest level of sensitivity, "SENS LO1" the lowest. If you select "SENS LO", "lo" will light up in the display.

- ⇒ Press **<>** (10) to adjust the desired sensitivity.
- ⇒ Once you have made your selection, press **MENU** (8) or **OK** (11).

## Storing radio stations

### **Storing radio stations manually**

- ⇒ Select the desired memory bank FM1, FM2, FMT or either MW or LW (the Sylt CD50 does not include MW/LW radio).
- ⇒ Tune the radio into the desired station.
- ⇒ Press and hold down one of the station preset buttons **1** to **6** (14) on which you want to store the radio station for longer than two seconds.

## Storing radio stations automatically (TravelStore)

You can automatically store the six radio stations with the strongest reception in your current reception area (for FM only). These stations will be stored in the FMT memory bank.

### **Note:**

Any stations stored previously in the memory bank will be deleted.

- ⇒ Press and hold down **BND / TS** (5) for longer than two seconds.

The storing process will begin. "TRAVEL-STORE" will appear in the display. After the stations have been stored, the radio will automatically begin to play the station stored on preset button 1 for the FMT memory bank.

## Recalling stored radio stations

- ⇒ Select the desired station memory bank.
- ⇒ Press the station button **1** to **6** (14) on which you have stored the desired radio station.

## Scanning the radio stations within reception range (SCAN)

You can scan all of the radio stations currently within your reception range. The scan time can be set in the menu to play from five to 30 seconds.

### **Starting SCAN**

- ⇒ Press and hold down **OK** (11) for longer than two seconds.

SCAN will begin. "SCAN" will appear briefly in the display, followed by the

# RADIO OPERATION

flashing station name or frequency of the radio station currently being scanned.

## Stopping the SCAN function, continuing to listen to the radio station scanned

⇒ Press **OK** (11).

SCAN will end and the last station scanned will continue playing.

## Adjusting the scan time

⇒ Press **MENU** (8).

⇒ Press **▼** (10) repeatedly until "SCANTIME" appears in the display.

⇒ Press **◀ ▶** (10) to set the scan time as desired.

⇒ Once you have made your selection, press **MENU** (8) or **OK** (11).

### Note:

The scan time selected also applies to the SCAN function for CD player and CD changer operation.

## Program Type (PTY)

In addition to the radio station name, a number of FM stations transmit information on the type of program they broadcast. This car radio has been equipped to receive and display this information.

These program types can include:

CULTURE	TRAVEL	JAZZ
SPORT	NEWS	POP
ROCK	CLASSICS	

Using the PTY function, you can select the radio station according to the type of program being broadcast.

As soon as the radio registers a radio station broadcasting the program type selected, it will automatically switch from the station playing or from the CD player or CD changer mode to that station.

## Switching PTY on/off

⇒ Press **MENU** (8).

⇒ Press **▼** (10) repeatedly until "PTY ON" or "PTY OFF" appears in the display.

⇒ Press **◀ ▶** (10) to switch this function either on or off.

PTY will light up in the display when this function has been activated.

⇒ Press **MENU** (8) or **OK** (11).

## Selecting the program type and starting seek tuning

⇒ Press **◀ ▶** (10).

The currently selected program type will appear in the display.

⇒ If you would like to select a different program type, press **◀ ▶** (10) while the program type is on display to switch to another program type.

### OR

⇒ Press one of the station preset buttons from **1** to **6** (14) to select the program type stored on that particular station button.

The program type selected will appear briefly in the display.

- ⇨ Press **▲** or **▼** (10) to start seek tuning.

The next radio station broadcasting the program selected will begin to play.

## Note:

If the radio is not able to find a station broadcasting the program type selected, you will hear a beep and "NO PTY" will appear briefly in the display. The station selected previously will then resume play.

## Storing the program types on the station preset buttons

- ⇨ Press **◀** or **▶** (10) to select the program type.
- ⇨ Press the desired station preset button (1 to 6) (14) for longer than two seconds.

The program type selected will then be stored on the station preset button (1 to 6) (14) pressed.

## Optimising radio reception

### Interference-related treble cut (HICUT)

The HICUT function improves reception when reception begins to deteriorate. If interference occurs, then the treble and the noise is cut automatically.

### Switching HICUT on/off

- ⇨ Press **MENU** (8).
- ⇨ Press **▼** (10) repeatedly until "HICUT" appears in the display.
- ⇨ Press **◀** or **▶** (10) to switch HICUT on or off.

"HICUT 0" indicates that the function is switched off; when "HICUT 1" appears, the treble will be cut.

- ⇨ Press **MENU** (8) or **OK** (11).

## Selecting the display of variable text

A number of radio stations use the RDS signal to transmit advertising or other texts in place of their station names. These "variable texts" will appear in the display. It is possible to adjust your radio so that these "variable texts" do not appear.

- ⇨ Press and hold down **RDS** (4) until "NAME FIX" appears in the display.
- ⇨ To have the "variable texts" displayed again, press and hold down **RDS** (4) until "NAME VAR" appears in the display.

# TRAFFIC INFORMATION RECEPTION

---

## Traffic information reception

### Switching traffic information priority on/off

⇒ Press **TRAF** (15).

Traffic information priority is activated when the traffic congestion symbol lights up in the display.

#### **Note:**

You will hear a warning beep

- if you leave the reception area of the traffic information station you are tuned into.
- if you are listening to a CD, leave the reception area of the traffic information station you are tuned into and the seek tuning function is unable to find another traffic information station.
- if you switch from a traffic information station to a station which does not broadcast traffic information.

Then either switch off traffic information priority or switch to a different traffic information station.

### Adjusting the volume for traffic announcements

⇒ Press **MENU** (8).

⇒ Press **V** (10) repeatedly until "TA VOLUME" appears in the display.

⇒ Press **< >** (10) to adjust the traffic announcement volume.

⇒ Once you have adjusted the setting, press **MENU** (8) or **OK** (11).

## CD player operation

The CD player in this car audio system can be used to play conventional music CDs with a diameter of 12 cm.

 Danger of damage to the CD player!

CD singles with a diameter of 8 cm and contour CDs (shape CDs) are not suitable for use with this CD player.

We assume no liability for any damage done to the CD player resulting from the use of unsuitable CDs.

### Starting CD player operation

- If there is no CD in the player,  
⇨ press  (9).

The flip release panel will open.

- ⇨ Insert a CD into the player with the label facing up until you feel resistance. Do not use force.

The CD will be pulled into the player automatically.

Do not attempt to assist or prevent this process.

- ⇨ Press the operating panel closed gently until you feel it click into place.

CD playback will begin.

- If there already is a CD inserted into the player,  
⇨ press **CD•C** (16) repeatedly until "CD" appears in the display.

Playback will resume at the point where it was interrupted.

### Selecting tracks

- ⇨ Press a key on the cursor block (10) to select the next or the previous track.

Press **V** or **<** (10) once to restart the same track.

### Audible fast forward/reverse (CUE/REVIEW)

To start Cue or Review,

- ⇨ press and hold down either **<** or **>** (10) until the process begins.

### Playing tracks in random order (MIX)

- ⇨ Press **5 MIX** (14).

"MIX CD" will appear briefly in the display, the MIX symbol will light up in the display. The next track played will be selected at random.

### Stopping the MIX function

- ⇨ Press **5 MIX** (14) again.

"MIX OFF" will appear briefly in the display and the MIX symbol will no longer light up.

### Scanning tracks (SCAN)

You can scan all of the tracks on the CD.

- ⇨ Press **OK** (11) for longer than two seconds. Scanning will begin with the next track.

### Note:

It is possible to adjust the scan time. For more information, read the section on "Adjusting the scan time" in the chapter on "Radio Operation".

# CD PLAYER OPERATION

---

## Stopping the SCAN function, continue listening to the current track

- ⇒ To stop the SCAN function, press **OK** (11).

The track currently scanned will continue playing.

## Repeating individual tracks (REPEAT)

- ⇒ To repeat the track currently playing, press **4 RPT** (14).

“REPEAT TRCK” will appear briefly in the display, the RPT symbol will light up in the display. The track will continue to repeat until RPT is deactivated.

## Stopping the REPEAT function

- ⇒ If you want to stop the REPEAT function, press **4 RPT** (14) again.

“REPEAT OFF” will appear briefly in the display and the RPT symbol will no longer light up. CD playback will resume normally.

## Interrupting playback (PAUSE)

- ⇒ Press **3** (14).

“PAUSE” will appear in the display.

## Stopping PAUSE

- ⇒ Press **3** (14) during the pause.

Playback will resume.

## Switching the display mode

- ⇒ To switch the display between the track number and time or the track number and elapsed playing time, press **DIS** (7) for longer than two seconds once or repeatedly as required.

## Traffic radio information during CD playback

- ⇒ If you would like to receive traffic radio information while listening to your CD player, press **TRAF** (15).

The traffic congestion symbol will light up in the display to indicate that priority for traffic radio announcements has been activated. For more information, please refer to the section on “Traffic information reception”.

## CD changer operation

### Note:

For information on how to handle CDs, how to insert CDs into the changer and how to operate the changer, please refer to the instructions included with the CD changer.

### Starting CD changer operation

- ⇨ Press **CD•C** (16) repeatedly until "CHANGER" appears in the display.

Playback will begin with the first CD the changer detects in the magazine.

### Selecting CDs

- ⇨ To select a CD up or down in the magazine, press **▲** or **▼** (10) the required number of times.

### Selecting tracks

- ⇨ To select a different track on the CD currently playing, press **▶** or **◀** (10) the required number of times.

### Audible fast forward/reverse (CUE/REVIEW)

To start Cue or Review,

- ⇨ press and hold down either **◀** or **▶** (10) until the process begins.

### Switching the display mode

- ⇨ To switch the display between the track number and time or the track number and elapsed playing time, press **⊕ / DIS** (7) for longer than two seconds once or repeatedly as required.

### Repeating individual tracks or entire CDs (REPEAT)

- ⇨ To repeat the track currently playing, press **4 RPT** (14) briefly.

"REPEAT TRCK" will appear briefly in the display, RPT will light up in the display.

- ⇨ To repeat the entire CD currently playing, press **4 RPT** (14) again.

"REPEAT DISC" will appear briefly in the display, RPT will light up in the display.

### Stopping the REPEAT function

- ⇨ To stop the REPEAT function for the current track or CD, press **4 RPT** (14) repeatedly until "REPEAT OFF" appears in the display and RPT no longer lights up.

### Playing tracks in random order (MIX)

- ⇨ To play the tracks of the currently selected CD in random order, press **5 MIX** (14) briefly.

"MIX CD" will appear briefly in the display, MIX will light up in the display.

- ⇨ To play the tracks of all of the CDs in random order, press **5 MIX** (14) again.

"MIX ALL" will appear briefly in the display, MIX will light up in the display.

### Note:

The CDC A 08 and the IDC A 09 are also able to play all of the CDs in the changer in random order. The other CD changers first play all of the tracks on a CD in random order and then select the next CD in the changer.

### Stopping the MIX function

- ⇒ To stop the MIX function, press **5 MIX** (14) repeatedly until "MIX OFF" appears briefly in the display and MIX no longer lights up.

### Scanning all of the tracks on all of the CDs (SCAN)

- ⇒ To scan all of the tracks on all of the CDs in ascending order, press **OK** (11) for longer than two seconds.

"SCAN" will appear in the display.

### Stopping the SCAN function

- ⇒ To stop the SCAN function, press **OK** (11) briefly.

The track currently scanned will continue playing.

### Note:

It is possible to adjust the scan time. For more information, read the section on "Adjusting the scan time" in the chapter on "Radio Operation".

### Interrupting playback (PAUSE)

- ⇒ Press **3** (14).

"PAUSE" will appear in the display.

### Stopping PAUSE

- ⇒ Press **3** (14) during the pause.

Playback will resume.

## CLOCK

### Displaying the clock briefly

#### In the radio mode

- ⇒ To display the time briefly, press **⊕ / DIS** (7) briefly.

#### In CD player and CD changer mode

- ⇒ To switch between the display of the CD number, playing time and the time, press **⊕ / DIS** (7) once or repeatedly.

### Altering the permanent display

- ⇒ To make the time or another display as described above permanent, press and hold **⊕ / DIS** (7) until the desired information appears in the display.

### Setting the time

- ⇒ To set the time, press **MENU** (8).

"MENU" will appear in the display.

- ⇒ Press **▼** (10) until "CLOCKSET" appears in the display.

- ⇒ Press **▶** (10).

The time will appear in the display. The minutes will flash and can be altered.

- ⇒ Press **▲** or **▼** (10) to alter the minutes.

- ⇒ Once you have altered the minutes, press **◀** (10). The hours will begin to flash.

- ⇒ Press **▲** or **▼** (10) to alter the hours.

- ⇒ Once you have set the time, press **MENU** (8) or **OK** (11) twice.

### Selecting the 12/24-hour time display mode

- ⇒ Press **MENU** (8).
- “MENU” will appear in the display.
- ⇒ Press **▼** (10) repeatedly until “24 H MODE” or “12 H MODE” appears in the display.
- ⇒ Press **◀** or **▶** (10) to switch the display mode.
- ⇒ Once you have selected the mode, press **MENU** (8) or **OK** (11).

### Activating the clock for display when the car audio system is switched off

- ⇒ To activate the clock for display when the car audio system is switched off, press **MENU** (8).
- “MENU” will appear in the display.
- ⇒ Press **▼** (10) repeatedly until “CLK DISP OFF” or “CLK DISP ON” appears in the display.
- ⇒ Press **◀** or **▶** (10) to switch the clock display on or off.
- ⇒ Once you have made the setting, press **MENU** (8) or **OK** (11).

### Displaying the time briefly when the car radio is switched off

To display the time briefly when the car radio is switched off,

- ⇒ press **⏸** / **DIS** (7).

The time will then appear in the display for eight seconds.

# TONE AND BALANCE/FADER

---

## Adjusting the tone and balance/fader

### Adjusting the bass

- ⇨ To adjust the bass, press **AUD / LD** (13).

“BASS” will appear in the display.

- ⇨ Press **▲** or **▼** (10) to alter the bass.

### Adjusting the treble

- ⇨ To adjust the treble, press **AUD / LD** (13).

“BASS” will appear in the display.

- ⇨ Press **▶** (10) until “TREBLE” appears in the display.
- ⇨ Press **▲** or **▼** (10) to alter the treble.

### Adjusting the balance

- ⇨ To adjust the balance, press **AUD / LD** (13).

“BASS” will appear in the display.

- ⇨ Press **▶** (10) until “BALANCE” appears in the display.
- ⇨ Press **▲** or **▼** (10) to alter the balance.

### Adjusting the fader

- ⇨ To adjust the fader, press **AUD / LD** (13).

“BASS” will appear in the display.

- ⇨ Press **▶** (10) until “FADER” appears in the display.
- ⇨ Press **▲** or **▼** (10) to alter the fader.

## Switching Loudness on/off

Loudness boosts the bass and treble when the volume is low to create a more natural sound.

- ⇨ Press **AUD / LD** (13) for approx. two seconds.

LD will light up in the display to indicate that Loudness is active.

### Adjusting Loudness intensity

The Loudness boost can be set in stages from one to six.

- ⇨ Press **MENU** (8).

“MENU” will appear in the display.

- ⇨ Press **▼** (10) repeatedly until “LOUDNESS” appears in the display.
- ⇨ Press **◀** or **▶** (10) to alter the Loudness setting.
- ⇨ Once you have completed adjusting the settings, press **MENU** (8) or **OK** (11).

## Equalizer

This car audio system is equipped with a parametric 2-band equalizer. For "LOW EQ" the gain can be set to a frequency between 60 to 100 Hz. For "HIGH EQ" the gain can be set to a frequency between 10000 and 17500 Hz. As a result, it is possible to significantly influence the in-vehicle acoustics.

### Notes on making the settings

We recommend that you use a CD you are familiar with to make the settings.

Before you set the equaliser, set bass, treble, balance and fader to "0" and deactivate the Loudness function. For more information on how to do this, refer to the section on "Tone and balance/fader".

- ⇒ Now listen to the CD you have selected.
- ⇒ Evaluate the sound according to your own personal preferences.
- ⇒ Now refer to "Sound impression" in the table.
- ⇒ Make the settings for the equalizer as described under "What to do".

### Adjusting the equalizer

- ⇒ Press **EQ** (12).
- "LOW EQ" will appear in the display.
- ⇒ Press **<** or **>** (10) to select either "LOW EQ" or "HIGH EQ".
  - ⇒ Press **▲** or **▼** (10) to adjust the gain.
  - ⇒ Press **<** or **>** (10) to select the frequency range.
  - ⇒ To select the next frequency, press **OK** (11) first and then **>** (10).
  - ⇒ Once you have completed making all of the necessary adjustments, press **EQ** (12).

# EQUALIZER

## Assistance in setting your equaliser

Start to make your settings in the treble and end it with the bass range.

Frequency range	Sound impression/problem	What to do	Notes
<b>Bass</b> 60 to 100 Hz	Bass reproduction too weak	Boost the bass with "LOW EQ". Frequency: 60 to 100 Hz. Gain: +4 to +6 dB.	Avoid distortion. Adjust the gain carefully.
<b>Treble</b> 10000 to 17500 Hz	Lifeless reproduction. Lack of transparency. Instruments do not sparkle.	Boost treble range with "HIGH EQ". Frequency: 10000 to 17500 Hz. Gain: +2 to +4 dB.	Avoid a piercing type of tone. Strong hissing sound unpleasant.

## Adjusting the spectrometer

The spectrometer in the display uses symbols to temporarily indicate what adjustments are made to the volume, the tone and balance/fader and the equalizer settings.

If no adjustments are being made to the system, the spectrometer displays the output level of the car radio.

You can select the type of spectrometer you want displayed in the menu.

There are two different types available.

## Selecting the spectrometer type

⇨ Press **MENU** (8).

"MENU" will appear in the display.

⇨ Press **▼** (10) repeatedly until "EQ DISPLAY" appears in the display.

⇨ Press **◀** or **▶** (10) to select either "SPECTRUM 1", "SPECTRUM 2" or "EQ DISP OFF".

⇨ Once you have completed adjusting the settings, press **MENU** (8) or **OK** (11).

## External audio sources

In place of the CD changer it is also possible to connect other external audio sources to the line output. These sources can include a portable CD player, MiniDisc player or MP3 player.

You must activate the AUX output in the menu.

If you would like to connect another external audio source, you will require an adapter cable. This adapter cable can be ordered from any authorized Blaupunkt dealer.

### Switching the AUX output on/off

⇒ Press **MENU** (8).

“MENU” will appear in the display.

⇒ Press **▼** (10) repeatedly until “AUX-IN-1 OFF” or “AUX-IN-1 ON” appears in the display.

⇒ Press **◀** or **▶** (10) to switch AUX on or off.

⇒ Once you have completed your selections, press **MENU** (8) or **OK** (11).

#### **Note:**

If the AUX input has been switched ON, you can select it by pressing **CD•C** (16).

## Specifications

### Amplifier

Output power: 4 x 25 watts sinus acc. to DIN 45 324 at 14.4 V  
4 x 40 watts max. power

### Tuner

Wavebands:

FM : 87.5 – 108 MHz

MW : 531 – 1602 kHz

LW : 153 – 279 kHz

(The Sylt CD50 does not include MW/LW.)

FM frequency response:

30 - 15000 Hz

### CD

Frequency response:

20 - 20000 Hz

### Preamp Out

4 channels: 2 V

Subject to technical modification!

**Service-Nummern / Service numbers / Numéros du service après-vente / Numeri del servizio di assistenza / Servicenummers / Telefonnummer för service / Números de servicio / Número de serviço**

	Tel.:	Fax:
Deutschland	0 18 05 00 02 25	0 51 21 49 40 02
Belgique / België	0 25 25 54 44	0 25 25 54 48
France	014 010 70 07	014 010 73 20
Nederland	023 565 63 48	023 565 63 31
Great Britain	018 958 383 66	018 958 383 94
Danmark	44 89 83 60	44 89 86 44
Sverige	08 750 15 00	08 750 18 10
Norge	66 81 70 00	66 81 71 57
Suomi	094 359 91	094 359 92 36
Österreich	01-6 10 39-0	01-6 10 39-391
Ελλάς	015 762 241	015 769 473
Česká republika	026 130 04 41	026 130 05 14
USA	800-266 25 28	708-681 71 88
Singapore	006 535 054 47	006 535 053 12
Slovensko	042 175 873 212	042 175 873 229

**Blaupunkt-Werke GmbH**  
**Bosch Gruppe**

