

*Thinking of you*

**Electrolux**

دليل المستخدم  
User Manual

غسالة الملابس  
Washing Machine

EWF 6120 W



**We were thinking of you**  
when we made this product

EN

## Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine.

We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!.

ع

## مرحباً بكم في عالم Electrolux

شكراً لك على اختيارك منتج رفيع المستوى من منتجات Electrolux. والذي نأمل أن يحقق لك مزيداً من الراحة في المستقبل. تسعى Electrolux إلى توفير مجموعة كبيرة ومتنوعة من المنتجات عالية الجودة التي توفر لحياتك قدراً أكبر من الراحة. ستجد بعض الأمثلة للمنتجات على غلاف هذا الدليل. برجاء استغراق بضع دقائق في مراجعة هذا الدليل حتى يتسنى لك الاستفادة من مزايا جهازك الجديد. نعدك بأن يمدك هذا الدليل بخبرة كبيرة كمستخدم مما يوفر لك راحة البال. حظاً سعيداً!.

## Contens

Safety information.....	31	Washing programme .....	45
Product description .....	34	Care and cleaning .....	46
Control panel.....	35	Something not working.....	49
Use.....	36	Technical data .....	52
Washing hints .....	41	Installation .....	53
International wash code symbol .....	44	Environment concerns.....	56

The following symbols are used in this manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

## Safety Information



**In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is**

**important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.**

## 32 safety information

### General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- During high temperature wash programmes the door glass may get hot. Do not touch it!
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Only use the advised quantities of fabric softener. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Always unplug the appliance and turn off the water supply after use, clean and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- Do not use your washing machine to wash articles with whalebones, material without hems or torn material.

### Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable, inlet hose and drain hose.
- If the appliance is installed in a location subject to frost, please read the "**dangers of freezing**" chapter.

## Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.
- Do not overload the appliance. See the relevant section in the user manual.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the washing machine if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible.


## Child safety

- This washing machine is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.




### 34 product description


## Product description

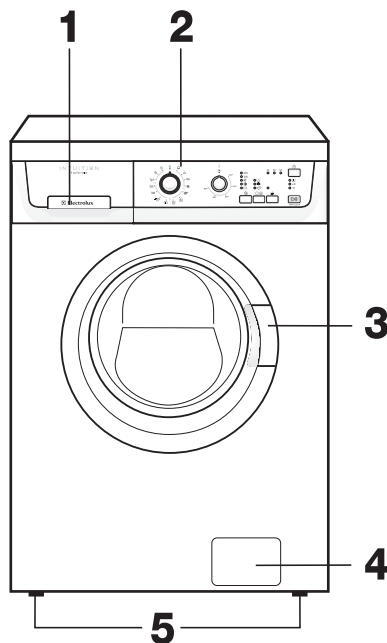- 1** Detergent dispenser drawer
- 2** Control panel
- 3** Door opening handle
- 4** Drain pump
- 5** Adjustable feet




### Detergent dispenser drawer

-  Prewash
-  Wash
-  Fabric Softener

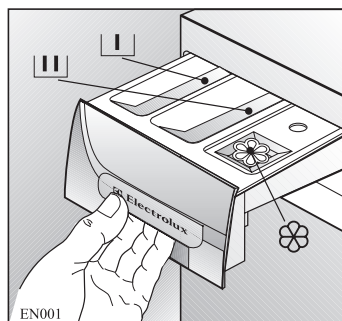

## Control panel

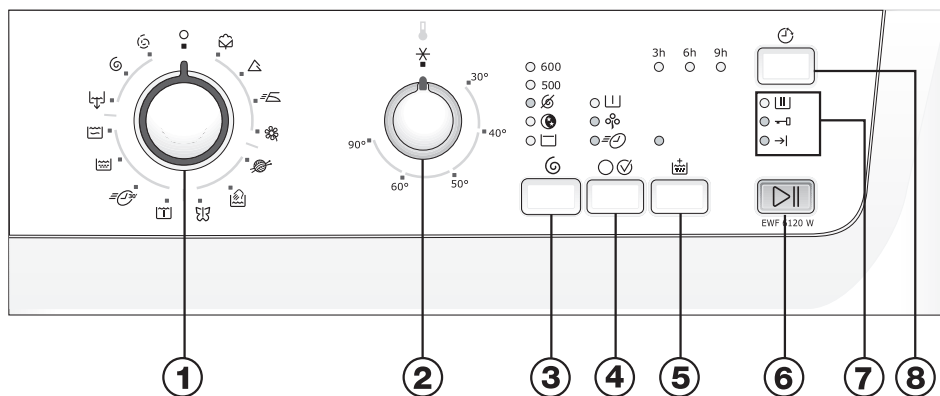


- 1** Programme selector dial
- 2** Spin reduction knob
- 3** Temperature options button"
- 4** Options Button
- 5** Extra Rinse button
- 6** Start/Pause button
- 7** Programme progress display
- 8** Delay Start button



## Use

### First Use



- Ensure that the electrical and water connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Pour 2 litres of water into the main wash compartment  of the detergent drawer in order to activate the ECO valve. Then run a cotton cycle at 90°C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the dispenser drawer and start the machine.

### Daily Use






#### Load the laundry

Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.



#### Measure out the detergent and the fabric softener

Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the main wash compartment  and, if you wish to carry out the “prewash” phase, pour it into the compartment marked .

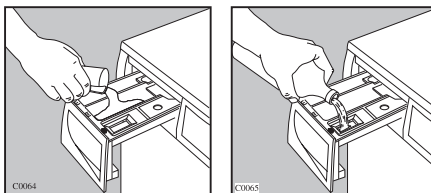

If required, pour fabric softener into the compartment marked  (the amount used must not exceed the “MAX” mark in the drawer). Close the drawer gently.

#### Select the required programme

Turn the programme selector dial to the required programme. The light Start/Pause starts to flash.



The selector dial is divided into following sections:

- Cottons 
- Synthetics 
- Delicates 
- Hand wash 

Special programmes:  Rinses,  Drain and  Spin.


The selector dial can be turned either clockwise or anticlockwise. Position **O** to Reset programme/ Switching OFF of the machine.

**At the end of the programme the selector dial must be turned to position O, to switch the machine off.**

### Attention!

If you turn the programme selector dial to another programme when the machine is working, the lights of the programme progress display start to flash. The machine will not perform the new selected programme.

### Select the required temperature

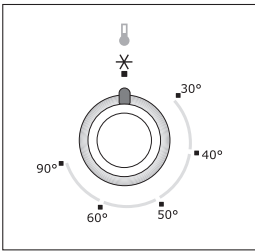

Turn the temperature selector dial to select the washing temperature.

Maximum temperatures are 95°C for cottons, 60°-50°C for synthetic fabrics, 40°C for delicate fabrics, wool and fabrics to be hand-washed.

By selecting position (Cold) the machine will wash with cold water. To be used for extremely delicate items, such as curtains

### Programme Option buttons

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button.

When these buttons are pressed, the corresponding pilot lights come on. When they are pressed again, the pilot lights go out.

### Select the spin speed or Night Cycle or Rinse Hold option

Turn the spin speed selector on desired position. You could also choose the position "No spin", "Rinse Hold" or "Night Cycle".

At the end of the program, the selector dial must be turned to position O, to switch the machine off.


- 600
- 500
- 
- 
- 



In the all levels of spin, the sound is reduced and your appliance could be used at night without any inconvenience, to take advantage of off-peak rates. For Cotton program and Synthetics, rinses were carried out with more water.

### Select the Prewash Eco or Super Quick Options

Press the Options button repeatedly, to select the desired option. The relevant light will light up.

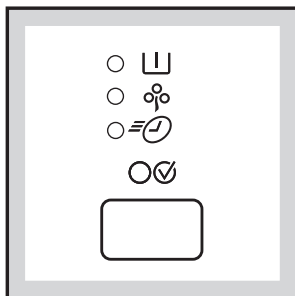

You can select 3 different options:

**Prewash:** select this option if you wish your laundry to be prewashed at 30°C before the main wash (not available for Handwash). The prewash ends with a short spin in programmes for cotton and synthetic fabrics whereas in the programmes for delicate fabrics the water is only drained.


**Eco:** This option can be selected to choose a program with a more economical washing cycle. You can select this option with cottons (40°-90°) and synthetic (40°-60°) programs. It is not available with the option "Super Quick".

**Super Quick:** a very short cycle for slightly soiled items that have been used or worn for a short time.

This option is not available with the Handwash programs and Eco option.


If an option is chosen that is not allowed with the selected programme, the red pilot light of the START/PAUSE button will flash 3 times.

### Select the AquaCare option

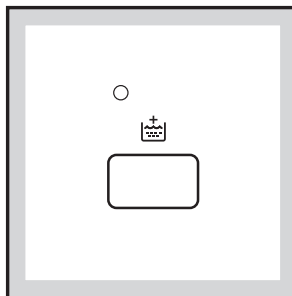



This button can be selected with all programmes except the wool and hand wash programmes. The machine performs 5 rinses instead of 3. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.
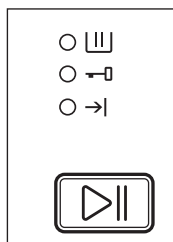
### Select the Start/Pause



To start the selected programme, press the **"start/pause"** button; the corresponding green pilot light stops flashing.

The **"wash"**  and **"door"**  lights are on to indicate that the appliance starts operating and the door is locked.


To interrupt a programme which is running, depress the **"start/pause"** button: the corresponding green pilot light starts to flash.

To restart the programme from the point at which it was interrupted, **press** the “start/pause” **button again**.

If you have chosen a delayed start, the machine will begin the countdown.

If an incorrect option is selected, an integrated red pilot light of the “start/pause” button flashes for 3 times.

### Select the Delay start

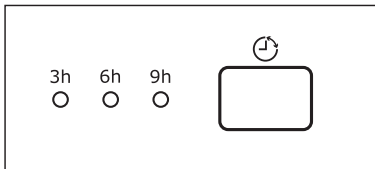

**Before you start the programme**, if you wish to delay the start, press the Delay Start button repeatedly, to select the desired delay. The relevant light illuminates.

This button makes it possible to delay the starting of the washing programme by 9, 6 and 3 hours.

You must select this option after you have set the programme and before you press the Start/Pause button.

You can cancel the delay time at any moment, before you press the Start/Pause button.

If you have already pressed the Start/Pause button, and you wish to cancel the delay time, proceed as follows:


- set the washing machine to PAUSE by pressing the Start/Pause button;
- press the Delay Start button once, the light relevant to the selected delay goes off.
- press the Start/Pause button again to start the programme.


### Important!

- The selected delay can be changed only after selecting the washing programme again.
- The door will be locked throughout the delay time. If you need to open the door, you must first set the washing machine to PAUSE by pressing the Start/Pause button and then wait about 2 minutes. After you have closed the door, press the Start/Pause button again.

The Delay Start can not be selected with **Spin** and **Drain** programmes.

### Programme progress display

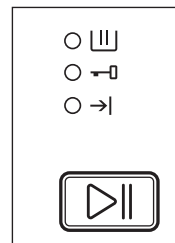

By selecting the wash programme, the “wash”  pilot lights comes on.

 
When the pilot light “wash” comes on this means that the machine is performing the washing cycle. If you have selected the “prewash” function, this light will be on during the prewash phase too.

The “door”  pilot light indicates if the door can be opened:

- light on: the door cannot be opened
- light off: the door can be opened
- flashing light: the door is opening

It stays on during the whole programme indicating that the door is locked.

When the light goes out, the door can be opened.

When the programme has finished, the “End”  pilot light comes on.

### Altering an option or a running programme

It is possible to change any option before the programme carries it out. Before you make any change, you must pause the washing machine by pressing the **“Start/Pause”** button.

Changing a running programme is possible **only by resetting it**. Turn the programme selector dial to **“O”** and then to the new programme position. The washing water in the tub will not emptied out. Start the new programme by depressing the **“start pause”** button again.

### Interrupting a programme

Depress the **“start pause”** button to interrupt a programme which is running, the corresponding light starts to flash. Depress the button again to restart the programme.

### Cancelling a programme

Turn the selector dial to **“O”** to cancel a programme which is running. Now you can select a new programme.

### Opening the door after the programme has started

First set the machine to pause by pressing the **“start pause”** button. If the **“door”** light flashes and after 2 minutes goes off, the door can be opened.

If the **“door”** light doesn't flash, this means that the machine is already heating, that the water level is above the bottom edge of the door or that the drum is turning. In this case the door can not be opened.

If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to **“O”**. After about 2 minutes the door can be opened (**pay attention to the water level and temperature!**).

### At the end of the programme

The machine stops automatically.

If the **“rinse hold”** option has been selected, the phase lights **“end”** and **“door”** illuminate, the **“start pause”** light goes off and the door remains locked to indicate that the water must be emptied out before opening the door.

### To empty out the water please read the steps on the Rinse Hold option paragraph.

Turn the programme selector dial to **“O”** to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty.

If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

## Washing hints



### Sorting the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

### Temperatures

90°	for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...)
60°	for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas....) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear).
* (cold) 30°-40°	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink».

### Before loading the laundry

Never wash whites and coloureds together. Whites may lose their "whiteness" in the wash.

New coloured items may run in the first wash; they should therefore be washed separately the first time.

### Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

Remove persistent stains before washing.

Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care. Remove hooks or tie them up in a bag or net.

### Maximum loads

Recommended loads are indicated in the programme charts.

General rules:

**Cotton, linen:** drum full but not too tightly packed;

**Synthetics:** drum no more than half full;

**Delicate fabrics and woollens:** drum no more than one third full.

Washing a maximum load makes the most efficient use of water and energy.

For heavily soiled laundry, reduce the load size.

### Laundry weights

The following weights are indicative:

bathrobe	1200 g
napkin, tea cloth, lady's brief, blouse	100 g
quilt cover	700 g
sheet	500 g
pillow case, towelling towel, night dress	200 g
table cloth	250 g
man's shirt	200 g
man's pyjamas	600 g
men's underpanths	100 g

### Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

**Blood:** treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

**Mould stains:** treat with bleach, rinse well (whites and fast coloureds only).

**Grass:** soap lightly and treat with bleach (whites and fast coloureds only).

## 42 washing hints

**Oil based paint:** moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

**Dried grease stains:** moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

**Rust:** oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

**Ball point pen and glue:** moisten with acetone (\*), lay the garment on a soft cloth and dab the stain.

**Lipstick:** moisten with acetone as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach.

Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

**Ink:** depending on the type of ink, moisten the fabric first with acetone (\*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

**Tar stains:** first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

(\*) do not use acetone on artificial silk.

## Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.


The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.


All commonly available washing machine detergents may be used in this appliance:

- powder detergents for all types of fabric,
- powder detergents for delicate fabrics (60°C max) and woollens,
- liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

If using concentrated powder or liquid detergents, a programme **without** prewash must be selected.

Pour liquid detergent into the dispenser drawer compartment marked  **just before** starting the programme.

Any fabric softener or starching additives must be poured into the compartment marked  before starting the wash programme.

Follow the product manufacturer's recommendations on quantities to use and **do not exceed the «MAX» mark in the detergent dispenser drawer.**

### Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Water hardness is classified in so-called “degrees” of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.

Follow the product manufacturers’ instructions on quantities to use.

Use less detergent if:

- you are washing a small load,
- the laundry is lightly soiled,
- large amounts of foam form during washing.













Degrees of water hardness			
Level	Characteristic	Degrees	
		German °dH	French °T.H.
1	soft	0-7	0-15
2	medium	8-14	16-25
3	hard	15-21	26-37
4	very hard	> 21	> 37











#### 44 International wash code symbol

### **i** International wash code symbols





 

These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry.

<p><b>Energetic wash</b></p>   <p><b>Delicate wash</b></p>	 <p>Max. wash temperature 95°C</p>	 <p>Max. wash temperature 60°C</p> 	 <p>Max. wash temperature 40°C</p>  	 <p>Max. wash temperature 30°C</p> 	 <p>Hand wash</p>	 <p>Do not wash at all</p>
--	---	---	---	---	--	---



 
 
 



 


























 <p><b>Bleaching</b></p>	 <p>Bleach in cold water</p>	 <p>Do not bleach</p>
---	---	--

 <p><b>Ironing</b></p>	 <p>Hot iron max 200°C</p>	 <p>Warm iron max 150°C</p>	 <p>Lukewarm iron max 110°C</p>	 <p>Do not iron</p>
---	---	--	--	---

 <p><b>Dry cleaning</b></p>	 <p>Dry cleaning in all solvents</p>	 <p>Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 &amp; R 113</p>	 <p>Dry cleaning in petrol, pure alcohol and R 113</p>	 <p>Do not dry clean</p>
--	---	--	---	--

 <p><b>Drying</b></p>	 <p>Flat</p>	 <p>On the line</p>	 <p>On clothes hanger</p>	 <p>high temperature low temperature</p> <p>Tumble dry</p>	 <p>Do not tumble dry</p>
--	---	--	--	---	---

## Washing programmes

Programme/ Temperature	Type of laundry	Options
 Cotton 90° - ✱	<b>White or colored clothes</b> for ex. Sheets, tablecloths, household linen.	   
 Synthetics 60°C - ✱	<b>Synthetic or mixed fabrics</b> , underwear, coloured garments, non-shrink shirts, blouses.	  <sup>(*)</sup> 
 Easy Iron 60° - ✱	Synthetic or mixed fabrics to be gentle washed and spun.	    
 Delicates 40°C - ✱	Delicate fabrics, for example curtains.	     
 Wool 40°C - ✱	Special programme for wool items that can be washed at machine	  
 Handwash 40°C - ✱	Special programme for hand washing fabrics	
 Silk 30°C	Specific program for silk fabrics. <b>Max. 1kg</b>	  
Soak 30°C	Short cycle to keep clothes in water	
Miniprogramme30°C	Short cycle for lightly soiled fabrics.	
Rinses	Separate rinse cycle for hand washed cotton fabric.	  
Delicate rinses	Separate rinse cycle for hand washed items of delicate fabric.	
Drain	For emptying out the last rinse water in programmes with the Rinse Hold or Night Cycle option.	
Spin	Separate spin for cottons.	
Delicate spin	Separate spin for delicate fabrics.	

(\*) This option is only available for temperatures between 60°C and 40°C.

## 46 care and cleaning

### Care and cleaning



You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

#### Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

#### After each wash

Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal.

#### Maintenance Wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash:

- The drum should be empty of laundry.
- Select the hottest cotton wash programme.
- Use a normal measure of detergent, must be a powder with biological properties.


#### External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.

#### Cleaning the dispenser drawer

The washing powder and additive dispenser drawer should be cleaned regularly.

Remove the drawer by pressing the catch downwards and by pulling it out. Flush it out under a tap, to remove any traces of accumulated powder.

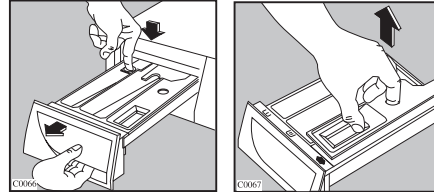


To aid cleaning, the top part of the additive compartment should be removed.

#### Cleaning the drawer recess

Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess.

Replace the drawer and run the rinse programme without any clothes in the drum.

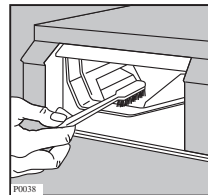



#### Cleaning the pump

The pump should be inspected if



- the machine does not empty and/or spin
- the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.

Proceed as follows:

- Disconnect the appliance.
- If necessary wait until the water has cooled down.
- Open the pump door.

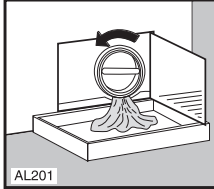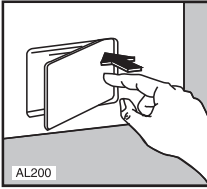

- Place a container close to the pump to collect any spillage.
- When no more water comes out, unscrew the pump cover and remove it. Always keep a rag nearby to dry up spillage of water when removing the cover.

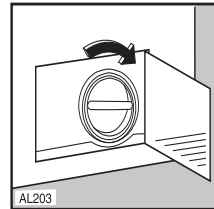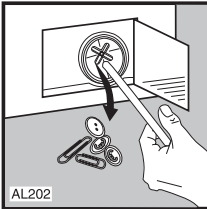

- Remove any objects from the pump impeller by rotating it.
- Screw the pump cover fully in.
- Close the pump door.



### Warning!

When the appliance is in use and depending on the programme selected there can be hot water in the pump.


Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

### Cleaning the water inlet filter

If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged.

It is therefore a good idea to clean it from time to time.

Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose.

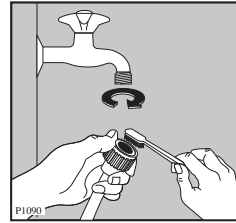

### The dangers of freezing

If the machine is exposed to temperatures below 0°C, certain precautions should be taken.

- Turn off the water tap.
- Unscrew the inlet hose.
- Place the end of the inlet hose in a bowl placed on the floor and let water drain out.
- Screw the water inlet hose back on.
- When you intend to start the machine up again, make sure that the room temperature is above 0°C.

## 48 care and cleaning



### **Important!**

Every time you drain the water through the emergency emptying hose you must pour 2 litres of water into the main wash compartment of the detergent drawer and then run the drain programme. This will activate the ECO VALVE device avoiding that part of the detergent remains unused at next washing.

### **Emergency emptying out**

If the water is not discharged, proceed as follows to empty out the machine:

- pull out the plug from the power socket;
- close the water tap;
- if necessary, wait until the water has cooled down;
- open the pump door;
- clean the pump if necessary as previously described;
- screw the pump cover again and close the door.

## Something not working



Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the **red** Start/Pause pilot light flashes to indicate that the machine is not working.

Once the problem has been eliminated, press the **Start/Pause** button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Malfunction	Possible cause	Solution
The washing machine does not start:	<ul style="list-style-type: none"> <li>• The door has not been closed. <b>(Red Start/Pause pilot light flashes)</b>.</li> <li>• The plug is not properly inserted in the power socket.</li> <li>• There is no power at the socket</li> <li>• The main fuse has blown.</li> <li>• The selector dial is not correctly positioned and the Start/Pause button has not been depressed.</li> <li>• The delay start has been selected.</li> </ul>	<ul style="list-style-type: none"> <li>• Close firmly the door.</li> <li>• Insert the plug into the power socket.</li> <li>• Please check it.</li> <li>• Replace the fuse.</li> <li>• Please turn the selector dial and press the Start/Pause button again.</li> <li>• If the laundry are to be washed immediately, cancel the delay start.</li> </ul>
The machine does not fill:	<ul style="list-style-type: none"> <li>• The water tap is closed. <b>(Red Start/Pause pilot light flashes)</b></li> <li>• The inlet hose is squashed or kinked. <b>(Red Start/Pause pilot light flashes)</b></li> <li>• The filter in the inlet hose is blocked. <b>(Red Start/Pause pilot light flashes)</b></li> <li>• The door is not properly closed. <b>(Red Start/Pause pilot light flashes)</b></li> </ul>	<ul style="list-style-type: none"> <li>• Open the water tap.</li> <li>• Check the inlet hose connection.</li> <li>• Clean the water inlet hose filter.</li> <li>• Close firmly the door.</li> </ul>
The machine fills then empties immediately:	<ul style="list-style-type: none"> <li>• The end of the drain hose is too low.</li> </ul>	<ul style="list-style-type: none"> <li>• Refer to relevant paragraph in "water drainage" section.</li> </ul>

## 50 something not workinn


Malfunction	Possible cause	Solution
The machine does not empty and/or does not spin:	<ul style="list-style-type: none"> <li>● The drain hose is squashed or kinked. <b>(Red Start/Pause pilot light flashes)</b></li> <li>● The drain pump is clogged. <b>(Red Start/Pause pilot light flashes)</b></li> <li>● The the option has been selected.</li> <li>● The option  or  has been selected.</li> <li>● The laundry is not evenly distributed in the drum.</li> </ul>	<ul style="list-style-type: none"> <li>● Check the drain hose connection.</li> <li>● Clean the drain pump.</li> <li>● Not select the option.</li> <li>● Redistribute the laundry.</li> </ul>
There is water on the floor:	<ul style="list-style-type: none"> <li>● Too much detergent or unsuitable detergent (creates too much foam) has been used.</li> <li>● Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp.</li> <li>● The drain hose is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>● Reduce the detergent quantity or use another one.</li> <li>● Check the water inlet hose connection.</li> <li>● Change it with a new one.</li> </ul>
Unsatisfactory washing results:	<ul style="list-style-type: none"> <li>● Too little detergent or unsuitable detergent has been used.</li> <li>● Stubborn stains have not been treated prior to washing.</li> <li>● The correct temperature was not selected.</li> <li>● Excessive laundry load.</li> </ul>	<ul style="list-style-type: none"> <li>● Increase the detergent quantity or use another one.</li> <li>● Use commercial products to treat the stubborn stains.</li> <li>● Check if you have selected the correct temperature.</li> <li>● Introduce into the drum less laundry.</li> </ul>
The door will not open:	<ul style="list-style-type: none"> <li>● The programme is still running.</li> <li>● The door lock has not been released.</li> <li>● There is water in the drum.</li> </ul>	<ul style="list-style-type: none"> <li>● Wait the end of washing cycle.</li> <li>● Wait about 2 minute.</li> <li>● Select drain or spin programme to empty out the water.</li> </ul>

Malfunction	Possible cause	Solution
The machine vibrates or is noisy:	<ul style="list-style-type: none"> <li>● The transit bolts and packing have not been removed.</li> <li>● The support feet have not been adjusted.</li> <li>● The laundry is not evenly distributed in the drum.</li> <li>● Maybe there is very little laundry in the drum.</li> </ul>	<ul style="list-style-type: none"> <li>● Check the correct installation of the appliance.</li> <li>● Check the correct levelling of the appliance.</li> <li>● Redistribute the laundry.</li> <li>● Load more laundry.</li> </ul>
Spinning starts late or the machine does not spin:	<ul style="list-style-type: none"> <li>● The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and select the spin programme.</li> </ul>	<ul style="list-style-type: none"> <li>● Redistribute the laundry.</li> </ul>
The machine makes an unusual noise	<ul style="list-style-type: none"> <li>● The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.</li> </ul>	
No water is visible in the drum	<ul style="list-style-type: none"> <li>● Machines based on modern technology operate very economically using very little water without affecting performance.</li> </ul>	



## 52 technical data

If you are unable to identify or solve the problem, contact our service centre.  
Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

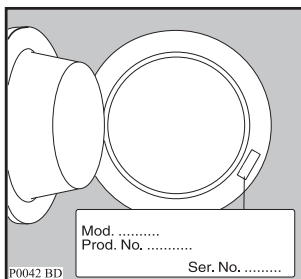

## Technical data

Dimensions	Width	60 cm
	Height	85 cm
	Depth	62,5 cm
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the appliance door	
Water supply pressure	Minimum	0,05 MPa
	Maximum	0,8 MPa
Maximum Load	Cotton	5 kg
Spin Speed	Maximum	600 rpm

CE

Données de consommation			
Programme	Programme duration (in minutes)	Energy consumption (in kWh)	Water consumption (in litres)
Cotton 90°	145	2	53
Cotton 60° Eco (*)	125	0.85	52
Cotton 60°	125	1.02	54
Cotton 40° Eco	125	0.85	49
Cotton 40°-30°-Cold	115	0.55	49
Synthetic 60°	75	0.45	51
Synthetic 40°-30°-Cold	70	0.23	51
Delicat 40°-Cold	50	0.25	55
Handwash 40°-Cold	55	0.07	55
Rinses	45	0.02	48
Drain	2	—	—
Spin	10	—	—



(\*) The "Cottons 60° Eco" with a load of 5 kg is the reference programme for the data entered in the energy label, in the compliance with EEC 92/75 standards.

The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature. It refers to the highest temperature for each wash programme.

## 54 installation


### Installation

#### Transit security bars




Before starting the machine up, **the transport security bars must be removed** as follows:

You are advised to keep all the transport security bars. In case the appliance has to be transported again.

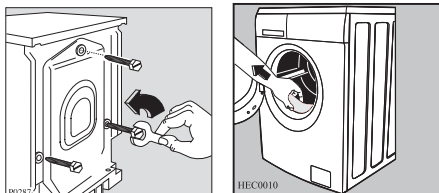

1. Unscrew and remove the three rear screws by means of a key.
2. Open the porthole, and remove the polystyrene block fitted with the adhesive tape on the door seal.

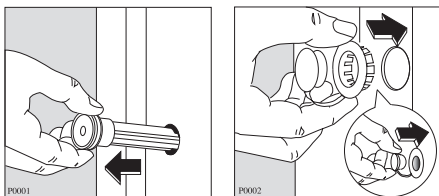

3. Place the machine in an upright position and remove the three plastic bolts.
4. Plug the 3 holes with the plastic plugs which you can find in the envelope containing the instruction booklet.


#### Hydraulic connection

There should be a COLD WATER tap near the washing machine with a screwing on connection pipe of 3/4 gas for the water supply, a sink, a wash basin or a drainage system in the wall.


Previously check if:

- it is not a hot water tap.
- the running water is clean. If not, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.


Have the permanent drainage system in the wall checked by a plumber.

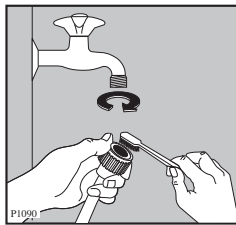


1. Carefully screw the pipe to the tap taking care not to damage the screwdriver and fix the nut well on to the end in order to avoid leaking.

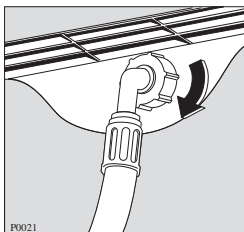

2. If necessary turn the hose adequately by unscrewing the nut at the rear of the appliance. Now tighten the nut anew to avoid leaks. (Open the tap and assure that it does not leak and close it again.)

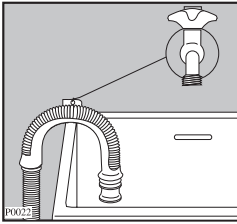

- Place the discharging hose in a washbasin or sink with the aid of the bent piece delivered separately. The bent piece has to be entered into the tube's mouth in order to assure the support. Aforesaid piece allows the hose to be fixed to the wall by means of an opening on the upper part and that way the hose does not move and its falling is avoided.

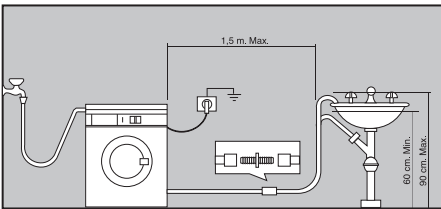

### IMPORTANT:

The distance from the floor to the highest part of the hose should be between 60 to 90 cm. (It is advised to be between 60 and 70 cm). The hose must not be bent nor twisted to avoid clogging. Should a prolongation of the discharging hose be unavoidable this must never surpass 1.5 m and must be of the same diameter as the original hose.


Make sure the hoses are not too tense

### Levelling

Level the appliance by loosening or tightening the feet. Once in the right position fix the feet by pushing the nuts against the base of the case. Accurate levelling will prevent vibration, noise and

displacement of the appliance during operation.

Some vibration is inevitable, especially if placed on a wooden floor. Wooden floors are particularly susceptible to vibrations. If possible always place the appliance on a solid floor.

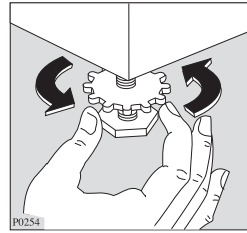

### Electrical connection

This machine is designed to operate on a 230 V, single-phase, 50 Hz supply.

Check that your domestic electrical installation can take the maximum load required (2.1 kW), also taking into account any other appliances in use.

**The applicable rules for electrical security require an adequate earthing. The plug of the appliance is provided with such a device.**



The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution. Should the appliance power supply cable need to be replaced, this should be carried out by our Service Centre.



Please ensure that when the appliance is installed the power supply cable is easily accessible.

## 56 environment concerns

### Environment concerns

#### Packaging materials



The materials marked with the symbol  are recyclable.

>PE<=polyethylene


>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

#### Old machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### Ecological hints



To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

## Standard guarantee conditions

We, Electrolux, undertake that if within 12 months of the date of the purchase this Electrolux appliance or any part thereof is proved to be defective

by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
  - The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
  - The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
  - Electrolux Service Force Centre must undertake all service work under this guarantee
  - Any appliance or defective part replaced shall become the Company's property.
  - This guarantee is in addition to your statutory and other legal rights.
  - Exclusions
  - Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
  - Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
  - Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
  - Products of Electrolux manufacturer that are not marketed by Electrolux Service and Spare Parts
- In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at [www.electrolux.fr](http://www.electrolux.fr) Before calling out an engineer, please ensure you have read the details under the heading "What to do if..."

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and postcode.
2. Your telephone number.
3. Clear concise details of the fault.
4. The model and Serial number of the appliance (found on the rating plate).
5. The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls.

### Customer Care

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at [www.electrolux.fr](http://www.electrolux.fr)

(\* ) Calls may be recorded for training purposes

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.
- The provisions of this European Guarantee do not affect any of the rights granted to you by law.







[www.electrolux.com](http://www.electrolux.com)

