

Sunbeam

Pie Magic 4

4-up pie maker with non-stick cooking plates

Instruction Booklet

PM4400

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	3
Features of your Sunbeam Pie Magic 4	4
An Introduction to your Sunbeam Pie Magic 4	6
Before using your Sunbeam Pie Magic 4	6
Making pies in your Sunbeam Pie Magic 4	7
Defrosting and reheating pies	9
Care and Cleaning	10

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώντε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری یکنید که احتیاط های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirlen güvencik önlemlerinin anlaşılıldüğundan emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM PIE MAGIC 4.

- Use well away from walls and curtains.
- Ensure the Sunbeam Pie Magic 4 is placed on a flat and stable surface during operation.
- Do not immerse or drop the Sunbeam Pie Magic 4 in water or in any other liquid.
- Do not allow the internal components of the Sunbeam Pie Magic 4 to get wet at any time.

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your Sunbeam Pie Magic 4

Deep-dish, non-stick plates.

 
 
Makes generous, high-top pies with extra filling. The four non-stick plates are easy to clean and allow the pies to be easily removed from the pie maker. You can make up to four perfect pies every time.

 
Edge crimper.

Seals the pies perfectly and gives them a decorative trim.

Pastry cutters.

The special cutters are for cutting the pastry tops and bases of your pies. The small cutter (104mm) is for the pastry top and the large cutter (122mm) is for the pastry base.

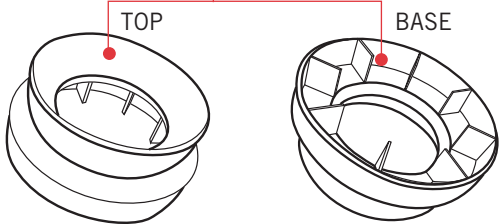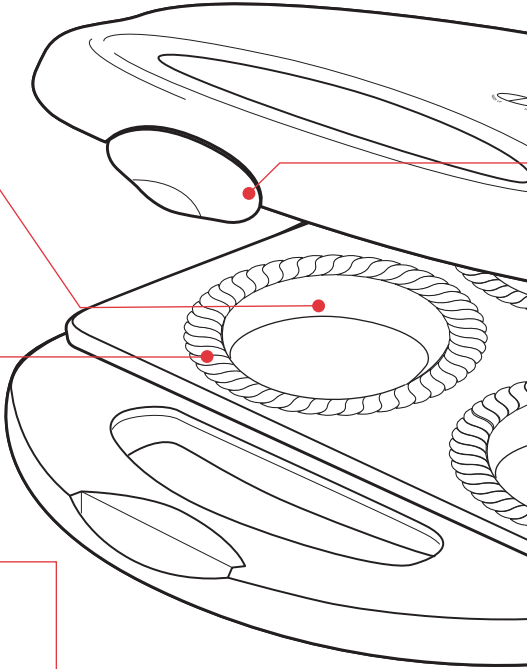

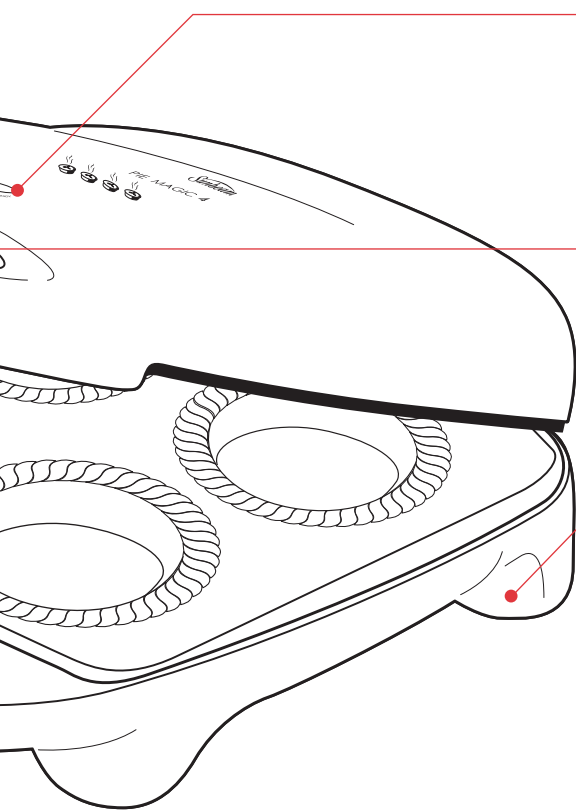

Power ON light.

Indicates that the pie maker is on and heating.

Securing latch.

Holds the pie maker closed, to seal the pies.

Rubber feet.

Holds the pie maker firmly in place and prevents it from scratching the benchtop.

An Introduction to your Sunbeam Pie Magic 4

Congratulations on the purchase of your Sunbeam Pie Magic 4.

Now you and the whole family can make golden brown, crispy pies at home, using your choice of delicious and imaginative fillings.

You will be amazed at the variety of pies you can make, chicken, beef, pork, vegetable and seafood pies, as well as fruit and sweet pies.

Your Sunbeam Pie Magic 4 is so versatile you can even make muffins, cup cakes, quiche and cheesecakes.

With your Sunbeam Pie Magic 4, you can turn any ingredients, left-overs or canned food into delicious pies – great for appetisers, meals, desserts, supper or snacks.

Make up to four perfect pies every time ... it's magic!

Note: During cooking, you may notice a whistling sound. This is normal and is due to steam escaping from the pies.

Before using your Sunbeam Pie Magic 4

Before using your Sunbeam Pie Magic 4 for the first time, the non-stick plates must be seasoned to protect the non-stick surface.

Plug the power cord into a 230/240 volt power outlet and turn the power ON. Preheat the pie maker for 5 minutes. Season the plates by applying a thin coat of cooking oil onto the surface and rub in with paper towelling.

Alternatively add oil to paper towelling and rub over the cooking plates.

After this initial seasoning, there is no need to season the plates after each use as the pastry leaves the plates slightly seasoned.

Note: When using your Sunbeam Pie Magic 4 for the first time, you may notice a fine smoke haze being emitted. This is normal and is due to the initial heating of the internal components.

Making pies in your Sunbeam Pie Magic 4

What type of pastry can be used?

There is a wide selection of ready rolled pastry available in your supermarket freezer, such as shortcrust, puff, butter puff and wholemeal pastry. These pastries give great results and are handy to keep in your freezer.

We recommend using Puff Pastry for the top combined with a Shortcrust Pastry for the base.

However, shortcrust pastry or puff pastry can be used for both the tops and bases of your pies.

For a light and more buttery taste, use butter puff pastry for your pastry top, combined with a shortcrust pastry for your base. This combination is ideal for desserts. Homemade pastry can also be used.

Preheat the Pie Magic 4 for 5 minutes, and defrost your frozen ready rolled pastry while preparing your pies.

Cutting the pastry.

Use the special pie cutter provided to cut the pastry tops and bases for your pies. The small cutter is for the top and the large cutter is for the base. See Figure 1.

To cut your pastry pieces, position the cutter on a flat sheet of pastry and cut by pressing down into the pastry. Ensure the cut is smooth around the edges.

Note: For best results, frozen pastry should be used as soon as it is thawed.

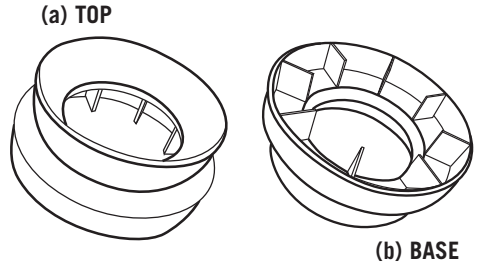 


Figure 1

Forming the pastry.

Using both hands, overlap the pastry slits by approximately 15mm. See Figure 2. Press the slits gently to ensure they join properly.

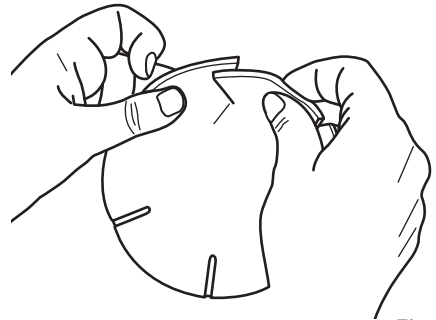 


Figure 2

Continue overlapping pastry slits until a pastry base is formed. See Figure 3.

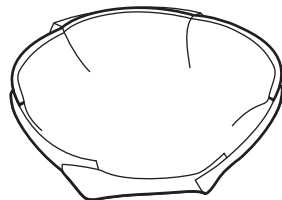 


Figure 3

Making pies in your Sunbeam Pie Magic 4 continued

Place the pastry base in the preheated pie maker and carefully press into the base. See Figure 4.

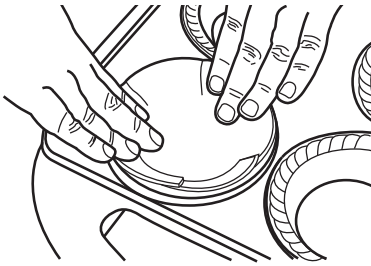 


Figure 4

Caution: Only touch the pastry as the pie maker will be very hot.

Adding the filling.

Any ingredients you have in your kitchen, left-overs and canned food make tempting pie fillings.

Pre-cook your pie fillings, particularly if using fresh meat or vegetable ingredients. Ingredients such as fruit and canned food can be used without pre-cooking.

Ensure all ingredients are cut into small and even pieces to allow them to heat through.

Note: Do not use liquid ingredients such as sauces, gravies and custard on their own or in large amounts, as they will overflow and make the pastry soggy. Always combine with solid ingredients.

Spoon your pre-cooked filling into the pastry base. As a general rule, use $\frac{1}{3}$ cup of filling, per pie. Do not overfill your pies.

For more recipes see “101 Great Pie Ideas” recipe booklet provided with your Sunbeam Pie Magic 4.

Cooking the pies.

Place the pastry tops over the filling and close the lid. Cook the pies for approximately 6 minutes. If you prefer extra browning, we recommend you cook for 8 minutes.

Note: During cooking you may notice a whistling sound. This is due to steam escaping from the pies.

Remove your pies using a plastic utensil.

DO NOT USE METAL UTENSILS AS THESE WILL SCRATCH THE NON-STICK SURFACE. Wipe the plates clean after making each pie.

Using left-over pastry.

Make more pies, garnishes and decorations with the left-over pastry.

Lightly knead the left-over pieces into a ball and roll out to approximately 3mm thick.

Hint: It is easier to roll pastry between 2 sheets of grease proof paper.

To make garnishes and decorations, cut the pastry into any shape, such as leaves.

Place the shape on the pastry top before closing the lid.

Note: It is recommended that only shortcrust ready rolled pastry be re-rolled. Also, keep the pastry covered to prevent drying and cracking.

Making pies in your Sunbeam Pie Magic 4 continued

Pre-cutting pastry.

Pastry can be pre-cut and stored in the freezer so that anyone can make pies at their convenience. After cutting up the pastry, separate each piece with a layer of plastic. Cover completely with plastic and return to the freezer.

Using bread.

Bread can be used as a substitute for pastry. The best results are achieved using sandwich bread. Avoid using toast style bread as it is too thick.

Cut the pie tops and bases using the cutter and trim the crusts.

Spread one side of the bread with butter or margarine. Make the pies as previously instructed, with the buttered side of the bread on the outside to prevent sticking. Cook for 6 minutes.

Hint: Avoid using liquid fillings as they tend to make the bread soggy.

Note: When using a non-pastry base in your pie maker it will be necessary to season the plates with a little oil, butter or margarine

Defrosting and reheating pies

Defrosting.

Room temperature: pies will defrost in approximately 1 hour.

Microwave oven (700W): defrost each pie for approximately 5 minutes on defrost setting.

Reheating.

Pie maker: Preheat the pie maker for 5 minutes (or until the light goes off).

Thawed pies – heat for approximately 6-8 minutes.

Do not heat frozen pies in the pie maker.

Oven: Preheat oven to 180°C.

Frozen pies – heat for 40-45 minutes.

Thawed pies – heat for 15-20 minutes.

Microwave oven (700W): Cook on high for approximately 2 minutes per pie after defrosting.

Note: The pastry will be soft and moist.

Care and Cleaning

Always use a plastic utensil to lift the pies from the pie maker.

Do not use metal utensils as these will scratch the non-stick surface.

To clean after use.

Always turn the power OFF and remove the plug before cleaning.

Do not immerse the pie maker in water or any other liquid.

Do not use abrasives or metal scourers as they will scratch the non-stick plates and the exterior surface.

To clean the non-stick plates.

Wipe over the plates with a dampened cloth.

To clean the exterior.

Wipe over with a dampened cloth and polish with a soft dry cloth.

To clean cooked on stains.

Should your pie maker require additional cleaning of stubborn build up and stains, the following cleaning method is recommended:

Combine: 2 tablespoons bicarbonate of soda and 2 teaspoons bleach.

1. Preheat the pie maker for approximately 1-1½ minutes.
2. Turn the power OFF and remove the plug. Brush the above paste solution onto the non-stick surface. Allow to stand for 1-2 hours.
3. Using a soft, dampened sponge with a mild household cleaner (not abrasive), vigorously wipe the non-stick surface.

Clean in a well ventilated area and avoid breathing in the vapours.

Before using your pie maker again, re-season the non-stick surface by applying a little oil, butter or margarine.

'Sunbeam' and 'Pie Magic' are registered trademarks of Sunbeam Corporation.

Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 12 Month Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2005.

ABN 45 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand 0800 786 232

The Sunbeam logo is located in the top left corner. It features the word "Sunbeam" in a white, elegant cursive font, set against a solid red rectangular background.

Consumer Hotline


Australia

1800 025 059

New Zealand

0800 786 232

www.sunbeam.com.au

 is a registered Trademark of Sunbeam Corporation Limited. ABN 45 000 006 771.

© Sunbeam Corporation Limited 2005.