


**⚠ WARNING**  
 All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by Qualified Service Personnel.

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	545191801	Assy-Switch Wire	20.	530016152	Wingnut - 1/4-20
2.	545187602	Housing-Throttle (RH)	21.	537419303	Housing
3.	530016449	Screw M4 x 1.75	22.	537419901	Adapter
4.	530015805	Screw 10-14 x 1/2	23.	537338801	Spring
5.	545190001	Spring-Trigger	24.	545080801	Assy - Spool
6.	545008073	Kit - Trigger (Incl. 5)	25.	545003365	Kit - Cover and Eyelet
7.	530015786	Bolt - 1/4-20 x 2	26.	537419601	Knob
8.	545199301	Assy - Throttle Cable	27.	952701717	Accy. - TNG 7 Cutting Head (Incl. 21,22,23,24,25,26)
9.	545187502	Housing-Throttle (LH)			
10.	545030601	Kit-Switch	<b>Not Shown</b>		
11.	530058583	Assy - Handle Assist (Incl. 7,12)	545186845	Manual	
12.	530016152	Wingnut - 1/4-20	545209101	Decal-Shaft Warning (lower)	
13.	545003366	Kit-Driveshaft Upper (Incl.#14)	✓ 545167716	Decal-Shaft Warning (upper)	
14.	530016344	Screw - 12-24 x .480			
15.	545024301	Kit-Driveshaft Lower			
16.	530071824	Kit-Shield (Incl. 17,18,19,20)			
17.	530052287	Limiter-Line			
18.	530015814	Screw - 10-14 x 3/4			
19.	530015820	Bolt - 1/4-20 x 1-1/4			

✓ = New Part Number For This IPL

★ = Refer to the Service Reference Indicated for more information. (Located at the END of the IPL)

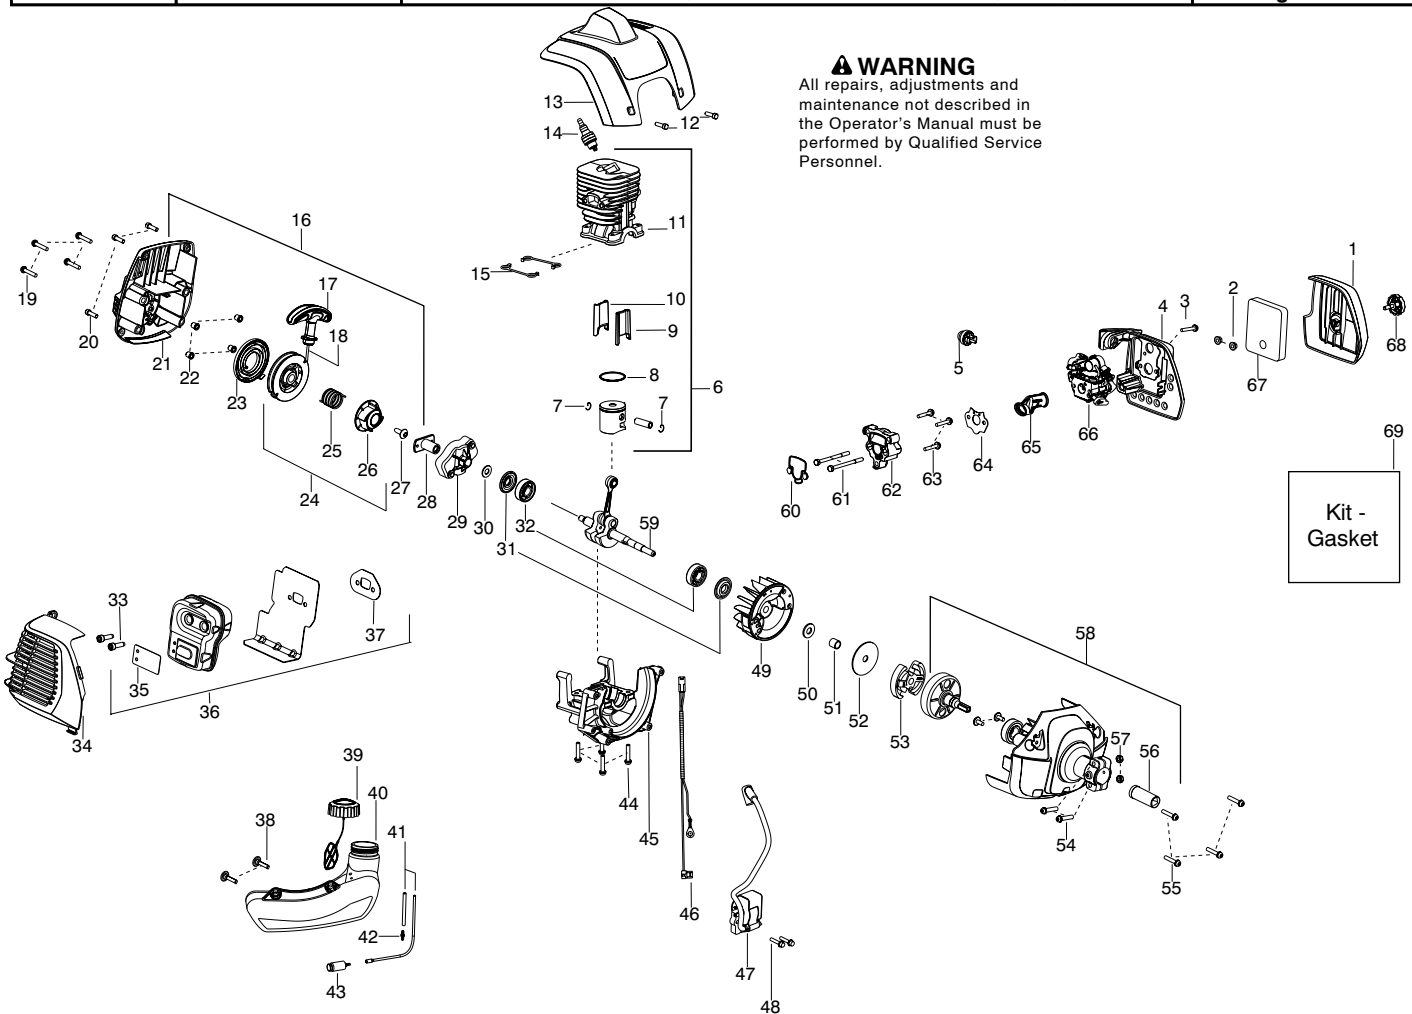

Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1.	545177001	Cover-Airbox	24.	545008049	Kit-Pulley(Incl 25,26)	46.	545191601	Assy-Leadwire
2.	530016101	Nut-Carb. Screw	25.	545188301	Spring-Starter Hub	47.	545189701	Module-Ignition
3.	530016301	Screw 8-32	26.	545188001	Hub-Starter	48.	530016357	Screw 8-32
4.	545176901	Base-Airbox	27.	545112801	Screw M6	49.	545120401	Assy-Flywheel
5.	530047721	Purge Bulb	28.	545188201	Coupling-Starter	50.	530016463	Washer
6.	545008046	Kit-Piston/Cyl. (Incl. 7,8,9,10,11)	29.	545188701	Assy-Starter Cup	51.	530057852	Spacer-Flywheel
7.	545194801	Retainer-Piston pin	30.	530015828	Washer-Flat	52.	530094189	Washer-Clutch
8.	545194601	Ring-Piston	31.	545008044	Seal-Crankshaft (kit)	53.	545008038	Kit-Clutch Assy.
9.	545194901	Insert-Front Transfer Port	32.	545013401	Bearing-Crankshaft	54.	530015774	Screw 10-24 x 1"
10.	545195001	Insert-Rear Transfer Port	33.	530058982	Bolt-Muffler	55.	530015897	Screw M5 x 25mm
11.	545181801	Cylinder-Machined	34.	545156301	Guard-Muffler	56.	545186401	Guide-Clutch Drum
12.	530016449	Screw M4 x1.75 x 16mm	35.	545008070	Kit-Spark Arrestor	57.	530015768	Locknut 10-24
13.	545156401	Cover-Top	36.	545180701	Assy-Muffler (Incl. 33,35,37)	58.	545190801	Assy-Fan Hsg (Incl.54,56,57)
14.	952030249	Spark Plug (RCJ- 6Y)	37.	545008044	Gasket-Muffler (kit)	59.	545008047	Kit-Crankshaft
15.	545008044	Seal-Cylinder(Kit)	38.	530016445	Screw-Tank Retainer	60.	545008044	Seal-Cyl./Adapter (kit)
16.	545190701	Assy-Shroud Rear (Incl. 17,18,21,22,23,24,27)	39.	545215901	Assy-Fuel Cap w/ret.	61.	530016418	Bolt M5 x .80
17.	545208401	Handle-Starter	40.	545182101	Assy-Tank (Incl. 39,41,42,43)	62.	545194501	Adaptor-Carburetor
18.	545029901	Kit-Rope	41.	530069599	Kit-Fuel line	63.	530016441	Screw .20 x 32
19.	530015897	Screw M4 x .8 x 25mm	42.	530023877	Fitting-Fuel Line	64.	545008044	Gasket-Carb./Adapter(kit)
20.	530016449	Screw M4 x 1.75 x 16mm	43.	530095646	Assy-Fuel Pickup	65.	545190501	Boot-Carb.
21.	545190601	Housing-Starter w/eyelet	44.	530015897	Screw-m5x25mm	66.	545008042	Kit-Carburetor
22.	545185301	Spacer	45.	545181901	Crankcase	67.	545195901	Filter-Air
23.	545008013	Kit-Starter Spring				68.	545188801	Assy-Airbox Knob
						69.	545008044	Kit - Gasket (Incl. 15,31,37,60,64)

✓ = New Part Number For This IPL

★ = Refer to the Service Reference Indicated for more information.(Located at the END of the IPL)