 


**JLFZWI810**

**Freezer**

Instruction manual



**John Lewis**

# Important safety information

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.

These warnings have been provided in the interest of safety. You **MUST** read them carefully before use of installation by a qualified person. If you are unsure of the meanings of these warnings contact the John Lewis branch from which you purchased the appliance.

## Installation

- Any electrical work required to install this appliance should be carried out by qualified and competent personnel to the relevant National Standards .
- This appliance is heavy. Care should be taken when moving it.
- Do not attempt to modify this product in any way.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.  
**Important:** if the supply cable is damaged, please contact our extended warranty administrators who will put you in touch with your local Service Force Repair Centre for further advice.
- The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle.
- Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation as stated in the installation instructions.

## Child safety

- This appliance is designed to be operated by adults.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children.

## General safety

- This appliance contains hydrocarbons in its cooling unit; maintenance and recharging must therefore only be carried out by authorised technicians.
- Take utmost care when handling your appliance so as not to cause any damages to the cooling unit with consequent possible fluid leakages.

- The appliance must not be located close to cookers, radiators or boilers.
- Avoid prolonged exposure of the appliance to direct sunlight.
- Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances.

## Use

- This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs.
- Frozen food must **NOT** be re-frozen once it has thawed out.
- Do not place carbonated or fizzy drinks in the freezer.
- Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Ice lollies can cause 'frost/freezer burns' if consumed straight from the freezer.
- Manufacturers' storage recommendations should be strictly adhered to. Refer to relevant instructions.

## Maintenance and cleaning


- Switch off and unplug the appliance before carrying out any cleaning or maintenance work.

## Service

- This product should be serviced by an authorised engineer and only genuine spare parts should be used.



## Environmental information

- After installation, please dispose of the packaging with due regard to safety and the environment.
- When disposing of an old appliance, make it unusable, by cutting off the cable. Remove any door catches, to prevent small children being trapped inside.
- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

# Contents

## For the User

<b>Important Safety Information</b>	2
<b>Description of the appliance</b>	5
<b>Control panel</b>	6
When the Freezer is first installed	6
Temperature control	7
Functions menu	7
Ambient temperature function	7
Child lock function	7
Eco mode function	7
Action freeze function	7
Drinks chill function	8
<b>Using the freezer</b>	9
Before use	9
Frozen food storage	9
Excessive temperature alarm	10
Thawing	10
Making ice cubes	10
Cold accumulators	10
Normal operation sounds	10
<b>Hints and Tips</b>	11
<b>Maintenance and Cleaning</b>	12
Internal cleaning	12
When the appliance is not in use	12
External cleaning	12
Defrosting	12
<b>Something Not Working</b>	13
<b>Repairs - After Sales Service</b>	14

## For the Installer

<b>Installation</b>	15
<b>Technical Specification</b>	15
<b>Electrical Connection</b>	16
Positioning	17
Rear spacers	17
Door Reversibility	18

## Guide to use the instruction manual

The following symbols will be found in the text to guide you throughout the instructions:

 **Safety instructions**

 **Hints and tips**

 **Environmental information**




This appliance complies with the following **E.E.C. Directives:**


- \* **73/23 - 90/683** (Low Voltage Directive);
- \* **93/68** ("General Product Safety Directive");
- \* **87/308** (Radio Interference Suppression);
- \* **89/336** (Electromagnetic Compatibility Directive) and subsequent modifications.

# Description of the appliance

- 1 Control panel
- 2 Freezing fresh food compartment
- 3 Frozen food storage compartments

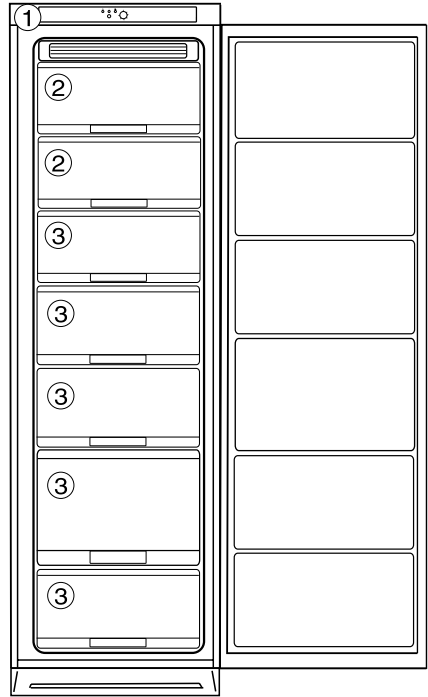

# The control panel

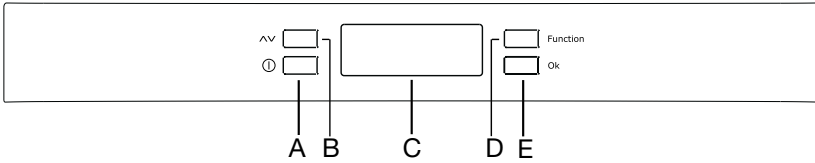

- A - Appliance button ON/OFF
- B - Temperature regulation button
- C - Temperature and function indicator

- D - Function button
- E - Confirmation button

## Display



- Excessive temperature alarm
- If on, the temperature indicated is the ambient temperature
- Negative Temperature indicator
- Temperature indicator

- If on, the Child Lock function is on
- If on, the timer function is on
- If on, the Quick Chill function is on
- If on, the Action Freeze function is on
- If on, the Eco Mode function is on

## When the freezer is first installed

### **Warning**

**Allow the appliance to stand for 2 hours after installation.**

After inserting the plug into the power outlet, if the display is not illuminated, press key (A), to turn the appliance on.

As soon as the appliance is turned on, it is in alarm condition, the temperature flashes and you will hear a buzzer.

Press key (E) and the buzzer will go off (also see the section on "excessive temperature alarm") the icon

still flashes and the warmest temperature reached will appear on the display .

For the correct storage of the food select the Eco Mode function that guarantee the following

temperature is set:

-18°C in the freezer

- Wait until the inside compartment temperature reach -18°C, before introducing the goods in the freezer compartment.
- To select a different temperature see "Temperature regulation".

The appliance is shut off by pressing key (A) for more than 1 second. During this, a countdown of the temperature from -3 -2 -1 will be shown.

## Temperature regulation

The temperature may be regulated by pressing the key B.

By pressing the key B the current temperature setting flashes on the indicator.

To confirm the choice of temperature press the key E. You will hear the buzzer for a few seconds and the indicator displays the newly selected temperature for a few seconds then shows the interior temperature again.

The newly selected temperature will be reached after 24 hours.

The temperature will remain stored even if the appliance is not in use.



### Attention!

Following first start up, the temperature displayed can not correspond to the set temperature. During this time it is possible that the temperature displayed is different from the actual temperature.

## Functions menu

The functions menu is accessed by pressing the key D.

Each function can be confirmed by pressing button E. If there is no confirmation after a few seconds the display will go out from the menu and return to normal condition.


The following functions are indicated:

 Ambient Temperature


 Child Lock function

 Eco Mode function

 Action Freeze function

 Drinks Chill function

## Ambient temperature function

The ambient temperature function is activated by pressing key D (several times if necessary) until the corresponding icon appears .


In this condition the displayed temperature is the ambient temperature.

You must confirm the choice by pressing key E within few seconds. You will hear the buzzer and the icon remains illuminated.

It is possible to de-activate the function at any time by pressing key D until the corresponding icon flashes and pressing key E.

## Child lock function

The Child Lock function is activated by pressing key D (several times if necessary) until the

corresponding icon appears .


You must confirm the choice by pressing key E within a few seconds. You will hear the buzzer and the icon remains illuminated.

When the Child Lock function is activated, the programmed temperatures and settings remain, even if any of the keys are pressed.

It is possible to de-activate the function at any time by pressing key D until the corresponding icon flashes and then pressing key E.

## Eco mode function

The Eco Mode function is activated by pressing key D (several times if necessary) until the

corresponding icon appears  (or setting the temperature at  $-18^{\circ}\text{C}$ ).

You must confirm the choice by pressing key E within few seconds. You will hear the buzzer and the icon remains illuminated.

In this condition the chosen temperatures are automatically set ( $-18^{\circ}\text{C}$ ), in the best conditions for storing food.

It is possible to de-activate the function at any time by changing the selected temperature in the compartment.


## Action freeze function

The freezer compartment is suitable for long term storage of commercially frozen and deep-frozen food, and for freezing fresh food.


The maximum quantity of foods to freeze in 24 hours is shown on the rating plate.

To freeze the amount of food indicated on the rating plate, place the food directly in touch with the cooling surface (remove the drawer or basket).


In case the food is frozen inside the drawers or baskets, the maximum quantity is slightly reduced.

To freeze fresh foods, you will need to activate the Action Freeze function. Press key D (several times if necessary) until the corresponding icon appears .

You must confirm the choice by pressing key E within few seconds. You will hear the buzzer and some animation with lines will appear on the display. After a pre-cooling period of 24 hours, place the foods in the freezer.

Place the food to be frozen in the  compartment, as this is the coldest point.

The freezing process takes 24 hours. During this period do not put other foods in the freezer.

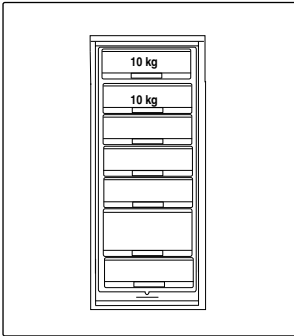


This function stops automatically after 52 hours.  
It is possible to de-activate the function at any time by pressing key D until the corresponding icon flashes and then pressing key E.

## Quick chill function

The Quick Chill function is used for the rapid cooling of drinks.

 



Put the drinks on the Quick Chill shelf and open the air lever to the maximum position.

The Quick Chill function is activated by pressing key D (several times if necessary) until the corresponding icon appears .

You must confirm the choice by pressing key E within few seconds. You will hear the buzzer and the icon remains illuminated.

In this mode, it sets a timer with a default value of 30 mins, which can be changed from 1 - 90 mins by pressing key B.

At the end of the selected time there are the following indications:

- On the display  the symbol  flashing ;
- The icon  flashing ;
- The icon  flashing;
- An acoustic alarm sounds until key E is pressed.

At this point remove the drinks contained in the freezer compartment.

It is possible to de-activate the function at any time by pressing key D until the corresponding icon flashes and then pressing key E.




# Using the freezer
 
## Before use

Remove all securing tapes. Wash inside the appliance with lukewarm water and bicarbonate of soda (5 ml to 0.5 litre of water).

**Do not use soap or detergent as the smell may linger. Dry thoroughly.**

**The freezer has the symbol  which means that it is suitable for freezing fresh food and for long term storage of frozen and deep-frozen food.**

The temperature may be regulated between -15°C and -24°C.

We suggest setting the internal temperature to approximately -18°C, which guarantees proper freezing and conservation of the frozen foods.



### Attention!

Following first start up, the temperature displayed can not correspond to the set temperature. During this time it is possible that the temperature displayed is different from the actual temperature.



### Attention!

A difference between the temperature displayed and the actual temperature is normal. Especially when:

- A new setting has recently been selected
- The door has been left open for a long time
- Warm food has been placed in the compartment


A difference of 5°C inside the compartment is quite normal.

During normal functioning the indicator shows the warmest temperature inside the compartment.

## Frozen food storage

When first starting-up or after a period out of use, before putting the products in the compartment let the appliance run for at least 12 hours.

To obtain the best performance from this appliance, if large quantities of food are to be stored, remove all drawers and baskets (except for the last one at the bottom) and place food on cooling shelves.

Pay careful attention not to exceed the load limit stated on the side of the upper section (where applicable). 

Do not exceed the storage period indicated by the manufacturer.

Finally, do not open the door frequently or leave it open longer than is absolutely necessary.



### Warning

Do not put carbonated liquids, (fizzy drinks etc.), in the freezer.

Ice lollies, if consumed immediately after removal from the freezer, can cause low temperature skin burns.

Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or “frost/freezer burns”.

 


### Important

In the event of a power cut the food in the freezer will not be affected if the power cut is short and if the freezer is full. Do not open the door. Should the food begin to thaw, it must be consumed quickly and must not be re-frozen .

## Excessive temperature alarm


An increase in the temperature in a compartment (for example due to a power failure) is indicated by:

- Flashing temperature;
- Flashing of the icon ;
- Sounding of buzzer.

When normal conditions are restored:

- The acoustic signal shuts off;
- The temperature value continues to flash;

When you press key "E" to de-activate the alarm, the highest temperature reached appears on display

 for a few seconds. It then returns to the normal operation showing the selected temperature.

During the alarm phase, the buzzer can be switched off by pressing key E.

## Thawing

Deep-frozen or frozen food, prior to being used, can be thawed in a refrigerator or at room temperature, depending on the time available for defrosting.

Small pieces may even be cooked still frozen, directly from the freezer: in this case, cooking will take longer

## Making ice cubes

The appliance is supplied with one ice tray.

Fill the tray 3/4 full to give the ice space to expand and place it in the freezer.

To release the ice cubes simply give the tray a slight twist.

Do not use sharp or metallic instruments to remove the ice tray from the freezer.

## Cold accumulators

2 cold accumulators are supplied in the freezer; these increase the length of time for which food will keep in the event of a power failure or breakdown. They must be placed in the top drawer.

## Normal operating sounds

- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped through the coils or tubing at the rear, to the cooling plate/evaporator or to the fixed freezer shelves.
- When the compressor is on, the refrigerant is being pumped round, and you will hear a whirring sound or pulsating noise from the compressor.

# Hints and tips

## Food storage

- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best.
- Avoid buying frozen food if you cannot store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- The symbols on the drawers show different types of frozen goods. The numbers indicate storage times in months for the appropriate types of frozen goods. Whether the upper or lower value of the indicated storage time is valid depends on the quality of the foods and pre-treating before freezing.

## Energy saving advice

- Do not install the cabinet close to sources of heat, i.e. boiler or radiator.
- Locate the appliance in a cool well ventilated room and make sure that the air openings of the cabinet are not obstructed.
- Avoid unnecessary frosting in the cabinet by packing all foodstuffs into airtight packages before placing them in the freezer.
- Always leave warm food to cool down to room temperature before placing in the freezer.
- Food which is to be frozen (when cool) should be placed in the fridge before being transferred to the freezer.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.

## In the event of a power failure

If there is a power failure during the storage of frozen foods, keep the door closed. If the temperature within your freezer should rise do not refreeze the food without checking its condition. The following guidelines should assist you.

### **Ice Cream:**

Once thawed should be discarded.

### **Fruit and Vegetables:**

If soft should be cooked and used up.

### **Bread and Cakes:**

Can be refrozen without danger.

### **Shellfish:**

Should be refrigerated and used up quickly.

### **Cooked Dishes:**

i.e. casseroles, should be refrigerated and used up.

### **Large Pieces of Meat:**

Can be re-frozen providing there are ice crystals remaining within them.

### **Small Joints:**

Should be cooked and used up quickly.

### **Chicken:**

Should be cooked and re-frozen as a fresh dish.

# Maintenance and cleaning

Before any maintenance or cleaning work is carried out, **DISCONNECT** the appliance from the **ELECTRICITY** supply.

## Internal cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0.5 litre of water). Rinse and dry thoroughly.




**NEVER USE DETERGENTS, ABRASIVE POWDERS, HIGHLY PERFUMED CLEANING PRODUCTS OR WAX POLISHES, TO CLEAN THE INTERIOR AS THESE WILL DAMAGE THE SURFACE AND LEAVE A STRONG ODOUR.**

## When the appliance is not in use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all foods and clean the appliance, leaving the doors ajar to prevent unpleasant smells.

## External cleaning

Once or twice a year dust the condenser (black grill) and the compressor at the back of the appliance, with a brush or vacuum cleaner, see figure, as an accumulation of dust will affect the performance of the appliance and cause excessive electricity consumption.

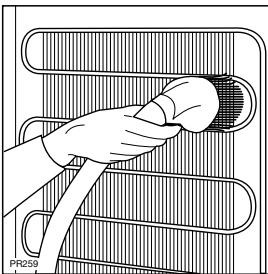

## Defrosting

Your appliance is frost free, which means there is no need to manually defrost your appliance as this will be carried out automatically.

# Something not working

If the appliance is not working correctly, please carry out the following checks, before contacting your local Service Force repair agent.

**IMPORTANT:** If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

<b>SYMPTOM</b>	<b>SOLUTION</b>
<ul style="list-style-type: none"> <li>■ No power to the appliance</li> </ul>	<ul style="list-style-type: none"> <li>◆ Check there is power at the socket.</li> <li>◆ Check there is not a power cut by checking the household lights.</li> <li>◆ Check the fuse has not blown.</li> </ul>
<ul style="list-style-type: none"> <li>■ The temperature in the freezer section is too high</li> </ul>	<ul style="list-style-type: none"> <li>◆ Check the electronic control in the freezer is in the correct setting relative to ambient conditions.</li> <li>◆ Check the ambient temperature is within the appliance's operating limits, please refer to the installation section in this instruction book. Relocate the appliance if necessary.</li> </ul>
<ul style="list-style-type: none"> <li>■ The freezer door will not open</li> </ul>	<ul style="list-style-type: none"> <li>◆ Has door just been opened? If so leave for a few minutes to allow the air pressure to equalise.</li> </ul>
<ul style="list-style-type: none"> <li>■ The compressor runs continuously</li> </ul>	<ul style="list-style-type: none"> <li>◆ Check if the electronic control knob gives the correct temperature control. See "Setting the temperature".</li> <li>◆ Check that the door is closed.</li> <li>◆ Large quantities of food have recently been placed in the cabinet and/or door is frequently opened.</li> <li>◆ Check that air ventilation is not obstructed.</li> </ul>
<ul style="list-style-type: none"> <li>■ Excessive frost and ice has built up</li> </ul>	<ul style="list-style-type: none"> <li>◆ Ensure the door is not left open.</li> <li>◆ Check that nothing is preventing the door from closing</li> <li>◆ Is the door gasket intact and clean.</li> <li>◆ Has advised periodic defrosting been carried</li> </ul>
<ul style="list-style-type: none"> <li>■ Noise</li> </ul>	<ul style="list-style-type: none"> <li>◆ Refer to normal operating sounds.</li> </ul>

# Repairs - after sales service

Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Refer to your local Service Force Centre and always insist on genuine spare parts.

If your appliance is not performing satisfactorily; consult the fault finding guide within this instruction book (Something not working). In the event of a fault occurring which you cannot resolve yourself from advice given within this instruction manual your first step is to contact our extended warranty administrators on **0870 0107887** who will give you details for your local Service Force Repair Agent.

When contacting the repair agent, please quote the model (Mod.) and serial number (S.N.), both of which are shown on the rating plate located on the side of the oven door (see picture).

So that you always have these numbers at hand, we recommend you to make a note of them here:

Mod.: .....

PNC: .....

S.N.: .....

Your appliance is covered by a 3 year parts and labour guarantee (see separate details given at point of sale). Please retain your purchase receipt safely for the service engineer to verify the purchase details.


## Spare parts

This product should be serviced by an authorised service engineer, and only genuine spare parts should be used.

Under no circumstances should you attempt to repair the appliance yourself.

Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact our extended warranty administrators on **0870 0107887** who will give you details for your local Service Force Repair Agent.

Always insist on genuine spare parts.

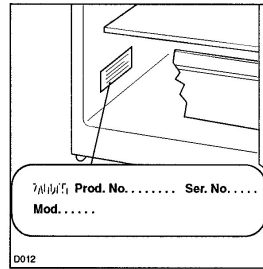

Manufacturer

Model

Energy Efficiency class

Energy Consumption kWh/year

Fresh food volume l Star Rating

John Lewis

JLFW1810


A


327


254



# Installation

 It is dangerous to alter the specifications or attempt to modify this product in any way.

 Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

 Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

## Technical data

Dimensions	
Height	1800 mm
Width	600 mm
Depth	645 mm
Freezer Gross capacity	266 litres
Freezer Net capacity	254 litres

## Rating

Supply voltage (50 Hz)	230-240 V
Connected load	1.7 A

# Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



---

**WARNING: THIS APPLIANCE MUST BE EARTHED.**

Should the appliance power supply cable need to be replaced, this must be carried out by a Service Force agent (see page 14). The manufacturer declines any liability should this safety measure not be observed.


---

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. (See picture on page 14).

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved BS 1363/A fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below. The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow	- Earth
Blue	- Neutral
Brown	- Live

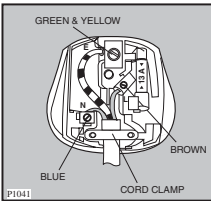

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug.

**Proceed as follows:**

1. Connect the Green and Yellow (earth) wire to the terminal in the plug which is marked with the letter "E" or the earth symbol  $\perp$  or coloured green and yellow.
2. Connect the Blue (neutral) wire to the terminal in the plug which is marked with the letter "N" or coloured black.
3. Connect the Brown (live) wire to the terminal in the plug which is marked with the letter "L" or coloured red.

4. Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

---

**WARNING:**

**A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard.**

**Ensure that the cut off plug is disposed of safely.**

---



**The plug must still be accessible after the appliance has been installed.**



**The appliance should not be connected to the electrical supply by means of an extension cable**

**WARNING!**

**The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre.**

**WARNING!**

**The power supply cable must be accessible after installing the machine**

## Permanent connection

In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.



## **Warning**

IF YOU ARE DISCARDING AN OLD APPLIANCE THAT HAS A LOCK OR CATCH ON THE DOOR, YOU MUST ENSURE THAT IT IS MADE UNUSABLE TO PREVENT YOUNG CHILDREN BEING TRAPPED INSIDE.

Depending upon the position which you choose for your appliance, you may wish to reverse the way in which the door opens. To do this, refer to instructions on “Door reversal directions”.

## Positioning

This appliance should only be installed at a location where the ambient temperature corresponds to the climate classification indicated on the rating plate, which is located at the left on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification:

SN +10°C to +32°C

N +16°C to +32°C

ST +18°C to +38°C

T +18°C to +43°C

It should be located in a dry atmosphere, out of direct sunlight and away from extreme temperature e.g. not next to a boiler or radiator, or in a very cold room e.g. an outhouse. If these temperatures are exceeded i.e. colder or warmer, then the appliance may not operate correctly.

### Important


It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

You should also ensure that air can circulate freely around the back and the top of the cabinet. There must also be at least 100 mm (4”) distance between the top of the cabinet and any overhanging kitchen furniture (A). Ideally, the appliance should not be positioned beneath overhanging furniture (B).

## Rear spacers

In the appliance, there are two spacers which must be fitted as shown in the figure.

Slacken the screws and insert the spacer under the screw head, then re-tighten the screws.


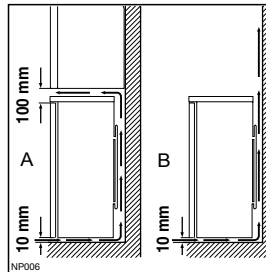


There should also be a gap of 25 mm either side of the appliance. Do not obstruct the space underneath. The back of the cabinet may be placed close to the wall but must not touch it. **DO NOT** install in places with restricted ventilation.

Adjust the level of the appliance by screwing out the adjustable foot, or feet, at the bottom of the cabinet using your fingers.

### Important

It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

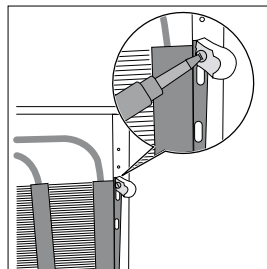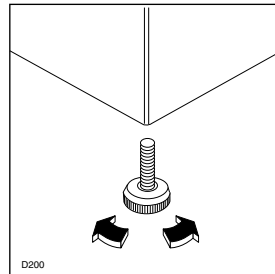


## Door reversibility

Before carrying out any operations, remove the plug from the power socket.

We suggest that this be done with another person who will keep a firm hold on the doors of the appliance during the operations.

Open the door with the appliance in the upright position. Unscrew the screws and remove the upper door plastic trim.

Remove the little plastic cover from the door plastic trim and refit on the opposite side (d).

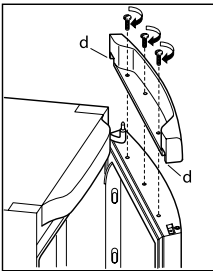


Lay the appliance onto its back side.

Remove the screw of the hinge cover plug (a).

Unscrew the upper hinge and remove it (b).


Unscrew the screw and remove the door stopper (c).

Remove the door.

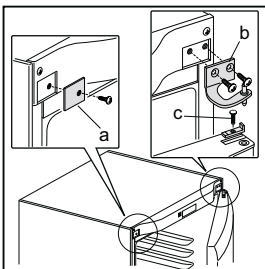

Remove using a tool the cover (e) unscrew the lower hinge pivot (f) and place it on the opposite side.

Reinsert the cover (e) on the opposite side.

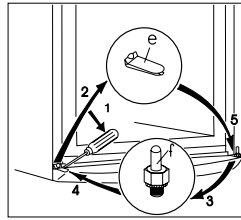

Reinsert the door .

Pay attention that the front board of the doors are parallel to the front board of the top.


Fix the door stopper on the opposite side.

Position and fix the upper hinge (that can be found in the instruction for use bag) on the opposite side .

Fix the screw of the new cover hinge (that can be found in the instruction for use bag).

Lift up the appliance to vertical position.

Open the door and reposition the upper door plastic trim with screws.

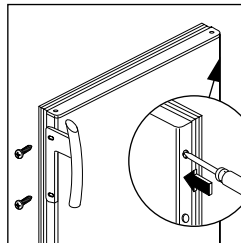

Fix the handle on the opposite side, insert the plastic plugs into the holes left open that can be found in the instruction for use bag.

**!** Reposition, level the appliance, wait for at least two hours and then connect it to the power socket.

In case you do not want to carry out the above operations, contact the nearest After Sales Service Force. The After Sales Service specialist will carry out the reversibility of the doors at your cost.

**!** **Warning**

**After having reversed the opening direction of the doors check that all the screws are properly tightened and that the magnetic seal adheres to the cabinet.**

**If the ambient temperature is cold (i.e. in Winter), the gasket may not fit perfectly to the cabinet. In that case, wait for the natural fitting of the gasket or accelerate this process by heating up the part involved with a normal hairdryer. Lay the appliance onto its back side.**



