

IR 901 Remote Control Instruction Guide, continued

Freeze On/Off

Pressing this button will toggle the Freeze mode On or Off. The Freeze mode freezes the output display.

Input Selection and Take

Press the **Input Selection** button to select the desired input. A subsequent input selection must be followed by pressing the **Take** button to select that input. The corresponding input button lights on the DVS 406's front panel.

Size


To adjust image size, press the \blacktriangle button to increase vertical size, the \blacktriangledown button to decrease the vertical size, the \blacktriangleleft button to increase horizontal size, or the \blacktriangleright button to decrease horizontal size.

Center

Press the \blacktriangleleft button to shift the image to the left, the \blacktriangleright button to shift the image to the right, the \blacktriangle button to shift the image up, or the \blacktriangledown button to shift the image down.

Image Adjustments

The + and - image adjustment controls (**Color**, **Tint**, **Brightness**, **Contrast**, **Detail**, and **Sharpness**) increment or decrement the image settings.

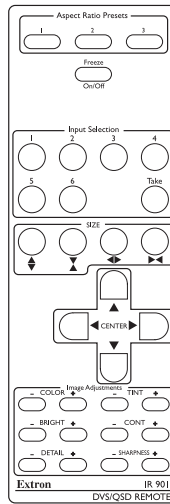

Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
800.633.9876 714.491.1500
FAX 714.491.1517


Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort, The Netherlands
+800.3987.6673 +31.33.453.4040
FAX +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Rd. #04-01
PM Industrial Bldg., Singapore 368363
+800.7339.8766 +65.6383.4400
FAX +65.6383.4664

Extron Electronics, Japan
Kyodo Building, 16 Ichibancho
Chiyoda-ku, Tokyo 102-0082
Japan
+81.3.3511.7655 FAX +81.3.3511.7656

IR 901 Remote Control Instruction Guide

Install two AAA batteries as shown at right.

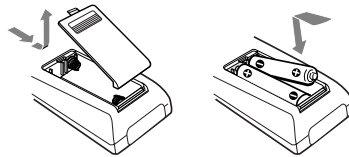

Operation

The buttons on the IR 901 duplicate the DVS 406's front panel controls for normal operation. The scaler responds to commands from the IR 901 as if that button or knob were pressed or rotated on the scaler. From a distance of no more than 30 feet, the IR 901 sends infrared (IR) signals to the DVS 406 via the scaler's front panel IR sensor.

NOTE The DVS 406 must be powered on and active **before** operating the IR 901. Setup operations cannot be performed from the IR 901.

Refer to the *DVS 406 User's Manual* for details.

Aspect Ratio Presets

Pressing any one of these three preset buttons will retrieve an input's saved aspect ratio presets (up to three).

