

**B&K Components, Ltd.**

**AVR101 series 100**

**AVR202 series 200**

**A/V Receiver**

**Owner's Manual**

B&K Components, Ltd., 2100 Old Union Road, Buffalo New York 14227-2725  
Phone (716)656-0026, Fax (716)656-1291, <http://www.bkcomp.com>, E-mail: [info@bkcomp.com](mailto:info@bkcomp.com)

p/n 12699 Rev. 9812C


# TABLE OF CONTENTS

<b>Acknowledgments</b> .....	1
<b>Safety Precautions</b> .....	2
<b>Features</b> .....	3
<b>The Basics</b> .....	4
<b>Front panel</b> .....	7
<b>Rear Panel</b> .....	8
<b>Making the connection</b> .....	9
Audio / Video connections .....	10
Digital Connections .....	11
Speaker outputs .....	12
Antenna Connections .....	13
Control outputs / IR Inputs .....	13
Frequently Asked Questions .....	14
<b>Setup</b> .....	16
The Menu System .....	16
User Preference Setup .....	17
Display Setup .....	17
Edit Preset Options .....	21
Surround Mode Operation .....	22
Setup/Configure .....	24
Speaker Size and Delay .....	24
Speaker Calibration .....	28
Source Levels .....	29
AM Tuner Settings .....	29
FM Tuner Settings .....	30
Memory Backup .....	31
<b>Operation</b> .....	32
Power On/Off .....	32
Sleep .....	32
Choosing a source .....	33
Tuner Operation .....	33
Adjusting the Volume .....	34
Temporary Level Adjustments .....	34
Surround Modes .....	35
Overrides .....	37
Presets .....	38
Getting receiver Status .....	39
Zone 2 Operation .....	40
<b>Advanced Features</b> .....	41
Advanced Security Options .....	41
Zone Configuration .....	42
Z1 Setup .....	42
Z2 Setup .....	44
Power On Titles .....	46
Control Out Setup .....	46
Factory Reset .....	48
<b>Troubleshooting</b> .....	49
<b>Receiver Specifications</b> .....	50
<b>The Menu System</b> .....	51
<b>Rear Panel Enlarged View</b> .....	52
<b>Notes</b> .....	53
<b>Limited Warranty</b> .....	55
<b>Returning Equipment</b> .....	55

# ACKNOWLEDGMENTS

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "AC-3", and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

DTS® is a registered trademark of Digital Theater Systems, LLC. Additionally licensed under the following US Patent 5,451,942 & National Patent applications derived from PCT/US95/00959. Additional U.S. and Foreign Patents pending. "DTS", "digital sound", and "coherent acoustics" logos are trademarks of DTS Technology LLC. All rights reserved.

Motorola®, , "Powered by Motorola"™, Motorola name and logo are registered trademarks of Motorola, Inc.

***The AVR101 series 100 may be used to process Dolby Pro Logic and Dolby Digital***

***The AVR202 series 200 may be used to process Dolby Pro Logic, Dolby Digital, and DTS.***

**Accessories included:** Owners manual, Remote control Manual, Power cord, Remote control, 4-AAA batteries

© Copyright 1998 All Rights Reserved.  
B&K Components, Ltd., 2100 Old Union Road, Buffalo New York 14227-2725  
Phone (716)656-0026, Fax (716)656-1291, <http://www.bkcomp.com>, E-mail: [info@bkcomp.com](mailto:info@bkcomp.com)



# SAFETY PRECAUTIONS



## PLEASE READ BEFORE INSTALLING

**WARNING:** to prevent fire or shock hazard, do not expose this unit to rain or moisture. Care should be taken to prevent objects or liquid from entering the enclosure. Never handle the power cord with wet hands.

The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may constitute a risk of electric shock to you.

The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

**Caution:** To prevent the risk of electric shock, do not remove cover. No user-serviceable *parts inside*. Refer servicing to *qualified service personnel*.

If an outdoor antenna is connected to the antenna input, be sure it is grounded to provide some protection against voltage surges and built up static charges. Keep the outdoor antenna away from power lines.

Unplug the receiver from the AC outlet when plugging in or unplugging cables, when left unused for an extended period of time, moving the receiver, or when you suspect lightning in your area.

Prevent damage to the power cord. Do not bend, pull, place objects on, alter, etc. Replace the power cord if it becomes damaged. Always grasp the plug on the power cord when plugging in or unplugging the receiver from the AC outlet.

Your system may produce sound levels capable of causing permanent hearing loss. Do not operate for extended periods of time at high volume levels.

Make sure the receiver is placed on a level surface.

Protect the receiver from impact. (Do not drop it!!!)

Do not climb on top of the receiver or place heavy objects on its top cover.

The receiver is equipped with raised feet to provide ventilation, reduce acoustic feedback, and provide protection against scratching the surface the unit is resting on. We advise against removing or altering feet.

Do not stack anything on top of the receiver (processor, source, etc.) Leave a minimum of 3" clearance from the top of the receiver to the next shelf (or component).

The receiver should be located away from heat sources such as heaters or amplifiers.

Do not perform any internal modifications to the receiver.

Always connect the receiver's power cord to an unswitched AC outlet for normal operation.

If young children are present, adult supervision should be provided until the children are capable of following all rules for safe operation.

Do not plug the receiver's power cord into an outlet with an unreasonable number of other devices. Be careful if using extension cords and ensure the total power used by all devices does not exceed the power rating (watts/amperes) of the extension cord. Excessive loads may cause the insulation on the cord to heat and possibly melt.

Mistaking **CONTROL OUTPUT** or **IR INPUT** connectors for audio/video inputs or outputs may damage your receiver or other components.

Damage can occur to your speakers if the power rating of each individual driver is exceeded by the receiver. Ensure that all the drivers in your system are capable of handling not only the average power being delivered by the receiver, but also the peak power that is likely to be generated during strong passages. If you are unsure of your speaker's power rating, contact the speaker manufacturer or the dealer where you purchased them.

The receiver should be serviced by qualified personnel when:

- The receiver is not functioning properly.
- Objects have entered the chassis.
- The receiver was exposed to rain or other type of moisture.
- The receiver was dropped, or the chassis is damaged.

# FEATURES

Your new receiver is a versatile audio/video control center. The receiver is designed to sound sensational and be an attractive, easy-to-use addition to your audio/video system. Although you already have a good idea of your receiver's features, we would like to take a moment to point out certain highlights.

**Remote Control** - easy control of your B&K equipment.

**Front Panel Operation** - nearly all functions can be controlled directly from receiver.

**Two-zone operation** - complete digital/analog preamp/processor for zone 1 plus fully independent analog preamp for second listening/viewing area.

**Plug and Play operation** - automatically selects the optimum input and surround sound format.

**A/V presets** - 20 preset memories allow instant recall of user settings.

**Customized input and A/V preset names** - assign names to presets, inputs, or the turn on message.

**Internal Digitally Synthesized AM/FM Stereo tuner** - stores 20 AM and 20 FM channels.

**Analog inputs/outputs** - seven A/V inputs and five A/V outputs **all** with stereo audio, composite video and S-video plus one set of 5.1 channel surround outputs

**Digital inputs/outputs** - seven coaxial inputs and one coaxial output plus five optical inputs and one optical output.

**Control Outputs** - four 12 VDC @ 50 mA outputs for controlling external systems such as a projection screen or B & K amplifier.

**IR inputs/outputs** - two IR inputs and up to four IR outputs let you integrate the receiver with an infrared repeater control system.

**Gold Plated Connectors** - better sound with minimum signal loss and degradation.

## **State-of-the-art power amplifier section -**

- Toroidal transformer and computer-grade electrolytic capacitors combine to provide for improved dynamics and extended low frequency control.
- Discrete Circuitry for more accurate, 3-dimensional reproduction.
- Class A Predriver improves low level detail for smoother, more musical sound.
- AB MOSFET Output Stage for efficient and linear power delivery.

**Upgradable** - modular design allows for future A/D, D/A, digital receiver, DSP and bass management enhancements.

# THE BASICS

The following is intended to familiarize users with common terms and applications of Home Theater equipment.

**Sources** - your receiver can directly provide audio from its built-in AM/FM tuner. It can also provide limited video from its on-screen menu system. Typically you will want to connect a number of additional sources (VCR, DVD player, etc.) to your receiver. Your receiver is designed to accommodate a wide range of audio and video signals.

The following table lists the most popular home theater media and how the audio information is stored.

Source Media	Analog	PCM	Dolby Digital	DTS
Audio Cassette	X			
Video Cassette	X			
Laserdisc (LD)	X	X	X	X
Compact Disc (CD)		X	X	X
Digital Versatile Disc (DVD)		X	X	X
Satellite Broadcast	X	X	X	
Digital Audio Tape (DAT)		X	X	X
Digital Compact Cassette (DCC)		X (compressed)		
Minidisc (MD)		X (compressed)		

**Analog vs. Digital Audio** - This refers to the method used to place audio information on the source material and how they are delivered to your receiver from the source. Analog signals exactly represent the sound you will hear through a continuously varying voltage. Audio and video cassettes are analog recordings and are normally delivered to your receiver over a pair of coaxial audio cables.

Digital signals closely approximate the original audio signals with a set of numbers referred to as a bitstream. CDs and DVDs are sources of digital audio and are normally connected to your receiver through a coaxial or optical digital cable. There are several different bitstream formats available. The simplest format is called Pulse Code Modulation (PCM). In PCM, the bitstream directly represents the original 2-channel audio. In Dolby Digital and DTS (see "Surround Formats" below) bitstreams are modified using a process called compression to squeeze more information into limited space. DTS squeezes 5.1 channels into the space normally required for two uncompressed channels, while Dolby Digital squeezes 5.1 channels into about ¼ the space required for two channels. Your receiver automatically detects the bitstream currently being provided from the source and performs the required decompression and surround processing. If no digital signal is present your receiver will automatically switch to analog processing.

All sounds that you hear from your speakers are analog. Digital signals are automatically converted to analog by your receiver before being output to your speakers.

*If analog signals exactly represent the audio, while digital signals only approximate it, why would I want to use digital?*

All analog sources add some amount of noise and distortion to the audio signal. Additional noise can be picked up through the cables from the source to your receiver. It is impossible for the receiver to tell the difference between the desired signal and the added noise and distortion, so it reproduces both of them. The result is increased background noise and decreased dynamic range and fidelity. Digital signals are virtually immune to noise and distortion. The receiver can, therefore, reproduce the signal with the greatest possible fidelity. We recommend you use digital signals wherever possible. Also Dolby Digital and DTS (see "Surround Formats" below) work only with digital signals.

**Surround Formats** - Your source material will be in one of five possible formats described below.

**Monaural (Mono)** - This is the oldest format available. It contains a single, full range audio channel. Modern recordings are seldom made in this format, but most older movies and music are available only in this format. You may get mono from any source - digital or analog. Sound will normally come only from

your center channel speaker, but your receiver can produce mono in two or four channels (see “Surround Mode”). Since all modern sources are stereo, the mono information is usually replicated on both the left and right channels.

**Stereo** - Stereo contains two discrete, full range audio channels. This is the most common format for music and is also used on many movies. You may get stereo from any source - digital or analog. Sound will normally come only from your front left and right speakers, but your receiver can additionally produce stereo in four or five channels (see “Surround Mode”).

**Dolby Pro Logic** - Dolby Pro Logic is a refinement of Dolby Surround which was the earliest form of true surround processing. Like Stereo, Dolby Surround contains two discrete, full range audio channels. In addition, a monaural, limited range rear channel is encoded on the two stereo channels in a process called matrixing. The rear channel information is encoded in positive polarity on the left channel and in negative polarity on the right channel. The Dolby Processor can detect this encoding (left minus right) and send that information to the rear channels. Dolby Pro Logic adds additional processing to produce a full range center channel by extracting the mono information from the left and right channel. This is the most common format for all but the most recent movies. Music sources are occasionally encoded in Pro Logic. However, many people prefer to use Pro Logic processing on all of their stereo sources. The center channel extraction process often yields improved stereo imaging, especially when you are sitting away from the “sweet spot” at center of the listening area. The rear channel processing often lends a pleasing ambiance even to material that is not Pro Logic encoded. Dolby Pro Logic is fully compatible with stereo and you may get it from any source - digital or analog. Sound will normally come from all five speakers in your system, but your receiver can reduce the number of channels to two or four (see “Surround Modes”).

**Dolby Digital (also referred to as AC-3)** - Dolby Digital contains up to five discrete, full range audio channels plus an additional Low Frequency Effects (LFE) channel. The LFE channel contains only low frequency information for enhanced sound effects in movies. This combination of five discrete channels plus a LFE channel is often referred to as 5.1 channels. Dolby Digital is a digital format only. It must be delivered to your receiver over a coaxial or optical digital cable. As of the writing of this manual, Dolby Digital is commercially available on DVD (Also see *Dolby Digital RF* below). It is also possible to create your own Dolby Digital CDs and DATs if you have the recording equipment. You can't directly record Dolby Digital onto minidisc or digital compact cassette since these devices add their own compression which is incompatible with the Dolby Digital compression. Sound will normally come from all five speakers in your system, but your receiver can reduce the number of channels to two or four (see “Surround Mode”). Not all Dolby Digital recordings will include all five channels, and, in fact, it is common on DVDs to have two channel Dolby Digital with or without Pro Logic processing.

**Dolby Digital RF (also referred to as AC3-RF)** - Dolby Digital RF is identical to normal Dolby Digital except that it uses a special RF encoding scheme to put the bitstream on Laserdiscs without replacing the normal stereo (or Pro Logic) PCM bitstream that is normally available from laserdisc. In order to use Dolby Digital RF laserdiscs you must have a B&K DT-1 RF demodulator or similar product from another manufacturer. For best results with your receivers Plug and Play capability we strongly recommend the DT-1.

**DTS (Digital Theater Systems)** - DTS is the latest surround sound technology. DTS is similar to Dolby Digital in that it provides 5.1 discrete audio channels. However, it uses more digital data to encode the information and may provide greater fidelity than Dolby Digital. DTS is a digital format only. It must be delivered to your receiver over a coaxial or optical digital cable. As of the writing of this manual, DTS is commercially available only on laserdisc and CD with DVD coming soon. No RF demodulator is required for DTS laserdiscs since the DTS bitstream replaces the normal PCM bitstream. Like Dolby Digital, you can create your own DTS DATs or CDs but not minidisc or digital compact cassette. As with Dolby Digital, sound will normally come from all five speakers in your system, but your receiver can reduce the number of channels to two or four (see “Surround Mode”).

**NOTE: The AVR101 series 100 processes Dolby Pro Logic and Dolby Digital, it DOES NOT process DTS. The AVR101 can be upgraded to process DTS. Contact B&K or your B&K dealer for information on upgrades. The AVR202 series 200 processes Dolby Pro Logic, Dolby Digital, and DTS.**



**Bass Management** - Dolby Digital and DTS formats contain up to 5 full range channels plus LFE. Only a system with five full-range (large) speakers plus a subwoofer can directly reproduce these formats. However, almost all commercially available center channel speakers are small and incapable of reproducing the lowest bass frequencies without distortion or even damage to the speaker. Many people also use small speakers in the rear of their system, while others use small speakers all around. Use of a subwoofer is almost mandatory when using five small speakers, but people with at least two large speakers may or may not choose to use a subwoofer. Some people may not use a center channel or rear speakers at all. In order to handle any possible combination of large, small, or missing speakers, a home theater system must contain good bass management, a concept often missing from two-piece systems where the Dolby Digital or DTS decoder is separate from the preamp. Your receiver contains a complete bass management system. You can use as few as two large front left and right speakers or two small left and right speakers plus a subwoofer or as many as five full range speakers plus a subwoofer or any combination in between without missing any information. Wherever small speakers are used the bass management system prevents low bass information from going to that speaker ("high pass"). This bass information is rerouted to a speaker that can handle it, usually a subwoofer, but it can also send center, rear, or LFE bass to large front speakers if no subwoofer is available. When center or rear speakers are not used at all, the missing channel is sent ("downmixed") to the front speakers.

**Preamp** - A preamp typically includes the capability to select from a number of sources, adjust volume levels and route the data to an amplifier. Your receiver includes a high quality preamp.

**Processor** - A processor typically includes the capability to decode one or more surround formats, and convert between digital and analog as required. Your receiver includes a high quality processor capable of decoding the surround formats described above.


**Zone** - A zone is usually a room that has speakers installed in it. Your receiver includes a full preamp/processor for zone 1 plus an additional analog stereo preamp for zone 2. This allows, for example, watching a Dolby Digital movie in zone one while simultaneously using the built-in AM/FM tuner in another room.

**Amplifier** - An amplifier takes the output of a preamp/processor and increases its level to that necessary to drive a speaker. Your receiver includes a high quality five-channel amplifier capable of excellent results with most speaker systems. Your receiver also includes direct preamp/processor outputs if you wish to use external amplifiers. If you are using a subwoofer it must be a self-powered type or a passive sub with an external amplifier. You must also provide external amplification for the second zone if you should use that capability.

**Speakers** - A surround sound system typically uses 5 speakers located left front, center front, right front, right rear, and left rear plus a subwoofer located anywhere in the room. Best results are achieved using five identical full range speakers plus subwoofer. This is not always practical. Excellent results can be achieved using smaller and/or fewer speakers, as long as you go through the set up procedures described later in the manual.





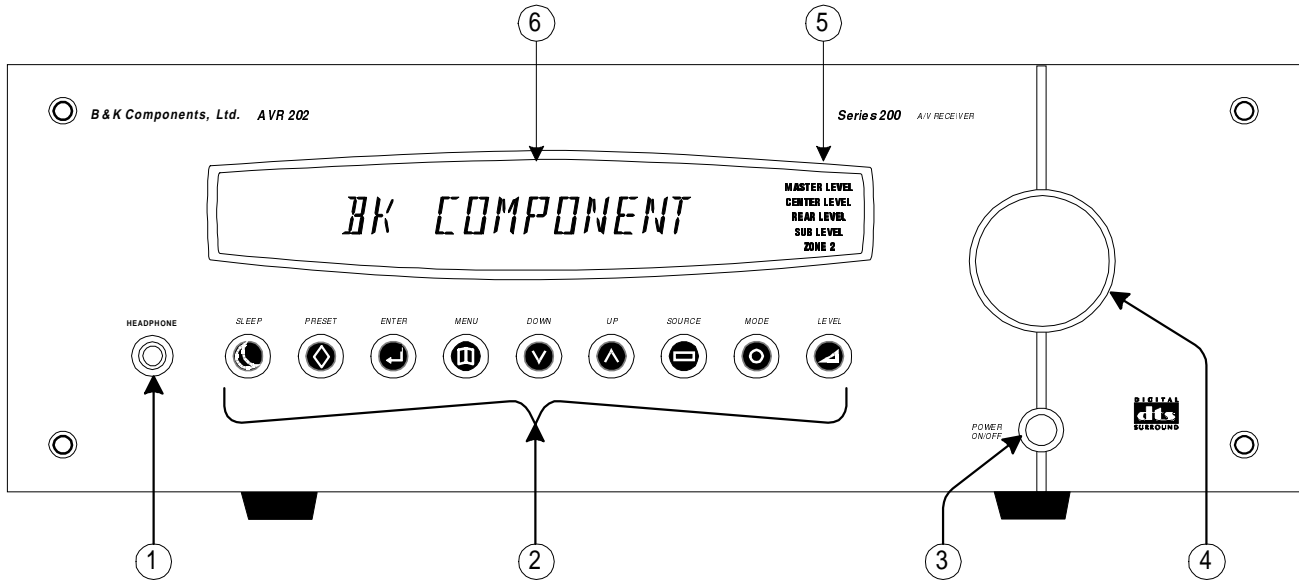




**Composite vs. S-video** - Composite video is the oldest standard for color video. It combines the luminance (brightness or black-and-white) and chrominance (color) information onto a single conductor. These signals must be separated again for display resulting in some degradation of the video quality. S-video is a newer standard that uses separate conductors for the luminance (Y) and chrominance (C) information resulting in better video quality. Your receiver is capable of switching both composite and S-video signals, but it cannot convert between video types.

# FRONT PANEL



**1. Headphone Jack** - Stereo headphones having a standard ¼ inch binaural plug can be connected to the headphone output. The receiver must be on and in HEADPHONE Mode for proper headphone operation.

## 2. Front panel buttons

 SLEEP	Puts the receiver in standby (low power) mode.
 PRESET	Steps through audio / video presets for instant recall of setups. Pressing ENTER recalls the preset.
 ENTER	Confirm selection or display current status of the receiver. Pressing ENTER and PRESET simultaneously will save preset.
 MENU	Enter / exit menu system
 DOWN  UP	Step through menus, sources, or surround modes.
 SOURCE	Steps through the audio / video sources.
 MODE	Steps through the surround modes.
 LEVEL	Selects MASTER, CENTER, REAR, and SUBWOOFER level Also allows ZONE 2 operation.

**3. Main power switch** - Removes all power to the receiver. Normal operation of the receiver requires the power switch to remain on. Use the Sleep button for daily on and off of the receiver. It places the unit in standby mode that allows turning back on with the remote control. Turn the receiver off with the main power switch when not using the receiver for an extended period of time.


**4. Volume control** - For controlling system volume. Turning the shuttle-type volume control clockwise increases the volume level, counterclockwise decreases the volume level. The volume knob is also used to change other receiver settings. See THE MENU SYSTEM and OPERATION

**5. Level indicators** - Display which volume level is being changed - MASTER, CENTER, REAR, or SUBWOOFER. The bottom indicator is for the activation of ZONE 2. It is lit when changes are made to zone 2.

**6. Display** - The receiver display is a 16 character alphanumeric fluorescent display. Displays current status of receiver and any changes being performed.

# REAR PANEL

The receiver's back panel is organized into groups of inputs and outputs for audio and video as shown below. See back of this manual for an enlarged view.

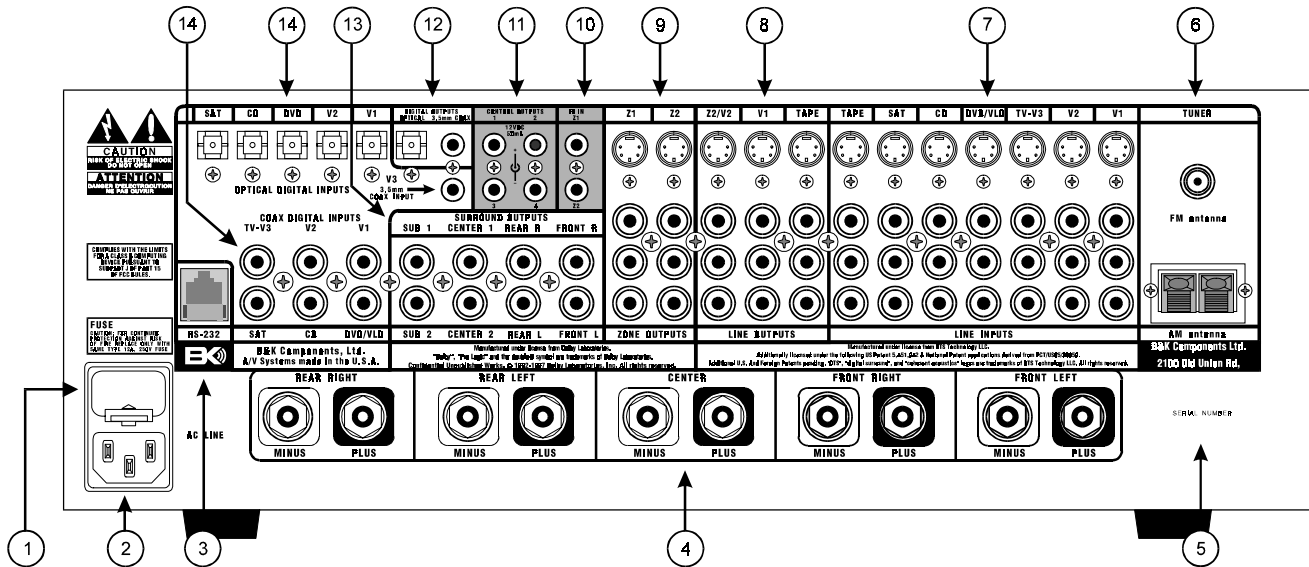

1. **AC fuse holder** - Holds the AC Line fuse. Replace only with 12 Amp / 250 Volt Slow Blow fuse.
2. **AC input receptacle** - For attaching the supplied AC power cord to the receiver.
3. **RS-232 input (optional)** - For future interface applications.
4. **Speaker outputs** - Connections for your speakers.  
*Red binding posts* - speakers (+)  
*Black binding posts* - speakers (-)
5. **Serial number** - B&K Components, Ltd. serial number of your unit.
6. **Antenna inputs** - Connections for the AM and FM antennas.
7. **Line inputs** - connections from your audio/video sources.  
*Red RCA jacks* - right analog audio  
*White RCA jacks* - left analog audio  
*Yellow RCA jacks* - composite video  
*4 pin din jacks* - S-video
8. **Line level outputs** - Fixed level outputs to an audio or video recorder.
9. **Zone outputs** - Variable level outputs to your video monitors and external amplifiers.
10. **IR in** - Accepts input from external IR receptors. Connect an IR repeater ("home run") to IR IN for controlling the receiver. This method of control is useful when the front IR receptor is blocked (for example, by a cabinet door) or to control the receiver from another room. This input is typically used in place of an emitter attached to the front panel.
11. **Control outs** - Outputs that allow you to remotely control external devices. (See "Making The Connection").
12. **Digital outputs** - One optical and one 3.5 mm coaxial that carry digital information from the selected digital input of the receiver out to digital recorders, personal computers, etc.
13. **Surround outputs** - Variable level outputs for driving external power amplifiers or powered speakers.
14. **Digital inputs** - Inputs used to connect a digital audio signal from your source to the receiver. The incoming signal may be PCM, Dolby Digital (AC-3) or DTS (AVR202 only).

# MAKING THE CONNECTION

It's tempting to just plug in your new receiver and have great sound pour out. Before you do that, take a few minutes to plan out how you want the receiver to fit into your audio/video system. Ask yourself the following questions:

- What source components do I want to connect to my receiver? (CD, VCR, etc.)
- What equipment will be receiving the audio and video? (TV monitor, Speakers, etc.)

The answers to your questions determine how many cables you need to connect to the back of the receiver. Good preplanning equals great sound. Keep these recommendations in mind:

- List all components in your system and indicate which jacks of the receiver each component will be connected to. Your receiver has seven sets of inputs. It is convenient to connect a DVD player to the input labeled DVD or a VCR to the input labeled V1 or TAPE, etc. However, your equipment may differ from the labeling on the back of your receiver. In most cases you can connect any type of source to any input (see FREQUENTLY ASKED QUESTIONS). For example, if you don't have a satellite receiver you can connect a DAT player or a second cassette deck to SAT. You can also reprogram the source name that will appear on your receiver's front panel and on-screen display (see SETUP - SOURCE NAMES)
- Also note the length of the cable for each component's connection and describe how it should be routed or draw your routing scheme below your list. You may want to label each cable with a name or number at both ends. Use high quality connections to maintain high quality audio and video.
- Think about the type and length of cable you need and obstacles in the cable's path (doorways, furniture, walkways, etc.). To decide which ones are right for you talk to your dealer about the various cable products that are available.
- For safety, keep all cables out of high traffic areas (hallways or doorways) and away from equipment that radiates power, including amplifiers, power cords, heaters, etc.
- If you might expand your audio/video system later, keep these ideas in mind as you plan current cable runs.
- To provide the best tuner reception, make sure the antenna is at least several feet away from the receiver and any other equipment that may produce high frequency interference such as Personal computers, CD players, halogen lamps, etc.



Take a look at the back panel of the receiver. You will notice that the RCA-type audio input and output connectors are identified by colors, red for right channel and white for the left channel audio. Composite video input and output connectors are identified by yellow. Coaxial digital inputs are identified by orange. The surround outputs are identified by black.

## AUDIO / VIDEO CONNECTIONS

### Connecting your analog sources to your receiver


**Audio / Video source** - connecting a DVD/VLD player to the receiver's analog inputs. Use the same instructions for connecting to other audio / video sources such as a television, satellite receiver, cable box, etc. (Omit the video connections for an audio-only component such as a CD player)

Attach one end of the audio interconnect cable to the left audio output on the DVD/VLD player, then attach the other end to the left (white) DVD/VLD audio input on the receiver. Repeat for the right (red) audio connection. Attach one end of the composite video interconnect cable to the video out on the DVD/VLD player, then attach the other end to the yellow video input on the receiver labeled DVD/VLD. Repeat for the S-video connections if you are using S-video.

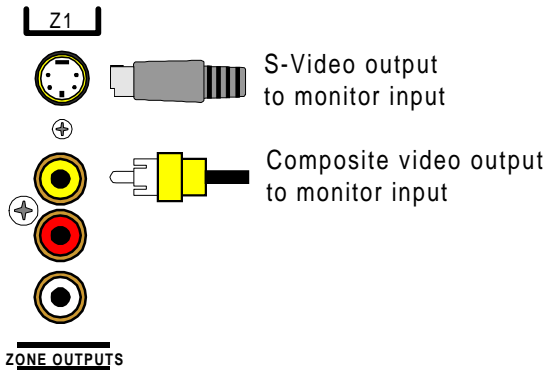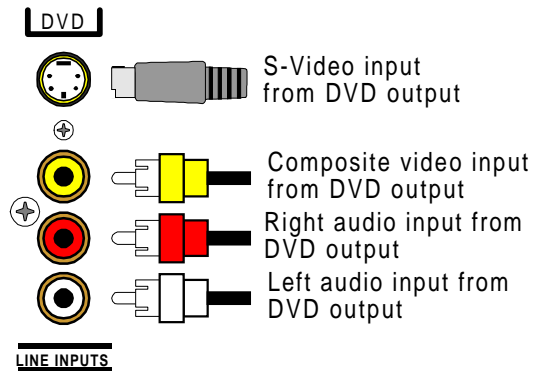

**Video Monitor** - Attach one end of the composite video interconnect cable to the video input on the monitor, then attach the other end to the yellow video output on the receiver's ZONE OUTPUTS. Repeat for the S-video connections if you are using S-video. Use Z1 for zone 1 and Z2 for zone 2.

**VCR or audio recorder** - connect a VCR to V1 . Use the same instructions for connecting to the V2 and TAPE analog inputs. If connecting a cassette deck or other audio-only recorder then omit the video connections.

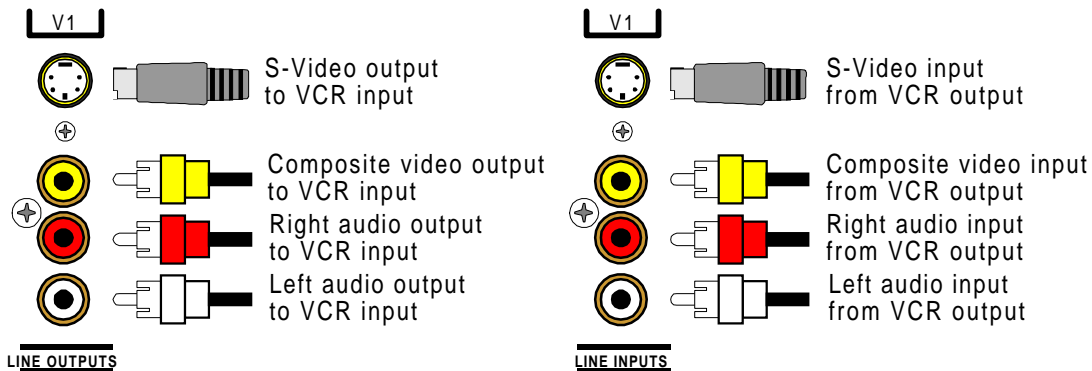



Attach one end of the audio interconnect cable to the left audio output on the VCR, then attach the other end to the left (white) V1 audio input on the receiver. Repeat for the right (red) audio connection. Attach one end of the composite video interconnect cable to the composite video output on the VCR, then attach the other end to the yellow video input on the receiver labeled V1. Repeat for the S-video connections if you are using S-video.

Attach one end of the audio interconnect cable to the left audio input on the VCR, then attach the other end to the left (white) V1 audio output on the receiver. Repeat for the right (red) audio connection. Attach one end of the composite video interconnect cable to the composite video input on the VCR, then attach the other end to the yellow video output on the receiver labeled V1. Repeat for the S-video connections if you are using S-video.

## DIGITAL CONNECTIONS



Connect digital inputs (DVD, VLD, etc.) to the receiver. You will need either coaxial or optical digital inputs to play Dolby Digital (AC-3) or DTS surround sound processing. Digital connections are also recommended for PCM sources. If your source has both optical and coaxial outputs connect only one.

**Coaxial digital inputs** - standard RCA type connectors. Attach one end of your digital coaxial cable to your source coaxial digital out and the other end to the appropriate receiver coaxial digital (orange) input.

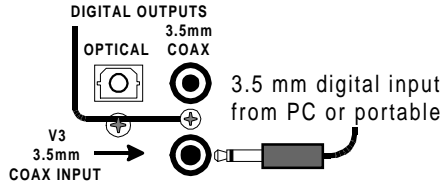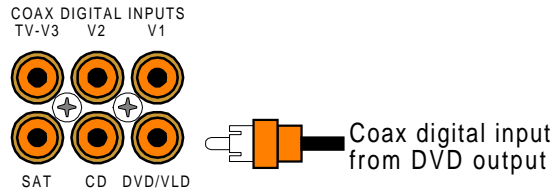


3.5 mm coaxial digital input - You may connect the V3 coaxial input using a 3.5 mm mono jack instead of the RCA type jack. This input works the same as the other digital inputs but uses a 3.5 mm mono jack instead of an RCA. The plug must be wired as tip (+) and the long barrel section (-).

**Optical digital inputs** - First, remove the cap on the optical digital input. Save the cap. Attach one end of your digital optical cable to your source and the other end to the appropriate digital input on the back of the receiver.

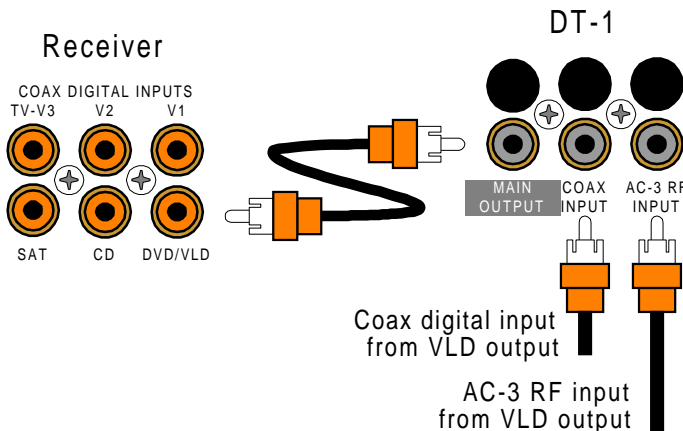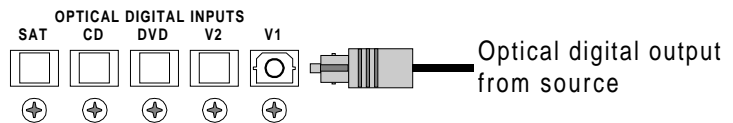

**Connecting A Laserdisc Player** - Dolby Digital (AC-3) laserdiscs use a special technique called AC-3 RF to encode the Dolby Digital bitstream. If the laserdisc player is capable of playing back Dolby Digital discs it will have a separate output for this bitstream in addition to the normal coaxial and/or optical outputs. Do not connect the AC3-RF output directly to your receiver. The AC-3 RF bitstream must first be converted to a normal (non-RF) Dolby Digital type signal. It is recommended that a B&K DT-1 be used to convert and select between the Laser's AC-3 RF and PCM/DTS signals. The output from a DT-1 will automatically select between the connected PCM/DTS bitstreams and the converted AC-3 RF Dolby Digital signal. Other AC-3 RF to Dolby Digital decoders may not make this switch automatically.


Connect the laserdisc's AC3-RF output to the DT-1's AC-3 RF input. Connect either the laserdisc player's PCM coaxial or optical digital output (not both) to the DT-1's coaxial or optical input. Connect the DT-1's coaxial output to the desired coaxial digital input on your receiver.

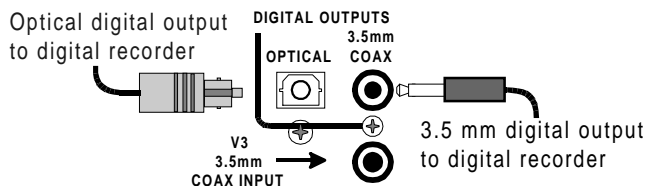

**Digital Outputs** - Connect to a digital recorder (CD-R, minidisc, DAT, personal computer, etc.) This signal is the same as the incoming digital signal from the selected source. If your digital recorder has both optical and coaxial inputs you need only connect one. The receiver converts optical to coaxial and coaxial to optical. You can connect one digital recorder to the optical output and another recorder to the coaxial. The coaxial connector is a 3.5 mm type for direct connection to a personal computer. You will need an adapter to connect the 3.5mm type to a standard RCA type coaxial input


## SPEAKER OUTPUTS

Five-way binding posts are provided, one pair for each channel. They are designed to accept a banana-type plug or spade lug connector (shown below) and are color coded for easy identification. The red (+) post should always be connected to the speaker's red (+) jack. The black (-) post should always be connected to the speaker's black (-) jack.

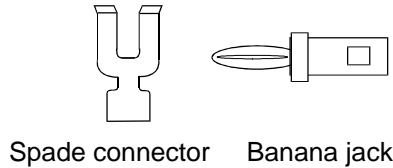

The amplifier section of the receiver will produce 105 watts / channel into 8 ohms. See SPECIFICATIONS for more information.

Here is a typical receiver output setup:

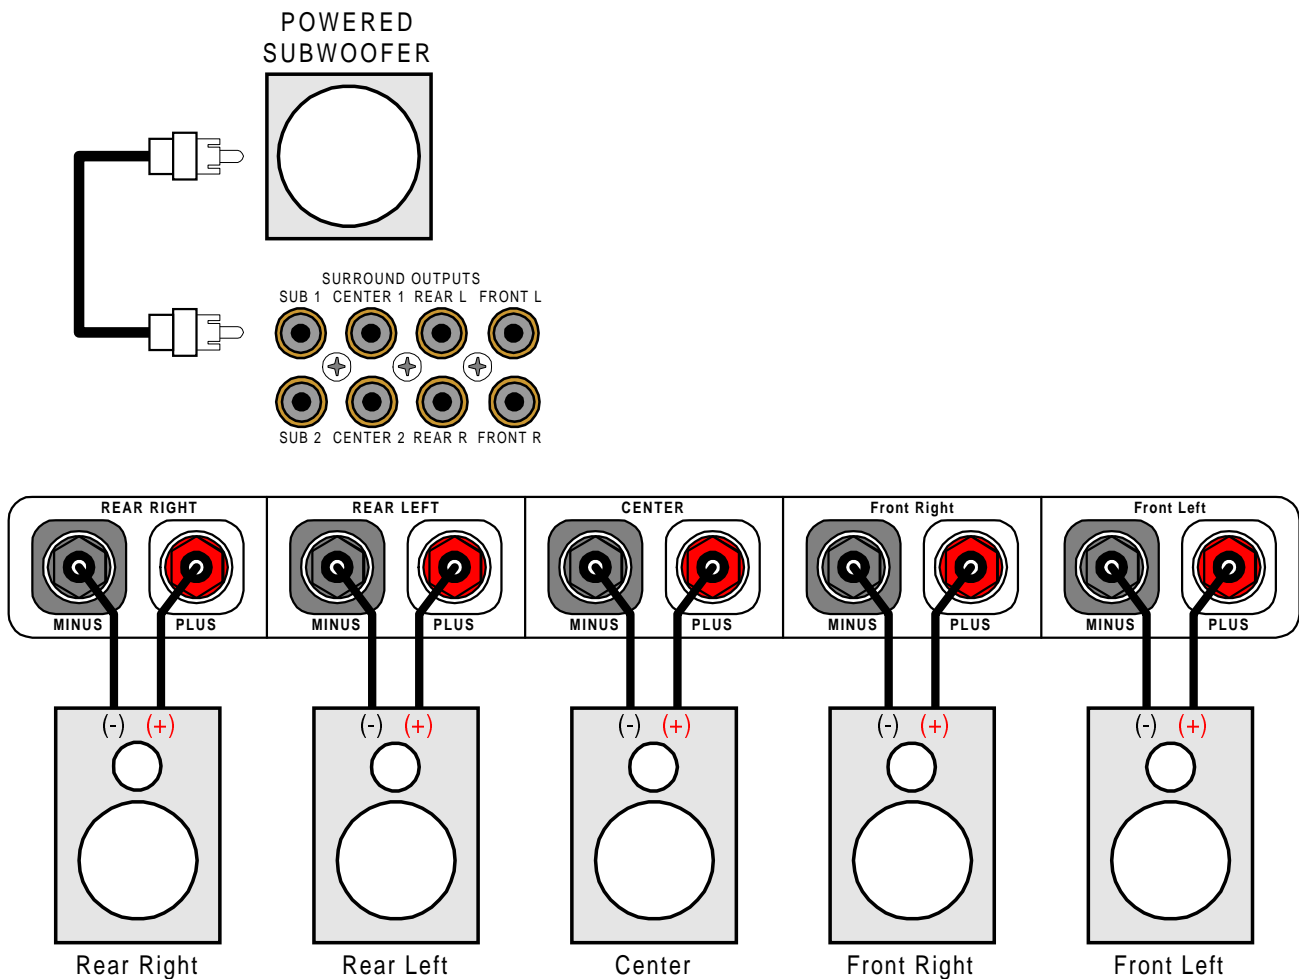


**Subwoofer Output** - your receiver does not include a power amplifier for a subwoofer speaker. Most subwoofers contain their own internal amplifier, so none is needed in the receiver. Connect an RCA cable from one of the receiver's two SUB outputs (part of the surround outputs). You may connect a second subwoofer to the other SUB output if desired. If your subwoofer does not contain its own amplifier you will need to purchase an external B&K or other power amplifier. Connect the receiver's SUB output to the audio input of the external amplifier. Connect the external amplifier's speaker output to your subwoofer.




## ANTENNA CONNECTIONS

The FM jack is a standard screw on F-type connector. The AM is a push type. Strip ¼ inch of insulation off your AM antenna wires and insert one wire end into each hole while holding the tabs down. Release the tabs to lock in the AM antenna wires.

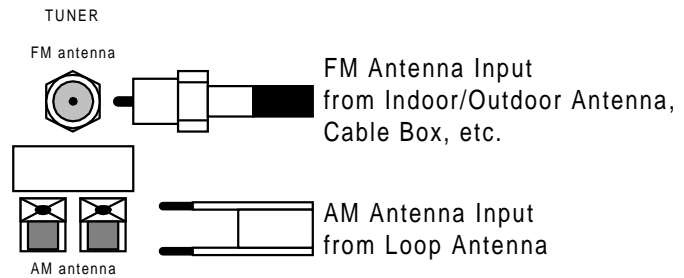

## CONTROL OUTPUTS / IR INPUTS

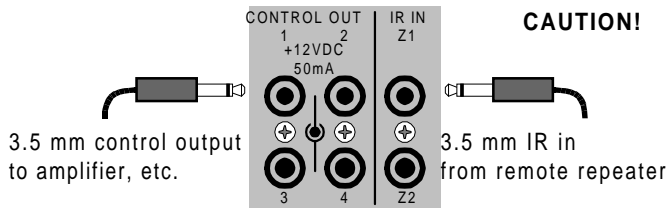

**Control Outputs** - These connections are used for controlling other equipment such as an external B&K Components, Ltd. amplifier, projection screen, etc. Connect your control cable to the receiver using a mono 3.5 mm jack shown at left. The plug must be wired as tip (+) and the long barrel section (-).

The Control outputs are programmable for each source in your system (see "Advanced Setup"). However, the receiver provides the following factory preprogrammed setup that should serve for most standard system applications.

**Control 1 - HEADPHONE** - On (+12 VDC) when zone 1 is on and not in Headphone mode, off when zone 1 is off or in Headphone Mode. This mode may be used for controlling external amplifiers or powered subwoofers in zone 1.

**Control 2 - ZONE 2**. On (+12 VDC) when zone 2 is on, off (0 VDC) when zone 2 is off. This mode is used for controlling external amplifiers, projection screens, etc. in zone 2.

**Control 3 - Z1 + Z2**. On (+12 VDC) when zone 1, zone 2, or both zones are turned on. Off (0 VDC) when both zones are off.

**Control 4 -REMOTE**. It will repeat a received 38 kHz modulated IR signal. The receiver will transmit received IR signals even in sleep mode.

Note - The control outputs can output a maximum of 50 mA. Check to see that the source you are connecting to the control out requires 50 mA or less current.

**WARNING** - Not all manufacturers adhere to the +12 VDC control specification. Check to see if your sources control inputs are +12 VDC compatible. Do not connect your receiver's control outputs to a source with control or remote inputs rated at +5 VDC or other voltage rating. Damage to your source may result.

**IR Inputs** - Your receiver can be controlled by a directly connected IR repeater system in combination with or in place of the supplied remote control. Connect your IR input cable to the receiver using a mono 3.5 mm jack shown above. The plug must be wired as tip (+) and the long barrel section (-). The inputs are standard 38kHz modulated IR type with a voltage range of +5 to +12 VDC.



## FREQUENTLY ASKED QUESTIONS

### ***My collection of equipment differs from the labels on the back of my receiver, how can I hook them up?***

Your receiver provides 5 identical sets of inputs - V1, V2, DVD, CD, and SAT. Each of these has analog audio, composite video, S-video, coaxial digital audio, and optical digital audio. It is convenient to connect components as labeled on the back of your receiver, but since all the inputs are identical, you can connect any compatible source to any set of inputs. For example, you can connect a DAT player to V1 instead of a VCR. You can program your receiver to display any 5 character name for any input (see SETUP - SOURCE NAMES).

The sixth input, TV-V3, is identical to the others except that the optical digital input is replaced by a 3.5 mm coaxial for simple connection to portable equipment or personal computers. You can also connect portables to any other coaxial digital input using adapters or special cables. If you have a source with only optical digital output don't connect it to TV-V3.

The seventh input, TAPE, has analog audio, composite video and S-video, but has no digital inputs. It is primarily intended for analog recorders such as VCRs or cassette decks. If you have a three-head cassette or reel-to-reel tape deck you will prefer the TAPE input since it allows a full tape monitor capability. Tape monitor allows you to listen to what is actually on the tape as you are recording it. The V2 input also provides full tape monitor capabilities for zone 2. If you don't use zone 2 you can use V2 as a second independent analog tape monitor loop. V1 includes a line level output but does not provide a true tape monitor capability.

### ***My DVD player (or other source) has both optical and coaxial digital outputs. Should I connect both?***

No, connect only one digital cable per source. (See also next question.)

### ***Do I need an AC-3 RF demodulator (B&K DT-1 or equivalent) to playback Dolby Digital DVDs?***

No, this is required only for Dolby Digital (AC-3) laserdiscs.

### ***Do I need an AC-3 RF demodulator (B&K DT-1 or equivalent) to playback DTS laserdiscs?***

No, this is required only for Dolby Digital (AC-3) laserdiscs.

### ***Do I need to connect both analog and digital audio from my DVD player (or other digital audio source) to the receiver?***

In general, it is simpler to connect both. However, if you can meet all of the following criteria you need only connect digital:

1. I do not use zone 2. (Zone 2 is analog only - if you use zone 2 you must connect both left and right analog to hear audio.)
2. I do not own any old laserdiscs. (Early laserdiscs contained only analog audio tracks - you must connect both left and right analog audio to play these back.)
3. I do not use Tape Monitor. (It is possible to tape digital-only sources. However, if you wish to listen directly to the tape as you are recording - you must connect both left and right analog audio - the tape monitor loops are strictly analog.)

### ***If the tape monitor loop is strictly analog, how do I make an analog recording of a digital-only source?***

Do not select TAPE. Select the source you wish to record. Select STEREO Lt Rt mode. If that source is digital, the converted digital-to-analog will appear at the tape and V1 outputs. V2 out, like Z2 out, is analog only. (See also Operation - Source Selection and Operation - Surround Mode.)

### ***I want to make direct digital recordings from my CD player (or other digital source) on my DAT (or other digital recorder). Can my receiver make this connection for me?***

Yes, your receiver's digital outputs act much like the analog tape outputs. When you select a source, if that source has a digital connection to your receiver, then that digital signal will appear on the receiver's coaxial and optical digital outputs. Simply connect all of your sources digital outputs to your receivers digital inputs. You can then connect up to two digital recorder inputs to your receiver's two digital outputs.

***My laserdisc player (or other digital source) has only optical output, but my CD recorder (or other digital recorder) has only coaxial input. Do I need some sort of converter to make direct digital recordings?***

No, your receiver will convert optical to coaxial and coaxial to optical. The currently selected digital input (optical or coaxial) will appear at both of the receiver's digital outputs (optical and coaxial).

***Do I need to connect both analog and digital audio from my receiver to my CD, DAT, MD, etc. recorder?***

In general, yes. If all of the sources you wish to record are digital, then you need only connect digital to your recorder. However, your receiver does not provide digital outputs for non-digital inputs. If you wish make a digital recording from an analog-only source you must also connect analog from your receiver (Tape or V1 out) to your recorder.

***Can I connect a phonograph directly to my receiver?***

No, you will need a separate outboard phono preamplifier. The output of the phone preamp can then be connected to any analog input on your receiver. There are several high-quality outboard phono preamps available. Talk to the dealer where you purchased your receiver.

***Do I need to connect both S-video and composite video to my receiver?***

If all of your video equipment has S-video then you need only connect S-video. S-video is a higher quality video format and you will probably not want to use composite. If all or most of your video equipment is composite then it is simplest to just connect the composite and omit S-video.

***Can I connect mixed composite and S-video sources?***

Yes, but your receiver will not convert S-video to composite or composite to S-video. If your monitors and VCRs accept only composite video then there is no point in connecting S-video from other sources. If you use mixed S-video and composite sources you must connect both S-video and composite to your monitors and VCRs. You will need to change your monitor or VCR S-video / composite inputs manually when you change sources. This can normally be done via the monitor's or VCR's remote control (or the supplied universal remote). Some monitors or VCRs may require you to physically disconnect S-video before they will accept composite video. Some monitors are capable of automatic switching between S-video and composite, but this may not work correctly using your receiver's Z1 output. Refer to your monitor or VCR manual.

To assist you, the receiver's on-screen display will tell you what video is currently selected whenever you change sources or hit the SEL (remote) or ENTER (remote or front panel) key, but it cannot switch your monitor or VCR input for you. Note that if the currently selected source is S-video and your monitor is switched to composite, you will see a black-and-white picture on your monitor. If the currently selected source is composite and your monitor is set to S-video, you will see a grainy color picture.

***Can I connect mixed composite and S-video monitors and VCRs?***

Yes, but you must connect both S-video and composite from all of your sources - your receiver will not convert between S-video and composite. Refer to the previous question if not all of your sources have both S-video and composite outputs.

For example, it is common to have an S-video monitor and a composite VCR. Connect the monitor to the Zone 1 S-video output and the VCR to the V1 or TAPE composite output. The composite inputs will appear at the composite outputs for TAPE and V1. (The S-video inputs also appear at the TAPE and V1 S-video outputs, but, in this example, they are not connected.) To prevent feedback, TAPE IN will not appear on TAPE OUT and V1 IN will not appear on V1 OUT - this also applies to the audio outputs. Zone 2 works the same for Z2 OUT and V2 OUT with feedback prevention on V2.

Things get a bit more complicated for the Zone 1 output because it contains your receiver's internal on-screen display system. You must be sure that you tell your receiver which type of monitor you have in Zone 1 (see the following SETUP procedures). For the above example, connect your monitor to the Zone 1 S-video output and set the Zone 1 monitor type to S-video in the SETUP procedure. The S-video inputs will appear at the Zone 1 S-video outputs along with your receiver's on-screen display. Note that, for the example, to view the tape made on the composite VCR you will need to switch your monitor to composite - see the previous question.

# SETUP

For best results, perform the following set up procedure when you initially install your receiver and anytime you change or add sources, speakers, etc. or when you rearrange your listening area

## THE MENU SYSTEM

Setup of your receiver will require you to navigate through the menu system. We recommend that you use a video monitor connected to the zone 1 output along with the remote control provided with your receiver. It is also possible to set up your receiver from the front panel. Do not leave your video monitor on with the receiver in the menu system for long periods of time. This can result in permanently burning the menu display into your monitor's screen. This would take several hours so there is no danger of it happening during normal setup procedures. The following are general instructions for using the menu system. A complete guide to the menu system is included at the back of this manual.

**MENU** - If you are not already in the menu system, the MENU button will activate the menu system. Once you are in the menu system, the MENU button will return you to the next higher level menu or, if you are already at the highest level, it will exit from the menu system.

**UP/DOWN ARROWS** - Once you are in the menu system, use the UP/DOWN ARROWS to move to the desired menu selection. The currently active menu line is highlighted in a contrasting color.

**SEL (remote) or ENTER (remote or front panel)** - Some menu selections cause another menu to be activated. Use the UP/DOWN ARROWS to move to the desired menu line. Pressing SEL or ENTER will activate the next menu.

**NUMERIC KEYS (remote only)** - From the remote control you may also go directly to a menu line by typing the corresponding line number. If there is another menu below that line it will be activated immediately (no ENTER required).

**LEFT/RIGHT ARROWS (remote) or VOLUME KNOB (front panel)** - Some menu selections allow you to change one of the receiver settings. Use the UP/DOWN ARROWS to move to the desired menu line. Pressing the LEFT/RIGHT ARROWS will change the setting. There are no LEFT/RIGHT ARROWS on the front panel. While in the menu system, the VOLUME KNOB acts as the LEFT/RIGHT ARROWS. This means that you will not be able to adjust the volume from the front panel while in the menu system. The remote control volume will work in most menus.


**TEXT EDITING** - some menu selections will require you to edit text. Use the UP/DOWN ARROWS to change the current (blinking) character. Use the LEFT/RIGHT ARROWS (or VOLUME KNOB) to move to another character position.

**HELP SCREENS** - The MAIN MENU provides a HELP GUIDE that summarizes these instructions. Specific help is also provided at the bottom of every menu. The MAIN MENU also provides a PRODUCT INFORMATION screen that provides basic information on your receiver. These screens will automatically scroll through each line.

**UNIVERSAL REMOTE** - Remember that when you press a source button (DVD, CD, etc.) the remote now controls the selected device. To return control to your receiver, you must press AUDIO. **ALWAYS check that your remote is set to AUDIO before attempting to control your receiver. AUDIO will be displayed in the remotes LCD window.**

## USER PREFERENCE SETUP


You should always perform USER PREFERENCE SETUP after first installing your receiver and after adding/changing sources or video monitors. Be sure your main power is switched on from the front panel. For correct zone 1 video operation it is important that you perform the first step - DISPLAY SETUP - Z1 VIDEO MONITOR. Other USER PREFERENCE setups are less important - the factory setting will work fine for most users. Feel free to skip to SETUP/CONFIGURE after setting your Z1 monitor type.

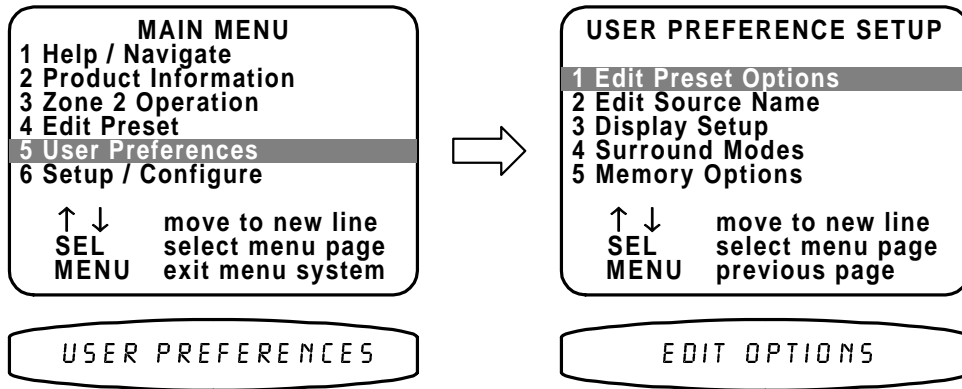

	From Remote	From Front Panel	Action
1	AUD or POWER	SLEEP	turn on receiver
2	MENU	MENU	activate menu system
3	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to User Preferences
4	SEL or ENTER	(ENTER)	activate USER PREFERENCE SETUP


### Display Setup

This menu allows you to setup various aspects of your video and front panel displays.

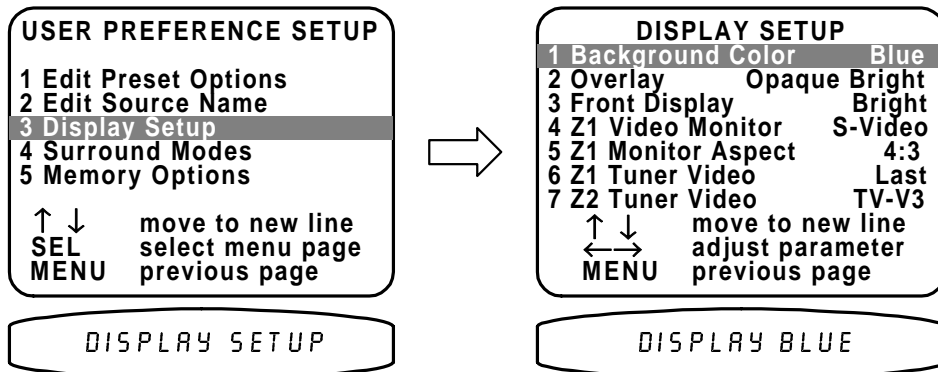

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Display Setup
2	SEL or ENTER	(ENTER)	activate DISPLAY SETUP

**Set your Zone 1 video monitor type** - You should do this first so that you will get the best possible display while performing the rest of the setup procedure.

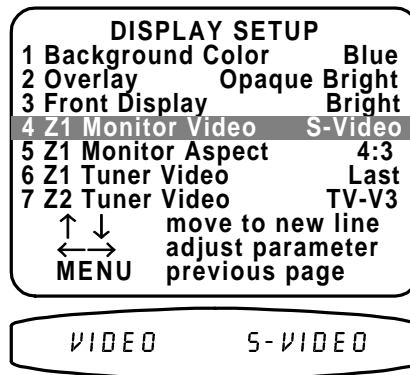


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Z1 Video Monitor
2	◀(REW) or ▶(FF)	VOLUME KNOB	change monitor setting Composite or S-Video

If you have a composite-only monitor or prefer to use composite video set this to COMPOSITE. If you have an S-video monitor and will be using S-video sources set this to S-VIDEO. The S-VIDEO setting allows for mixed composite and S-video sources.

In COMPOSITE mode your receiver will send only composite video to your zone 1 monitor. If your receiver detects no composite video on the currently selected source it will send its internal composite background screen to the monitor.

In S-VIDEO mode, your receiver will look for S-video on the selected source. If it finds S-video it will send it to your Z1 monitor. If it finds no S-video but does find composite video it will send composite video to your monitor. It is up to you to set your monitor accordingly. If it finds no video it will send its internal background screen to your monitor. If S-video was previously detected on the current source, then the background screen will be S-video. If composite was previously detected then the background screen will be composite. Setting Z1 VIDEO MONITOR to COMPOSITE then back to S-VIDEO temporarily resets all inputs to S-video. If your monitor is capable of both composite and S-video, make sure that its setting matches the setting you have chosen for the receiver. After making this setting you should have a sharp, color picture on your zone 1 monitor.

**Set the background color for your on-screen display menus -**

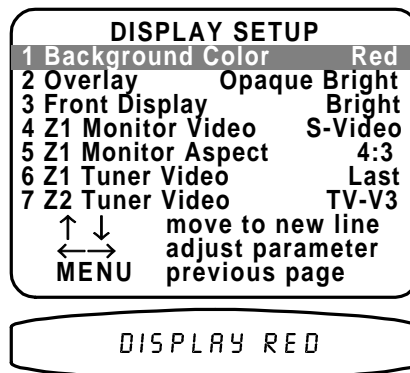

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Background Color
2	◀(REW) or ▶(FF)	VOLUME KNOB	change Background Color

**Set the intensity of on-screen video overlays** - Overlays will appear when you change a receiver setting or your receiver detects a change in the incoming audio or video information. Transparent mode allows video to be seen behind the overlay.

```

DISPLAY SETUP
1 Background Color      Red
2 Overlay               Opaque Bright
3 Front Display         Bright
4 Z1 Monitor Video     S-Video
5 Z1 Monitor Aspect    4:3
6 Z1 Tuner Video       Last
7 Z2 Tuner Video       TV-V3
↑ ↓                   move to new line
← →                   adjust parameter
MENU                  previous page
    
```

OVERLAY OP BRIGHT

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Overlay
2	◀(REW) or ▶(FF)	VOLUME KNOB	change Overlay Type

**Set the intensity of the front panel display-**


```

DISPLAY SETUP
1 Background Color      Red
2 Overlay               Opaque Bright
3 Front Display         Bright
4 Z1 Monitor Video     S-Video
5 Z1 Monitor Aspect    4:3
6 Z1 Tuner Video       Last
7 Z2 Tuner Video       TV-V3
↑ ↓                   move to new line
← →                   adjust parameter
MENU                  previous page
    
```

DISPLAY BRIGHT



	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Front Display
2	◀(REW) or ▶(FF)	VOLUME KNOB	change Display Brightness

**Set the Z1 Monitor Aspect Ratio** - During normal operation, your receiver will overlay status information on your video monitor. This information is normally displayed at the bottom of the monitor. However, if you are viewing letterbox material on a 16:9 (widescreen) monitor, this information will be cut off. Selecting the 16:9 monitor aspect ratio will position the status display within the letterbox viewing area. This setting does NOT affect setup menus. Your monitor must be set for normal 4:3 viewing in order to display the entire menu page.

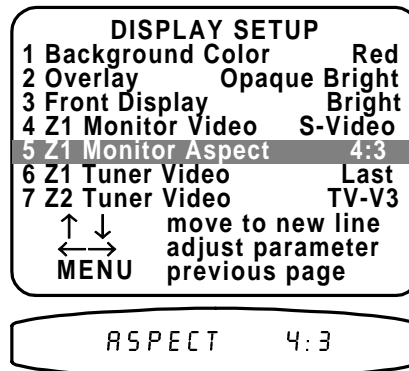

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Z1 Monitor Aspect
2	◀(REW) or ▶(FF)	VOLUME KNOB	change aspect


**Set the tuner video** - This allows you to view a TV/FM simulcast or watch a network sports broadcast while listening to your local radio announcer. You can set any of the seven external sources. You can also choose "last". In "last" mode the tuner video will be from whatever source you watched before switching to TUNER. The final choice for tuner video is off. In zone 1 "off" will cause the background color to be displayed. Zone 2 has no on-screen display capability so off is truly off.

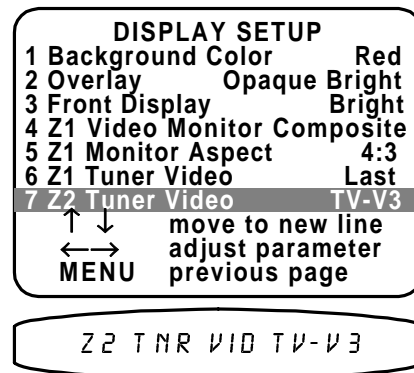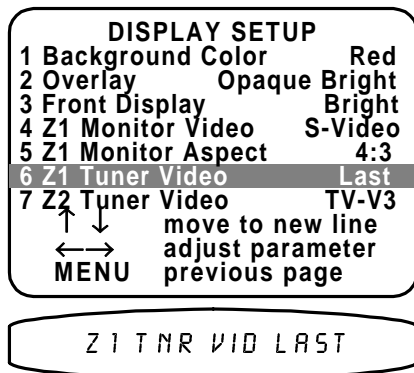

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Z1 Tuner Video
2	◀(REW) or ▶(FF)	VOLUME KNOB	select Z1 Tuner Video
3	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Z2 Tuner Video
4	◀(REW) or ▶(FF)	VOLUME KNOB	select Z2 Tuner Video
5	MENU	📖 MENU	return to USER PREFERENCE SETUP

## Edit Preset Options


This menu allows you to configure your EDIT PRESET menu (see OPERATION - PRESETS) to allow changing only the preset title (as you are used to if you have used older B&K equipment) or a more versatile mode that allows for directly editing common preset information from the EDIT PRESET menu. Check that you are in USER PREFERENCE SETUP and that the remote is in AUDIO mode.

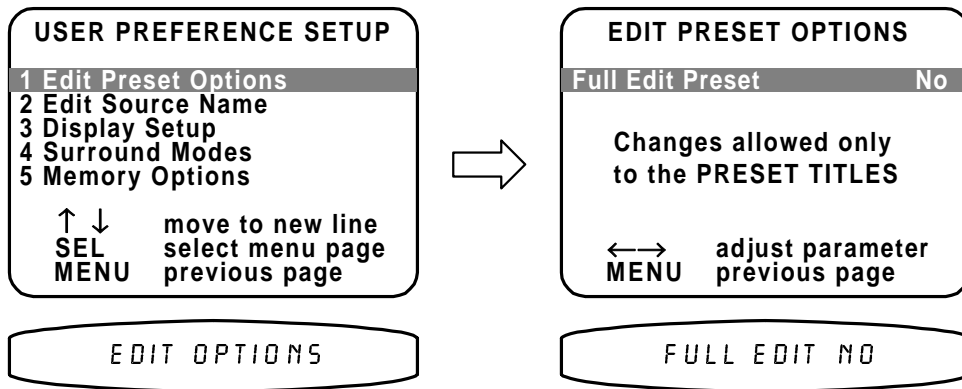

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Edit Preset Options
2	SEL or ENTER	▣ (ENTER)	activate EDIT PRESET OPTIONS
3	◀(REW) or ▶(FF)	VOLUME KNOB	choose option
4	MENU	📖 MENU	return to USER PREFERENCE SETUP

## Edit Source Name

From the factory, your receiver will display source names that match those printed on the rear of the receiver and on the supplied remote. However, this menu allows you to change the displayed names to match the actual sources used. If you do not want to change the names then skip this step. Note that the tuner name cannot be changed. Check that you are in USER PREFERENCE SETUP and that the remote is in AUDIO mode.

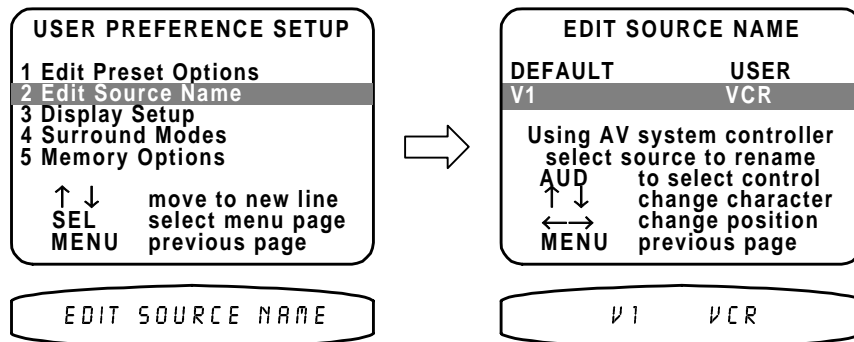




	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Edit Source Names
2	SEL or ENTER	■ (ENTER)	activate EDIT SOURCE NAME
3	desired source	■ (SOURCE) step to source	select source to rename
4	AUDIO		return control to receiver
5	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	change blinking character
6	◀(REW) or ▶(FF)	VOLUME KNOB	move to new character position
7	repeat 5 - 6	repeat 5 - 6	continue changing characters
8	repeat 3 - 7	repeat 3 - 7	rename more sources
9	MENU	■ MENU	return to USER PREFERENCE SETUP

### Surround Mode Operation

This menu allows you to set the level of automation your receiver will apply in choosing a surround mode and make a special setup for stereo listening. Check that you are in USER PREFERENCE SETUP and that the remote is in AUDIO mode.

**Set Surround Operation** - Most users will prefer the factory setting - AUTOMATIC. In this mode the receiver automatically sets the surround mode to full 5.1 channel operation (or as many as permitted by your speaker setup) whenever a Dolby Digital or DTS bitstream is detected regardless of what surround mode you have selected. For example, load your CD changer with a normal PCM CD, a DTS CD, and another normal PCM CD and set the surround mode to 3-STEREO. While the PCM CD is playing you will get sound from the front and center speakers only. When the disc changes to the DTS CD you will get sound from front, center, and rear. When the third (PCM) CD starts the receiver returns to 3-STEREO. Note that if a Dolby Digital or DTS source is currently playing and you change the surround mode the receiver will stay in the selected surround mode until you change to another disc. In MANUAL mode the chosen surround mode remains set regardless of the bitstream detected. In the above example only the front and center speakers would be used on all three CDs even though the DTS CD was capable of providing full 5 channel sound. Note that the rear channel information is not lost. It is simply mixed into the front speakers.

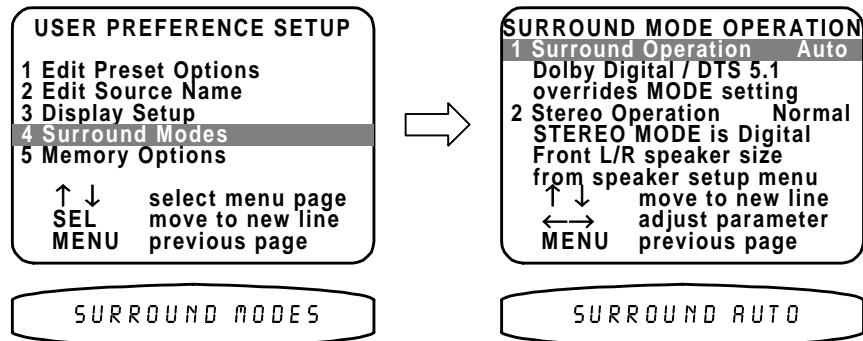

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Surround Modes
2	SEL or ENTER	■ (ENTER)	activate SURROUND MODE OPERATION
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Surround Operation
4	◀(REW) or ▶(FF)	VOLUME KNOB	choose desired mode

**Set Stereo Operation** - Most users will prefer the factory setting - NORMAL. In this mode, the settings you will enter in the following speaker setup apply to the STEREO surround mode as well as all the other modes. Users with large front speakers may wish to use them with a subwoofer for movies to keep the extreme bass contained in some movies out of their front speakers. However, they may wish to use their front speakers as full range speakers when listening to stereo music material. If this is your case then set STEREO OPERATION to LARGE. We do not recommend using the LARGE setting if you use small, satellite or bookshelf speakers as the bass information even in stereo music may damage the speakers at high volume levels. Some users may prefer the sound of their source's (or separate) digital to analog converter over the converter contained in the receiver but still wish to use the receiver's converter for Dolby Digital and DTS material. If this is your case then set STEREO OPERATION to DIRECT. Make sure you have made both analog and digital connections from your source. In this mode when you choose STEREO your receiver will ignore the digital inputs. Note that direct mode also bypasses bass management so that you get the purest possible sound from your outboard equipment. This means that, like LARGE mode, you should not use DIRECT mode with small, satellite or bookshelf speakers.

```

SURROUND MODE OPERATION
1 Surround Operation  Auto
  Dolby Digital / DTS 5.1
  overrides MODE setting
2 Stereo Operation  Normal
STEREO MODE is Digital
Front L/R speaker size
from speaker setup menu
↑ ↓      move to new line
← →     adjust parameter
MENU    previous page
    
```


```

STEREO NORMAL
    
```

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Stereo Operation
2	◀(REW) or ▶(FF)	VOLUME KNOB	choose desired mode
3	MENU	📖 MENU	return to USER PREFERENCE SETUP
4	MENU	📖 MENU	return to MAIN MENU

## SETUP/CONFIGURE

You should always perform Setup/Configure after first installing your receiver and after adding/changing speakers or sources or rearranging your listening area. If you have just completed the USER PREFERENCE SETUP above you are already in the MAIN MENU. If not, follow the instructions above to get to the MAIN MENU. Check that the remote is in AUDIO mode.

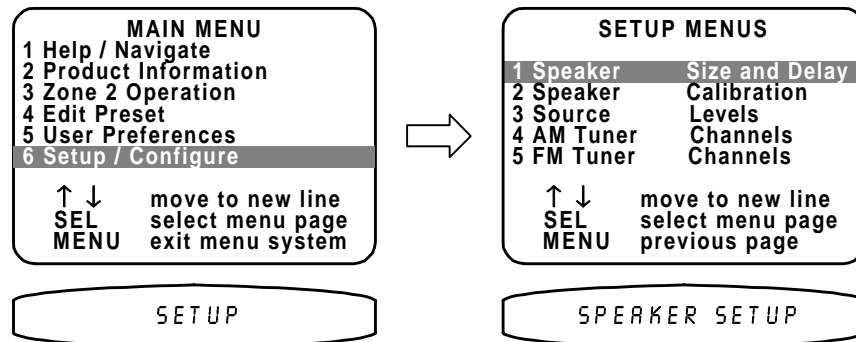


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Setup/Configure
2	SEL or ENTER	↵ (ENTER)	activate SETUP MENUS

### Speaker Size and Delay

The speaker size and delay menu lets you tell your receiver how many speakers you have in your system, the relative size of the speakers, and their placement in the room. This is the most important setup procedure you will perform. The receiver comes from the factory setup for 5 small speakers and a subwoofer. If this does not match your speakers then audio information will be lost. For example, if you do not currently have a center channel speaker and you do not perform this setup procedure, the center channel information will be lost. If you perform this setup correctly, the receiver will know that you have no center channel speaker and send this information to your front left and right speakers (along with the normal front left and right information) so no audio information is lost.

**About Speaker Size** - Speaker size literally refers to the size of your speakers. Audio material, particularly Dolby Digital and DTS movies, often contain large amounts of bass. If this bass information is sent to small speakers that are incapable of reproducing so much bass, then the bass information will be lost or distorted. **MANY SMALL SPEAKERS MAY BE DAMAGED BY TOO MUCH BASS.** By telling your receiver the size of your speakers, it will be able to intelligently route the bass to speakers that can reproduce it correctly. Typically, all bookshelf or satellite speakers are considered small. Smaller floor standing speakers with single woofers 8" or less should also be considered small. Floor standing speakers with 10" or larger woofers or multiple smaller woofers may be considered large. These are general guidelines only - if you are unsure consult your speaker manufacturer. If you have all small speakers we strongly recommend use of a subwoofer. If your front left and right speakers (or more) are large then you may not require a subwoofer, but you may still get better results using a subwoofer, especially with Dolby Digital and DTS movies.


Set The size for your front left/right speakers - OFF is not a choice - you must have front speakers.

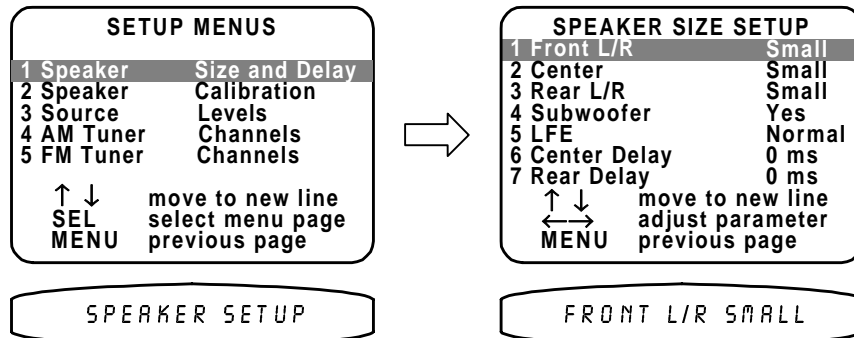

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Speaker Size and Delay
2	SEL or ENTER	↵ (ENTER)	activate SPEAKER SIZE SETUP
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Front L / R
4	◀(REW) or ▶(FF)	VOLUME KNOB	choose speaker size

Front L / R setting	Subwoofer Ultra	Subwoofer On	Subwoofer Off
Small	Front Bass to Subwoofer Front Hi-Pass to Front	Front Bass to Subwoofer Front Hi-Pass to Front	Front Bass is Lost Front Hi-Pass to Front
Large	Front Bass to Subwoofer Front Full Range to Front	Front Full Range to Front	Front Full Range to Front

Set the size for your center speaker -

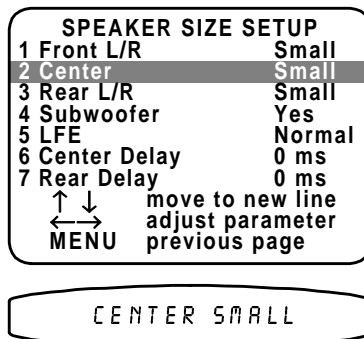

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Center
2	◀(REW) or ▶(FF)	VOLUME KNOB	choose speaker size

Center setting	Subwoofer Ultra	Subwoofer On	Subwoofer Off Front Large	Subwoofer Off Front Small
Off	Center Bass to Sub Center Hi-Pass to Front	Center Bass to Sub Center Hi-Pass to Front	Center Full to Front	Center Bass is Lost Center Hi-Pass to Front
Small	Center Bass to Sub Center Hi-Pass to Center	Center Bass to Sub Center Hi-Pass to Center	Center Bass to Front Center Hi-Pass to Center	Center Bass is Lost Center Hi-Pass to Center
Large	Center Bass to Sub Center Full to Center	Center Full to Center	Center Full to Center	Center Full to Center

**Set the size for your rear left/right speakers -**

SPEAKER SIZE SETUP	
1 Front L/R	Small
2 Center	Small
3 Rear L/R	Small
4 Subwoofer	Yes
5 LFE	Normal
6 Center Delay	0 ms
7 Rear Delay	0 ms
↑ ↓	move to new line
← →	adjust parameter
MENU	previous page

REAR L/R SMALL

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Rear L / R
2	◀(REW) or ▶(FF)	VOLUME KNOB	choose speaker size

Rear setting	Subwoofer Ultra	Subwoofer On	Subwoofer Off Front Large	Subwoofer Off Front Small
Off	Rear Bass to Sub Rear Hi-Pass to Front	Rear Bass to Subwoofer Rear Hi-Pass to Front	Rear Full to Front	Rear Bass is Lost Rear Hi-Pass to Front
Small	Rear Bass to Subwoofer Rear Hi-Pass to Rear	Rear Bass to Sub Rear Hi-Pass to Rear	Rear Bass to Front Rear Hi-Pass to Rear	Rear Bass is Lost Rear Hi-Pass to Rear
Large	Rear Bass to Sub Rear Full to Rear	Rear Full to Rear	Rear Full to Rear	Rear Full to Rear

**Setup your subwoofer -**

SPEAKER SIZE SETUP	
1 Front L/R	Small
2 Center	Small
3 Rear L/R	Small
4 Subwoofer	Yes
5 LFE	Normal
6 Center Delay	0 ms
7 Rear Delay	0 ms
↑ ↓	move to new line
← →	adjust parameter
MENU	previous page

SUBWOOFER YES

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Subwoofer
2	◀(REW) or ▶(FF)	VOLUME KNOB	choose subwoofer setting

Subwoofer Setting	Front Large	Front Small
Off	LFE to Front Speakers	LFE is Lost
On or Ultra	LFE to Subwoofer	LFE to Subwoofer

Note: The subwoofer setting affects the routing of front, center, and rear bass information as shown previously. This table shows the effect of the subwoofer setting for the LFE channel only.

**Setup your LFE channel** - Usually this will be set to NORMAL. However, if you prefer less LFE you can reduce the level or completely turn off the LFE channel. Note that this affects only the separate LFE channel available on Dolby Digital and DTS material it has no effect on the reproduction of normal bass from the front, center, or rear channels. If you have no subwoofer you may wish to reduce or turn off the LFE channel to reduce its contribution to the bass going to your front speakers.

SPEAKER SIZE SETUP	
1 Front L/R	Small
2 Center	Small
3 Rear L/R	Small
4 Subwoofer	Yes
5 LFE	Normal
6 Center Delay	0 ms
7 Rear Delay	0 ms
↑ ↓	move to new line
← →	adjust parameter
MENU	previous page

LFE NORMAL

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to LFE
2	◀(REW) or ▶(FF)	VOLUME KNOB	choose LFE setting

**Set your delays for speaker placement** - Ideally your front and center speakers will be the same distance away from your listening area. If this is the case leave the Center Delay set to 0. However, physical limitations sometimes require placing the center speaker closer than the front left and right speakers. The center delay setting electronically “moves” the center speaker back into alignment with the front speakers. Measure the distance in feet to your front speakers and to your center speaker. Subtract the center distance from the front distance. Use this number for your delay setting (1 foot is roughly equal to 1 ms). If the result is negative set the delay to zero. If the result is greater than 5 feet set the delay to 5 ms.

Ideally your front and rear speakers will be the same distance away from your listening area. If this is the case leave the Rear Delay set to 0. However, physical limitations often require placing the rear speakers closer than the front speakers. The rear delay setting electronically “moves” the rear speakers back into alignment with the front speakers. Measure the distance in feet to your front speakers and to your rear speakers. Subtract the rear distance from the front distance. Use this number for your delay setting (1 foot is roughly equal to 1 ms). If the result is negative set the delay to zero. If the result is greater than 15 feet set the delay to 15 ms.

SPEAKER SIZE SETUP	
1 Front L/R	Small
2 Center	Small
3 Rear L/R	Small
4 Subwoofer	Yes
5 LFE	Normal
6 Center Delay	0 ms
7 Rear Delay	0 ms
↑ ↓	move to new line
← →	adjust parameter
MENU	previous page

CTR DELAY 0MS


SPEAKER SIZE SETUP	
1 Front L/R	Small
2 Center	Small
3 Rear L/R	Small
4 Subwoofer	Yes
5 LFE	Normal
6 Center Delay	0 ms
7 Rear Delay	0 ms
↑ ↓	move to new line
← →	adjust parameter
MENU	previous page

REAR DELAY 0MS

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Center Delay
2	◀(REW) or ▶(FF)	VOLUME KNOB	adjust Center Delay
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Rear Delay
4	◀(REW) or ▶(FF)	VOLUME KNOB	adjust Rear Delay
5	MENU	☐ MENU	return to SETUP MENUS

## Speaker Calibration


Speaker calibration allows you to equalize the volume levels of each speaker to make up for differences in speaker characteristics and distances from the listener to the speakers. For best results it is important that you perform this calibration when you initially install your receiver, whenever you change speakers, and whenever you rearrange your listening area. You may use a Sound Pressure Level (SPL) meter to perform this calibration or just use your ears. If you do it by ear you may wish to go through the speakers several times. Sit or place the SPL meter in your normal listening spot. Check that you are in the SETUP MENUS and that your remote is in AUDIO mode. Note that if you have turned a speaker OFF in the SPEAKER SIZE SETUP menu then you will not be able to select that speaker in the SPEAKER CALIBRATION menu. Also note that the VOL on the remote will not function in this menu.

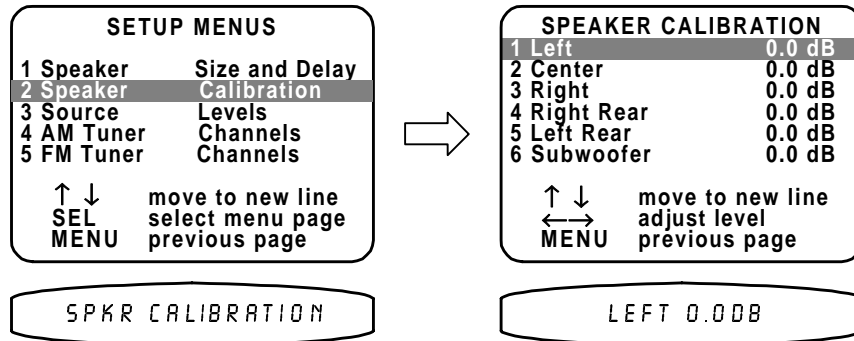

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Speaker Calibration
2	SEL or ENTER	■ (ENTER)	activate SPEAKER CALIBRATION
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Left
4	◀(REW) or ▶(FF)	VOLUME KNOB	adjust left level to a convenient reference level
5	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Center
6	◀(REW) or ▶(FF)	VOLUME KNOB	adjust center level to match left
7	repeat 5-6 for each speaker	repeat 5-6 for each speaker	repeat until all levels match
8	MENU	■ MENU	return to SETUP MENUS

## Source Levels

This setup allows you to match the levels of your sources so that there are no large changes in volume as you change from one source to another. This is for your convenience only and need not be performed unless you wish to. You may use a SPL meter or your ear to adjust the levels. Note that the levels will depend not only on this setting but also on the source material being played back. You may wish to use a test disc. Make sure you are in the SETUP MENUS and your remote is in AUDIO mode.

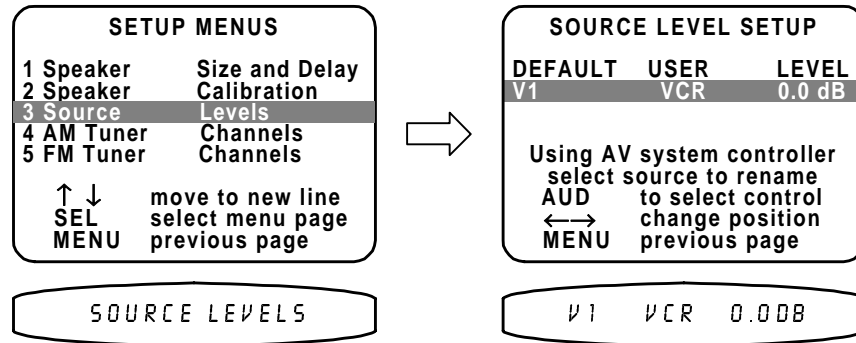

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Source Levels
2	SEL or ENTER	■ (ENTER)	activate SOURCE LEVEL
3	desired source	■ (SOURCE) step to source	select source to adjust
4	AUDIO		return control to receiver
5	◀(REW) or ▶(FF)	VOLUME KNOB	adjust source level
6	repeat 3 - 5	repeat 3 - 5	adjust more sources
7	MENU	■ MENU	return to SETUP MENUS

## AM Tuner Settings


This set up allows you to preset up to 20 AM tuner channels for fast access. This is for your convenience only and need not be performed unless you wish to.

**Direct Frequency Tuning** - Enter the frequency desired using the numeric keypad on the remote control. Press CHANNEL UP to select the next preset channel.

**Manual Tuning** - Quick presses of LEFT/RIGHT or turn and release of the VOLUME KNOB will cause tuning in single 10 kHz steps. (9kHz steps for European version.)

**Seek Tuning** - Holding LEFT/RIGHT or VOLUME will cause the tuner to SEEK (tune up or down automatically stopping on strong stations). Once the tuner has started seeking you can let go of the button/knob. Once a station is found you must let go of the button/knob before you can change frequencies again. In strong signal areas the tuner may stop one step above or below the true frequency. Unless you are sure of the station's frequency, check to see that the signal might be better one step above or below the frequency that SEEK has found. In weak signal areas the tuner may continue to seek all the way to the end of the band. To stop this simply press the ARROW (or turn the VOLUME KNOB) in the opposite direction.



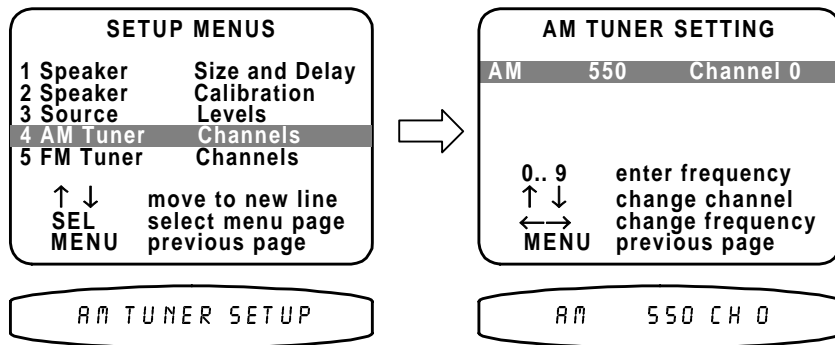


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to AM Tuner Channels
2	SEL or ENTER	⏏ (ENTER)	activate AM TUNER SETTINGS
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	select channel for programming
4	Numeric keypad 0-9 or ◀(REW) ▶(FF)	VOLUME KNOB	adjust frequency
5	repeat 3 - 4	repeat 3 - 4	program more channels
6	MENU	⏏ MENU	return to SETUP MENUS

### FM Tuner Settings

This set up allows you to preset up to 20 FM tuner channels for fast access. This is for your convenience only and need not be performed unless you wish to. Refer to Direct / Manual / Seek tuning for AM Tuner above.


**Stereo/Mono** - Programming a channel to Stereo will play the channel in stereo if it is broadcast in stereo or in mono otherwise. Programming a channel to Mono will force the channel to mono regardless of the broadcast. Use mono to reduce background noise on weak channels.

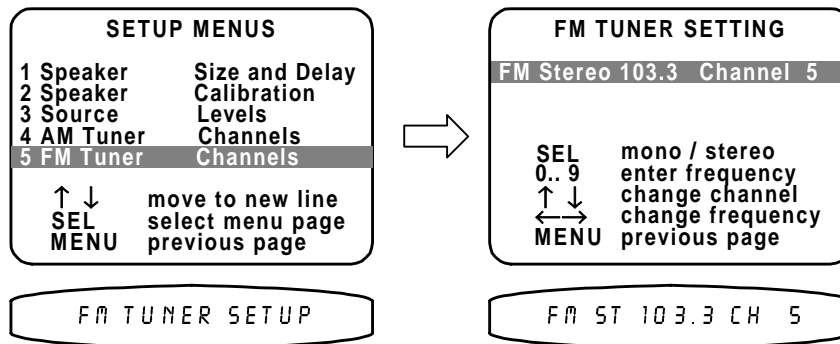


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to FM Tuner Channels
2	SEL or ENTER	⏏ (ENTER)	activate FM TUNER SETTINGS
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	select channel for programming
4	Numeric keypad 0-9 or REW) or ▶(FF)	VOLUME KNOB	adjust frequency
5	SEL or ENTER	⏏ (ENTER)	set Stereo/Mono
6	repeat 3 - 6	repeat 3 - 6	program more channels
7	MENU	⏏ MENU	return to SETUP MENUS
8	MENU	⏏ MENU	return to MAIN MENU

## Memory Backup

Your receiver continually saves any settings you have made even if power is lost. However, you may wish to save a backup of your settings in case of inadvertent changes to them. To perform a backup follow the procedure below. To restore backup settings perform the same procedure but select restore instead of backup. If you have never made a backup, then performing a restore will call back the original factory settings.

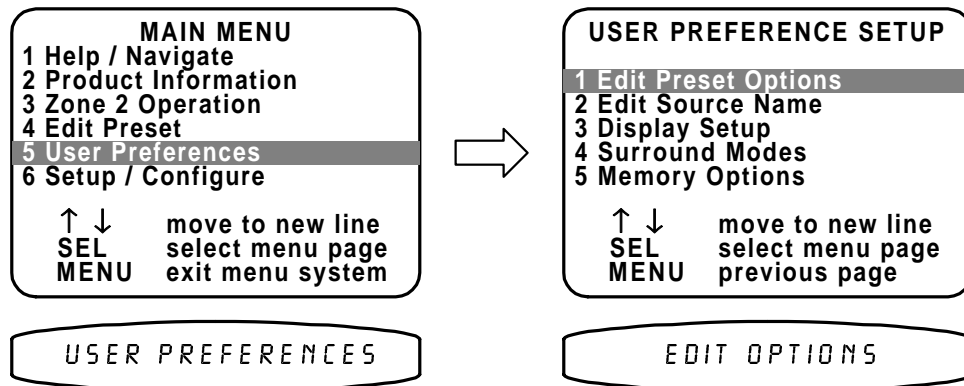

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to User Preferences
2	SEL or ENTER	⏏ (ENTER)	activate USER PREFERENCE SETUP

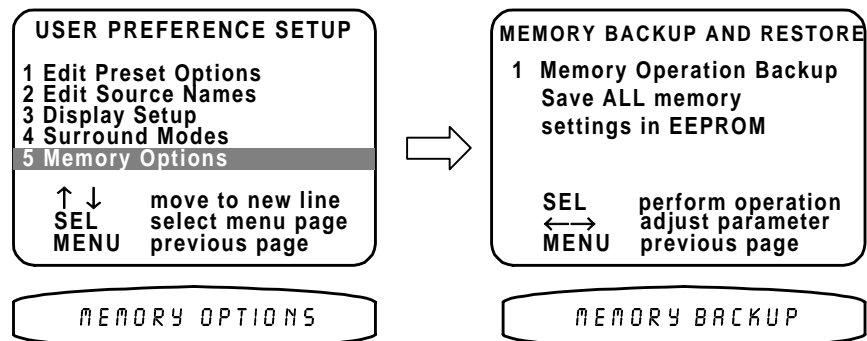


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Memory Options
2	SEL or ENTER	⏏ (ENTER)	activate MEMORY BACKUP AND RESTORE
3	◀(REW) or ▶(FF)	VOLUME KNOB	choose Backup or Restore
4	SEL or ENTER	⏏ (ENTER)	perform Backup or Restore
5	MENU	⏏ MENU	return to USER PREFERENCE SETUP
6	MENU	⏏ MENU	return to MAIN MENU
7	MENU	⏏ MENU	return to normal operation

# OPERATION

The following outlines the normal day-to-day operation of your receiver from the supplied universal remote or directly from your receiver's front panel. The universal remote is also capable of controlling other equipment and storing sequences of commonly used commands. Refer to the separate remote manual for details on these functions.

## POWER ON/OFF


The main power switch on the front panel of your receiver must be on for the receiver to operate. When this switch is off all power is removed from your receiver. This prevents turning it back on with the remote control. You can use the main power switch for normal day to day operation but we suggest you use the sleep function instead so that the receiver can be turned on and off from the remote. After turning on the main power you must wait a few seconds while your receiver restores its internal memory. You may want to turn off the main power switch when your receiver will be idle for extended periods of time or during periods of power line fluctuations. Your receiver will not lose its memory while the main power switch is off.

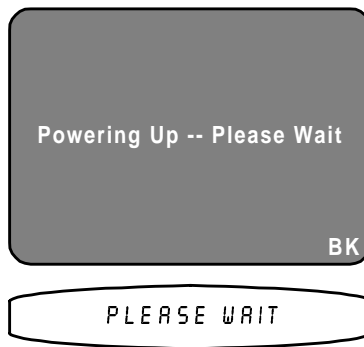



From Remote	From Front Panel	Action
can't turn off main power from remote	POWER ON/OFF	main power on/off

## SLEEP

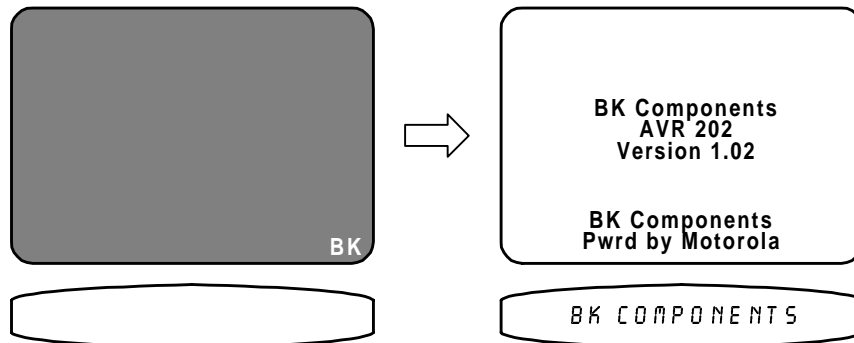Normally you will simply put your receiver to sleep (standby) when not in use. Sleep mode keeps a bare minimum of functions running in order to allow remote control operation and fast start up. Note that the front panel SLEEP button is lit while your receiver is asleep and is off when your receiver is operating. Also note that the remote POWER button will not toggle your receiver in and out of sleep. You must use OFF.



	From Remote	From Front Panel	Action
1	AUD or POWER	 SLEEP	wake up receiver
2	OFF	 SLEEP	put receiver to sleep (standby)

## CHOOSING A SOURCE

In general, the selected source will appear at the ZONE 1 output, the TAPE output, and the V1 output. To prevent feedback, TAPE input will not appear at TAPE output and V1 input will not appear at V1 output.

DVD Source Composite Video  
DVD PCM 2.0 Pro Logic

DVD PRO LOGIC

From Remote	From Front Panel	Action
desired source	<input type="checkbox"/> (SOURCE) step to source	select desired source - remote now controls source
AUDIO		return control to receiver if desired

Note: if your source has separate ON and OFF control like your receiver, pressing the source button will also turn on that source. If not, you will have to hit POWER while the remote is still set to the desired source.

**TAPE MONITOR** - If you have an analog three-head cassette or reel-to-reel analog tape recorder you may wish to use TAPE MONITOR, which allows you to hear exactly what is on the tape as you are recording.

Tape Source S-Video  
Analog 2.0 Pro Logic

TAPE PRO LOGIC

From Remote	From Front Panel	Action
desired source	<input type="checkbox"/> (SOURCE) step to source	select desired source or TUNER source will appear on TAPE and V1 outs
		wait a few seconds while receiver analyzes selected source
TAPE	<input type="checkbox"/> (SOURCE) step quickly to TAPE	select TAPE monitor TAPE will appear on Z1 out

Note: The tape monitor loop only allows recording of analog inputs. If you simply choose the source you wish to tape without then selecting TAPE MONITOR then you can make analog recordings of digital inputs as well as analog inputs.

## TUNER OPERATION

FM St 96.9 Composite Video  
Ch 0 Pro Logic

FM ST 96.9 CH 0

	From Remote	From Front Panel	Action
1	AUDIO	<input type="checkbox"/> (SOURCE) step to AM or FM	make sure remote is in AUDIO mode
2	TUNER		select TUNER
3	BAND		select AM or FM
4	CHAN $\wedge$ or CHAN $\vee$	$\blacktriangle$ (UP) or $\blacktriangledown$ (DOWN)	change to another channel
5	TUNE+ or TUNE-	$\blacktriangle$ (UP) or $\blacktriangledown$ (DOWN) and then VOLUME KNOB	manually tune up or down to desired frequency see AM/FM TUNER SETTING for DIRECT / SEEK / TUNE
6	SEL or ENTER	<input type="checkbox"/> (ENTER)	set FM stereo/mono

Note: For a few seconds after performing any tuner operation ( TUNER, BAND, CHAN  $\wedge$ / $\vee$ , or TUNE+/-) you may directly enter a frequency from the remote control's numeric keypad. During this time the front panel VOLUME KNOB also controls frequency and SEL or ENTER controls stereo/mono selection.

## ADJUSTING THE VOLUME



From Remote	From Front Panel	Action
VOL ▲ or VOL ▼	VOLUME KNOB	adjust volume
MUTE	can't do from front panel	instant volume all the way down press MUTE again to restore

Note: The front panel VOLUME KNOB is used to control multiple functions and, therefore, cannot always control the volume. MASTER LEVEL will light to let you know when the VOLUME KNOB will control volume. The VOLUME KNOB never controls volume in the menu system. During normal operation the VOLUME KNOB may switch to controlling other functions but will return to MASTER LEVEL after a few seconds. The remote's VOL ▲ or VOL ▼ will always change master volume level except in the SPEAKER CALIBRATION and SOURCE LEVEL menus.

## TEMPORARY LEVEL ADJUSTMENTS

Occasionally you may find that a you can't hear the dialog very well in a particular movie, or a movie has too much bass, etc. You can temporarily adjust the center, rear, and subwoofer settings without changing the permanent settings you made in the SPEAKER CALIBRATION setup.



From Remote	From Front Panel	Action
CENTER ▲ or CENTER ▼	▣ (LEVEL) step to CENTER LEVEL then use VOLUME KNOB	adjust center volume
REAR ▲ or REAR ▼	▣ (LEVEL) step to REAR LEVEL then use VOLUME KNOB	adjust rear volume
SUB ▲ or SUB ▼	▣ (LEVEL) step to SUB LEVEL then use VOLUME KNOB	adjust subwoofer volume
DELAY ▲ or DELAY ▼	can't adjust from front panel	adjust rear delay
◀(REW) or ▶(FF)	can't adjust from front panel	adjust balance Note: only in STEREO mode

Note: your receiver remembers a set of temporary adjustments for each source. If, for some reason, you wanted to adjust CENTER LEVEL for all sources you would need to select each source and adjust it individually. Also note that these settings are temporary and will be lost when you put your receiver to sleep or turn off the main power.

## SURROUND MODES

Your receiver provides a number of listening modes. The following table shows how your receiver responds to the chosen surround mode setting for various types of source material. The table assumes five full range speakers plus a subwoofer. If your speaker configuration is different from this make sure you have performed the set up procedures described previously. When the setup is correctly performed your receiver will automatically route audio to fewer/smaller speakers with no loss of information. If you wish to temporarily reduce the number of speakers you are using do not repeat the setup procedure - simply choose the appropriate surround mode.

	Mono	Stereo Pro Logic Dolby Digital 2.0	Dolby Digital 2.0 (Stereo)	Dolby Digital 5.1 DTS 5.1
Surround	M	L-M M R-M L-R L-R	L R	LF C RF LR LFE RR
3 Stereo Hall	M	L-M M R-M L-R L-R	L-M M R-M L-R L-R	LF C RF LR LFE RR
3 Stereo	M	L-M M R-M	L-M M R-M	LF+LR C RF+RR LFE
Stereo Hall	M M	L R L-R L-R	L R L-R L-R	LF+C RF+C LR LFE RR
Stereo F/R	M M M M	L R L R	L R L R	LF+C+LR RF+C+RR LF+C+LR LFE RF+C+RR
Stereo	M M	L R	L R	LF+C+LR RF+C+RR LFE
Stereo Lt Rt	M M	L R	L R	LF+C+LFE+(LR+RR) RF+C+LFE-(LR+RR)
Headphone	M M	L R	L R	LF+C+LR+LFE RF+C+RR+LFE

- M - mono, same information on both channels of analog, PCM, or Dolby Digital 2.0 bitstream
- L - left channel of stereo information of analog, PCM, or Dolby Digital 2.0 bitstream
- R - right channel of stereo information of analog, PCM, or Dolby Digital 2.0 bitstream
- LF - left front channel of a Dolby Digital 5.1 or DTS 5.1 bitstream
- C - center channel of a Dolby Digital 5.1 or DTS 5.1 bitstream
- RF - right front channel of a Dolby Digital 5.1 or DTS 5.1 bitstream
- RR - right rear channel of a Dolby Digital 5.1 or DTS 5.1 bitstream
- LR - left rear channel of a Dolby Digital 5.1 or DTS 5.1 bitstream
- LFE - low frequency effects channel of a Dolby Digital 5.1 or DTS 5.1 bitstream

## Surround Modes (cont.)

DVD Source Composite Video  
DVD PCM 2.0 Pro Logic

DVD PRO LOGIC

From Remote	From Front Panel	Action
MODE	<input checked="" type="radio"/> (MODE)	step to desired mode

Note: your receiver keeps track of a surround mode for each of the sources. It would be possible, for example, to have your DVD player set to SURROUND while your CD player is set to STEREO. All you need to do is change sources and the surround mode you last used for that source will be recalled. HEADPHONE mode, unlike the other surround modes, applies to all sources. This allows you to change sources while remaining in HEADPHONE mode. When you leave HEADPHONE mode, each source will return to the SURROUND mode that was previously active for that source.

### **Why do I need all these modes?**

Many people will be happy leaving their receiver in SURROUND mode all the time. Your receiver will automatically switch back and forth between Dolby Pro Logic, Dolby Digital and DTS (AVR202 only). Stereo material will be played back with Pro Logic decoding. ProLogic's extraction of mono information to the center channel works just as well on stereo (non-ProLogic encoded) material and may provide improved imaging, especially when sitting away from the "sweet spot" in the center of your speakers. Only Dolby Pro Logic encoded 2-channel material has true rear speaker information. However, ProLogic's rear speaker processing may provide a pleasing ambiance effect on many stereo (non-ProLogic) soundtracks. You can turn off center channel processing by using STEREO HALL mode, you can turn off rear channel processing by using 3 STEREO mode, or you can turn off both center and rear processing by using STEREO mode.

STEREO F/R (Front/Rear) mode puts you in the orchestra instead of in front of it. Some people prefer this mode for all their stereo listening. It may also be useful when you have a large group where it is difficult to put everyone near the optimum listening position.

STEREO Lt Rt (Right total Left total) is provided for making Pro Logic compatible analog recordings from all sources including Dolby Digital and DTS. Your tape outputs contain the same audio information as your left and right front speaker outputs. If you make a tape in a normal listening mode such as SURROUND then the center and rear information will not appear on the tape. Since the center channel contains much of the dialog for movies, the tape will be almost useless. STEREO Lt Rt mode allows you to make a tape with little loss of information. You can't directly make an analog tape of Dolby Digital 5.1 or DTS 5.1, but STEREO Lt Rt will produce a Dolby Pro Logic compatible tape from 5.1 sources that will preserve much of the surround information. Note that Dolby Digital will mix LFE at 10dB below normal level in this mode.

**WARNING: in order to make STEREO Lt Rt recordings with full range audio, it is necessary to override the bass management processing in your receiver. This means that full range audio (including LFE) will also be sent to your front left and right speakers. If you have small front speakers we strongly suggest you turn the volume down or even mute the volume while making STEREO Lt Rt recordings. Otherwise you can damage your speakers. The volume or mute setting does not effect the level from the TAPE and V1 outputs.**

HEADPHONE mode is identical to STEREO mode except that the internal amplifiers in your receiver are turned off. Also, some of the CONTROL outputs may also be turned off (typically CONTROL OUT 1) depending on how your receiver has been set up (see ADVANCED FEATURES), allowing you to turn off any external amplifiers or powered subwoofers with compatible CONTROL inputs.

**WARNING: in order to provide full range audio to your headphones, it is necessary to override the bass management processing in your receiver. This is not a problem if you are using the internal amplifiers in your receiver since they will be turned off. However, if you are using external amplifiers or powered speakers with no CONTROL OUT capability then full range audio (including LFE for DTS) will also be sent to your front left and right speakers. If you have small front speakers we strongly suggest you manually turn off your external amplifiers or powered speakers before switching to HEADPHONE mode. Otherwise you can damage your speakers.**

## OVERRIDES

Some laserdiscs contain the normal movie soundtrack on the PCM, AC-3 RF or DTS digital soundtrack along with supplemental information on the laserdisc's analog track. Your receiver will automatically select the digital track if one is available. In order to reach the analog track we have provided an analog override to force the receiver to ignore the digital soundtrack. Note that your laserdisc player normally puts out converted digital soundtracks on its analog output. You will also need to adjust your laserdisc player to get the analog track. Refer to your laserdisc manual. The override is not limited to laserdisc. It can be used with any source anytime you wish to hear the analog input rather than the digital.

**Warning - DTS and Dolby Digital are digital only formats. Your source may try to interpret these as normal PCM tracks resulting in a loud noise on the source's analog outputs. If you're not sure, turn your receiver's volume down before engaging the analog override. This warning does not apply to DVD players. All DVD players can properly interpret Dolby Digital tracks. Currently available DTS compatible DVD players have no analog output when the DTS track is selected.**

When DTS started to make CDs and Laserdiscs, they made the bitstream fully compatible with the PCM standards. Unfortunately, this makes it difficult to tell the difference between PCM and DTS. The result is that you will occasionally hear a short extraneous sound at the beginning of DTS CDs and laserdiscs or after fast-forward, pause, etc. We have provided an override to eliminate this extraneous sound at the cost of automatic bitstream detection. If you find the extraneous sound unacceptable, engage the DTS override before playing your DTS disc. Remember that if you subsequently try to play any non DTS material you will need to manually switch back to auto (plug and play) operation.

Dolby Digital recordings may contain passages with very large dynamic range. This normally will enhance the Home Theater experience. However, it may not be desirable at all times, for example, during late night listening. Dolby Digital bitstreams allow for listening with a compressed dynamic range that reduces high level passages and increases low level passages. This allows the listener to hear quiet passages even at low volume levels while at the same time limiting the maximum volume of very loud passages. Note: this override is available only for Dolby Digital recordings.

DVD Plug and Play ?  
Press SEL to Engage Override

DVD AUTO ?

	From Remote	From Front Panel	Action
1	★	⏏ (ENTER) then ⏶ (UP) or ⏵ (DOWN)	step to desired override mode or plug and play (auto)
2	SEL or ENTER	⏏ (ENTER)	engage override

Note: your receiver remembers an override independently for each source. If, for some reason, you wanted to set DTS or analog override for all sources you would need to select each source and override individually. Also note that these settings are temporary and will be lost when you put your receiver to sleep or turn off the main power.



## PRESETS


Presets allow you to save your favorite settings and recall them instantly. Your receiver can store two banks of 10 presets (0..9 & A0..A9) in each of 2 Zones. The saved information includes the selected source, the volume, the surround mode, the tuner station and band, and all of the temporary settings and overrides described above. A convenient set of presets come preprogrammed with your receiver.

### Recalling a Preset



	From Remote	From Front Panel	Action
1	number or A + number	⬠ (PRESET) step to desired preset	review settings for recall
2	SEL or ENTER	⬠ (ENTER)	recall preset


### Saving a Preset

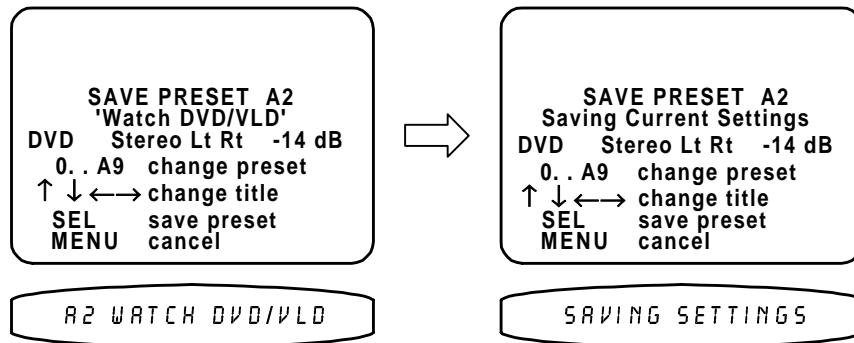

	From Remote	From Front Panel	Action
1	make all settings you wish to save	make all settings you wish to save	prepare for saving preset
2	SAVE	⬠ (PRESET) and ⬠ (ENTER) simultaneously	activate preset save
3	▲(PAUSE) or ▼(STOP) <(REW) or >(FF)	▲(UP) or ▼(DOWN) VOLUME KNOB	rename preset if desired
4	SEL or ENTER	⬠ (ENTER)	save preset

### Recalling/Saving Presets via the Menu System

You can also recall and save presets via your receiver's menu system from the remote or from the front panel. If using the remote be sure it is in AUDIO mode, if not, press AUDIO.

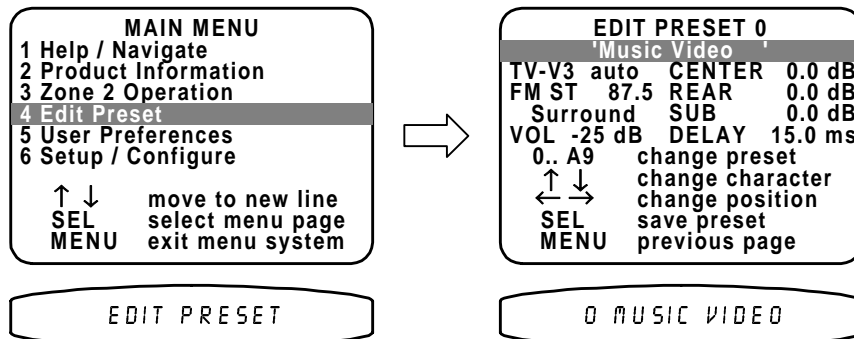


	From Remote	From Front Panel	Action
1	MENU	MENU	activate menu system
2	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Edit Preset (Titles)
3	SEL or ENTER	(ENTER)	activate EDIT PRESET (TITLE)
4	number or A + number	(PRESET) step to desired preset	recall preset
5	▲(PAUSE) or ▼(STOP) ◀(REW) or ▶(FF)	▲(UP) or ▼(DOWN) VOLUME KNOB	rename preset if desired
6	source then AUDIO MODE VOL ▲ or VOL ▼ CENTER ▲ or CENTER ▼ REAR ▲ or REAR ▼ SUB ▲ or SUB ▼ DELAY ▲ or DELAY ▼	(SOURCE) (MODE)	edit preset if desired (full preset edit must be enabled - see USER PREFERENCE SETUP)
7	SEL or ENTER	(ENTER)	save preset if desired
8	repeat 4 - 7	repeat 4 - 7	edit more presets
9	MENU	MENU	return to main menu
10	MENU	MENU	exit menu system

Note: If you have selected TUNER you can change channel or frequency as described in TUNER OPERATION.

## GETTING RECEIVER STATUS

If you are not in a menu, pressing ENTER will bring up a two-line status message. This display will also pop up automatically whenever you change sources or whenever the source information changes. The video type is very important if you are using mixed composite and S-video sources since it will tell you how you must set your monitor for the best picture. The bitstream and channel information is particularly important with DVDs since they may contain multiple soundtracks. When you initially start the DVD you may get a Dolby Digital 2.0 soundtrack. To get the best possible sound, you may have to use the DVD player's menu system to get to a Dolby Digital or DTS 5.1 channel soundtrack. If you ever need to call B&K regarding a problem with your receiver be sure to note the status display before calling.

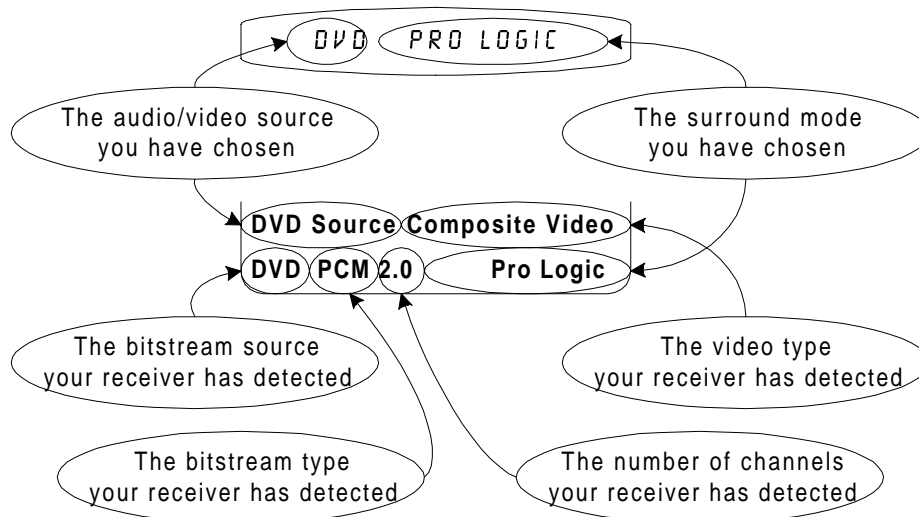

From Remote	From Front Panel	Action
SEL or ENTER	(ENTER)	recall receiver status

## ZONE 2 OPERATION

### Via the Front Panel


You can control zone 2 from your receiver's front panel by using the LEVEL button to step to ZONE 2. The front panel will now control zone 2. After a few seconds of inactivity, control will return to zone 1. The SLEEP, PRESET, ENTER, UP/DOWN ARROWS, SOURCE and VOLUME KNOBS will function exactly as for zone 1. MENU and MODE buttons will not function in zone 2. The level button will instantly return front panel control to zone 1.

### Via the Remote Control

You can set up your remote to control zone 2 instead of zone 1. Follow the instructions in the separate remote control manual for setting the AUDIO product ID to match zone 2 (product ID 2 unless you have changed it in ADVANCED ZONE SETTINGS). After setting your remote for zone 2 it will no longer control zone 1 until you change it back. If you use zone 2 often you may wish to purchase an additional B&K AV 5.1 system controller (or other compatible universal remote control) and leave it set up for zone 2. You may also wish to install a remote repeater system to allow zone 2 control from other rooms.

### Via the Menu System

You can control zone 2 from the menu system using either the front panel or zone 1 remote. Choose Zone 2 Operation from MAIN MENU. (Be sure the remote is in AUDIO mode.)

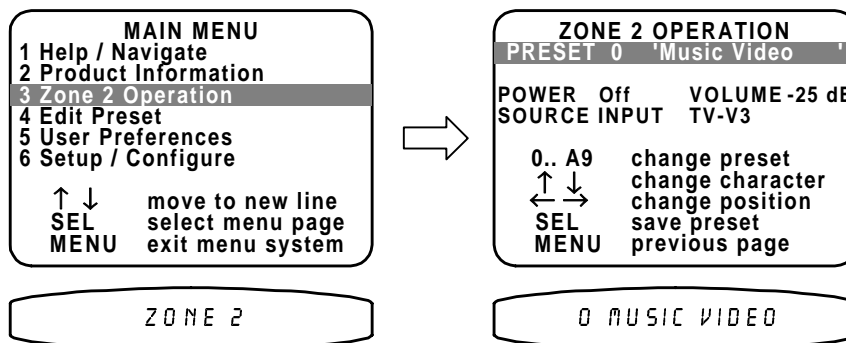

	From Remote	From Front Panel	Action
1	MENU	MENU	activate menu system
2	▲(PAUSE) or ▼(STOP)	▲(UP) or ▼(DOWN)	move to Zone 2 operation
3	SEL or ENTER	(ENTER)	activate ZONE 2 OPERATION
4	number or A + number	(PRESET) step to desired preset	recall preset
5	▲(PAUSE) or ▼(STOP) ◀(REW) or ▶(FF)	▲(UP) or ▼(DOWN) VOLUME KNOB	rename preset if desired
6	Power source then AUDIO VOL ▲ or VOL ▼	SLEEP (SOURCE)	edit preset if desired
7	SEL or ENTER	(ENTER)	save preset if desired
8	repeat 4 - 7	repeat 4 - 7	edit more presets
9	MENU	MENU	return to main menu
10	MENU	MENU	exit menu system


# ADVANCED FEATURES

**WARNING** - The following describes the advanced features of the receiver. Since changing some of these functions may cause severe effects such as no sound or no remote control operation, we suggest you leave this menu disabled (hidden) for normal operation. If you are unsure of what you are changing **DO NOT** perform any advanced operations. These features may be activated by simultaneously pressing the SLEEP, DOWN, and UP buttons on the front panel of the receiver.

## ADVANCED SECURITY OPTIONS


Advanced Security options allow you to hide the ADVANCED SYSTEM SETUP menu to prevent inadvertent changes to advanced system settings. This menu also allows you to lock your preset and tuner channel settings to prevent inadvertent reprogramming

**Advanced Menu Visibility** - If you select Advanced Menu Visible then you can return to this menu directly by entering MAIN MENU and selecting Setup / Configure (refer to SETUP). Advanced Systems Settings will appear as line 6 in SETUP MENUS. Make sure your receiver is on and the remote is in AUDIO mode.

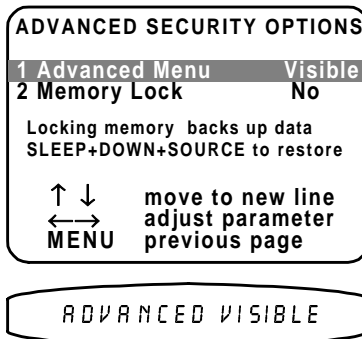

	From Remote	From Front Panel	Action
1	Function not available from remote	SLEEP,  (UP) and  (DOWN) simultaneously	enable advanced features
2	(PAUSE) or  (STOP)	(UP) or  (DOWN)	move to Advanced Menu
3	(REW) or  (FF)	VOLUME KNOB	set to Hidden (recommended) or Visible

**Memory Lock** - Locking memory will prevent changing of your presets, tuner channels, and system setup.

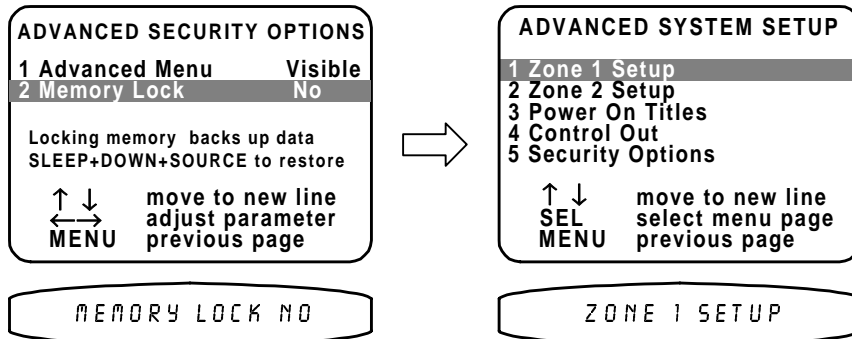

	From Remote	From Front Panel	Action
1	(PAUSE) or  (STOP)	(UP) or  (DOWN)	move to Memory Lock
2	(REW) or  (FF)	VOLUME KNOB	No - can change memory Yes - memory is locked
3	MENU	MENU	move up to ADVANCED SYSTEM SETUP


## ZONE CONFIGURATION

Zone Configuration will allow you to set maximum volume levels for each zone, change remote control ID codes for each zone and turn off the on-screen display overlays in zone 1. Make sure you are in the ADVANCED SYSTEM SETUP menu and the remote is in AUDIO mode.

### Z1 Setup

**Z1 Max Level** - Z1 max level allows you to set a maximum volume level for zone 1. This is very useful if you are using speakers that can't handle the maximum power output from your receiver or if you simply wish to limit the volume that can be achieved using normal front panel or remote operation.


**WARNING** - If you set this level too low, the receiver may appear broken (no sound).

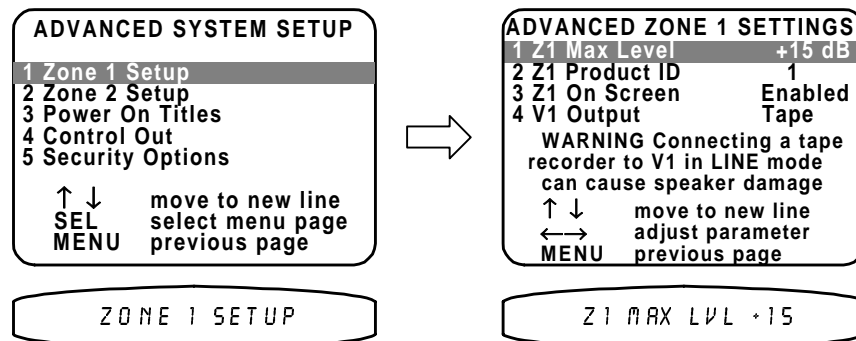

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Zone Configuration
2	SEL or ENTER	■ (ENTER)	activate ADVANCED ZONE SETTINGS
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Z1 Max Level
4	◀(REW) or ▶(FF)	VOLUME KNOB	set desired maximum level


**Z1 Product ID** - Each message transmitted from your remote includes a Product Code, identifying the manufacturer, and a product ID code from 1 to 16. The product ID code allows multiple B&K products to be controlled from the same remote. Your receiver actually uses two product ID codes - one for zone 1 (normally set to ID code 1) and the other for zone 2 (normally set to ID code 2). If you have a system with multiple B&K products then you may wish to set the product ID codes to other values. Note that you cannot set the Z1 product ID to the same setting as zone 2 or vice versa. If you need to set zone 1 to the current zone 2 setting then set zone 2 to some other value first. Make sure you are in the ADVANCED ZONE SETTINGS menu and the remote is in AUDIO mode.

**WARNING** - if you change the product ID code in the receiver without making the corresponding change to the remote then the remote will no longer work. Refer to the separate remote manual for details on changing the remote's product ID ("device code").

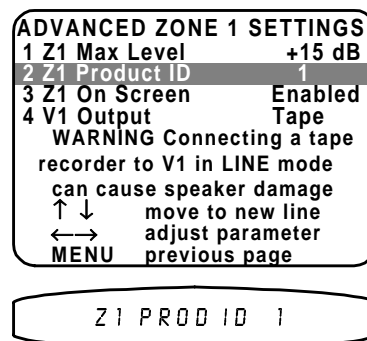


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Zone 1 Setup
2	SEL or ENTER	■ (ENTER)	activate Zone 1 Setup
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Zone 1 Zone ID
4	◀(REW) or ▶(FF)	VOLUME KNOB	set desired product ID
5	MENU	■ MENU	move back to ADVANCED SYSTEM SETUP

**Z1 On Screen** - During normal operation, when you make a change to a system setting or your receiver detects a change to the incoming audio or video a message is overlaid along the bottom of your video screen. You can turn off the overlay display from this menu. This will not affect the on-screen displays when you enter the menu system.

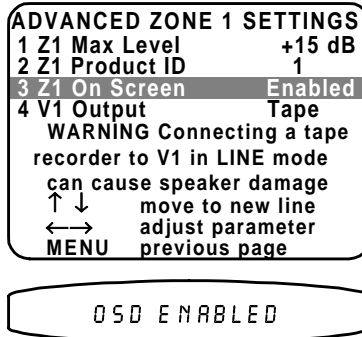

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Z1 On Screen
2	◀(REW) or ▶(FF)	VOLUME KNOB	set Enabled or Disabled

**V1 Output** - V1 output is normally set up as a tape loop. The V1 and Z1 output are the current source (V2, TV-V3, CD, DVD, etc.) except when the current selection is V1. When V1 is selected as the source, the Z1 output is V1 and the V1 output is off. This prevents feedback when the V1 inputs and outputs are connected to a tape deck or VCR. Feedback can cause high frequency oscillations which may damage your speakers. If you don't connect a tape deck to the V1 input and output you can use the V1 output as an additional line out. In this mode V1 output is always the selected input including V1. Note: The Tape input and output is always set up as a tape monitor for zone 1.

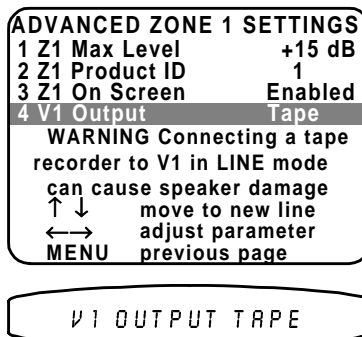


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to V1 Output
2	◀(REW) or ▶(FF)	VOLUME KNOB	select either Tape or Line
3	MENU	■ MENU	move back to ADVANCED SYSTEM SETUP

## Z2 Setup

**Z2 Level Control** - You may wish to install an in-wall volume control in your second zone. This can cause confusion between your receiver's internal zone 2 volume controls and your in-wall controls.


**WARNING** - Setting **Z2 LEVEL CONTROL** to **FIXED** will cause your receiver to immediately send its maximum zone 2 volume to your second zone (if zone 2 is on). Turn down your in-wall volume controls before making this change.

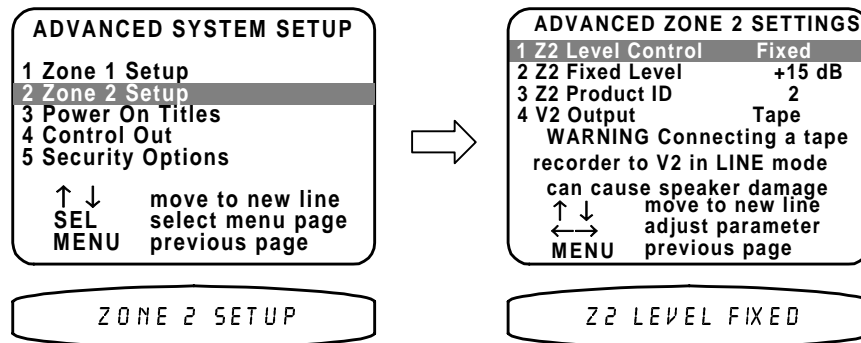

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Zone 2 Setup
2	SEL or ENTER	■ (ENTER)	activate ADVANCED ZONE 2 SETTINGS
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Z2 Level Control
4	◀(REW) or ▶(FF)	VOLUME KNOB	select Zone 2 Fixed or Variable

**Z2 Max (Fixed or Variable) Level** - Z2 max level allows you to set a maximum volume level for zone 2. This is very useful if you are using speakers that can't handle the maximum power output from your external amplifier or if you simply wish to limit the volume that can be achieved using normal front panel or remote operation. If you have chosen zone 2 level control (fixed), then this setting becomes the fixed level for zone 2. If you have chosen zone 2 level control (variable) then this setting allows the level for zone 2 to be adjusted. However, when adjusting this level it cannot exceed the value set in Z2 max level.


**WARNING** - If you set this level too low, the receiver may appear broken (no sound).

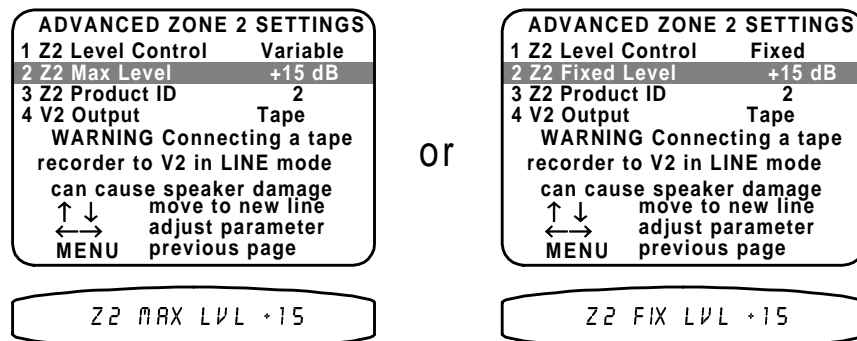

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Z2 Max or Fixed Level
2	◀(REW) or ▶(FF)	VOLUME KNOB	set to desired level


**Z2 Product ID** - Each message transmitted from your remote includes a Product Code, identifying the manufacturer, and a product ID code from 1 to 16. The product ID code allows multiple B&K products to be controlled from the same remote. Your receiver actually uses two product ID codes - one for zone 1 (normally set to ID code 1) and the other for zone 2 (normally set to ID code 2). If you have a system with multiple B&K products then you may wish to set the product ID codes to other values. Note that you cannot set the Z1 product ID to the same setting as zone 2 or vice versa. If you need to set zone 2 to the current zone 1 setting then set zone 1 to some other value first. Make sure you are in the ADVANCED ZONE SETTINGS menu and the remote is in AUDIO mode.

**WARNING** - If you change the product ID code in the receiver without making the corresponding change to the remote then the remote will no longer work. Refer to the separate remote manual for details on changing the remote's product ID ("device code").

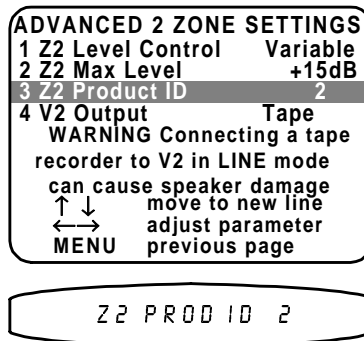

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Zone 2 Zone ID
2	◀(REW) or ▶(FF)	VOLUME KNOB	set desired product ID

**V2 Output** - V2 output is normally set up as a tape loop. The V2 and Z2 output are the current source (V1, TV-V3, CD, DVD, etc.) except when the current selection is V2. When V2 is selected as the source, the Z2 output is V2 and the V2 output is the previously selected source. This prevents feedback when the V2 inputs and outputs are connected to a tape deck or VCR. Feedback can cause high frequency oscillations which may damage your speakers. If you don't connect a tape deck to the V2 input and output you can use the V2 output as an additional line out. In this mode V2 output is always the selected input including V2.

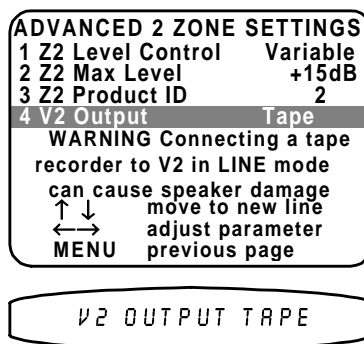


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to V2 Output
2	◀(REW) or ▶(FF)	VOLUME KNOB	select either Tape or Line
3	MENU	☐ MENU	move back to ADVANCED SYSTEM SETUP



## POWER ON TITLES

When you turn your receiver on it displays two lines of text. You can change this text to a personalized message. Make sure you are in the ADVANCED SYSTEM SETUP menu and the remote is in AUDIO mode.

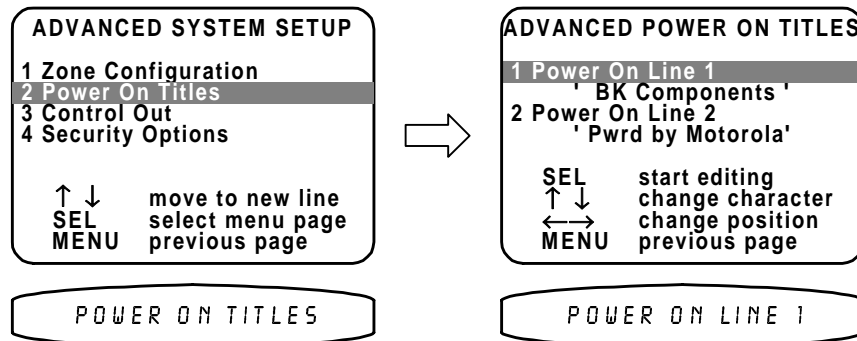


	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Power On Titles
2	SEL or ENTER	■ (ENTER)	activate ADVANCED POWER ON TITLES
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Power On Line 1
4	SEL or ENTER	■ (ENTER)	activate Line 1
5	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	change blinking character
6	◀(REW) or ▶(FF)	VOLUME KNOB	move to new character
7	repeat 5 - 6	repeat 5 - 6	continue changing characters
8	SEL or ENTER	■ (ENTER)	finish editing line 1
9	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Power On Line 2
10	repeat 4 - 8	repeat 4 - 8	edit Line 2
11	MENU	■ MENU	return to ADVANCED SYSTEM SETUP

## CONTROL OUT SETUP


Your receiver's control outputs allow you to control up to 4 external devices such as power amplifiers, projection screens, etc. The control outputs can be programmed on/off depending on which source is selected. They may also have global control for all sources for headphone listening or remote repeater functions.

**Control Out 1** - Control out 1 is dedicated to zone 1 it can be programmed to be on or off for each source. For example you may wish to use the control out to pull down a projection screen for your V1 and DVD sources but roll it up for Tuner and CD. Control out 1 can also be set to HEADPHONE mode. HEADPHONE mode is intended to control external amplifiers to permit headphone listening without the need for manually turning off your external amplifiers. HEADPHONE is a global setting for all sources - if you set HEADPHONE for one source it will be set for all other sources.

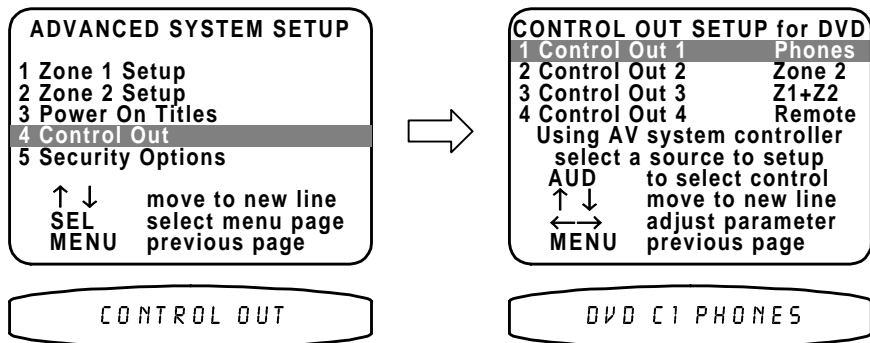

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Control Out
2	SEL or ENTER	■ (ENTER)	activate CONTROL OUT SETUP
3	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Control Out 1
4	desired source	■ (SOURCE) step to source	select source for Control Out setup
5	AUDIO		return control to receiver
6	◀(REW) or ▶(FF)	VOLUME KNOB	set desired control out
7	repeat 4 - 6	repeat 4 - 6	set control out 1 for other sources

**Control Out 2, 3, and 4** - Control out 2, 3, and 4 can be used in either zone. For each source they can be programmed to be on when that source is selected in zone 1, zone 2, or both zones. If the source is selected in neither zone the control out will be off. Control outs 2, 3, and 4 can also be set to REMOTE. In REMOTE mode your receiver acts like a remote repeater - IR remote signals detected by your receiver are repeated on the control out. REMOTE mode is a global override for all sources.

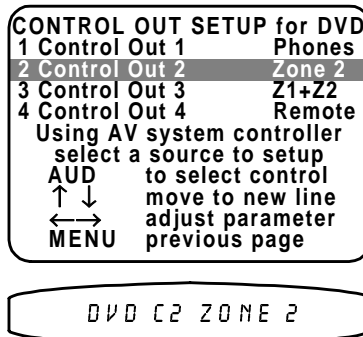

	From Remote	From Front Panel	Action
1	▲(PAUSE) or ▼(STOP)	▲ (UP) or ▼ (DOWN)	move to Control Out 2
2	desired source	■ (SOURCE) step to source	select source for Control Out setup
3	AUDIO		return control to receiver
4	◀(REW) or ▶(FF)	VOLUME KNOB	set desired control out
5	repeat 2 - 4	repeat 2 - 4	set control out 2 for other sources
6	repeat 1 - 5	repeat 1 - 5	set control out 3 and 4
7	MENU	■ MENU	return to ADVANCED SYSTEM SETUP
8	MENU	■ MENU	return to SETUP MENUS
9	MENU	■ MENU	return to MAIN MENU
10	MENU	■ MENU	return to normal operation

After completing all of your advanced settings you may wish to backup the settings. Refer to Memory Backup in the Setup section of this manual.

## FACTORY RESET

Should you ever need to completely reset the receiver to the original factory settings from the front panel press the SLEEP, DOWN, and LEVEL buttons simultaneously. **The receiver will perform a complete reset and erase all user programmed presets, menu settings, and the memory backup if you have performed one.**

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No sound, display will not light	<ol style="list-style-type: none"> <li>1. Power cord not plugged in.</li> <li>2. Power off at AC source.</li> <li>3. Power switch off.</li> <li>4. AC power inlet fuse blown or faulty. *</li> </ol>	<ol style="list-style-type: none"> <li>1. Reconnect power cord.</li> <li>2. Check power at plug.</li> <li>3. Turn power switch on.</li> <li>4. Check for shorts or overloading. Replace fuse.</li> </ol>
No sound, display on.	<ol style="list-style-type: none"> <li>1. Receiver in mute</li> <li>2. Volume control to minimum.</li> <li>3. Wrong source selected.</li> <li>4. Line stage to amp. cables loose or faulty.</li> <li>5. Source to line stage cables loose or faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1. Unmute receiver.</li> <li>2. Increase volume.</li> <li>3. Select source.</li> <li>4. Tighten, repair, or replace cable.</li> <li>5. Tighten, repair, or replace cable.</li> </ol>
Loud hum or buzz on one or more channels	<ol style="list-style-type: none"> <li>1. Poor ground connection in interconnect cables.</li> <li>2. Poor ground in main AC supply.</li> <li>3. Poor ground on cable box.</li> <li>4. Cables running across back of TV.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check all connectors and repair as necessary.</li> <li>2. Check ground of outlet. Have it checked by qualified serviceman.</li> <li>3. Check ground.</li> <li>4. Reposition cables.</li> </ol>
Surround sound does not sound correct.	<ol style="list-style-type: none"> <li>1. Recordings are not Pro Logic.</li> <li>2. Recordings are not Dolby Digital.</li> <li>3. Surround processor not in correct mode.</li> <li>4. Check speaker setup.</li> <li>5. Speakers phase wrong.</li> </ol>	<ol style="list-style-type: none"> <li>1. Play a Pro Logic recording.</li> <li>2. Play a Dolby Digital recording.</li> <li>3. Select proper surround mode.</li> <li>4. Pick correct speaker setup for your system.</li> <li>5. Check wiring of speakers (+) of speaker to (+) on receiver. (-) on speaker to (-) on receiver.</li> </ol>
Remote will not operate unit.	<ol style="list-style-type: none"> <li>1. Batteries missing.</li> <li>2. Batteries dead.</li> <li>3. Batteries inserted wrong.</li> <li>4. Remote signal blocked.</li> <li>5. Lens requires cleaning.</li> <li>6. Wrong programming.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check for batteries inside remote.</li> <li>2. Put in fresh batteries.</li> <li>3. Follow diagram in battery compartment.</li> <li>4. Clear path to front panel of unit.</li> <li>5. Clean lens with a soft cloth.</li> <li>6. Refer to remote manual.</li> </ol>
Video is in Black and White	<ol style="list-style-type: none"> <li>1. Z1 video monitor is selected to the wrong signal type.</li> </ol>	<ol style="list-style-type: none"> <li>1. Select the proper video signal type (composite or S-video).</li> </ol>
One or more channels sound bad	<ol style="list-style-type: none"> <li>1. Internal fuses may have blown. * There are two internal fuses per channel</li> </ol>	<ol style="list-style-type: none"> <li>1. Please contact B&amp;K customer service.</li> </ol>

**\* Note:**

If unit continues to blow power inlet fuses, replace only with fuses of same type and rating.

**DO NOT USE A HIGHER RATED FUSE!**, have it serviced by your dealer or B&K.

# RECEIVER SPECIFICATIONS


<b>Audio Specifications</b>	<b>Video Specifications</b>
Frequency Response: 5 Hz - 20 kHz, +0/-0.5dB	Frequency Response: 20 Hz - 10 MHz ±3dB
Input Sensitivity: 63 mV	Maximum Input Level: 2 V P-P
Maximum Output Level: 9 V rms	Maximum Output Level: 2 V P-P
Signal to Noise Ratio: 89 dB CCIR 2 k Weighted max level	Input Impedance: 75 Ohms
Input Impedance: 50 k Ohms	Output Impedance: 75 Ohms
Output Impedance: 221 Ohms	Video Inputs 7
Noise Test Reference Level: -12.5 dB	Video Outputs 5
Surround Outputs 8	
Audio Analog Inputs 7	
Audio Analog Outputs 5	
Digital Inputs coax/optical 7/ 5	
Digital Outputs coax/optical 1/1	
High Pass Crossover 80 Hz 12dB per octave	
Low Pass Crossover 80 Hz 24dB per octave	

<b>Tuner Specifications</b>	<b>FM Section</b>	<b>Tuner Specifications</b>	<b>AM section</b>
Frequency Range:	87.5 - 107.9 MHz	Frequency Range:	520 - 1670 kHz
Total Harmonic Distortion:	Less than 0.25%	Total Harmonic Distortion:	Less than 0.3%
Frequency Response	20 Hz - 15 kHz, +1/ -3 dB	Sensitivity:	28 dBf
Capture Ratio:	2 dB	Sensitivity:	28 dBf
IHF (Usable) Sensitivity:	12 dBf	Selectivity:	30 dB
Mono/Stereo Sensitivity:	15 / 35 dBf	Antenna Input Impedance:	300 Ohms
Alternate Channel Selectivity:	65 dB		
Signal to Noise Ratio:	70 dB, A Weighted		
Antenna Input Impedance:	75 Ohms		

<b>Amplifier Specifications</b>	<b>Miscellaneous</b>
Power rating: 8 ohms: 105 watts @ 1 kHz	Line voltage: 120/220/240 VAC
Frequency response: 5 Hz - 45 kHz	Power consumption: 1080 watts max
THD (S + N): 0.09 % @ 1 kHz	( 9 amps @ 120 V)
Damping factor: 150	31 watts standby
Current (peak to peak): 28 Amps	Replacement fuses: Line -12 Amp/250 Volt
Slew rate: 14 V/μsec	(slow blow type) Rails - 4 Amp/250 Volt
Dynamic headroom: 1.4 dB	Dimensions: 17"(w)x17"(d)x6.25"(h)
S / N (A-weighted): 95 dB	Weight: 55 pounds
	Warranty: 5 years receiver
	See Warranty page for 1 year remote
	complete explanation

*Specifications subject to change without notice*

# THE MENU SYSTEM

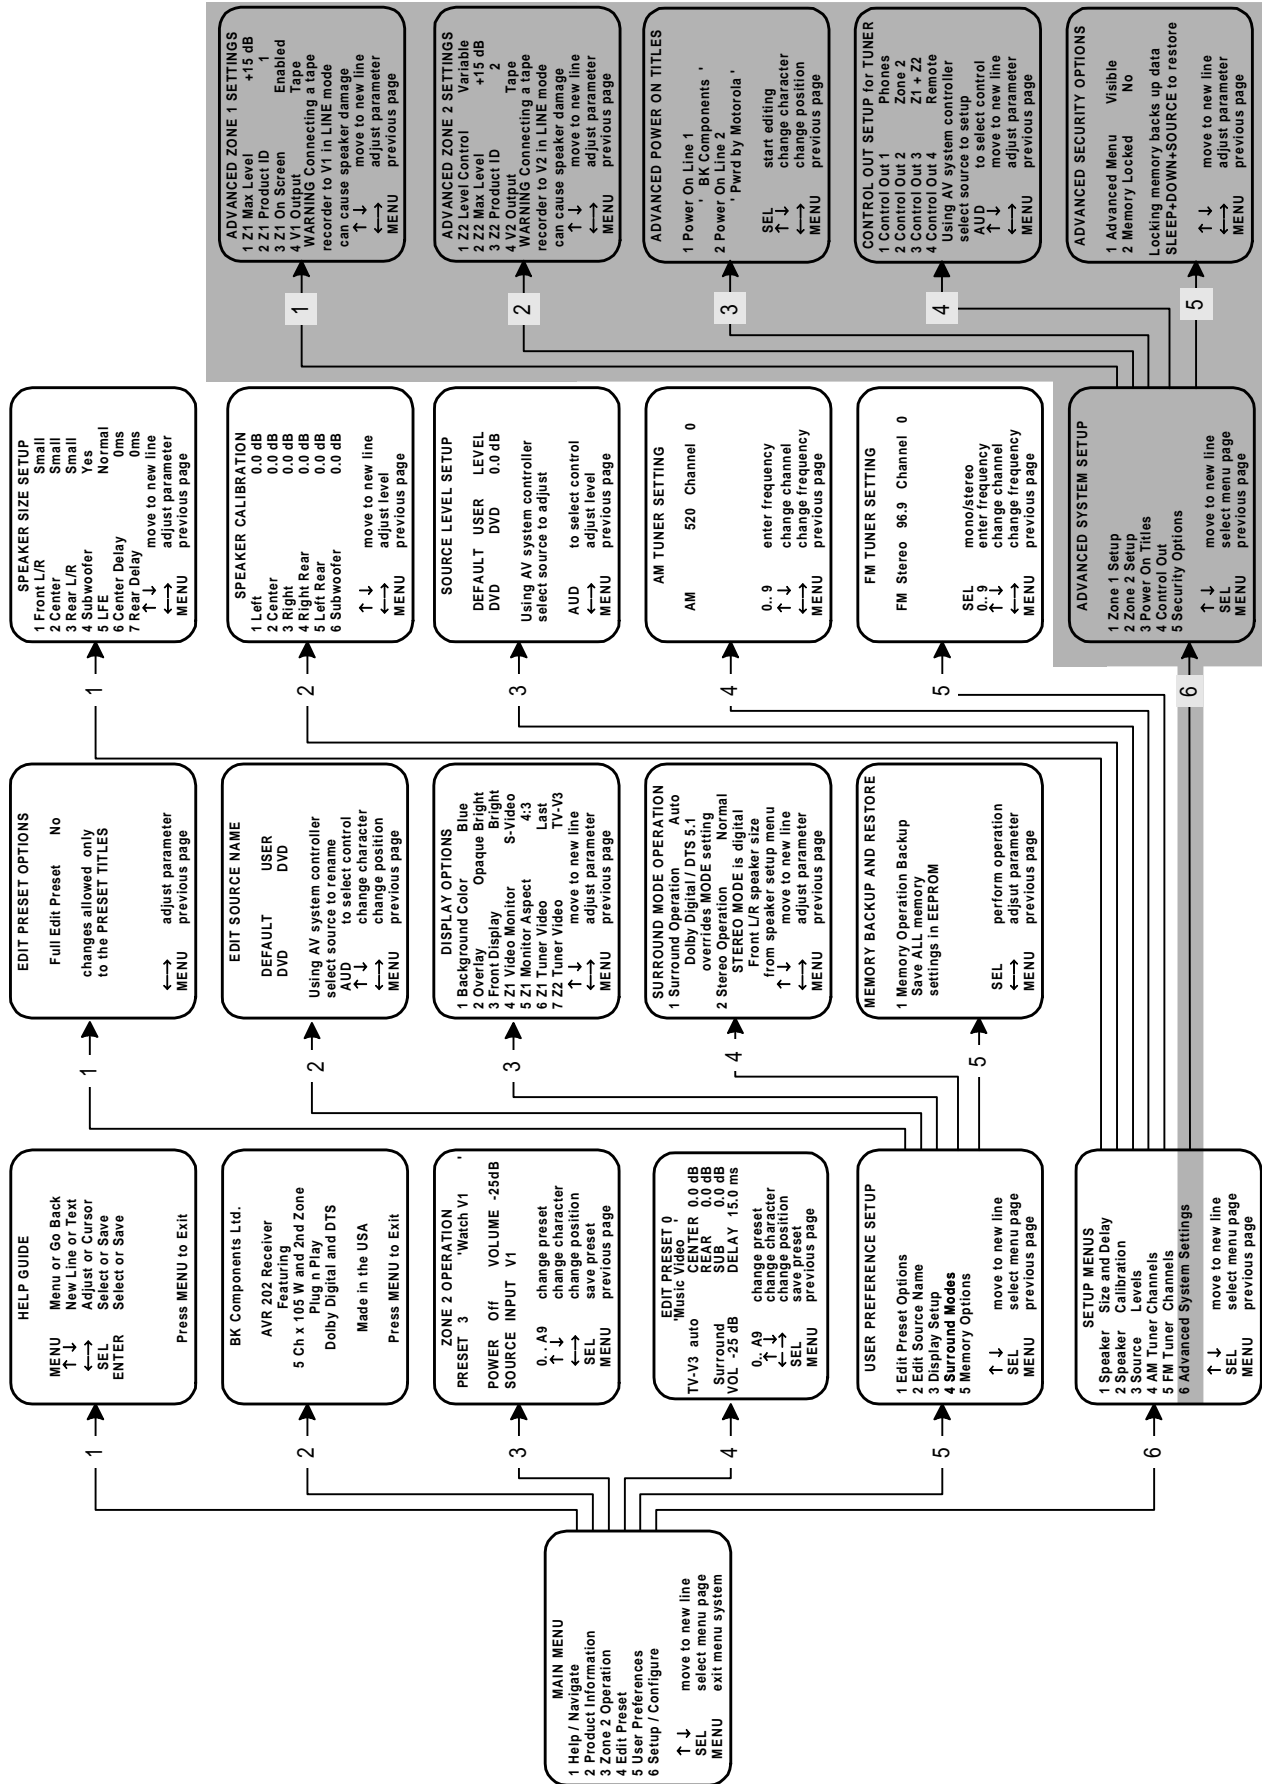



# NOTES

## SPEAKER SIZE SETUP

- |                |          |
|----------------|----------|
| 1 Front L/R    | _____    |
| 2 Center       | _____    |
| 3 Rear L/R     | _____    |
| 4 Subwoofer    | _____    |
| 5 LFE          | _____    |
| 6 Center Delay | _____ ms |
| 7 Rear Delay   | _____ ms |

## SPEAKER CALIBRATION

- |              |       |    |
|--------------|-------|----|
| 1 Left       | _____ | dB |
| 2 Center     | _____ | dB |
| 3 Right      | _____ | dB |
| 4 Right Rear | _____ | dB |
| 5 Left Rear  | _____ | dB |
| 6 Subwoofer  | _____ | dB |

## SOURCE LEVEL

DEFAULT	USER	LEVEL
CD	_____	dB
DVD	_____	dB
TAPE	_____	dB
SAT	_____	dB
TV-V3	_____	dB
V1	_____	dB
V2	_____	dB
TUNER	_____	dB



# NOTES

## FM TUNER SETTING

FM	_____	Channel	0
FM	_____	Channel	1
FM	_____	Channel	2
FM	_____	Channel	3
FM	_____	Channel	4
FM	_____	Channel	5
FM	_____	Channel	6
FM	_____	Channel	7
FM	_____	Channel	8
FM	_____	Channel	9
FM	_____	Channel	10
FM	_____	Channel	11
FM	_____	Channel	12
FM	_____	Channel	13
FM	_____	Channel	14
FM	_____	Channel	15
FM	_____	Channel	16
FM	_____	Channel	17
FM	_____	Channel	18
FM	_____	Channel	19

## AM TUNER SETTING

AM	_____	Channel	0
AM	_____	Channel	1
AM	_____	Channel	2
AM	_____	Channel	3
AM	_____	Channel	4
AM	_____	Channel	5
AM	_____	Channel	6
AM	_____	Channel	7
AM	_____	Channel	8
AM	_____	Channel	9
AM	_____	Channel	10
AM	_____	Channel	11
AM	_____	Channel	12
AM	_____	Channel	13
AM	_____	Channel	14
AM	_____	Channel	15
AM	_____	Channel	16
AM	_____	Channel	17
AM	_____	Channel	18
AM	_____	Channel	19

## LIMITED WARRANTY

B&K Components Ltd., referred to herein as B&K, warrants your B&K equipment against all defects in material and workmanship for a period of five years from the date of purchase. This warranty applies only to the original purchaser and only to equipment in normal residential use and service. Defective equipment must be returned to B&K, prepaid, accompanied by sufficient payment to cover the cost of return shipping and handling, and will be repaired or replaced at the discretion of B&K whose decision as to the method of reparation will be final.

This warranty shall not apply to any equipment which is found to have been improperly installed, incorrectly fused, misused, abused, or subjected to harmful elements, used in any way not in accordance with instructions supplied with the unit, or to have been modified, repaired or altered in any way without the expressed, written consent of B&K. This warranty does not apply to the cabinet, the remote controller, or appearance items such as the faceplate, control buttons, or display lenses, nor does it cover any expenses incurred in shipping the unit to and from the manufacturer's service depot.

No warranty, implied or otherwise created by State law shall extend beyond the terms of this warranty and B&K shall not be liable for any incidental or consequential damage arising out of a defect in material or workmanship of the unit during the terms of this warranty or thereafter. Some States do not allow the exclusion or limitation of incidental or consequential damages and the foregoing exclusions may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from State to State.

No agent, representative, dealer or employee of B&K has the authority to increase or alter the obligations or terms of this warranty.

### **B&K Components Ltd.**

---

**Warranty on Remote control is 1 year parts and labor. Customer is responsible for shipping to and from the factory**

## RETURNING EQUIPMENT

No equipment may be returned to B&K Components Ltd. without a RETURN AUTHORIZATION. Should you find it necessary to return equipment to B&K, for any reason, a RETURN AUTHORIZATION (RA) number must be issued by B&K in respect of the equipment being returned. You may request an RA number by calling B&K at the numbers below. We will need the following information to issue your RA number. Please have it ready before you call.

1. Your name, address, and phone number.
2. The model and serial number of the equipment being returned.
3. A description of the problem being experienced.
4. Your sales receipt.

Your call will be referred to a Technical Service Representative who will work with you to resolve the problem. If it is determined that the unit must be returned for repair, an RA number will be issued.

**B&K Components Ltd. 2100 Old Union Road, Buffalo New York 14227**  
**1-800-543-5252 or 1-716-656-0026**

# NOTES

B&K Components, Ltd.  
2100 Old Union Road  
Buffalo, New York 14227  
716-656-0023  
www.bkcomp.com

*LIST YOUR UNIT INFORMATION HERE*

*MODEL #* \_\_\_\_\_

*SERIAL #* \_\_\_\_\_

*DEALER NAME* \_\_\_\_\_

\_\_\_\_\_

*DEALER PHONE #* \_\_\_\_\_

*SALES PERSON* \_\_\_\_\_

*DATE PURCHASED* \_\_\_\_\_