

DYNAMO LED FLASHLIGHT

(2 Pack)

Model 65207

OPERATING INSTRUCTIONS



Distributed exclusively by Harbor Freight Tools®.

3491 Mission Oaks Blvd., Camarillo, CA 93011

Visit our website at: <http://www.harborfreight.com>



Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL.

Copyright© 2008 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

For technical questions or replacement parts, please call 1-800-444-3353.

SPECIFICATIONS

Lights	3 LED, 252 lux after 1 minute of cranking
Crank Time	1 minute @ 120 RPM = 8-10 minutes of light. (Turn crank handle in clockwise rotation)

UNPACKING

When unpacking, make sure that the 2 items are intact and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at the number shown on the cover of this document as soon as possible.

NOTE: No replacement parts are available.

Use Precautions

1. This product is not a toy. Keep away from children.
2. Inspect before use; do not use if parts are loose or broken.
3. Keep dry; do not use in we conditions.

OPERATION

1. Turn the crank handle in a clockwise rotation (at a fast pace), for at least one minute. This will produce 8-10 minutes of light. See Figure 1.
2. Slide the ON/OFF button, located on the front of the flashlight, forward to turn ON the light. Slide it in the opposite direction to turn the light OFF. See Figure 2.



FIGURE 1

FIGURE 2

