# **BLACK & DECKER**<sup>®</sup>

## Fin Fan Oil Radiator



## First Use Safety Recommendation

Please read through this booklet for safe and efficient use of the appliance. We urge you to read the "Hints" section and also follow all detailed instructions even if you are familiar with using this appliance.

Keep this guide handy for future reference.

## IMPORTANT SAFEGUARDS

 
While using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should be followed, including the following:


- Read all instructions carefully.
- To protect against electrical shock, do not immerse the appliance, cord set or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Keep children & animals away from the appliance & cord set.
- Unplug from outlet when not in use. Unplug before cleaning, changing accessories or approaching parts which move in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
- Do not use outdoors.
- Do not position this appliance directly below a socket outlet.
- Do not allow children or any person unfamiliar with these instructions use this appliance.
- Always leave sufficient space around the heater for ventilation.
- Do not let the power cord hang over the edge of tables or counters, or touch hot surfaces.
- Always route the cord carefully so it does not create a tripping hazard.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for anything other than the intended use.
- The use of accessory attachments not recommended by this appliance manufacturer may cause hazards.
- · Surfaces may be hot during use and during the cool down period
- Do not leave this appliance unattended in use.
- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- If an extension cord is used, please ensure it is correctly wired and rated for use with this appliance. If in doubt, consult a qualified electrician. The extension cord should be arranged so that it will not drape over the counters or table tops where it could be pulled by children or tripped over.


### SAVE THESE INSTRUCTIONS

#### Part identification

- 1 Thermostat dial
- 2 Low power button
- 3 High power button
- 4 Fan Switch
- 5 Handle
- 6 Heating Fins
- 7 Wheel support
- 8 Wheel clamp
- 9 Wheel
- 10 Wing nut




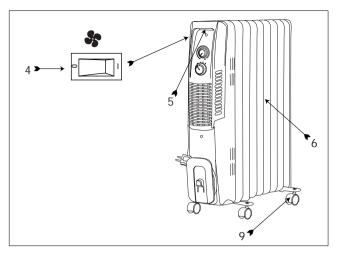


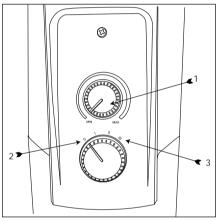



Fit wing nut (10)

  ...with wheels "out"



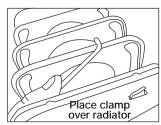




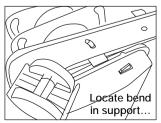





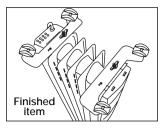

#### Features

- OR11FC 2200W
- 3-Heat settings
- Wheels

#### How to use your Fan Heater

*Caution:* This product is intended for heating rooms. Do not use this appliance for any other purpose. For indoor, domestic use only.

#### Assembly:

- Fit the wheels before using the appliance. Never use the appliance without the wheels fitted.
- Fit a wheel into a wheel support (6) making sure to align the flat portions of each item. Fit a washer over the threaded portion of the wheel, then fit the nut & tighten it. Repeat for the other wheel then repeat the process to assemble the other wheel support.
- Place the heater on the floor upside down. It is quite normal to hear the oil moving inside the radiator.
- Holding the bent end, insert the wheel clamp (7) between the last 2 heating fins. Place one assembled wheel support over this, & fit the bent end of the clamp through the hole in the support.
- Slide the wheel support towards the bend in the wheel clamp, rotating the clamp as it moves until the free end can be fitted through the other hole.
- Tighten the wing nut onto the free end of the clamp.
- · Repeat this assembly process for the other wheel assembly.

*Note:* When fully assembled, the 2 sets of wheels should be facing away from each other (wheels out). Put the heater into its normal upright position. Wait for at least three minutes before operating the appliance.

#### Heater Operation:

- Fully unwind the cord & place the unit on a flat, even floor away from any obstructions and pointing towards the area of the room to be heated.
- As a safety mechanism, the oil radiator will not function if the unit is not on a level surface.
- Connect the heater to an electrical supply, leaving sufficient space around it for ventilation.
- Rotate the thermostat dial (1) to maximum and rotate the heat setting dial to the required heat, 1 low, 2 medium, 3 high.
- Once the room is at a comfortable temperature, the thermostat dial (1) should be slowly turned in the opposite direction until the appliance just stops working.
- The temperature will be maintained at the present level by the thermostat inside the unit.
- When it is no longer necessary to heat the room, return the heating buttons to the off (0) position to turn the unit off and unplug it from the mains supply.

*Note:* To heat the room more quickly the fan heater can be used. This can be activated by pressing the fan button to the on position.

Note: This appliance must be attended in use.

Warning: In order to avoid overheating, do not cover this appliance.

#### Safety of others

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.

#### Safety Fuse:

- In case of overheating, a cut-out will operate and the appliance will stop working. If the appliance stops operating, return all heating buttons to the off (0) position, unplug the appliance and allow it to cool for at least 10 minutes before attempting to use it again.
- In extreme conditions, a back-up cut-out will operate. This will not re-set & the appliance will need to be repaired by a qualified person.

#### How to take care of your Radiator

#### Cleaning your Radiator

- Switch off the appliance before cleaning, changing accessories or approaching parts which move in use.
- Do not immerse the appliance, cord set or plug in liquids
- Wipe the appliance with a damp cloth & dry thoroughly before using.
- · Never use detergents or abrasives to clean this appliance.

#### Storing your Radiator

• When the appliance is to be stored, return the heating buttons to the off (0) position and unplug it from the mains supply.

#### Additional Safety Warnings:

- Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Use this appliance on a level surface, away from steps of stairs.
- Combustible materials such as furniture, pillows, bedding, papers, clothes and curtains must be kept at least 1m from the appliance.
- Do not allow anything to block the vents of the appliance. A gap of at least 50cm is advised.
- Always use and store in a dry area.
- Do not use in areas where gas, paint or other flammable goods may be present.
- This heater is filled with a precise quantity of special oil. Repairs requiring opening of the oil container are
  only to be made by the manufacturer or his service agent who should be contacted if there is an oil leak.
- When scrapping the heater, follow the local regulations concerning the disposal of oil.
- Never pull the unit by the cord. Always use the handle provided when moving the appliance.
- Always disconnect the appliance from the socket outlet before moving it to a new location.
- Keep the cord set away from hot parts of the appliance.
- This appliance must be earthed.
- This appliance is fitted with a safety device which will prevent the heater working unless it is in its normal, upright working position.



#### Protecting the environment

Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose it off with other household waste. Make this product available for separate collection.

Separate collection of used products and packaging allows materials to be recycled and used again. Use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Black & Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf. You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. A list of authorised Black & Decker repair agents and full details of our after-sales service and contact are available on the Internet at: www.2helpU.com

#### حماية البيئة

يجب عدم التخلص من هذا المنتج مع بقية النفايات المنزلية.

إذا وجدت في يوم من الأيام أنك بحاجة لشراء جهاز بلاك أند ديكر جديد، أو لم تعد بحاجة للجهاز القديم، لا تتخلص منه مع النفايات المنزلية الأخرى. جهز هذا المنتج للإستلام المنفصل.

الإستلام المنفصل للمنتجات المستعملة ومواد التغليف يسمح بإعادة تصنيع المواد واستعمالها من جديد. إستعمال المواد المعاد تصنيعها يساعد على منع التلوث البيئي ويقلل الطلب على المواد الأولية.

الأنظمة المحلية قد تنص على ضرورة الإستلام المنفصل للمنتجات الكهربائية من المنازل، في مواقع البلدية للنفايات أو بواسطة بائع التجزئة عندما تشتري منتجاً جديداً.

توفر بلاك أند ديكر التسهيلات لاستلام وإعادة تصنيع منتجات بلاك أند ديكر عندما تصل إلى نهاية حياتها العملية. للإستفادة من هذه الخدمة، يرجى إعادة جهازك إلى أي وكيل تصليح معتمد والذي سيقوم باستلامه بالنيابة عنا. يمكنك معرفة موقع أقرب وكيل تصليح معتمد بالنسبة لك بمراجعة مكتب بلاك أند ديكر المحلي على العنوان المبين في هذا الكتيب. تتوفر قائمة بأسماء وكلاء التصليح المعتمدين من بلاك و ديكر، كما تتوفر تفاصيل كاملة عن خدمات ما بعد البيع وعناوين الاتصال على شبكة الإنترنت : www.2helpU.com

#### Names & Addresses for Black & Decker Service Concessionaries

Afghanistan: Ishan National Co., Opp. Ministry of Justice, Kabul. Tel.: +93-2-2101727. Algeria: SARL Outillage Corporation, 04 Route De Dely Brahim Cheraga, Alger. Tel.: +213-21-364363/508, Fax: +213-21-369667. Bahrain: Fawaz Al Zayani, P.O.Box 26563, Adliya, Manama. Tel.: +973-17-715252/712756, Fax: +973-17-713789. Bangladesh: Ultra Corporation, 8, Kushol Centre, Uttara, Malija, Maliana, Hel. 47/31/71/32/21/12/30, Fax. 47/31/71/31/32 Bigadosh, Olida Colporation, O. Rosho, Settas, Dhaka 1230. Tel. + 880-2-891927/21/9756 Ext. 28, Fax: +880-2-98817167. Egypt: Anasia Egypt for Trading S. A. E., P.O. Box 2443, 110 Mostafa Refaat Street, Sheraton Heliopolis 11361, Cairo. Tel.: +20-2-2684159, Fax: +20-2-2684169. Ethiopia: Tewfik Sherif & Co. Ltd., P.O.Box 5583, Debre Zeit Road, Addis Ababa, Tel.: +251-1-651700/601, Fax: +251-1-650570. India: Gryphon Impex Pvt. Ltd., D-6/4, Okhla Industrial Area, Phase-I, New Delhi-110020. Tel.: +91-11-26372602-4, Fax: +91-11-26372601. Iran: Tehran - Service Centre of Iran, No 510, South Karger Ave, Below Pasteur Sg. Tehran. Tel.: +98-21-6490608/0656/6407672. Kish Island: Cayhan Electric Co., No. 69, Paradise Shopping Centre, Kish Island. Tel.: +98-76444-22894. Jordan: Bashiti Hardware, P.O.Box 1564, TLA Ali, Amman. Tel.: +962-6-5350009/4770741, Fax: +962-6-5350012/4789783. Kenya: Zylog Enterprises, IPS Building, Kuanda Street, P.O.Box 40877, Nairobi. Tel.: +254-2-338188/199, Fax: +254-2-330642. Kuwait: Al Omar Technical Co., P.O.Box 4062, 13041 Safat, Kuwait. Tel.: +965-4848595/0039, Fax: +965-4845652. Lebanon: Est. F.A. Kettaneh SA, PO.Box 110242, Dora Highway, Kettaneh Building, Beirut. Tel.: +961-1-255860/6, Fax: +961-1-255891. Libya: El Ghoul Brothers, P.O.Box 348, Islamic Call Bidg., Office 201-202, Benghazi. Tel.: +218-61-9097681/4183, Fax: +218-61-9094123. Madagascar: Group Tana Confort S. A. R. L., B. P. 1770, Antananarivo. Tel.: +261-20-2264505, Fax: +261-20-2264244. Malta: John G. Cassar Ltd., 36 Victory Str, Qormi QRM 06, Malta. Tel.: +356-21-493251, Fax: +356-21-483231. Mauritius: Happy World Marketing Ltd., Block 2, Industrial Estate, Coromandel, P.O.Box 429, Port Louis. Tel.: +230-2076700, Fax: +230-2337330/7400. Nepal: Universal Trading Centre, P.O.Box 1947, Tripureswor, Kathmandu. Tel.: +977-1-262192/260587/785, Fax: 261154. Nigeria: Amin Bros. Eng. Co. Ltd., 30A (Plot 1291), Akin Adesola Street, Victoria Island, Lagos. Tel.: +234-1-3201778, Fax: +234-1-2613667. Oman: Oman Mktg. & Service Co., P.O.Box 2734, Ruwi, Muscat. Tel.: +968-560232, Fax: +968-560255. Pakistan: Karachi - Ammar Service & Spares, 60, Bank Arcade, Serai Road, Karachi. Tel.: +92-21-2426905, Fax: 2427214/5243. Pakistan: Lahore - Electronics Inn, 212-G Raja Centre, Main Market, Gulberg, Lahore. Tel.: +92-42-5756750. Philippines: Modern House International Enterprises, 213 Rizal Ave. Extension, between 2nd and 3rd Ave. Kalookan City, Tel: +62-36-50 Biologian Hamppines. Modern Hodge International Life prises, 216 Market Alexandre, Derwein and +974-4650880/4446868, Fax: +974-4441415. Saudi Arabia: Dammam - Ebrahim Fawaz Al Zayani, P.O.Box 76026, Al Raka, Dammam. Tel.: +966-3-8140914, Fax: +966-3-8140824. Jeddah: Anasia Trading Co. Ltd. Caravan Shopping Centre, Hall Street. P. O. Box 50959, Jeddah-21477, Tel. 02 650 0948/02 636 3825, Fax 02 638 0720. Madina: Garziz Trdg. for Bldg. Mat & Decor., P.O.Box 3364, Madina. Tel.: +966-4-8261490/8227636, Fax: +966-4-8265741. Riyadh: Anasia Trading Co. Ltd. New Akaria Building, 60th St., 3rd Floor, Building # 4, Office # 3402, Malaz. P. O. Box, 18689, Riyadh-11425, Tel.: 01 478 2549, Fax: 01 478 2761. Yanbu: bull St., 310 Flob, Bullotting # , Oilice # 3402, Mialz, F. O. Box, Foods7, Kiyadi F1422, Fei, Of 470 2347, Fax, 04 76 2761, Tariba, Bin Afif, P.O.Box 530 Yanbu, Al Bahr, Tel.: +966-4-3222626/8867, Fax: +966-4-3222210. Sri Lanka: Delmege Gen. Equip. Pvt. Ltd., No. 428/TAT. B., Jaya Mawatha (Darley Road), Colombo-10. Tel.: +94-11-2665914, Fax: +94-11-2665915. Sudan: United Distribution Company, P.O.Box 325, Sayed Abdul Rehman Street, Khartoum. Tel.: +249-11-772612/777296, Fax: +249-11-770919. Tanzania: General Motors Investment, P. O Box 16541, 14 Vingunguti Nyerere Road, Dar Es Salaam. Tel.: +255-22-2862661/5022, Fax: +255-22-2862667/5412/3. Tunisia: STE Tunisienne De Quincaillerie Stg., Nvelle Z.I 2013, Ben Arous, Tunis, Tunisia, Tel: +216 71386102, Fax: +216 71380412. UAE: Abu Dhabi - Light House Electric., P.O.Box 120, Abu Dhabi. Tel.: +971-2-6726131, Fax: +971-2-6720667. Dubai - Black & Decker (O) A.G., P.O.Box 5420, Dubai. Tel.: +971-4-7028234/233, Fax: +971-4-2822765. Ideal Mach. & Equipt. R. W/shop P.O.Box 37116, Al Quoz, Dubai. Tel.: +971-4-3474160, Fax: +971-4-3474157. Sharjah - McCoy Middle East LLC, P.O.Box 20228, Sharjah. Tel.: +971-6-5336321, Fax: +971-6-5336320. Uganda: The Building Centre, Kitgum House, 52 Station Road, P.O.Box 7436, Kampala. Tel.: +256-41-234567, Fax: +256-41-236413. Yemen: Aden - Middle East Trad. Co. Ltd., Mulla Dakka, Aden. Tel.: +967-2-240950, Fax: +967-2-240952. Sana'a: Middle East Trad. Co. Ltd., P.O.Box 12363, Hayel Street, Sana'a. Tel.: +967-1-204201, Fax: +967-1-204204. Taiz: Middle East Trad. Co. Ltd., Campa area near Al-Kair mosque, Taiz. Tel.: Saira a. tel., +707-1-204201, Fax. +707-1-204204, Taiz. Middle Last Had. Co. Ed., Campa area hear Arkain Hosque, Haz. tel., +967-4-231610/232033, Fax: +967-4-219869. Zimbabwe: J.D.Distributors, P.O.Box 226, 17 Bessemer Road, Graniteside, Harare. Tel.: +263-4-753913-7, Fax: 753918. Cyprus: G. Kyprianou Trading Co Ltd., 51 Prodromou AVE. Strovolos, 1681, P.O. Box 23318 Nicosia Cyprus. Tel.: 00357 22 468170/1, Fax: 00357 22 468186, Email gktltd@spidernet.com.cy

# **BLACK** & DECKER

WARRANTY REGISTRATION CARD

YOUR NAME/الإسـم

العنـوان YOUR ADDRESS

— الرمز البريدي POSTCODE

\_\_\_تاريخ الشراء DATE OF PURCHASE

\_\_\_ إسم و عنوان البائع/DEALER'S NAME & ADDRESS

PRODUCT MODEL NO. OR11FC