 


LifeFitness

Arctic Silver 95RE Recumbent Bike

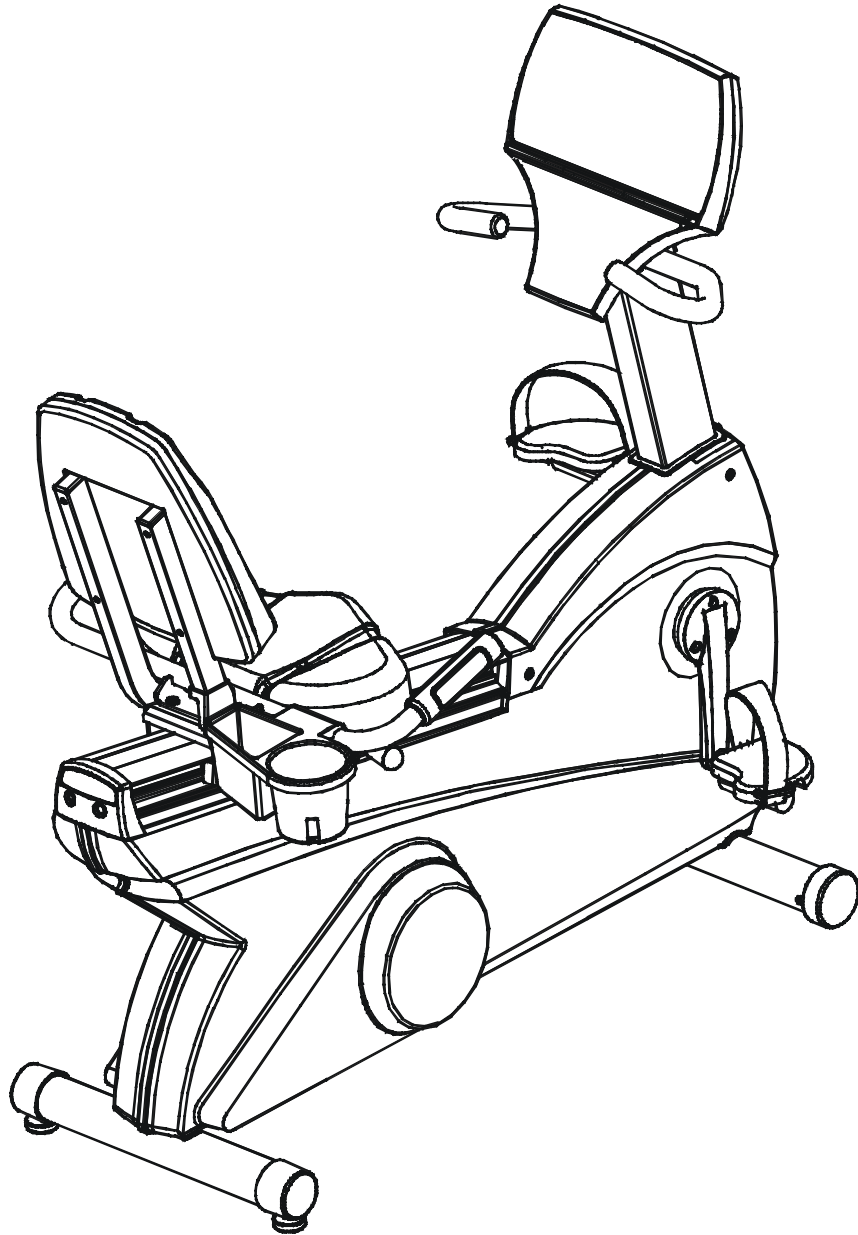


Customer Support Services
PARTS MANUAL

rev 01 May 2008

OPERATION MANUAL – (ENG) OPERATION MANUAL – (F/S/P) OPERATION MANUAL – (G/D/I) OPERATION MANUAL – (JAP) OPERATION MANUAL – (CHI) OPERATION MANUAL – (KOR) OPERATION MANUAL – (RUS)	M051-00K39-A133 M051-00K39-A134 M051-00K39-A135 M051-00K39-A136 M051-00K39-A137 M051-00K39-A138 M051-00K39-A139
POWER SUPPLY: 12V; 4.5A Without Line Cord	118E-00001-0161
LINE CORD: DOM. 10A 125V	0017-00003-0704
LINE CORD: CON 10A 250V	0017-00003-0691
LINE CORD: 10A; UK	0017-00003-0889
LINE CORD: AUSTRALIA	0017-00003-0918
HARDWARE BAG	GK39-00002-0009
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K39-B012

	Page
CONSOLE ASSEMBLY	4
CONSOLE SUPPORT ASSEMBLY	6
SHROUDS, END CAP, CRANKARMS AND PEDALS	7
BELTS	8
RESISTOR ASSEMBLY	9
POWER CONTROL BOARD	10
ALTERNATOR W/PULLEY	11
CRANKSHAFT AND BEARING ASSEMBLY	12
INTERMEDIATE SHAFT AND BEARING ASSEMBLY	13
IDLER BRACKET ASSEMBLY	14
SEAT ASSEMBLY	15
SEAT BOTTOM ASSEMBLY	16
SEAT FRAME ASSEMBLY	17
SEAT PADS AND ACCESSORY TRAY	18
EXTRUSION ASSEMBLY	19
SEAT LOCKING ASSEMBLY	20
WHEEL AND LEVELER	21
CABLES	22

 The version –04 95Re will have both Telemetry and Life Pulse sensors for reading Heart Rate.

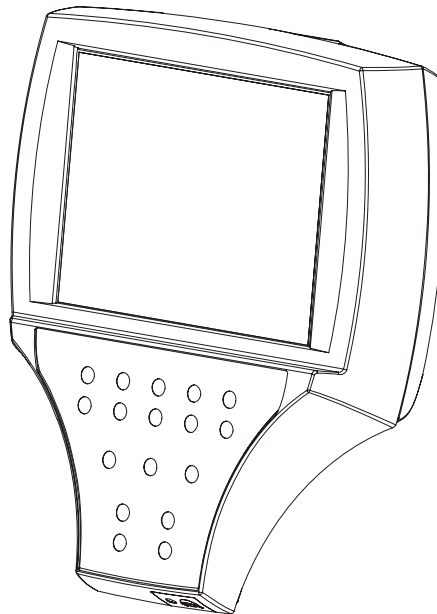


CONSOLE ASSEMBLY	
GK63-00002-0063	KIT: SERVICE CONSOLE W/FM NTSC ENG
GK63-00002-0064	KIT: SERVICE CONSOLE W/FM NTSC SPN
GK63-00002-0065	KIT: SERVICE CONSOLE W/FM NTSC JAP
GK63-00002-0066	KIT: SERVICE CONSOLE W/FM NTSC FRN
GK63-00002-0067	KIT: SERVICE CONSOLE W/FM NTSC POR
GK63-00002-0068	KIT: SERVICE CONSOLE W/FM PAL ENG
GK63-00002-0069	KIT: SERVICE CONSOLE W/FM PAL GER
GK63-00002-0070	KIT: SERVICE CONSOLE W/FM PAL SPN
GK63-00002-0071	KIT: SERVICE CONSOLE W/FM PAL FRN
GK63-00002-0072	KIT: SERVICE CONSOLE W/FM PAL ITL
GK63-00002-0073	KIT: SERVICE CONSOLE W/FM PAL DUT
GK63-00002-0074	KIT: SERVICE CONSOLE W/FM PAL POR


OVERLAY BEZEL ASSEMBLY	
Part Number	Description
AK63-00247-0001	BZL/SW W/OVERLAY ASSY: MFG; ENG
AK63-00247-0003	BZL/SW W/OVERLAY ASSY: MFG; GER
AK63-00247-0004	BZL/SW W/OVERLAY ASSY: MFG; SPN
AK63-00247-0006	BZL/SW W/OVERLAY ASSY: MFG; JAP
AK63-00247-0007	BZL/SW W/OVERLAY ASSY: MFG; FRN
AK63-00247-0008	BZL/SW W/OVERLAY ASSY: MFG; ITL
AK63-00247-0009	BZL/SW W/OVERLAY ASSY: MFG; DUT
AK63-00247-0010	BZL/SW W/OVERLAY ASSY: MFG; POR

ARCTIC SILVER 95RE

Console and Related Components

  
95RE-0XXX-04
S/N 100000-UP

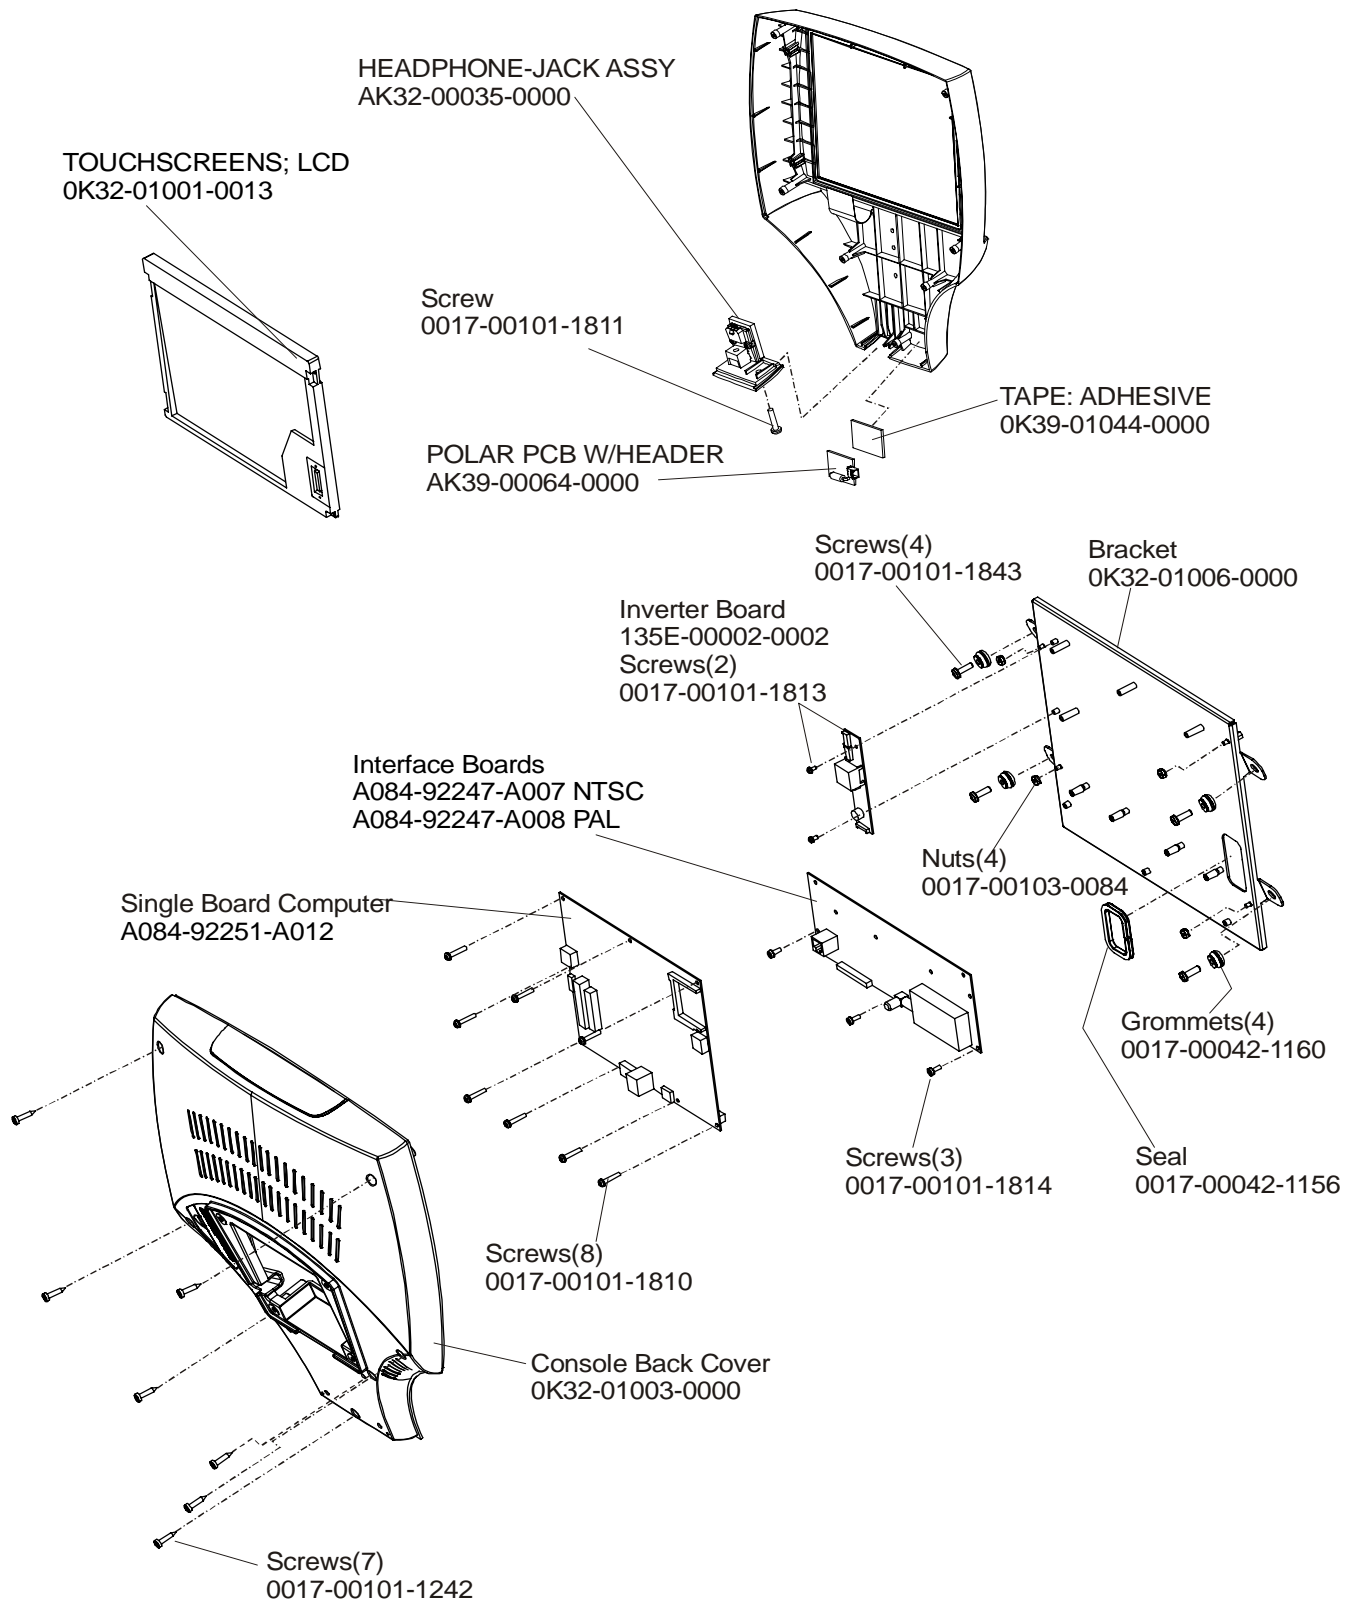


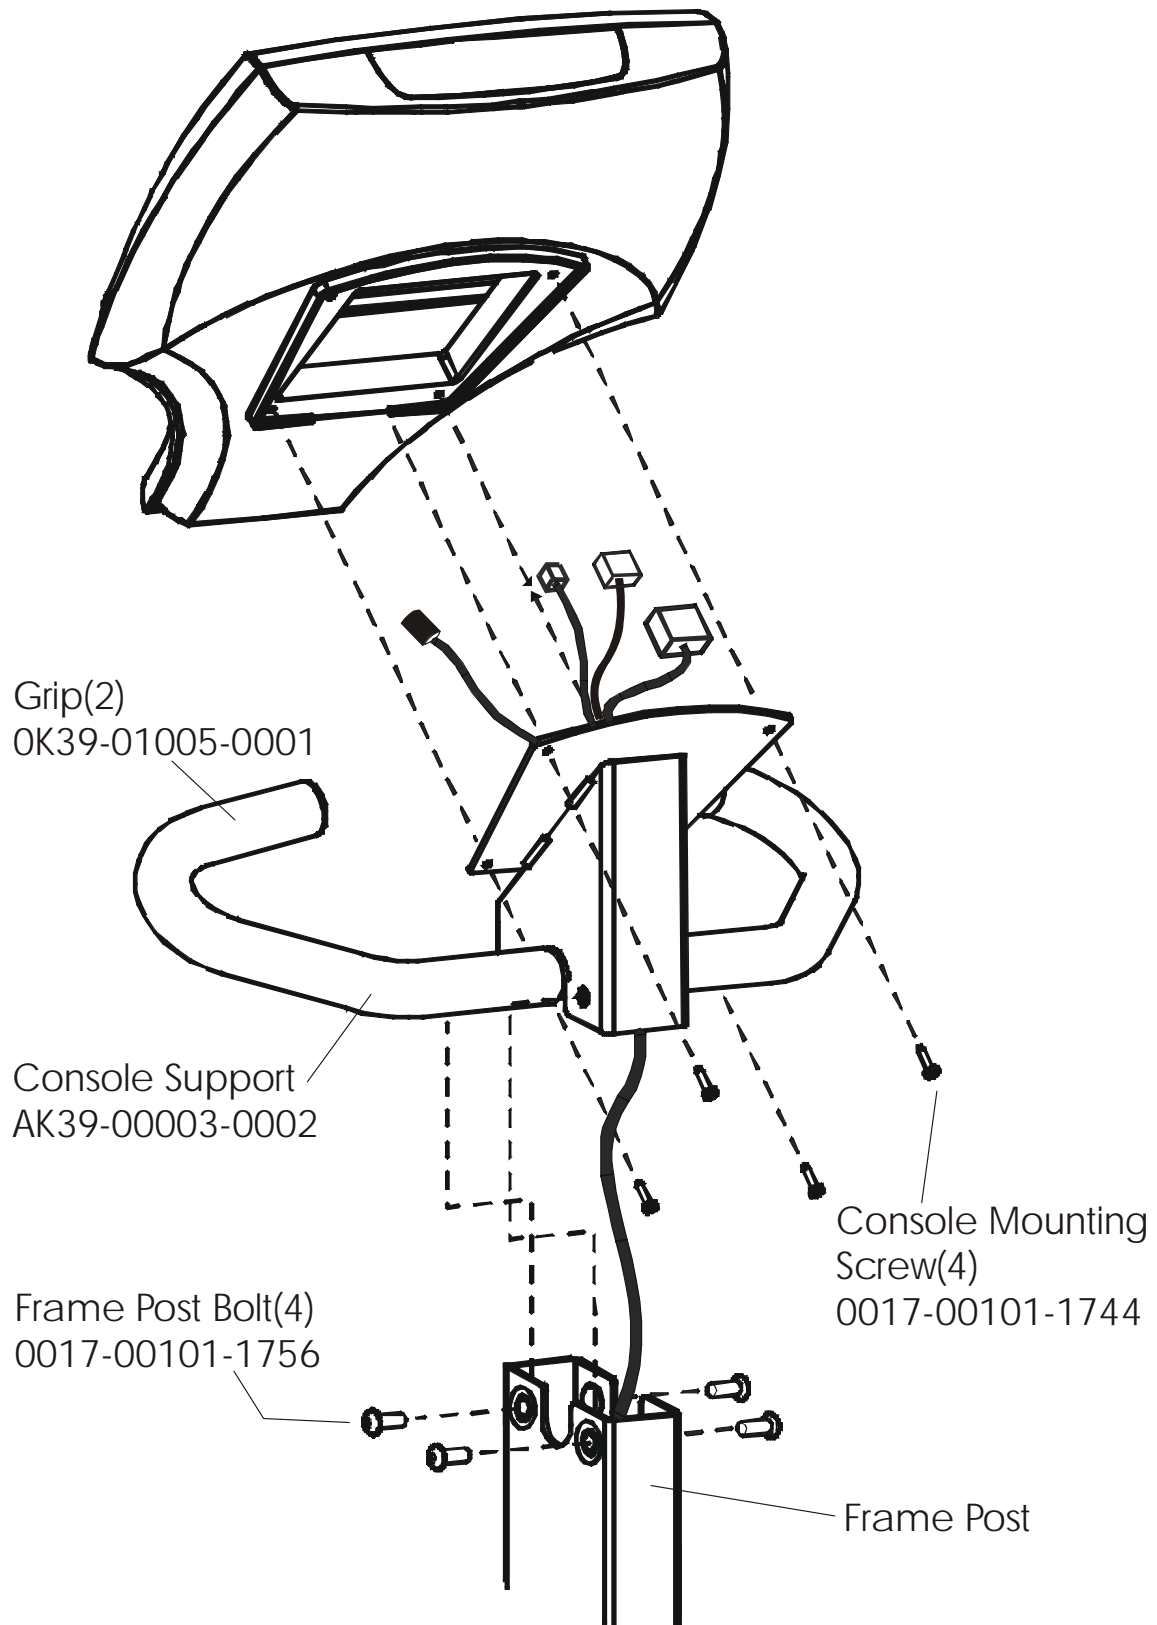

ARCTIC SILVER 95RE
Shrouds, End cap and Pedals

  
95RE-0XXX-04
S/N 100000-UP

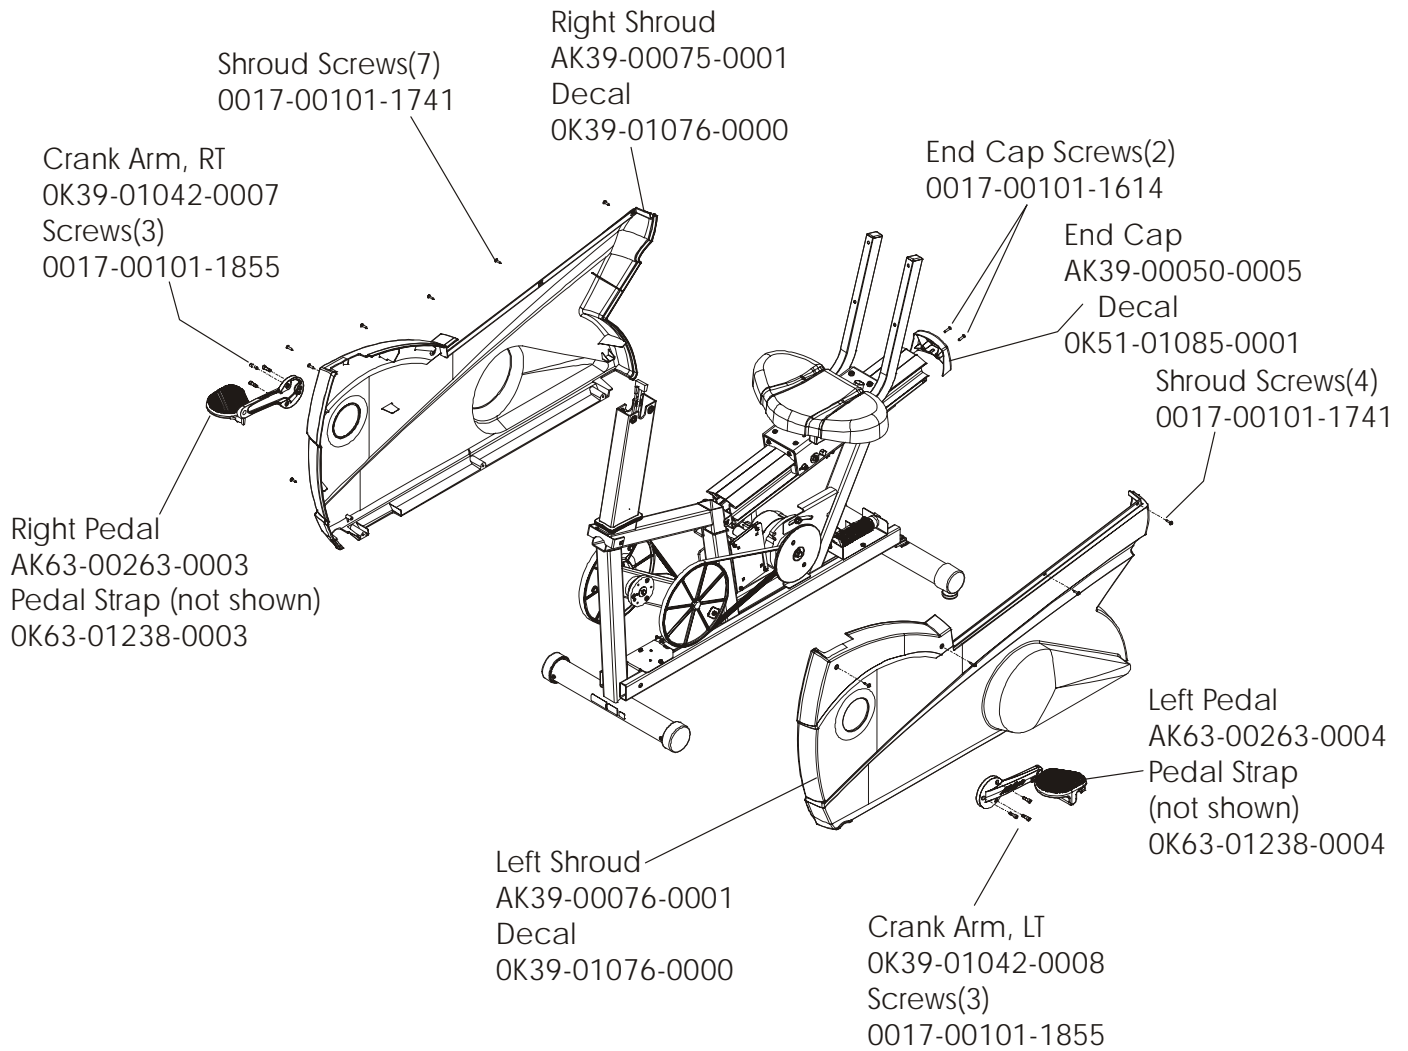

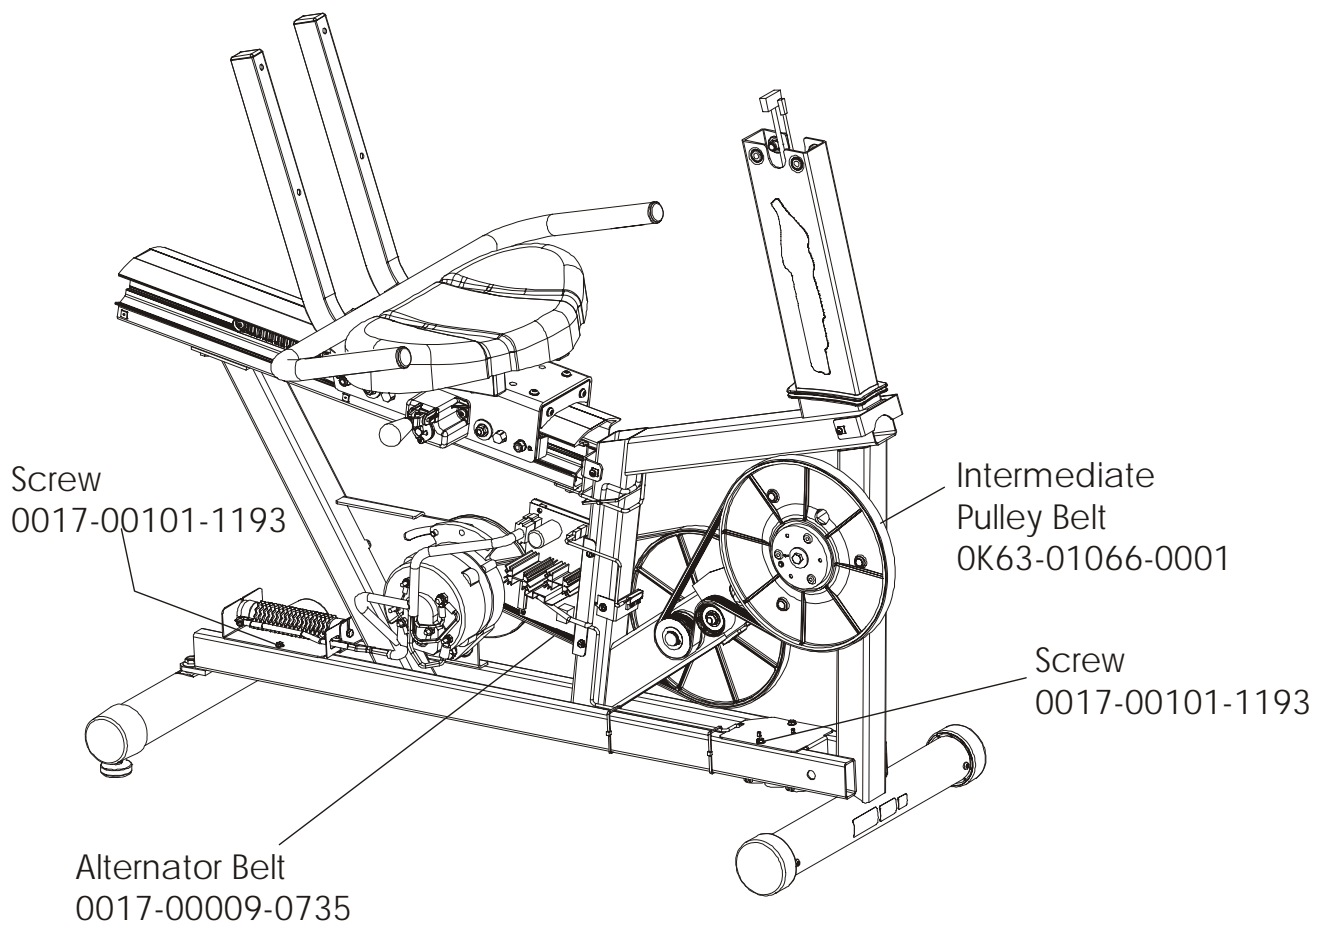

ARCTIC SILVER 95RE
Resistor Assembly-AK39-00020-0001

 
95RE-0XXX-04
S/N 100000-UP

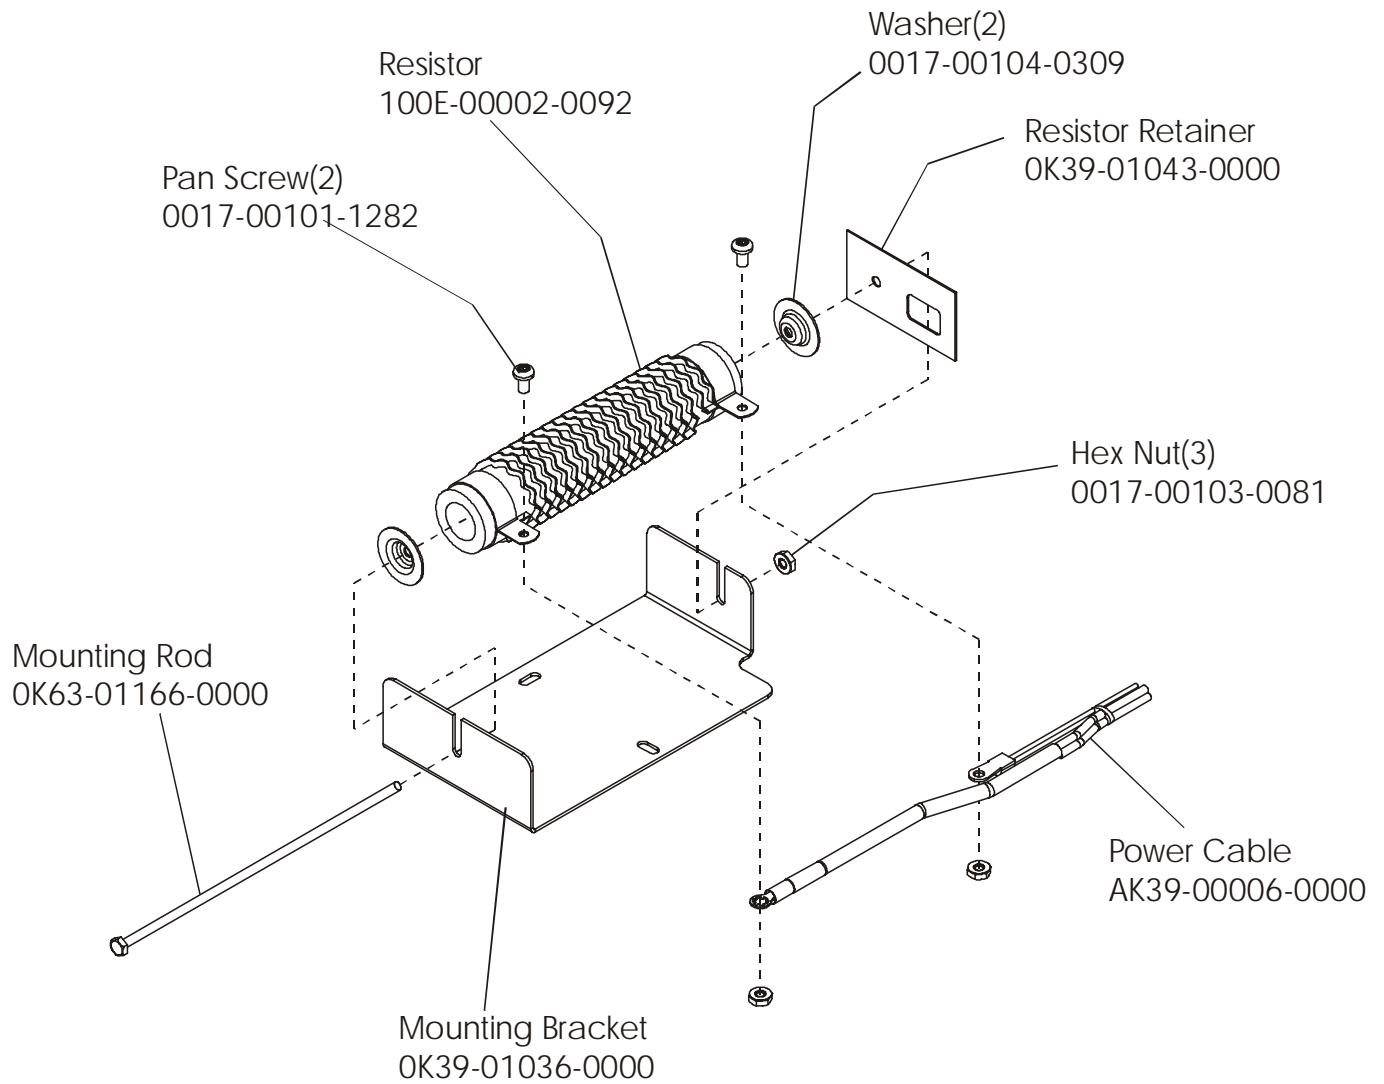

ARCTIC SILVER 95RE
Power Control Board

95RE-0XXX-04
S/N 100000-UP

 
Assembly Number - AK39-00092-0000

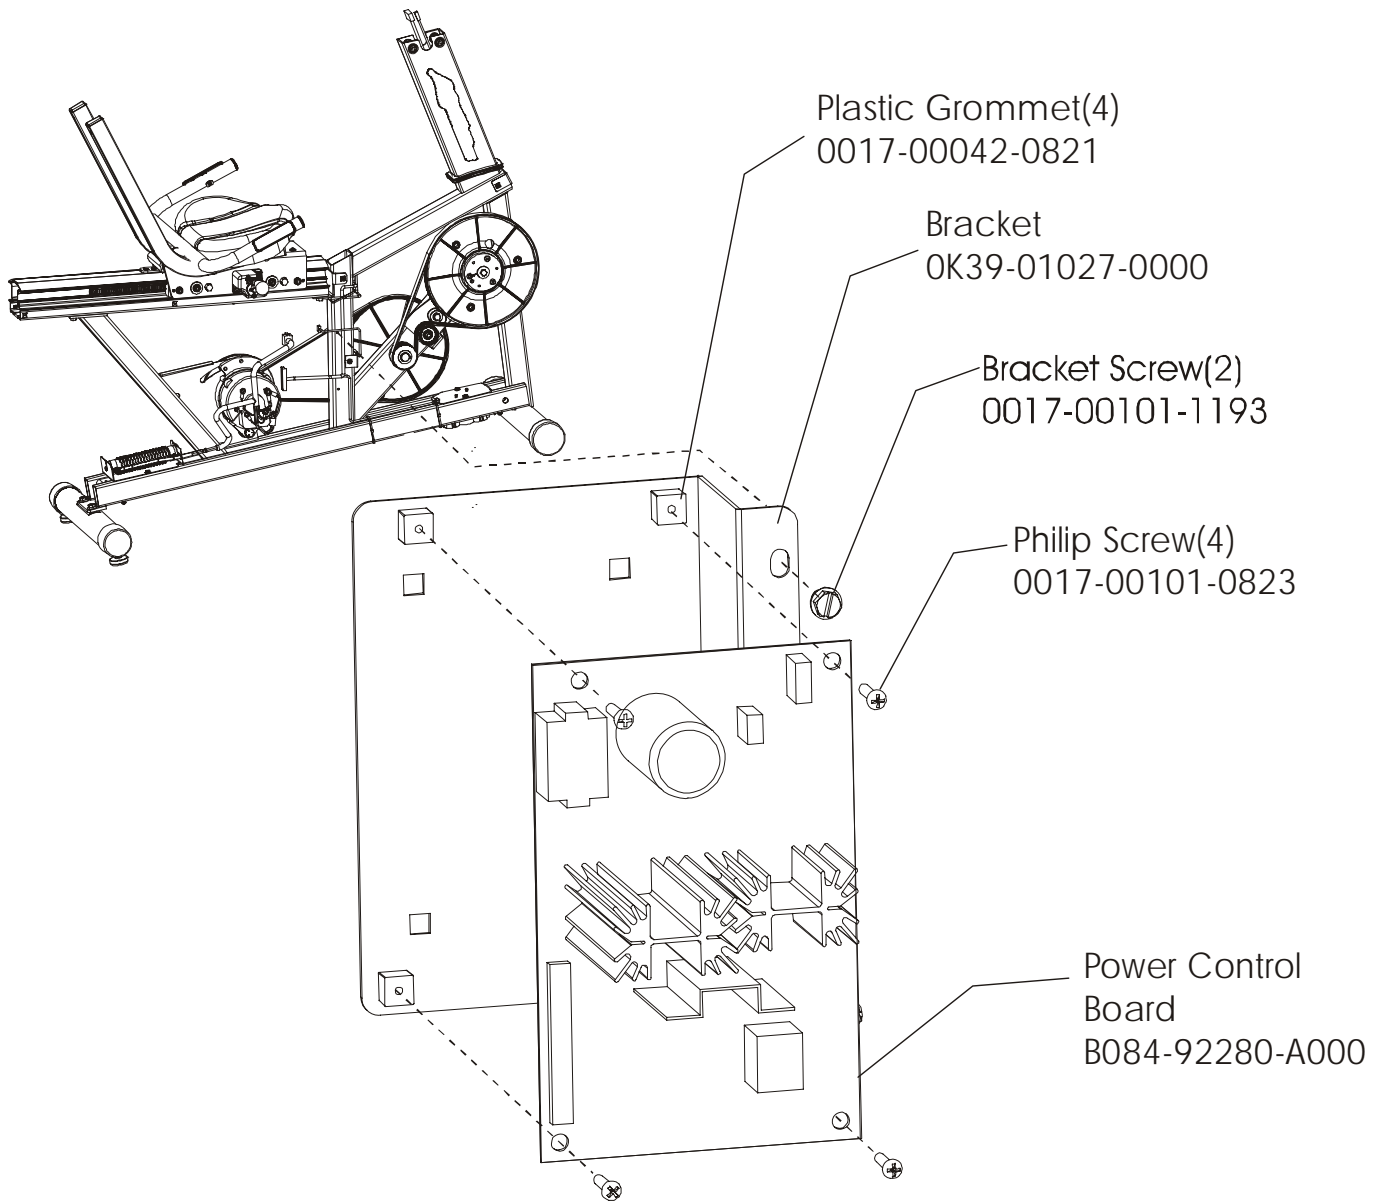

ARCTIC SILVER 95RE
Alternator w/pulley Assembly

95RE-0XXX-04
S/N 100000-UP

 
Assembly Number – AK63-00093-0000

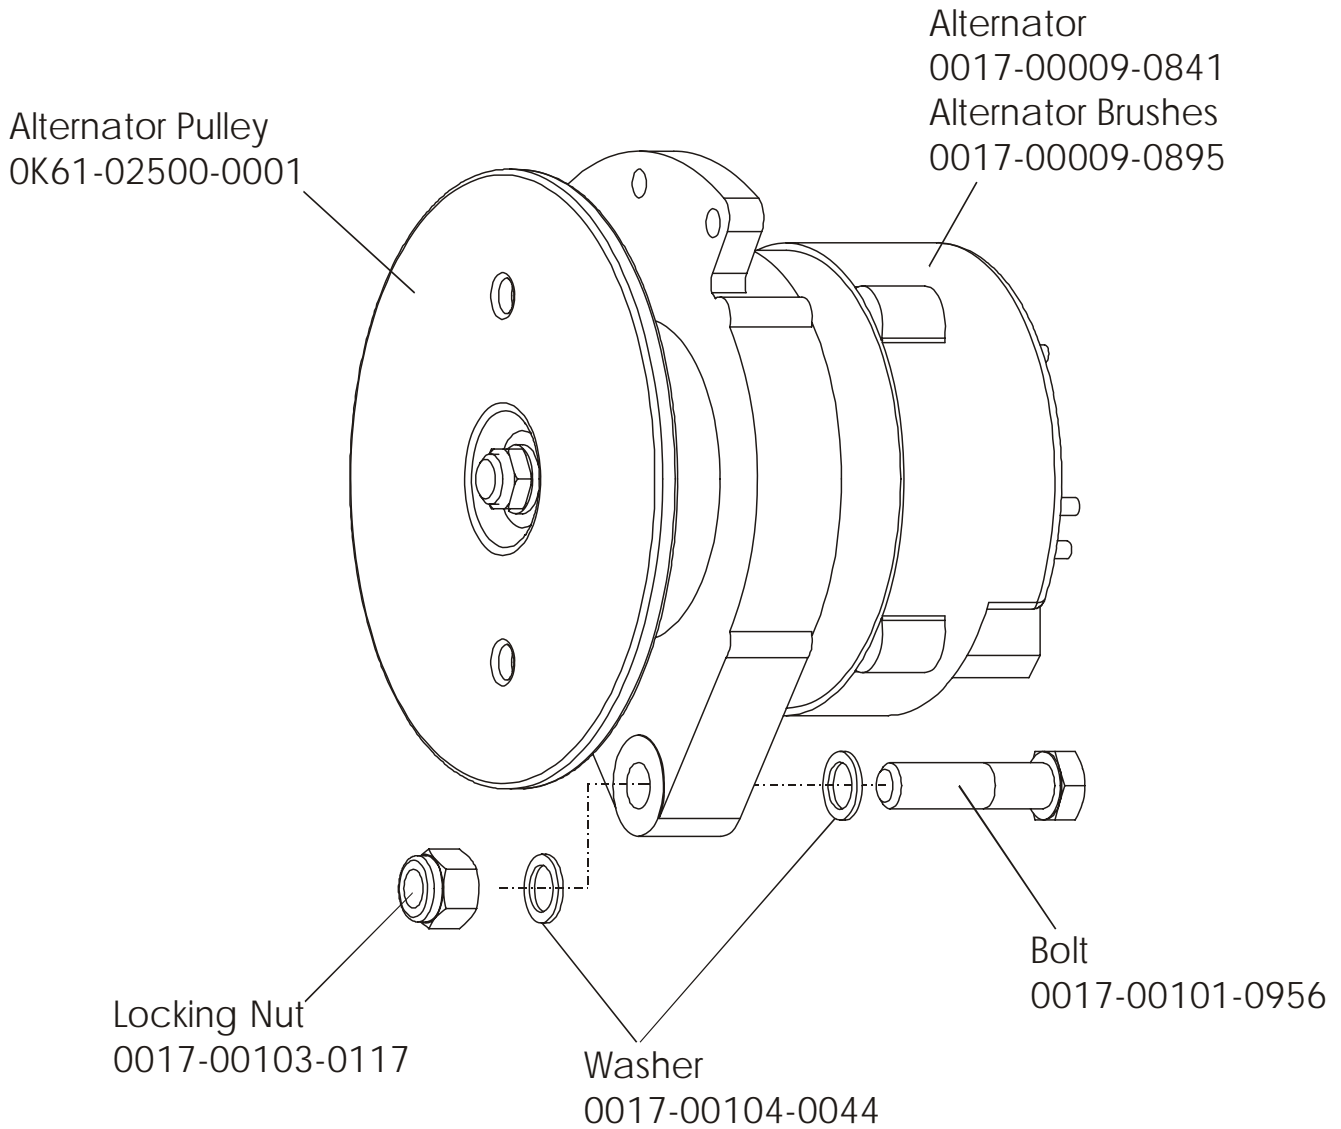

ARCTIC SILVER 95RE

Crank Shaft and Bearing Assembly

 95RE-0XXX-04
S/N 100000-UP

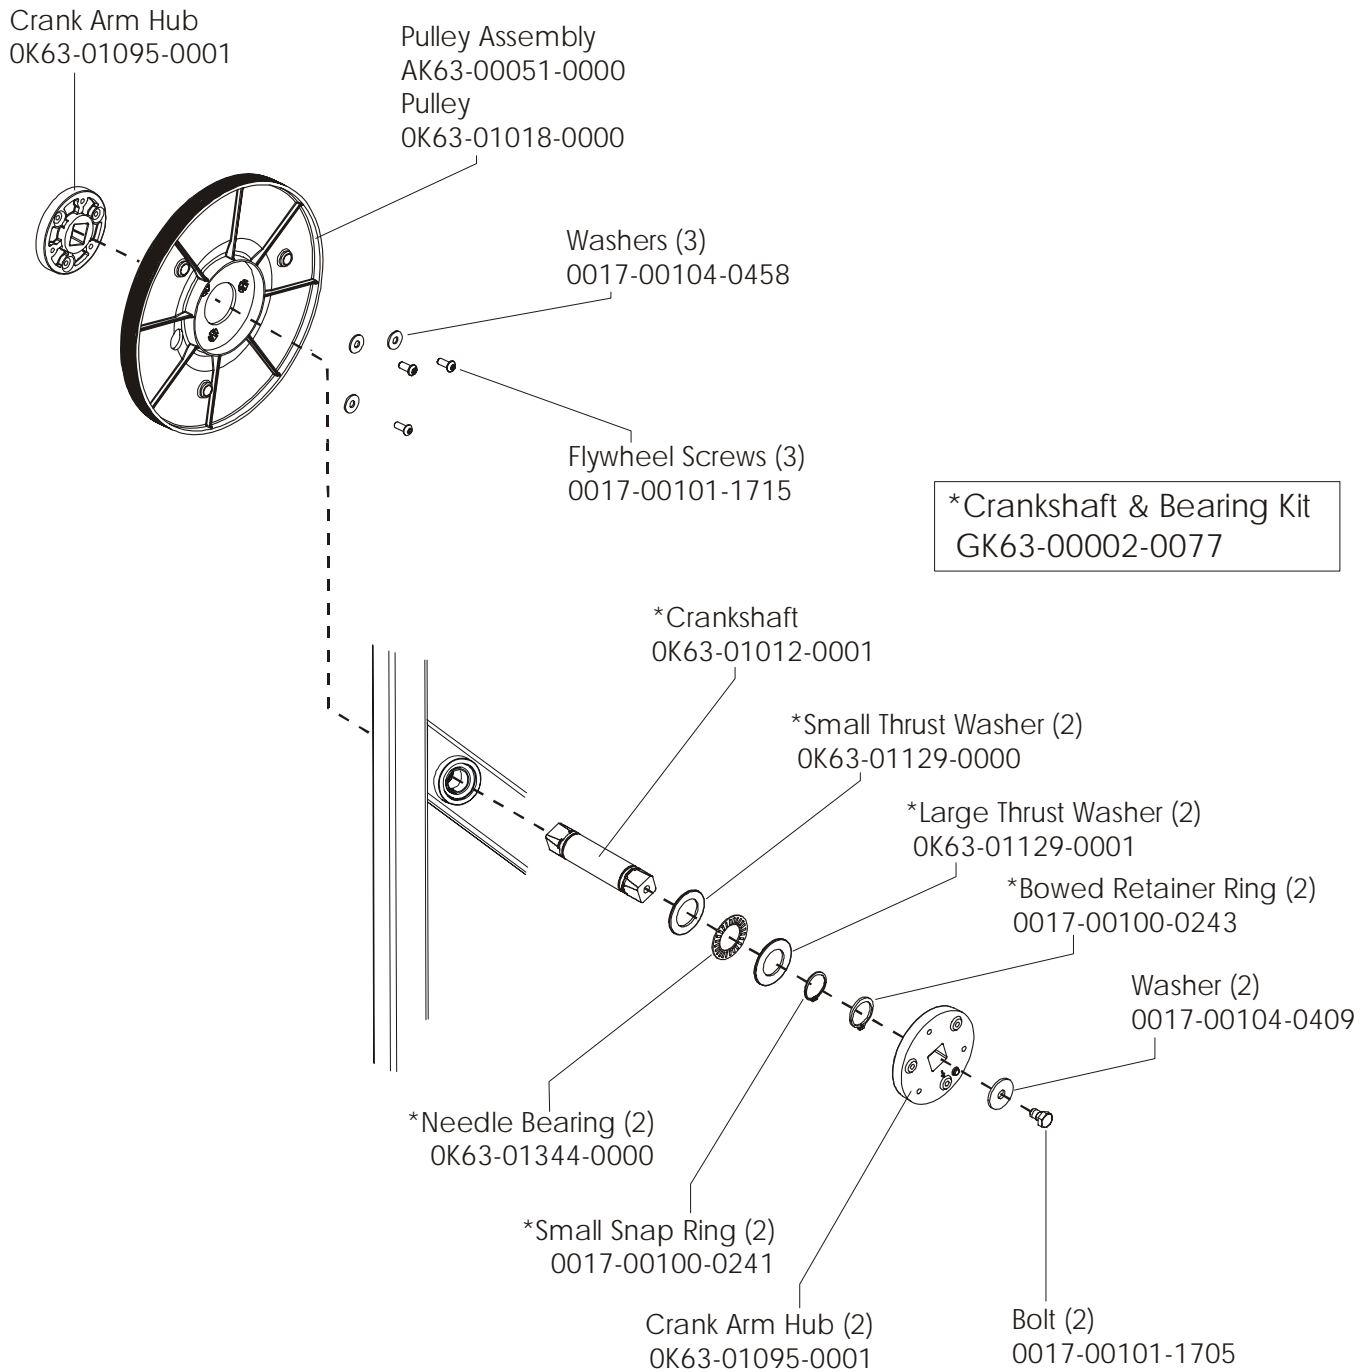


ARCTIC SILVER 95RE
Intermediate Shaft and Bearing Assembly


95RE-0XXX-04
S/N 100000-UP

Clutch Assembly
AK63-00026-0000
(not included in kit)

 Magnet
118E-00001-0124
(not included in kit)

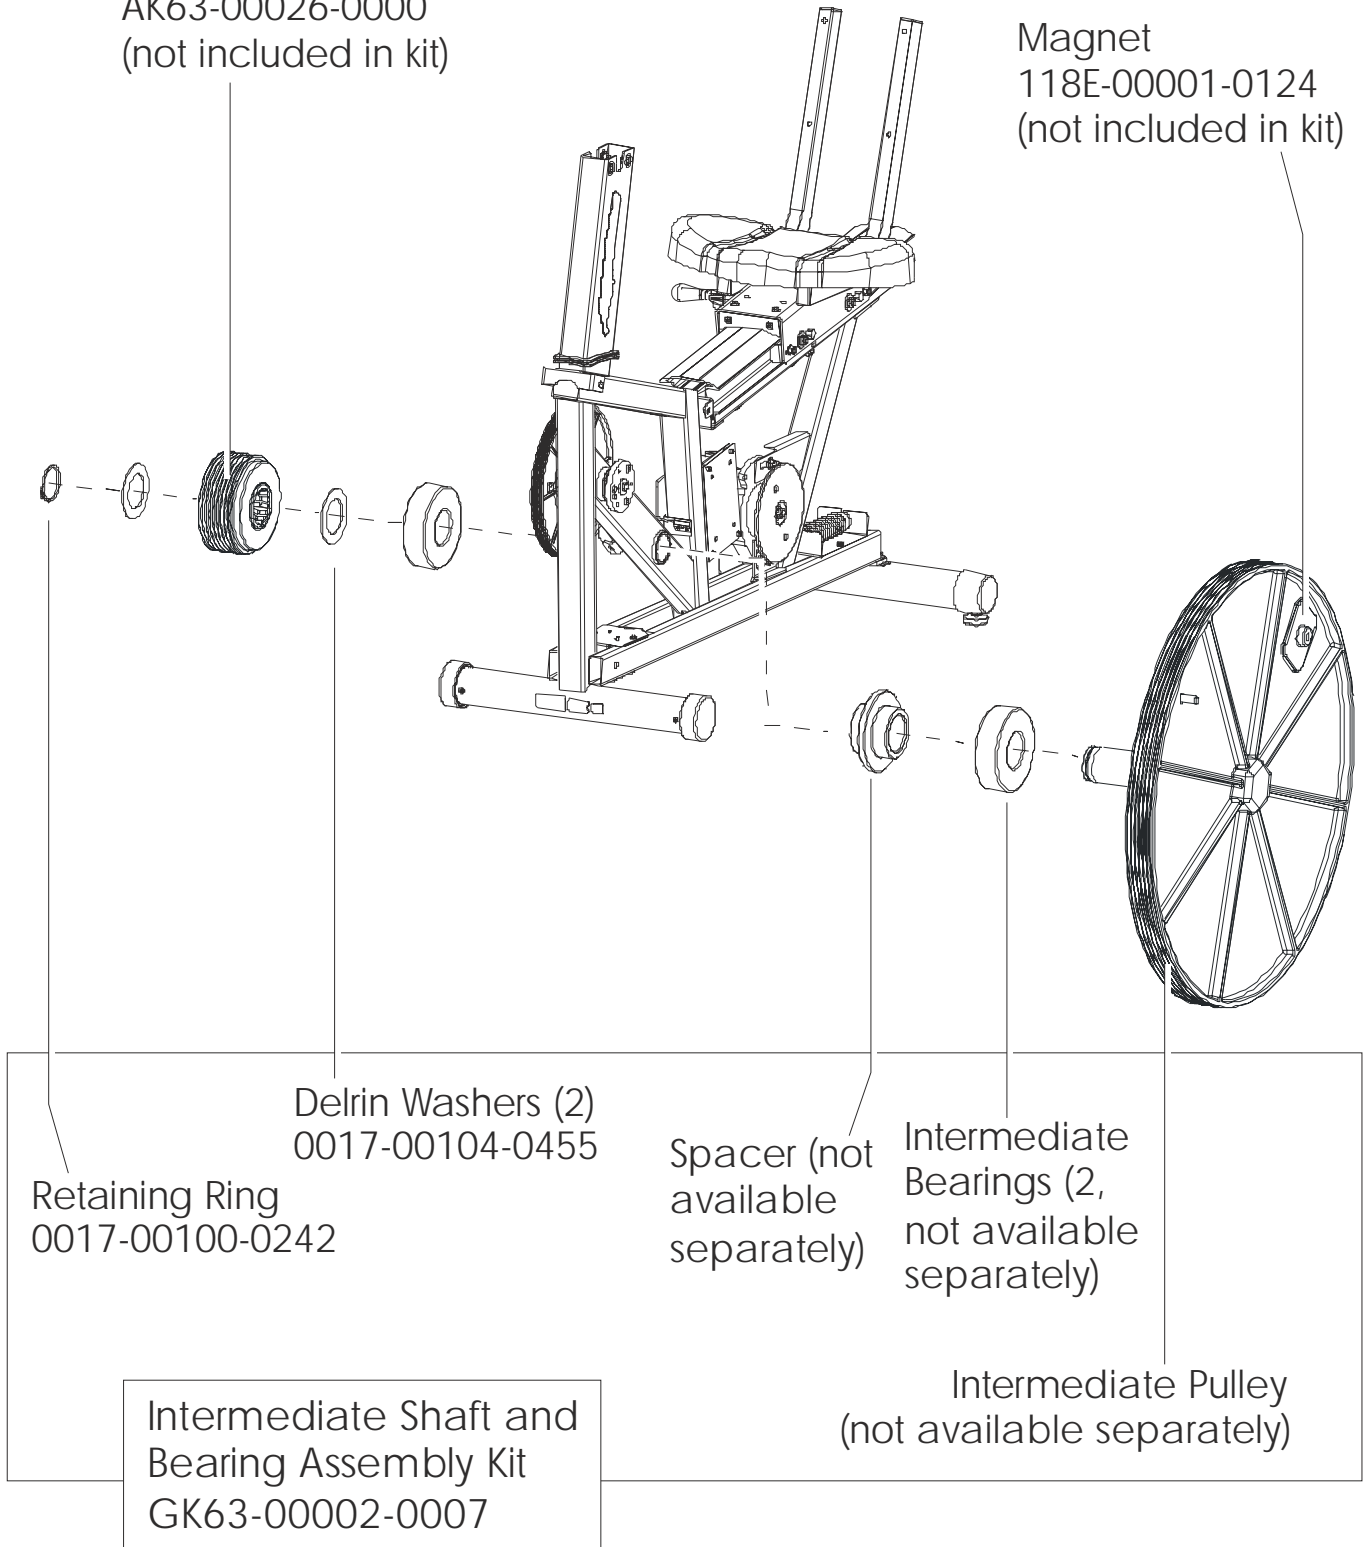


 Idler Bracket Assembly – AK63-00021-0000

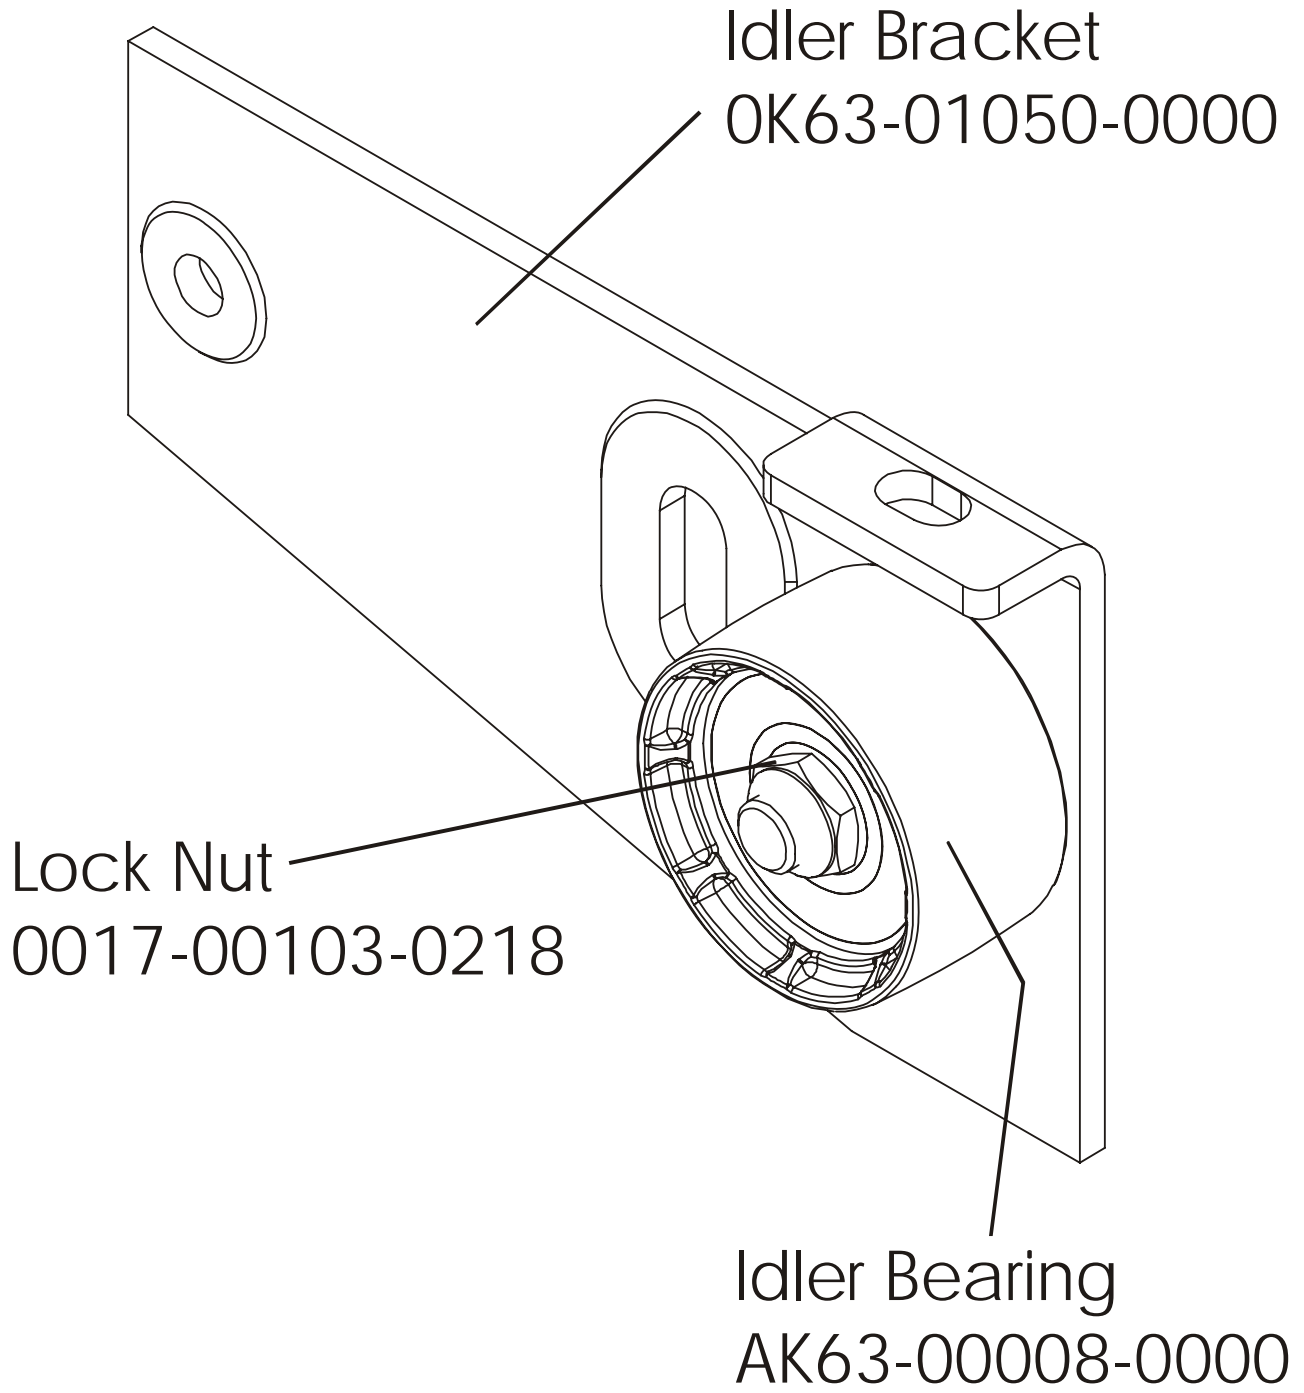


ARCTIC SILVER 95RE
Seat Assembly

 95RE-0XXX-04
S/N 100000-UP

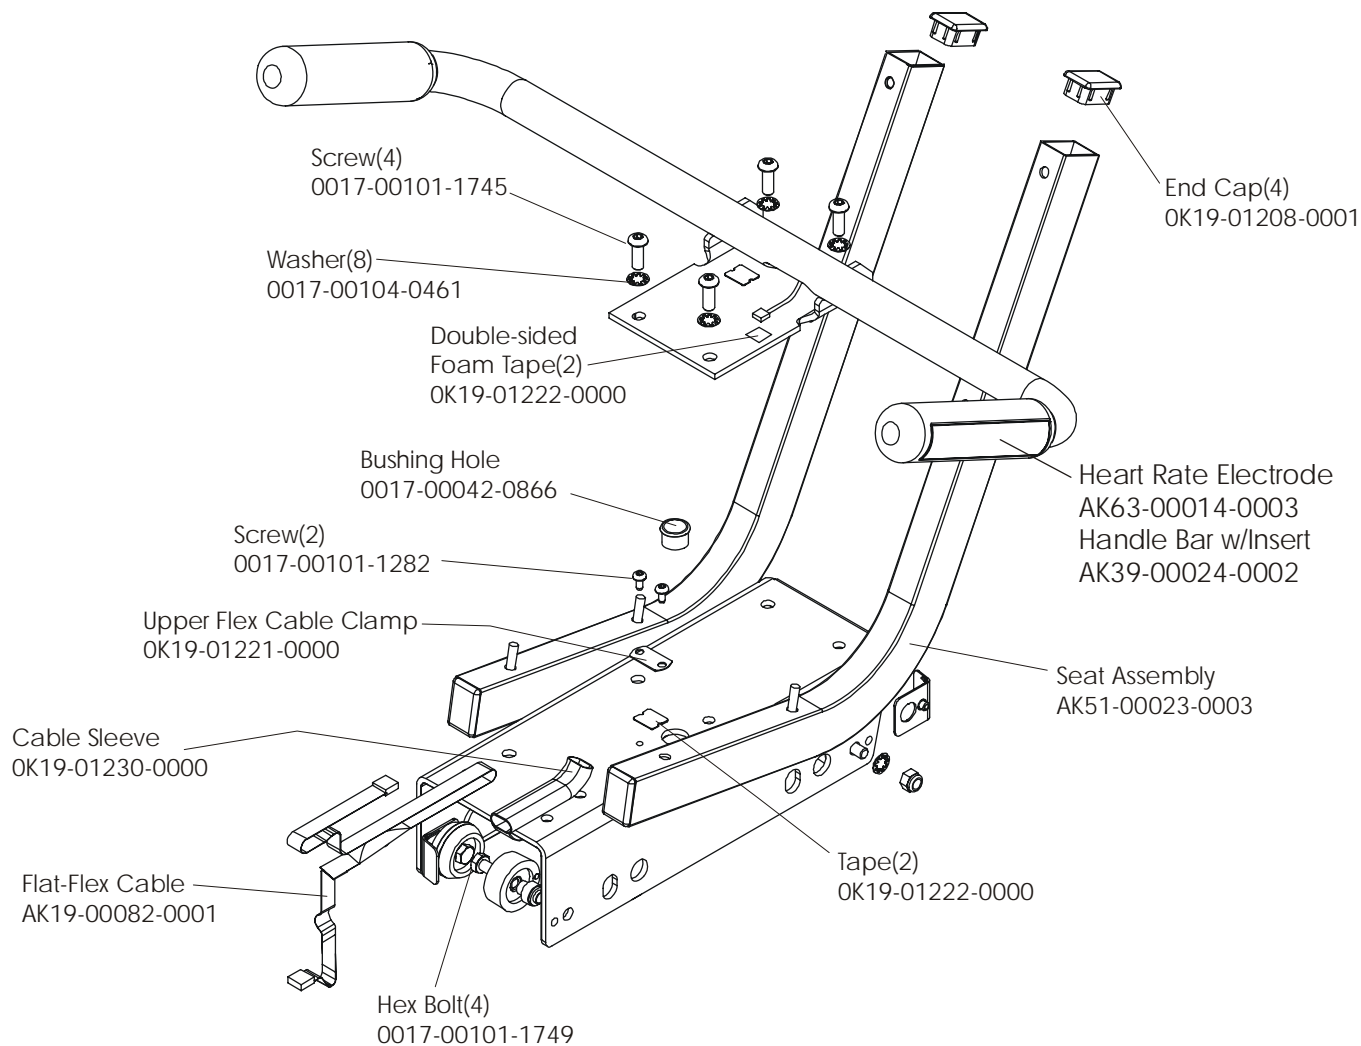


ARCTIC SILVER 95RE
Seat Assembly - Bottom

 95RE-0XXX-04
S/N 100000-UP

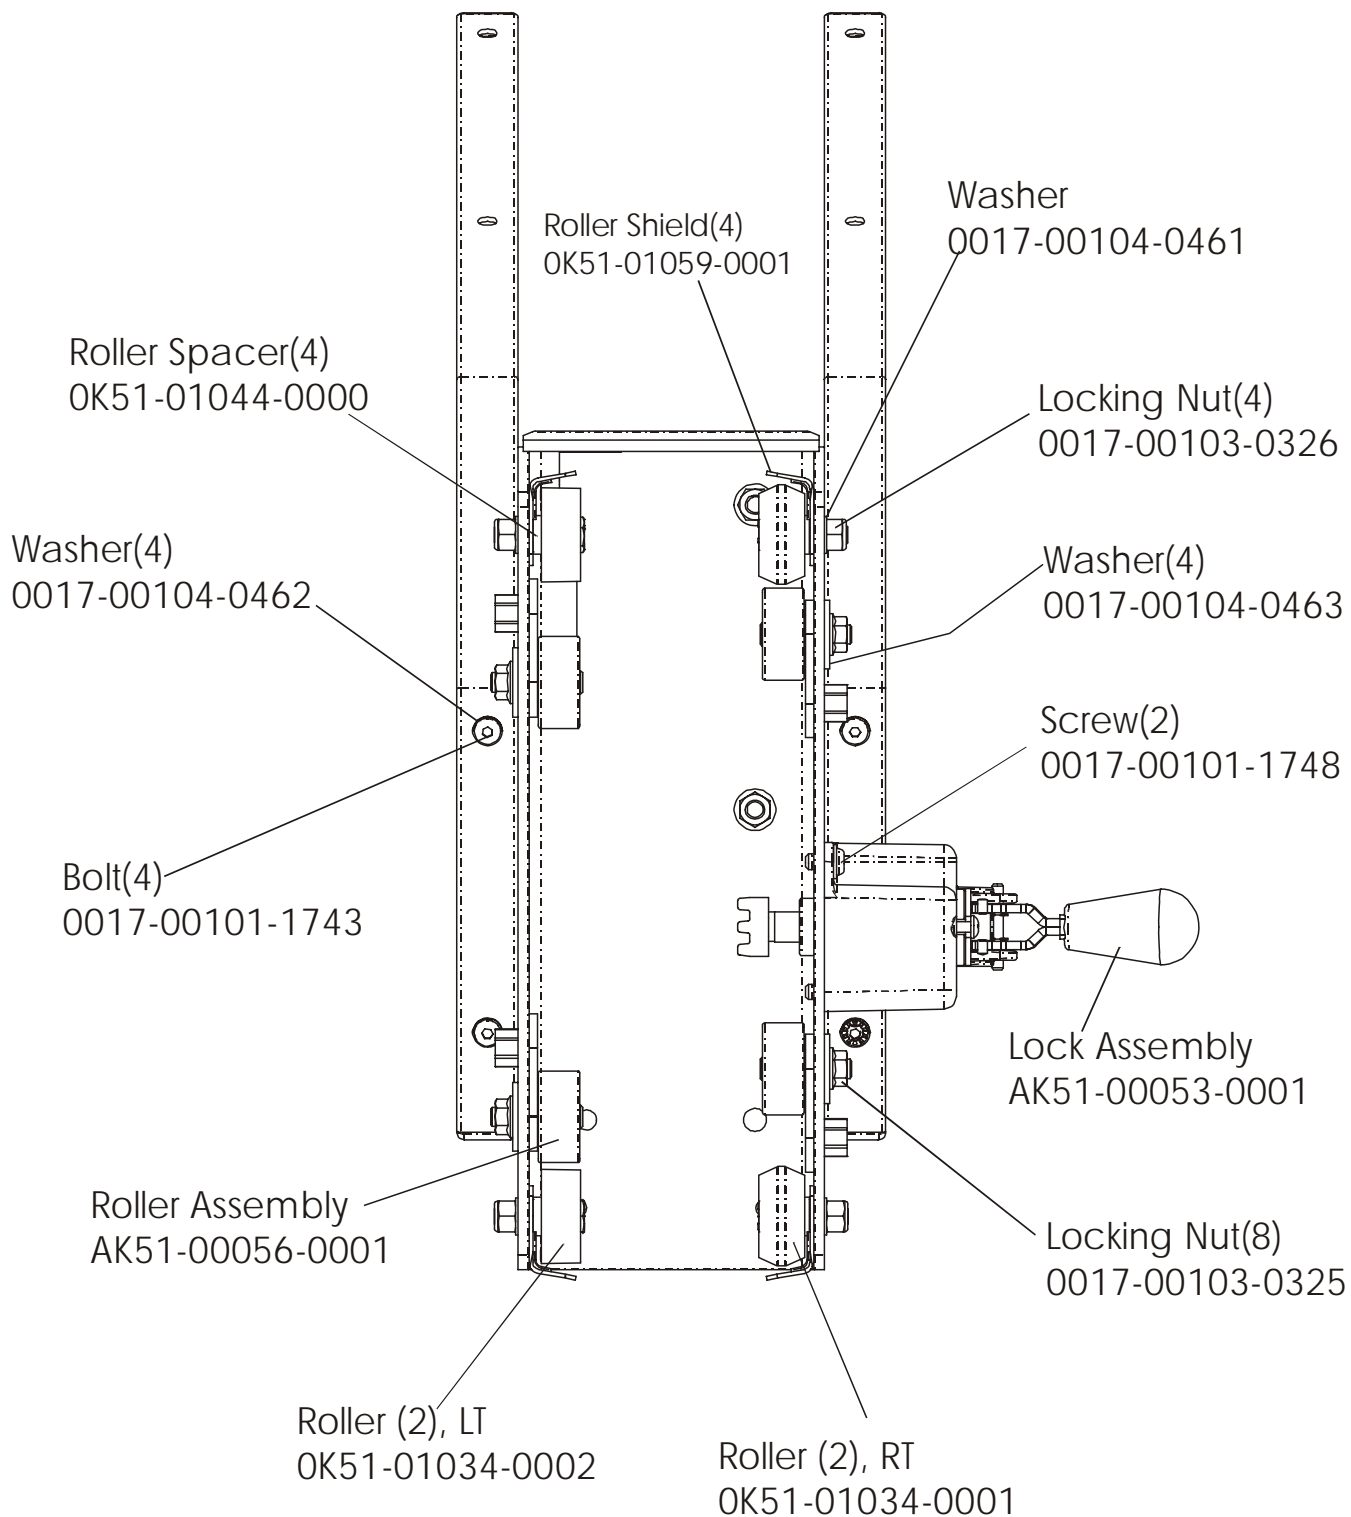


ARCTIC SILVER 95RE
Seat Frame Assembly

 95RE-0XXX-04
S/N 100000-UP

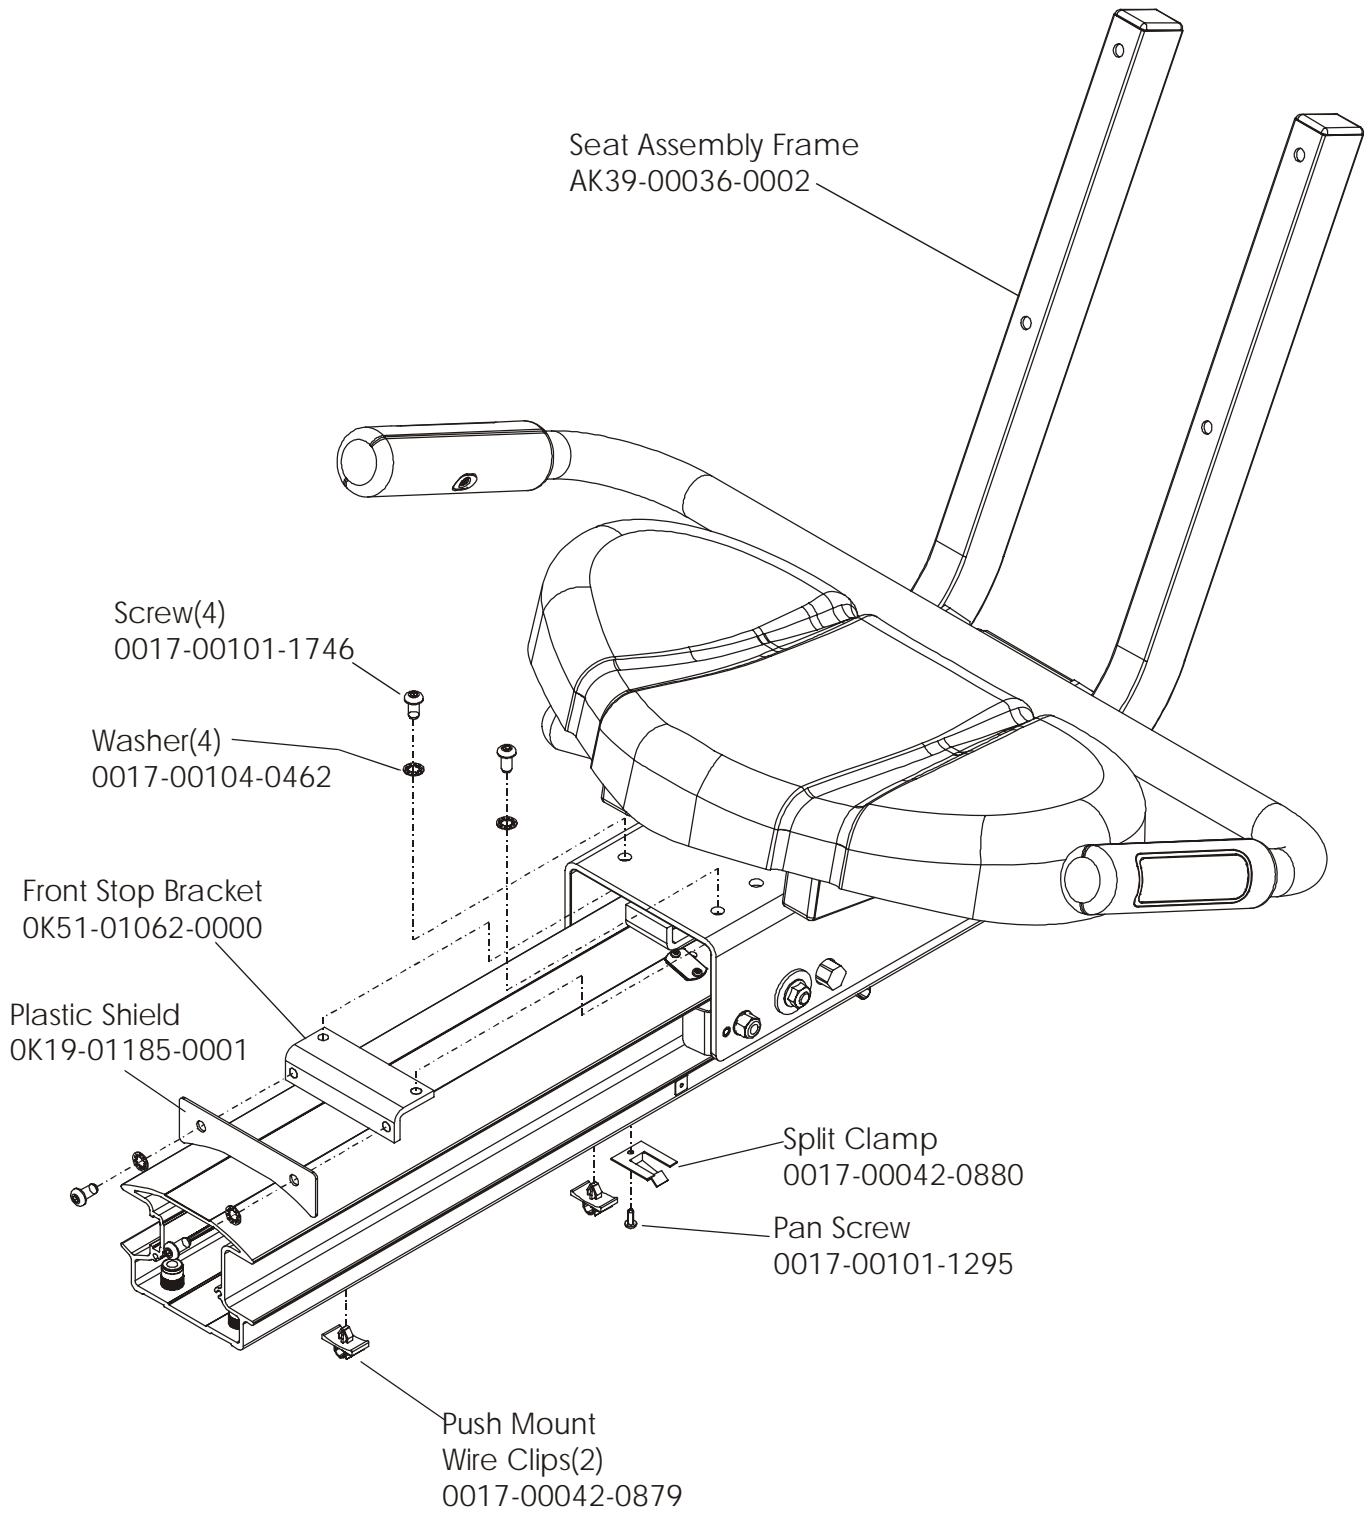


ARCTIC SILVER 95RE
Seat Pads and Accessory Tray

 95RE-0XXX-04
S/N 100000-UP

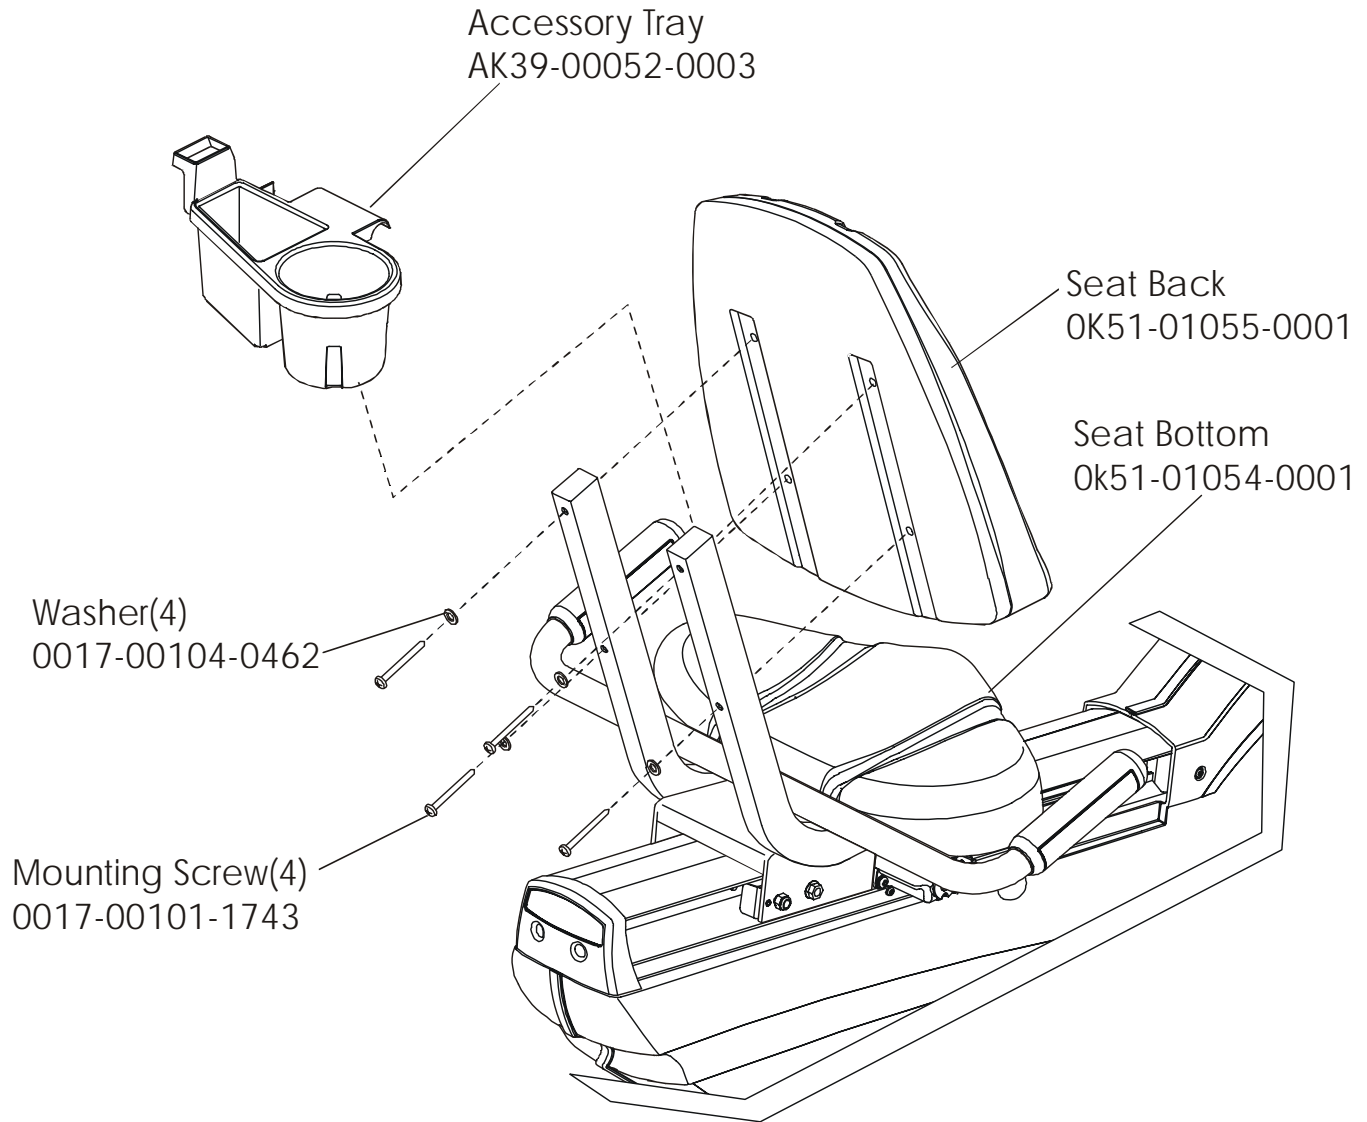

ARCTIC SILVER 95RE
Extrusion Assembly. – AK39-00027-0005

 95RE-0XXX-04
S/N 100000-UP

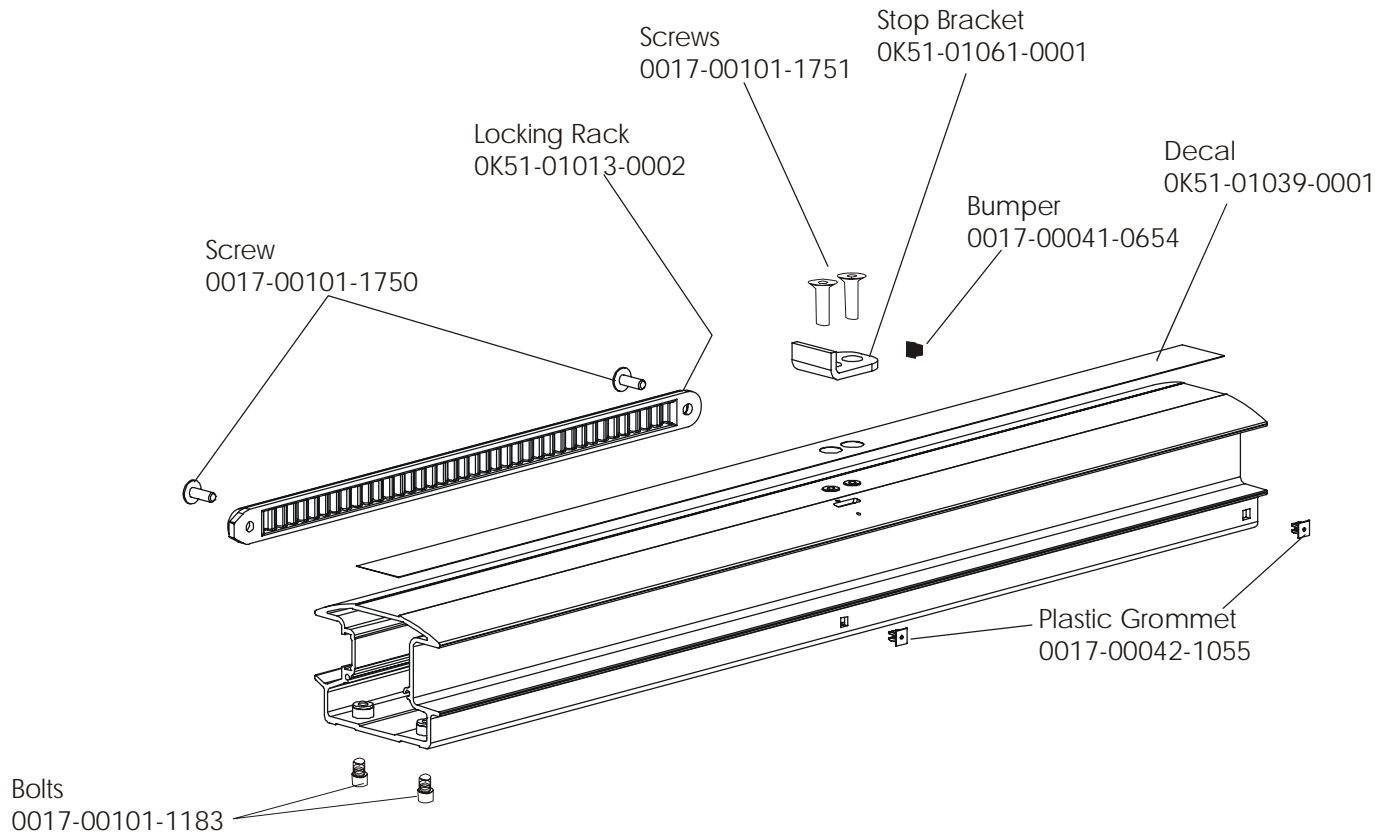


ARCTIC SILVER 95RE

Locking Assembly. – AK51-00053-0001


95RE-0XXX-04

 S/N 100000-UP

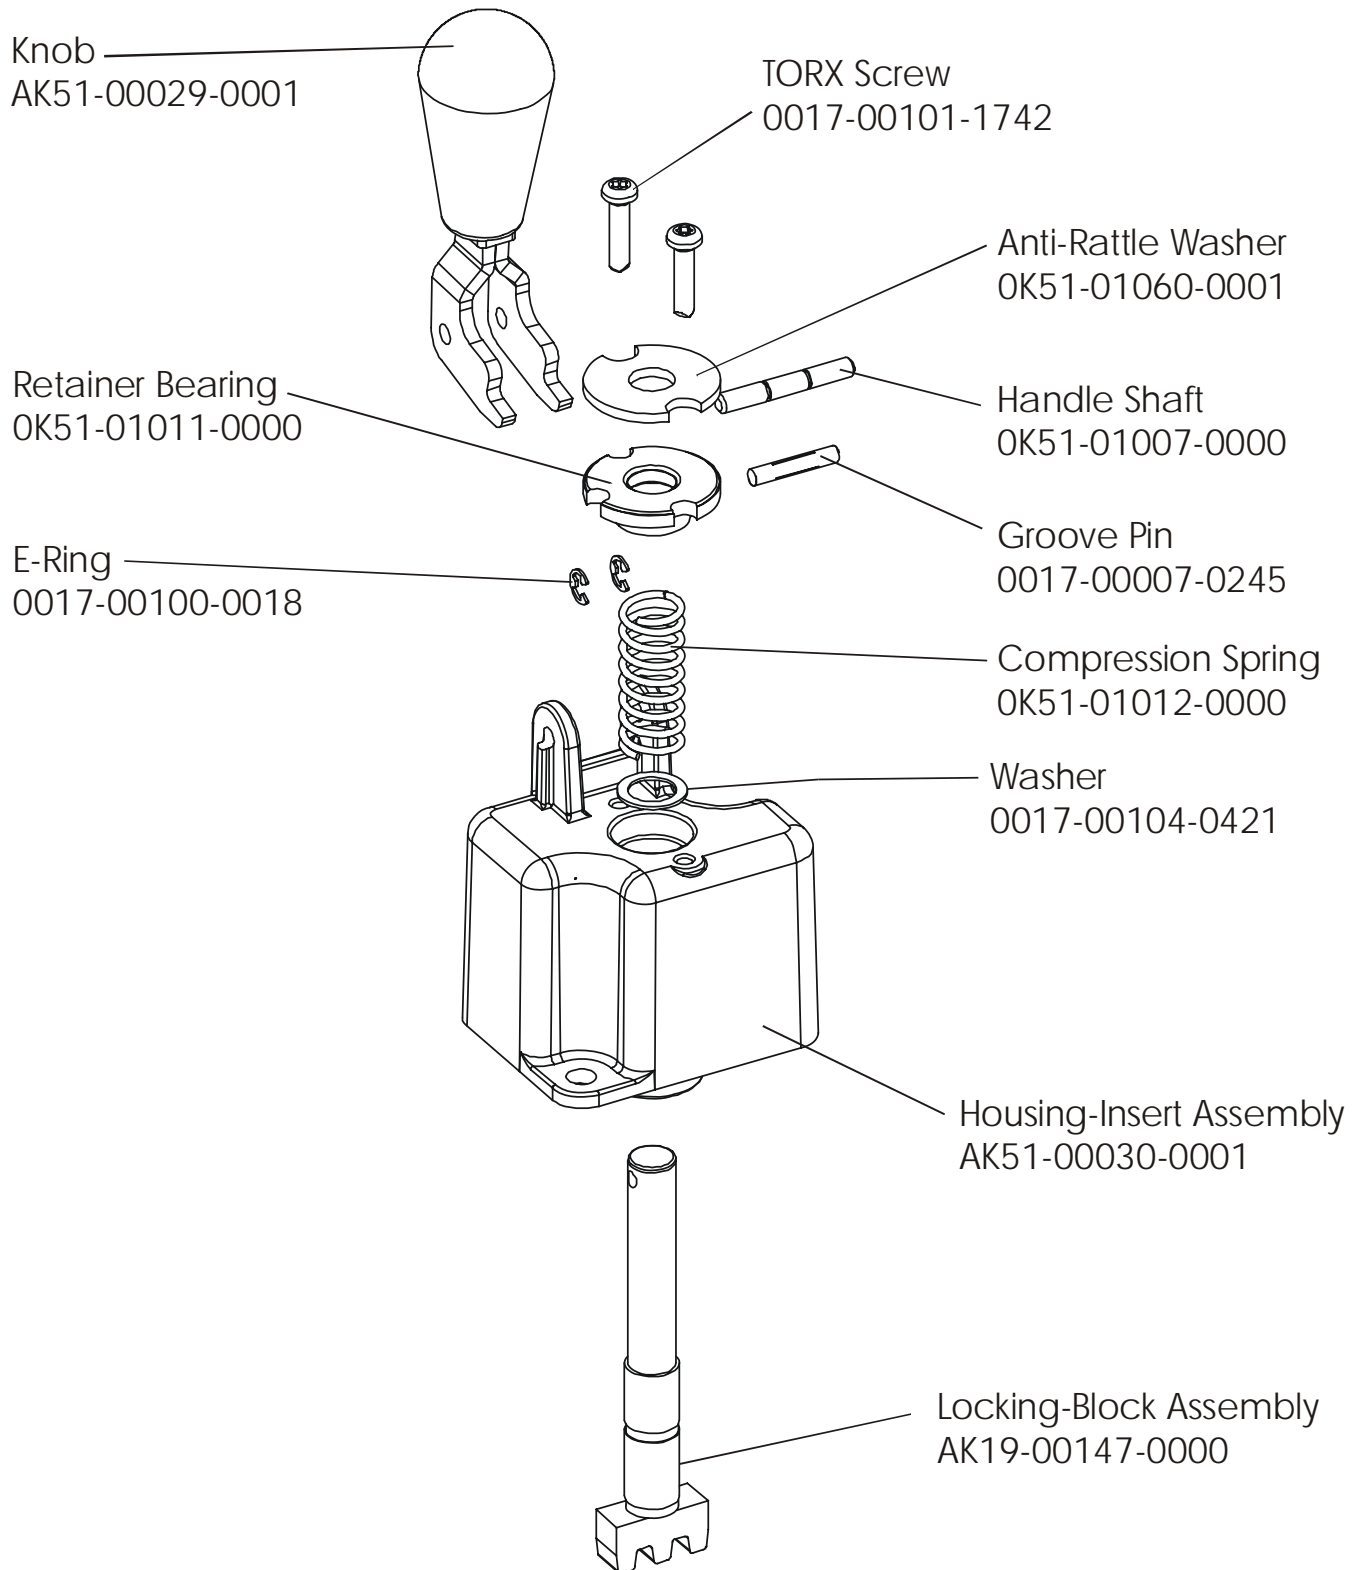

ARCTIC SILVER 95RE
Wheel and Leveler

 95RE-0XXX-04
S/N 100000-UP

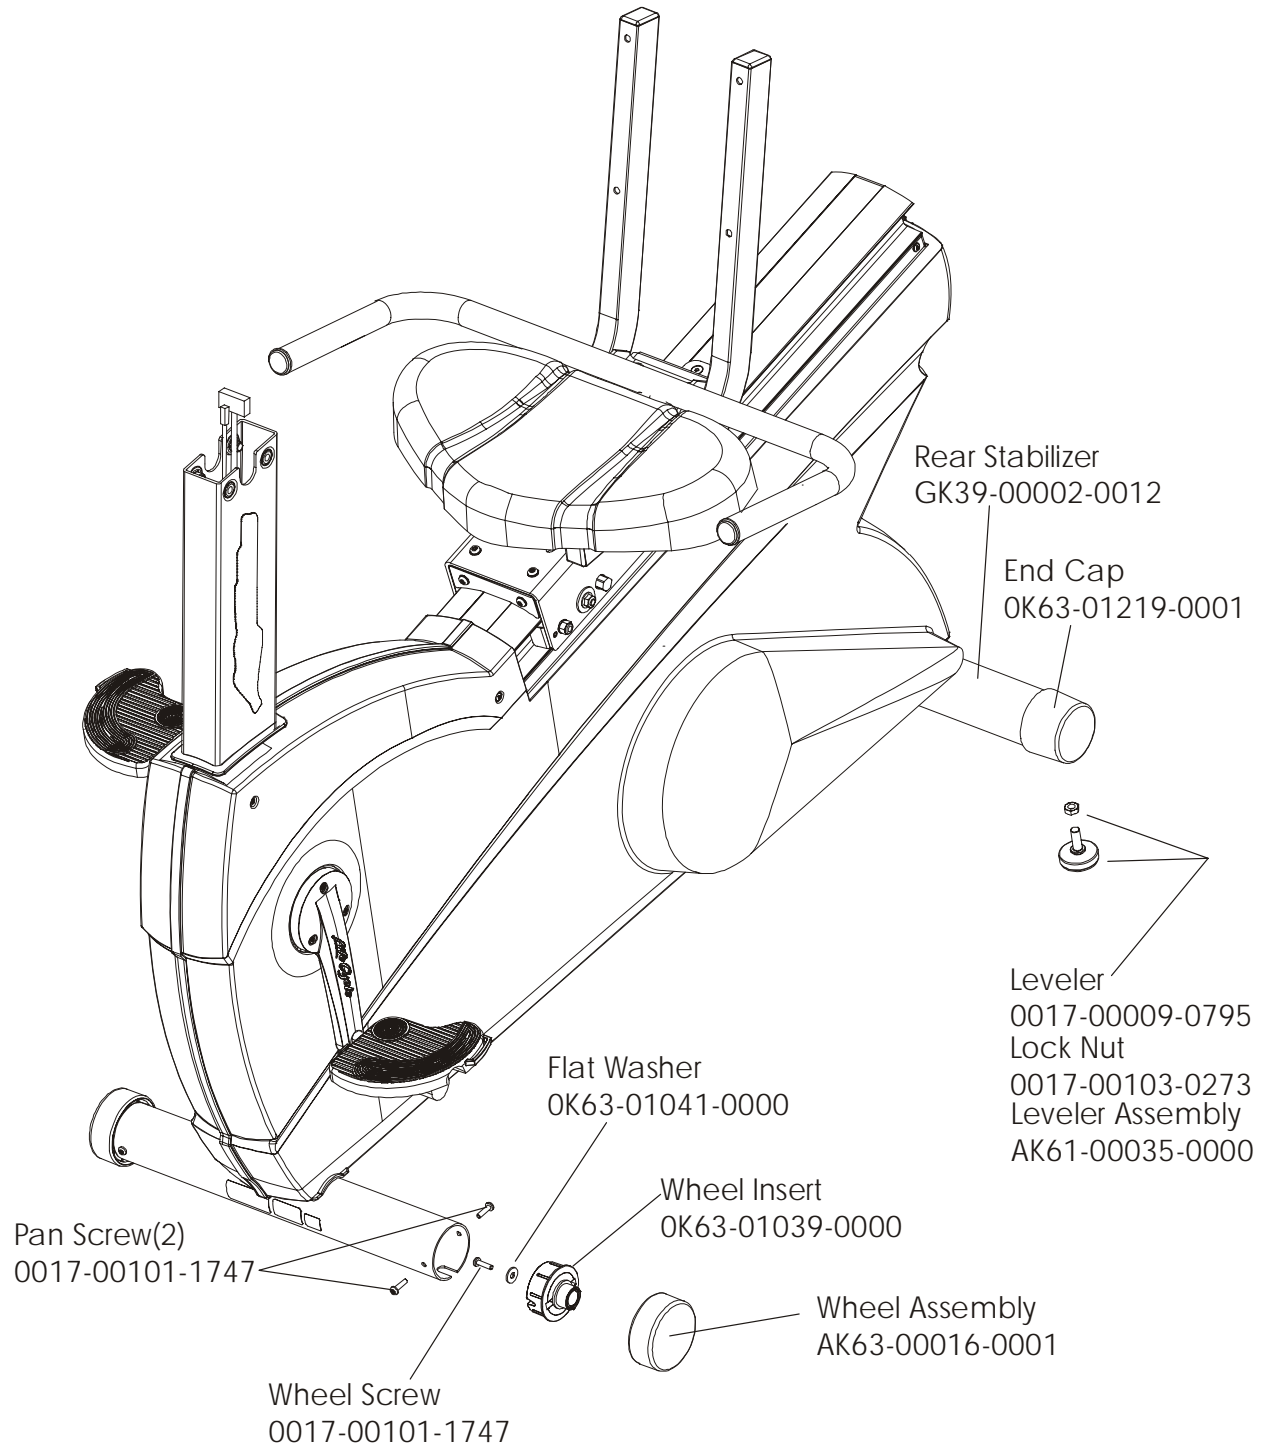

ARCTIC SILVER 95RE
Cables

95RE-0XXX-04
S/N 100000-UP

