

Using a Wireless Transmitter

- 1. Connect the transmitter to the car, the power indicator will be lit. Connect
- the transmitter to the audio source.
- 2. Select the proper frequency for transmission by pressing " \langle " and " \rangle ".
- The range of available FM frequency is: 87.5~108MHz.
- The LCD shows the current FM Frequency.
- Each successive press of " \leq " will decrease the frequency by 0.1MHz.
- Each successive press of ">" will increase the frequency by 0.1MHz.
- The maximum transmission distance can be up to 4 meters.
- The transmission distance differs depending on the sensitivity of the receiver you use .
- 3. Turn the frequency of your FM radio receiver to the same frequency as your transmitter.
- 4. Adjust the volume of your audio source to get good quality sound.
- 5. To turn the transmitter OFF, unplug the DC Car Kit.

Specifications:

The range of FM Frequency is: 87.5~108MHz.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

• Adjust or relocate the receiving antenna.

- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the **Coby Electronic Corp.** may void the user's warranty. (Example-use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device must not cause harmful interference .
- 2. This device must accept any interference received, including interference that may cause undesired operation.

|__|

COBY®

Important Notice: Before returning your item for service, please read the instruction manual carefully and check our website www.cobyusa.com for FAQs.

If you are still experiencing difficulty, please contact Customer Service. COBY ELECTRONICS CORP. ("COBY") warrants this product to the original purchaser to be free from defects in material or workmanship under normal use for **90** DAYS from the date of original purchase. COBY agrees at our option under this warranty, to repair or replace any parts that become defective in normal use, free of charge to the original purchaser. This warranty does not cover any product, which has been subjected to neglect, unreasonable use, accident, and violation of operating instructions, damages due to material erosion as a result of climatic conditions, acts of God, or any product that has been repaired or modified by an unauthorized service agent. This warranty does not cover Products sold AS IS or sold through non-traditional retail markets (e.g. online auctions, garage sales, flea markets). This warranty does not extend to cost incurred for installation, removal or reinstallation of the product, or damages to tapes, discs, speakers, accessories or electrical systems. This warranty does not cover improper use or installation of 12-volt applications.

To obtain factory service, return this unit freight-prepaid to our Customer Service Department. Please retain all packagings and material to prevent damage in transit.

The unit will not be accepted for service if there are scratches or damages to the

unit as the result of handling. The unit(s) must be packaged in such a way as to reasonably protect it from possible shipping damage. A copy of the sales receipt, a detailed description of the problem and all parts or accessories must be included.

If the product is no longer under warranty, the consumer will be responsible for all freight charges and repair/service costs. Coby Electronics 56-65 Rust St., Maspeth NY 11378, 1-800-688-2629, **customerservice@cobyusa.com** Please allow 2-4 weeks for return; please allow a additional 2 weeks during the Holiday season.

COBY's liability under any legal theory for any loss or damage in any way related to this product shall not exceed the sales price of this product. In no event shall COBY be liable for any incidental or consequential damages resulting from the use of this product, or inability to use this product. Repair of replacement as provided under this warranty is the exclusive remedy of the consumer.

Except to the extent prohibited by law, no express or implied warranty of merchant ability or fitness for a particular purpose on this product shall not be extended beyond the period of this warranty. Some states prohibit the exclusion of limitation of incidental or consequential damages, so that the above limitations or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights that may vary from state to state.