

GRACO®

Stroller

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,
Please fill in the model and serial numbers above from the label on the rear leg of your new stroller.



Model No. 7225

Congratulations on your purchase of a Graco® stroller!

Graco is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Graco® stroller is a wise choice, promising many hours of enjoyment for your baby.

Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

Please save your Owner's Manual for future use.

 
Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109**. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

⚠ WARNING




Never leave child unattended. Always keep your child in view.

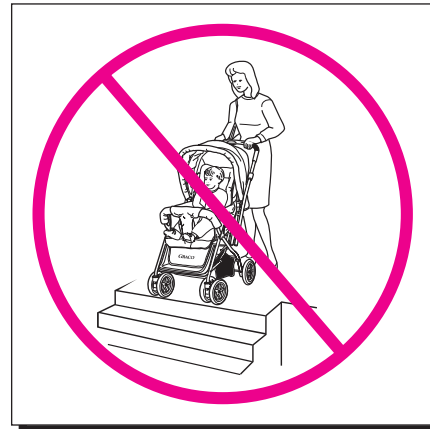


Never use stroller on stairs or escalators. You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.



 Use of the stroller with a child weighing more than 40 lbs. (18.1 kg) will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time. Never place a child in the storage basket.

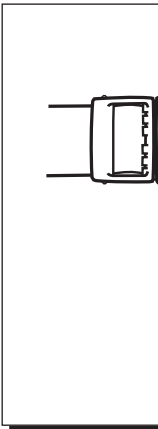

Avoid serious or sliding of belt.

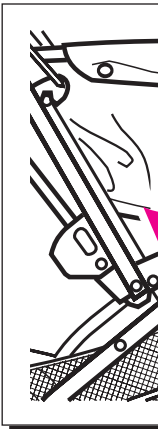 


Be certain the child is seated and latched.



Child may slip and strangle. Carriage position placed under wire snapped.

 Failure to follow these warnings and the assembly instructions could result in serious injury or death.

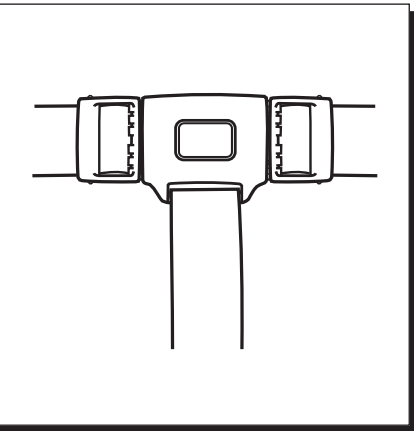


Avoid serious injury from falling or sliding out. Always use seat belt.



Never allow your stroller to be used as a toy.



 To prevent a hazardous condition, do not place more than 10 lbs. (4.5 kg) in the storage basket.

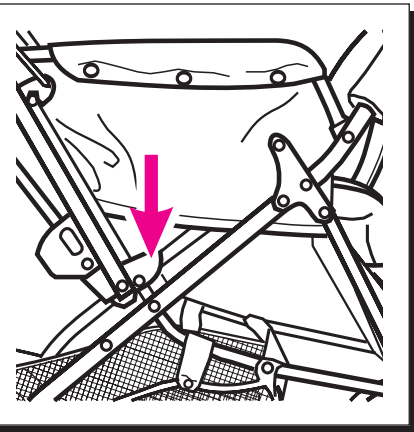


Be certain the stroller is fully erected and latched before allowing your child near the stroller.



DO NOT place purses, shopping bags, parcels and accessory items on handle or canopy. They may fall on the child or change the balance of the stroller and make it unstable.



 Avoid strangulation. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

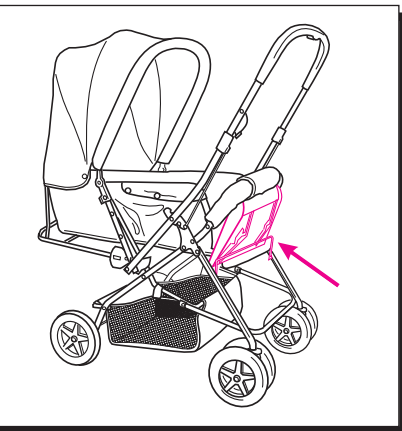

Child may slip into leg openings and strangle. Never use in reclined carriage position unless footrest is placed under padded front bar and wire snapped into lower notch.



Use care when reversing handle to avoid catching child's arms or hands in the mechanism. When adjusting your stroller, always be sure that all parts of your child's body are clear of any moving parts.

 
Stroller to be used only at walking speed. Product not intended for use while jogging, skating, etc.

FOR ADDITIONAL IMPORTANT INFORMATION, please see the Helpful Hints and Care and Maintenance sections on the third page of these instructions.

PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your stroller. If any parts are missing, call Customer Service at 1-800-345-4109.


THIS PRODUCT REQUIRES ADULT ASSEMBLY.
No tools required for assembly.

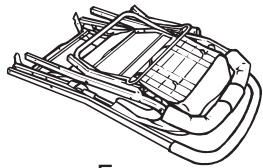

Frame



 Slung basket

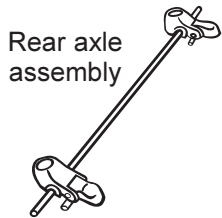

Rear axle assembly



Rear wheel (2)



Front wheel assembly (2)



Cap (2, 1 extra)

 


Retainer (2, 1 extra)

To Unpack Stroller

Step 1.


Flatten stroller carton to protect floor.

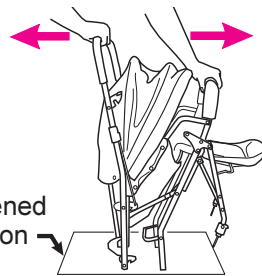

Flattened carton


Step 2.

 Open stroller on carton as shown until latched.

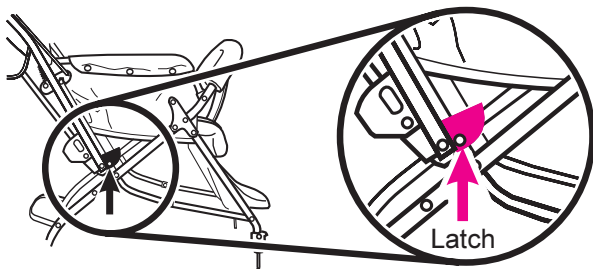

Latch

 To Assemble Rear Axle

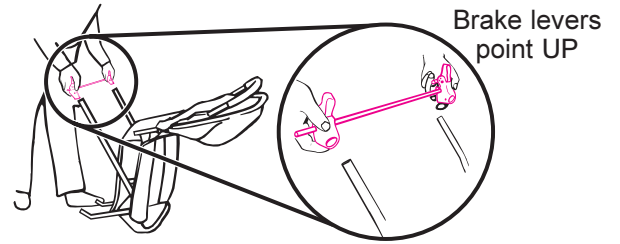

Step 1.

Turn stroller over as pictured above.

Step 2.

Position rear axle assembly as shown.

Step 3.

Start both wheel mounts onto leg tubes at the same time.

Step 4.

 
Push both wheel mounts all the way on until they snap onto the legs.

Step 5.


Pull firmly on both wheel mounts to be sure they are securely attached.

To Assemble Rear Wheels

Place parts on both ends of rear axle **in order** as shown. Push red retainer onto axle **BEFORE** attaching white cap.

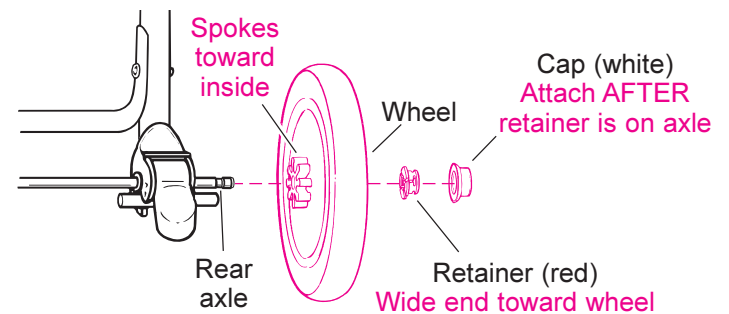

 Snap red retainer into axle groove. Then snap cap over red retainer as shown.

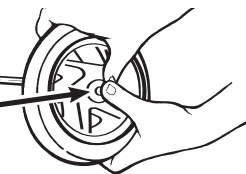

Be sure cap is snapped securely over red retainer.

To Assemble Front Wheels

Step 1.

Line up pin on bottom of front leg with a wheel assembly as shown. **Plastic snap inside wheel mount must be away from pin.**

 
Step 2.

Push wheel assembly onto pin until it snaps in place.

Step 3.

Repeat for other wheel assembly.

NOTE: Pull firmly on each wheel assembly to be sure the wheel assemblies are securely attached.

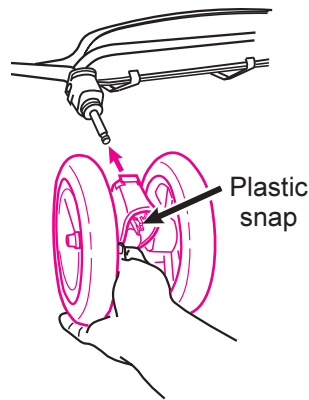


To Install Basket

Step 1.

Position the basket under rear of stroller so the straps are toward front of stroller.

Step 2.

 
Fasten the 8 snaps as shown.

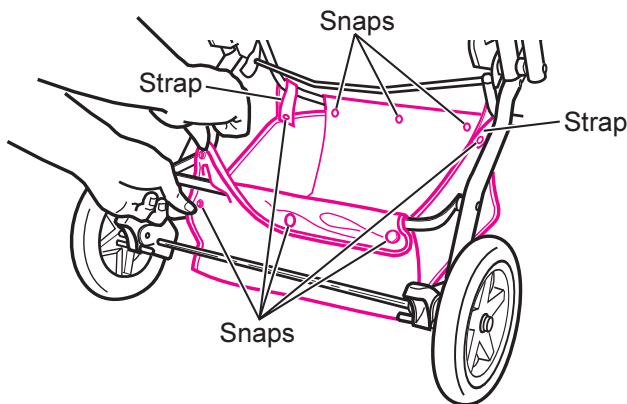

To Unfold Stroller


Step 1.

 Unfold footrest from under armrest.

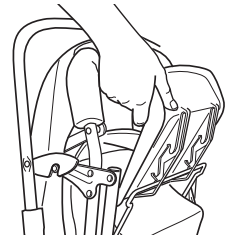

Step 2.

 
Release latch.

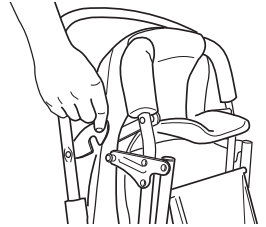

Step 3.

Unfold as shown.

 
▲ WARNING Be certain the stroller is fully erected and latched before allowing your child near the stroller.

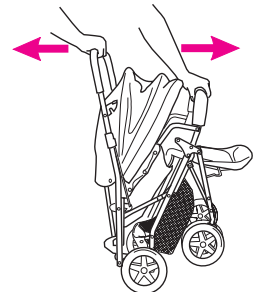

To Adjust Back


Step 1.

 Push back of seat slightly forward while squeezing as shown to unlock.

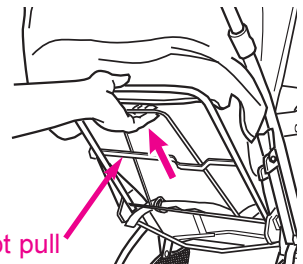

Step 2.

 
Adjust to desired position.

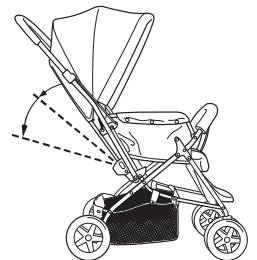

To Move Handle to Carriage Position

Step 1.

 
Pull up on both plastic slides on the handle as shown to unlock.

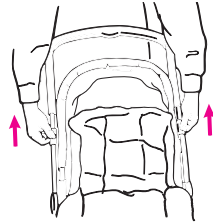

Step 2.

Move handle to new position. Be sure handle is securely locked.


 
⚠ WARNING Use care when reversing handle to avoid catching child's arms or hands in the folding mechanism.

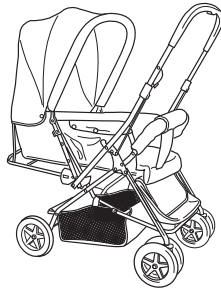

To Raise Footrest

Lift footrest and hook wire into footrest bracket.

  ⚠ WARNING Child may slip into leg openings and strangle. Never use in reclined carriage position unless footrest is placed under padded front bar and wire snapped into lower notch.

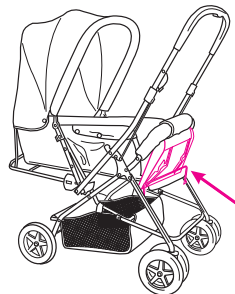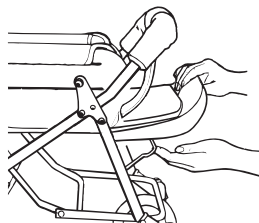


To Secure Your Child

⚠ WARNING Avoid serious injury from falling or sliding out. Always use seat belt.


Step 1.

 Place crotch strap between child's legs and snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

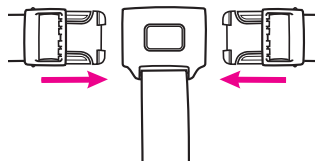


Step 2.

 Push in on front of buckle to release.

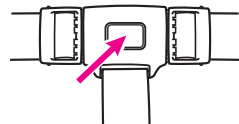

To Use Canopy

 
Push or pull front of canopy to open or close.

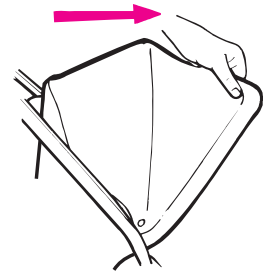

Canopy may be removed for washing:


Step 1.

 Fold stroller handle away from canopy. Pull wire on outside of canopy mount out of slot.

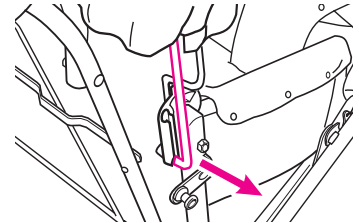

Step 2.

 Fold canopy backward, then pull wire on inside of canopy mount out of hole. Remove canopy fabric from wires.

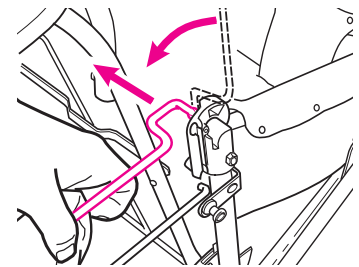



Step 3.

To replace canopy, reverse the above steps.

To Change to Swivel or Non-swivel Wheels

Front swivel wheels lock for use on uneven surfaces such as grass, stones or gravel.

  NOTE: Before locking swivels, first push stroller forward a few feet to ensure the wheels are correctly positioned.

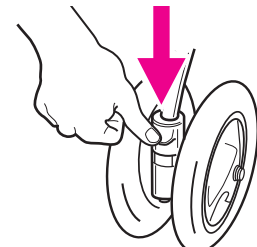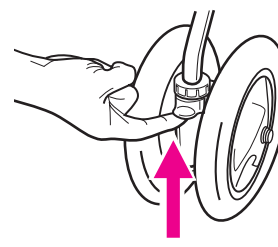


Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.


To Use Brakes

▲WARNING Always apply both brakes to park stroller.

 Push **DOWN** to park.

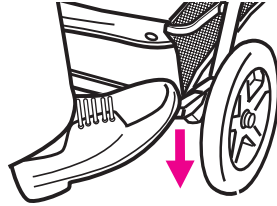

Lift **UP** to stroll.

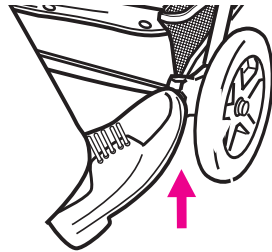 


To Fold Stroller

NOTE: Before folding, 1) position handle behind canopy; 2) adjust back to upright position; 3) fold canopy.


Step 1.

 Push on rod to fold as shown.

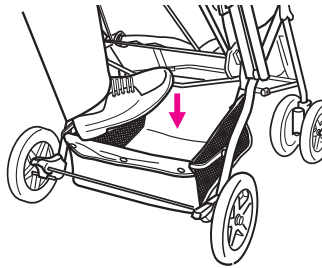


Step 2.

 Push handle forward.

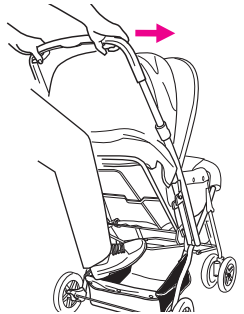


Step 3.

 Push on secondary lock on right side of stroller (red button).

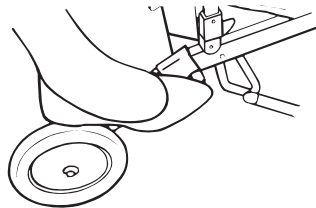


Step 4.

 Lock latch.

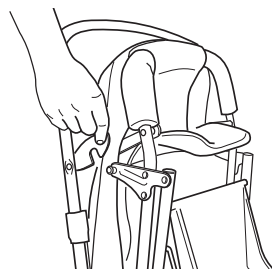

HELPFUL HINTS

 IF WHEEL SQUEAKS, use a light oil (e.g., WD-40, 3-in-1, or sewing machine oil). It is important to get the oil into the axle and wheel assembly as per the illustration.

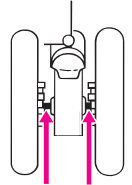

WHEN USING YOUR STROLLER AT THE BEACH, completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies.

IF FOOTREST BECOMES CAUGHT under arm bar when unfolding your stroller, first refold the stroller, pull footrest down into correct position, then proceed to unfold your stroller.

CARE AND MAINTENANCE

DO NOT MACHINE WASH SEAT (with inner board). It should only be wiped with a mild detergent taking care not to soak the material.

REMOVABLE SEAT PAD (if so equipped) and canopy may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

FROM TIME TO TIME CHECK YOUR STROLLER for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

DISCONTINUE USING YOUR STROLLER should it become damaged or broken.

TO CLEAN STROLLER FRAME, use only household soap or detergent and warm water. **NO BLEACH.**

EXCESSIVE EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.

Replacement Parts

Instructions for ordering stroller parts:

Complete form below. Your stroller model number **MUST** be included on the form to ensure proper replacement parts. Your model number can be found on a sticker on the rear leg of your stroller. **Payment must accompany your order.**

Parts List:	Price:*
Seat	\$27.00
Front wheel assembly (2 wheels per unit)	\$12.00 (each)
Rear axle assembly	\$12.00
Rear wheel	\$ 7.00 (each)
Slung basket	\$15.00
Footrest cover	\$12.00
Canopy	\$12.00
Removable soft pad	\$17.00
(only on some models)	* Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions, please call toll-free:

1-800-345-4109

Return the form below with payment to:
GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
MAIN STREET
ELVERSON, PA 19520

Model Number	SHIP TO:
(Must be filled in)	Name _____
<input type="checkbox"/> Seat	Address _____
<input type="checkbox"/> Front swivel assembly	City, State, Zip _____
<input type="checkbox"/> Rear axle assembly	(_____) _____
<input type="checkbox"/> Rear wheel	Telephone _____
<input type="checkbox"/> Slung basket	
<input type="checkbox"/> Footrest cover	
<input type="checkbox"/> Canopy	
<input type="checkbox"/> Removable soft pad	
	<input type="checkbox"/> Check enclosed (payable to Graco Children's Products Inc.)
	<input type="checkbox"/> Charge to credit card: <input type="checkbox"/> Visa <input type="checkbox"/> MasterCard <input type="checkbox"/> Discover
Total: _____	Account #: _____
6% sales tax (PA only): _____	Expiration date: _____
Total amount due: _____	Signature: _____