 


Goblin®

Topo compact vacuum cleaner

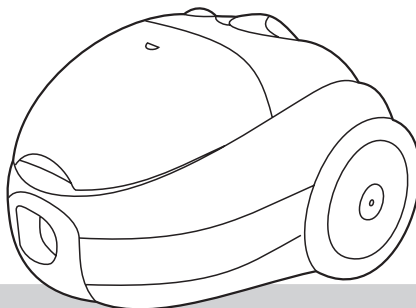

Please read and keep these instructions



getting the best from your new cleaner...

If your cleaner isn't picking up as well as it should, please check

- **Dustbags**

It is important to replace them when full, otherwise the performance of the cleaner will be impaired. The dustbag compartment lid will not close unless the dustbag is fitted correctly. See page 5 - Replacing the dustbag.

- **Filters**

It is important to clean the filters every time you change the dustbag and replace them every 5 dustbag changes otherwise the performance of the cleaner will be impaired. See page 5 & 6 - Cleaning the filters.

- **Blockages**

Check the nozzle, tubes and hose for blockages



www.morphyrichards.co.uk



Important safety instructions

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!
IMPORTANT: Damage to the appliance! In addition we offer the following safety advice.

Location

- Do not use or keep this product outside when it is raining.
- Do not store the appliance near hot ovens or heating appliances.

Mains lead

- Do not allow the mains lead to become strained or run this appliance over it.
- If the electrical cable becomes damaged the complete cable assembly must be replaced. Do not attempt this task yourself, contact Goblin using the helpline number on the front of this leaflet.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

Other safety considerations

- Never use the appliance without the filters or bag installed.

- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Never use in the presence of explosive liquids or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner, or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Always disconnect the appliance from the mains supply after use or prior to cleaning or replacing dust bags.
- The appliance should never be left running unsupervised.
- Never modify the cleaner in any way.
- Repairs to electrical appliances are only to be undertaken by trained personnel. Unprofessional repairs can be dangerous for users.
- Use only genuine Goblin spare parts and accessories.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).

For appliances with fitted plug.

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

 
If you cut off the plug and let go of the cable it will rewind into the machine. Therefore you must pull out a length of cable and secure it before cutting off the plug and refitting a new one.

WARNING : The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.



Features

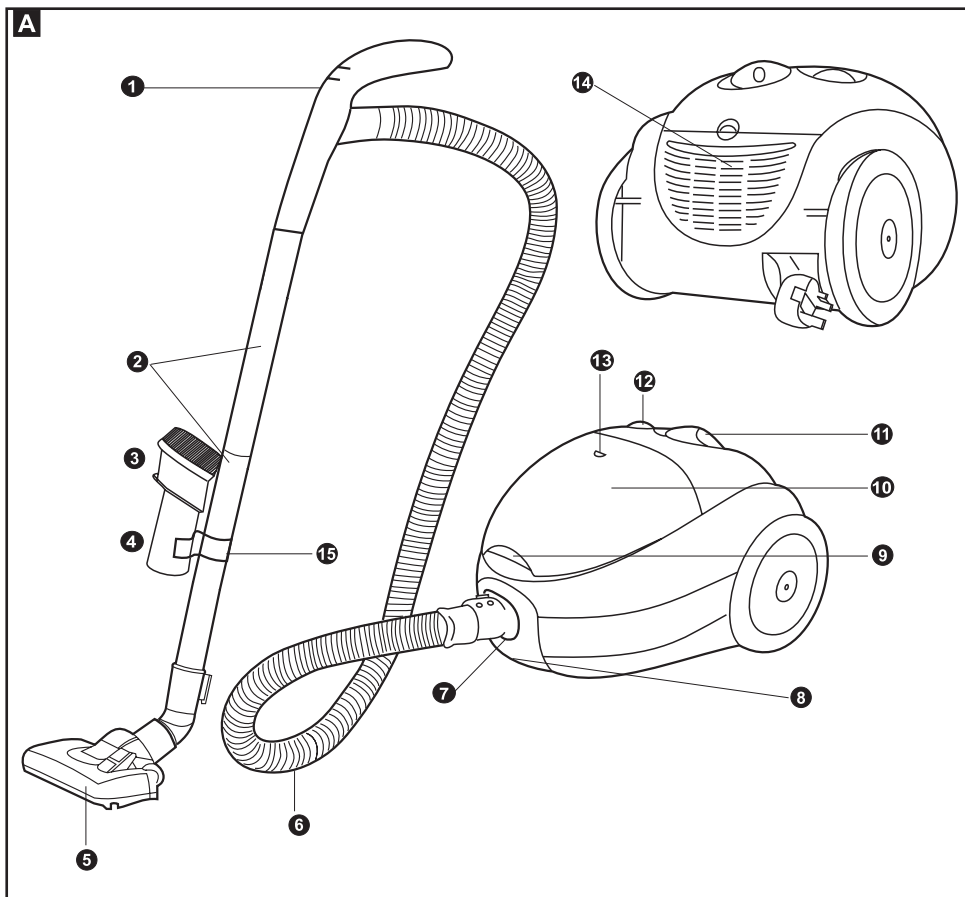

Accessories you should have:

- | | | | |
|---|----------------------------------|----|----------------------------------|
| 1 | Hose handle with airflow control | 9 | Dust bag compartment lid release |
| 2 | Extension tubes | 10 | Dust bag compartment lid |
| 3 | Brush attachment | 11 | On/Off variable power switch |
| 4 | Crevice tool | 12 | Cable rewind switch |
| 5 | Combination floor nozzle | 13 | Dust bag condition indicator |
| 6 | Hose | 14 | Exhaust filter cover |
| 7 | Hose inlet | 15 | On board tube storage |
| 8 | Carrying handle | | |

 


Quick start

- 1 Assemble the nozzle, tubes and hose as shown **A**.
- 2 Pull out the cable to it's full length and plug in to the mains supply.
- 3 Switch on by pressing the on/off variable power switch.


Accessories

- 1 Fit the hose to the cleaner by inserting the hose end into the hose inlet. **7**

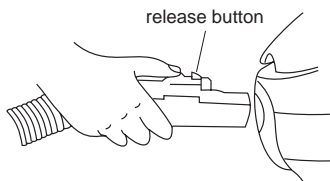

- 2 To remove press the release button down on the hose and pull out.
- 3 Attach the extension tubes **2** to the handle end of the hose. The hose handle features an airflow control which can be adjusted as required.
- 4 Attach the combination floor nozzle to the extension tubes. The floor nozzle **5** has two levers for the two positions.
 - Brush up for carpets, rugs etc.
 - Brush down for hard floors, tiles etc.
- 5 The other accessories include:
 - Crevice tool **4** for awkward places, behind radiators etc.
 - Brush attachment **3** for pelmets, delicate objects etc which attaches to the crevice tool.

 To alternate between the brush and crevice tool push the button down and slide.

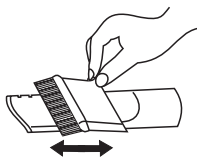


Tools storage

The crevice tool, brush can be stored on the tubes for added convenience.

Product storage

 When finished, you can store the vacuum cleaner as shown by inserting the hook on the floor nozzle into the slot on the cleaner body.

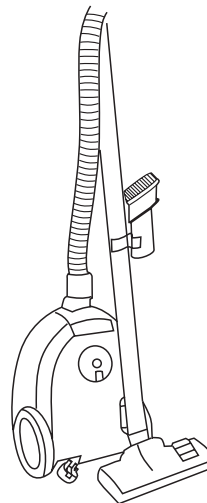


Controls

Power


To switch the cleaner on press the on/off variable power switch **1** inwards. To switch off press the on/off switch again.

 The suction power can be adjusted using this switch. Turn the switch to the desired level.

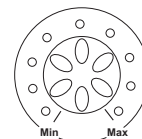

Suction may also be varied with the fingertip control on the handle.

 - Closed: full suction
- Open: reduced suction

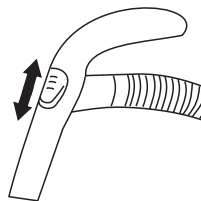

Automatic cable rewind

After use, unplug and press the cable rewind button **12** to retract the cable.

WARNING: When using the cable rewind, always hold the plug as the cable will rewind quickly.



Replacing the dustbag

 
To obtain the best results from your cleaner be sure to check and change the dustbag regularly, otherwise the airflow and cleaning power of your cleaner will be reduced and you may damage your cleaner.

Dustbag condition indicator


If the suction power decreases or if the dustbag condition indicator **16** shows fully red then the bag must be emptied immediately and/or the motor protection filter cleaned, even if the bag does not appear full. This will also occur if the nozzle, tubes or hose have become blocked.

- The dustbag indicator may occasionally show red during use - this is quite normal.

- 1 Lift the dust compartment lid **9**.
- 2 Pull the dustbag retaining clip forward to release. Carefully lift the dustbag clear of the cleaner and dispose of the dustbag.
- 3 To fit the new dustbag first locate the bottom end of the dustbag collar into the guide slot at the bottom of the dustbag compartment then pull the collar forward until it locates into the securing clip.

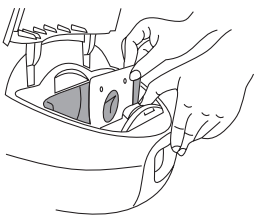

 - 4 The arrow on the collar of the dust bag must point downwards when fitting.

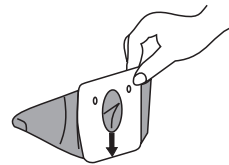

Note: The dustbag compartment lid will not close unless the dustbag is fitted correctly.

IMPORTANT

 
- All filters should be checked regularly for signs of damage, preferably after each cleaning task. The filters must be replaced immediately if they become damaged.
- Always disconnect the cleaner from the mains when checking filters or replacing dust bag.
- Always make sure the dust bag, grill and filters are fitted before use. Failure to do so may result in damage to your product.

Motor filter

The motor filter must be cleaned everytime the bag is changed to remove the fine dust particles collected. This can be done by shaking it.

However, after approximately 5 dustbag changes, the filter should be replaced.

The motor filter is found in the dustbag compartment. With the dustbag removed remove the filter grill, press the centre tab and pull out. Pull out the filter, shake to clean and replace.

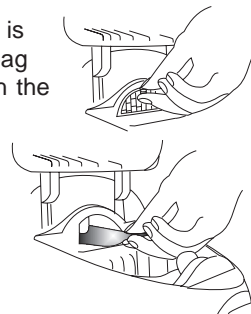

The grill must be replaced after the filter has been cleaned.

 


Exhaust filter

The exhaust-filter must be cleaned everytime the bag is changed to remove the fine dust particles collected. This can be done by shaking it.

However, after approximately 5 dustbag changes, the filter should be replaced.

The exhaust filter is located behind the exhaust filter cover 14. To remove, unclip the cover and remove the filter and clean or replace.

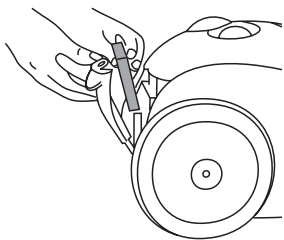

Care and maintenance

Your cleaner is manufactured to withstand normal day-to-day use, but an occasional wipe over will help maintain its good looks. Abrasive cleaners should not be used.

Purchasing new filters and dustbags

Only use original Goblin bags and filters. Replacements can be purchased from Goblin Service Agents for details (see separate leaflet) or by calling our Helpline number.



Helpline

If you have any difficulty with your appliance, do not hesitate to call us. We're more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product
- Model number as shown on the underside of the appliance.



Your two year guarantee

- **It is important to retain the retailers receipt as proof of purchase.** Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model No. Serial No.

All Goblin products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Goblin at the address shown. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (1-5) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before returning the appliance or calling the helpline.

- Check the dust bag and filters for blockages.
- Check the hose and tubes for blockages.
- Check the plug is firmly in the socket and the supply is switched on.
- Make sure the socket is working by trying another appliance.
- Check the fuse in the plug.

Goblin products are intended for household use only.

Goblin has a policy of continuous improvement in product quality and design.

The Company, therefore, reserves the right to change the specification of its models at any time.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the manufacturers instructions. For example bags and filters should be changed or cleaned regularly.

EXCLUSIONS

Goblin shall not be liable to replace or repair the goods under the terms of the Guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non-domestic use.
- 5 The guarantee excludes consumables such as bags and filters.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



Goblin®

The After Sales Division,
Goblin, Mexborough,
South Yorkshire, England, S64 8AJ

Helpline (office hours)
UK 0870 060 2604
Republic of Ireland 1800 409119

VC73155M Rev 3