

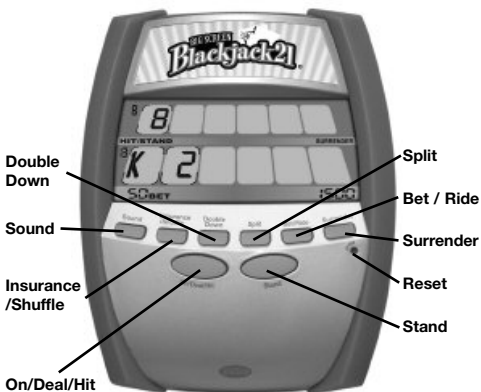
RADICA®**BIG SCREEN
Blackjack21®****I6004****For 1 Player / Ages 8 and up
INSTRUCTION MANUAL**

P/N 82398500 Rev.C

Deal me in and double down!

You're sitting at a Blackjack table in Vegas. Showing no emotion, you peek at your two cards. They add up to 16. Taking a deep breath, you tap the table in front of you. The dealer slides a card from the top of the deck and deals it to you. You turn over the card and see it's a five of diamonds. You have 21!

Now you can take the excitement of Las Vegas Blackjack anywhere you go with Hit Me 21! You'll be swinging just like the high rollers as you coolly tap to Hit or calmly wave your hand to Stand over the felt! Just don't bust and whenever possible, split and doubledown!

Good luck!**FEATURES AND BUTTONS**

ON / DEAL / HIT - Press this button to turn the game ON, begin a new game (DEAL), and receive a new card (HIT) during a game.

STAND - If you do not want to accept any new cards, press this button to STAND on the current hand dealt.

BET / RIDE - Press this button to place your BET or let your winnings from the previous game RIDE on to the next game.

Note: Maximum bet equals 300.

DOUBLE DOWN - Press this button to DOUBLE your bet (called DOUBLEDOWN), if your first two cards add up to 10 or 11.

INSURANCE / SHUFFLE - If the dealer's first card dealt is an Ace, press the button to buy insurance that the dealer has Blackjack. Press this button to SHUFFLE the deck when the game is over.

E

Note: INSURANCE - When the dealer's first card is an Ace, you may press the INSURANCE button to place a bet that the dealer HAS Blackjack. If the dealer DOES have Blackjack and you do not, your original BET and INSURANCE are returned.

SPLIT - When your first two cards are identical, press this button to SPLIT them into two playable hands.

SURRENDER - Press this button to SURRENDER your current hand. You can only SURRENDER during a game when the first two cards are dealt. You will lose only half your bet.

SOUND - This adjusts the game's sound.

RESET - When a blunt point is inserted, this button resets the game to its original settings.

SLEEP MODE - After 60 seconds of inactivity, the game will automatically shut down, going into "sleep mode." To turn it on again, simply press the ON / DEAL / HIT button.

AUTO BACK LIGHT - Big Screen Blackjack is equipped with an auto-backlight feature. This allows you to play your favorite game in the dark! After you turn your game on, or at anytime while you are playing your game, if your lighting conditions become dim, your screen will automatically illuminate! If you set the game down, the game goes to sleep, and the light will also automatically turn off.

HOW TO PLAY

The object of the game is to be dealt cards that add up to be higher than the dealer's cards without going over 21. All cards equal their own number except for face cards (Jacks, Queens, and Kings), which each represent 10. Aces can be either 1 or 11.

To begin, press the ON / DEAL / HIT button to turn the game ON or wake it from Sleep Mode.

Next, place your bet by pressing the BET / RIDE button. Press it again to increase your bet.

Press the ON / DEAL / HIT button or do a HIT MOTION to have the dealer DEAL the cards.

Once you've been dealt two cards you can choose to HIT, STAND, or SURRENDER. Do a HIT MOTION to be dealt another card. If you don't want another card, do a STAND MOTION. If you wish to give up and only lose half your bet, press the SURRENDER button.

NOTE: If you want you can use the ON/DEAL/HIT or STAND button during the game.

If the dealer's hand is 16 or less, the dealer will automatically draw additional cards. The dealer will automatically STAND on 17 or higher.

HINT: It is often thought that a player should always STAND on 17 or higher and HIT on 16 and below. This is merely a gambler's rule of thumb and doesn't always win.

If you draw enough cards that are closer to 21 than the dealer's hand, you win!

Notes: Bright or close lighting such as halogen lights near to the product may delay game play.

BATTERY INSTALLATION

This game is powered by two (2) AA (LR6) batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AA (LR6) batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

Adult supervision is recommended when changing batteries.

CAUTION

- As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.
- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.
- Under an environment with radio frequency interference, the device may malfunction and require user to reset the device.

MAINTENANCE

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, press the Reset button, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult the warranty information located at the end of this instruction manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

RECYCLING - EUROPE

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment on the environment, through re-using or recycling such equipment.

The crossed out wheelee-bin symbol on this product is to remind you that Waste Electrical and Electronic products should not be disposed of with household waste. If you are unable to re-use or recycle your product it should be disposed of at a civic amenity site.

While Radica toys comply with all relevant safety standards, we are obliged to tell you that some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

90-DAY LIMITED WARRANTY

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed by:
RADICA USA Ltd.
 13628-A Beta Road
 Dallas, TX 75244-4510



RADICA:®

BIG SCREEN BLACKJACK 21 IS A REGISTERED TRADEMARK OF RADICA GAMES LTD.
 © 2002-2005 RADICA GAMES LTD.
 PRODUCT SHAPE™
 ALL RIGHTS RESERVED