

# ACCUSPLIT® AX740

## OPERATING INSTRUCTIONS

### BASIC STOPWATCH OPERATIONS

**Twin Button Feature:** The Left and Right buttons on new ACCUSPLIT stopwatches operate interchangeably, so both are labeled “A” for these instructions.



#### Event

A – Start

A – Stop (Display shows “SPLIT”)

A (2sec) – Reset

#### Dual Split Memory with Split Counter

A – Start (Shows Running DUAL Time)

A – Split\* (Top shows CUM 1, Bottom shows LAP 1)

A – Split\* (shows CUM 2, Bottom shows LAP 2)

A – Split\* (Top shows CUM 3, Bottom shows LAP 3)

A – Split\* (Top shows CUM 4, Bottom shows LAP 4)

A (2sec) – Reset

\*Split Counter always shows Current Split

Push C to return to Running Time

#### Memory Review (before Resetting)

C (2sec) – Review\* (Shows last DUAL Split)

C – Review (Shows next DUAL Split, in reverse order)

C (2sec) – Exit Memory Review to last DUAL Split.

\*Reviews at any time in reverse numerical order.

### BATTERY CHANGING

If the display becomes dim or goes blank, you can replace the battery using “X3V” case battery changing instructions posted at [www.accusplit.com/support](http://www.accusplit.com/support). The watch uses a five-year CR2032 Lithium battery.

#### Master Reset

Remove battery as shown above. Wait 5 seconds and reinstall.

#### NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check

<http://support.ACCUSPLIT.com>

ACCUSPLIT, Inc. • 3090 Independence Drive, Suite 148 • Livermore, CA 94551 USA

800-935-1996 • 925-290-1900 • FAX 925-290-1930

[www.ACCUSPLIT.com](http://www.ACCUSPLIT.com) • [support@ACCUSPLIT.com](mailto:support@ACCUSPLIT.com)