





• Melbourne • Perth • Auckland • Hong Kong • Shanghai • Taipei • New York • Verona • London • Paris



Contents

Warranty	2
Introduction	3
Environmental protection	3
Specifications	3
Safety instructions	3
Unpacking	4
Know your product	5
Assembly	6
Mowing height	6
Adjustment of lower blade	6
Maintenance and storage	6

REPLACEMENT WARRANTY

Full 2 Years Home Use Warranty

Whilst every effort is made to ensure your complete satisfaction with this tool, occasionally, due to the mass manufacturing techniques, a tool may not live up to our required level of performance and you may need the assistance of our service department.

This product is warranted for a 2-year period for home domestic use from the date of the original purchase. If found to be defective in materials or workmanship, the tool or the offending faulty component will be replaced free of charge with another of the same item. A small freight charge may apply.

The warranty replacement unit is only made available by returning the tool to the place of purchase with a confirmed register receipt. Proof of purchase is essential. We reserve the right to reject any claim where the purchase cannot be verified.

This warranty does not include damage or defects to the tool caused by or resulting from abuse, accidents, alterations or commercial or business use.

It also does not cover any bonus accessories unless the tool is a GMC Platinum Professional model.

Please ensure that you store your receipt in a safe place. Conditions apply to the above warranty.

If you need direction of what constitutes a free of charge warranty claim, please review the guide given on the rear of the Receipt Holder. An indication is given as to the types of claim that are permissible, and those that are not.

Dear Customer

If you require any help with your product, whether it is a Warranty claim, spare part or user information, please phone our Help Line for an immediate response. Phone 1300 880 001 in Australia or 0800 445 721 in New Zealand.

Introduction

Your new GMC tool will more than satisfy your expectations. It has been manufactured under stringent GMC Quality Standards to meet superior performance criteria.

You will find your new tool easy and safe to operate, and, with proper care, it will give you many years of dependable service.

CAUTION. Carefully read through this entire Instruction Manual before using your new GMC Tool. Take special care to heed the Cautions and Warnings.

Your GMC tool has many features that will make your job faster and easier. Safety, performance, and dependability have been given top priority in the development of this tool, making it easy to maintain and operate.

Environmental protection



Recycle unwanted materials instead of disposing of them as waste. All tools, hoses and packaging should be sorted, taken to the local recycling centre and disposed of in an environmentally safe way

Specifications

Cutting width:	350mm
Height adjustment:	25mm – 75mm
Blade reels:	5 x 146mm
Wheel diameter:	210mm
Roller diameter:	45mm
Weight:	8.5kg

Safety instructions

The tool must be used only for its prescribed purpose. Any use other than those mentioned in this Manual will be considered a case of misuse. The user and not the manufacturer shall be liable for any damage or injury resulting from such cases of misuse.

To use this tool properly, you must observe the safety regulations, the assembly instructions and the operating instructions to be found in this Manual. All persons who use and service the machine have to be acquainted with this Manual and must be informed about its potential hazards. Children and infirm people must not use this tool. Children should be supervised at all times if they are in the area in which the tool is being used. It is also imperative that you observe the accident prevention regulations in force in your area. The same applies for general rules of occupational health and safety.

The manufacturer shall not be liable for any changes made to the tool nor for any damage resulting from such changes.

WARNING. When using hand mowers, basic safety precautions should always be taken to reduce the risk of personal injury. Also, please read and heed the advice given in the additional important safety instructions.

Save these instructions

Work area

- Keep work area clean and tidy. Before commencing mowing, check your lawn to ensure that the area is clean of debris such as stones and mulch. Remove all obstructing material from the lawn, otherwise the hand mower could pick up this debris and either damage the cutting blades or eject it causing possible injury to the user or other persons in the area.
- Keep visitors away from the work area. All visitors and onlookers, especially children and infirm persons, should be kept well away from where you are working. Do not let others in the vicinity make contact with the mower.
- Keep hands and feet well away from the cutting blades. Even when you want to clean the blades, do not insert your hands into the blade.
- Store tools safely. When not in use, tools should be locked up out of reach.
- Do not force the tool. The tool will do the job better and safer working at the rate for which it was designed.
- Dress correctly. Always wear safety footwear when cutting the lawn with this hand mower. Leather gloves are also recommended when working outdoors.
- **Do not overreach.** Keep your footing secure and balanced at all times.
- Look after your tools. Keep tools sharp and clean for better and safer performance. Follow the instructions regarding lubrication and accessory changes. Should the hand mower not be functioning correctly, it should be inspected by an authorized repair centre.

Tool use and care

• Store idle tools out of the reach of children and do not allow persons unfamiliar with the tool or these instructions to operate the tool. Tools are dangerous in the hands of untrained users.

- Maintain tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the tool's operation. If damaged, have the tool repaired before use. Many accidents are caused by poorly maintained tools.
- *Keep cutting tools sharp and clean.* Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the tool, accessories etc., in accordance with these instructions and in the manner intended for the particular type of tool, taking into account the working conditions and the work to be performed. Use of the tool for operations different from intended could result in a hazardous situation.

Service


• Have your tool serviced by a qualified repair personnel using only identical replacement parts. This will ensure that the safety of the tool is maintained.

Unpacking

Due to modern mass production techniques, it is unlikely that your mower is faulty or that a part is missing. If you find anything wrong, do not operate the mower until the parts have been replaced or the fault has been rectified. Failure to do so could result in serious personal injury.

Know your product



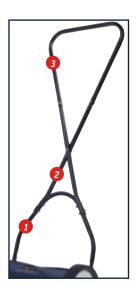





Carefully read the entire Instruction Manual before using this product.

Before returning this product for a Warranty Claim or any other reason Please Call 1300 880 001 (Australia) or 0800 445 721 (New Zealand)

When you make your call, please have the following information at hand:

• GMC Product Type • GMC Product Code

A GMC Service Engineer will take your call and, in most cases, will be able to solve your problem over the phone.

You are welcome to use this phone-in service to make suggestions or give comments about any GMC product.

With continuing product development changes may have occurred which render the product received slightly different to that shown in this instruction manual. The manufacturer reserves the right to change specifications without notice. Note: Specifications may differ from country to country.



The GMC 777 Helpline operates from 7am to 7pm, 7 days a week (EST). This allows you to contact GMC directly with any queries and technical questions you have regarding our products.



45–55 South Centre Road Melbourne Airport Victoria, Australia 3045 Tel: (03) 8346 1100 Fax: (03) 8346 1200



Save this Manual for future reference.