



IMPORTANT

ALL INSTALLATIONS MUST COMPLY WITH COUNCIL AND LOCAL AUTHORITY BYLAWS. IT IS THE RESPONSIBILITY OF THE PLUMBER TO ENSURE THAT THE WASTE IS MADE WATERTIGHT BY MEANS OF SILICONE SEALANT OR CAULKING COMPOUND. PLEASE PROVIDE MOTOR ACCESS FOR SERVICING.

Instructions, drawings, and diagrams contained in this manual present information available at the time of printing. Although every attempt has been made to keep them up-to-date, Kohler Company reserves the right to implement product changes without further notice.

CAUTION

TO COMPLY WITH AUSTRALASIAN ELECTRICAL SAFETY STANDARDS, THE WHIRLPOOL MUST BE HARD WIRED TO AN RCD PROTECTED CIRCUIT (TRIP CURRENT OF 30 MILLIAMPS/30 MILLISECONDS; MINIMUM CURRENT RATING OF 10 AMPS) BY A QUALIFIED ELECTRICIAN.

TABLE OF CONTENTS

	Page
1.0 INTRODUCTION.	3
1.1 PRODUCT INFORMATION	3
1.2 WHIRLPOOL IDENTIFICATION	3
1.3 SPECIFICATIONS	3
<hr/>	
2.0 INSTALLATION	4
2.1 PRODUCT INSPECTION	4
2.2 ACCESS PANEL	4
2.3 WHIRLPOOL INSTALLATION	5
2.4 TAPWARE AND DRAIN INSTALLATION	5
2.5 ELECTRICAL CONNECTIONS	6
2.6 TESTING	6
<hr/>	
3.0 OPERATION	7
3.1 EFFERVESCENCE MODE	7
3.2 CHROMATHERAPY OPTION	7
3.3 KEYPAD ICONS	8
3.4 OPERATING THE DIAL CONTROL	9
3.5 OPERATING THE REMOTE CONTROL	10
3.5.1 FUNCTIONS	10
3.5.2 PROGRAMMING	10
3.5 AUTOMATED FUNCTIONS	11
3.6 CLEANING AND MAINTENANCE	11
3.7 OPERATING THE WHIRLPOOL	12

1.0 INTRODUCTION.

RECOMMENDED WATER TEMPERATURE MAXIMUM 40 °C.

1.1 PRODUCT INFORMATION

Water capacity	Water depth	Capacity
Working (min.)	250 mm	180 litres
Overflow depth (at waste)	545 mm	420 litres


Pump		
Volts	Hz	Amps
240	50	7.2

1.2 WHIRLPOOL IDENTIFICATION

At the time of publication, the Kohler Purist Whirlpool models are:

SHAPE	SYSTEM	SPECIFICATION LEVEL
OVAL	PURIST	1110-0
OVAL	PURIST RELAX	1110-CT-0

1.3 SPECIFICATIONS

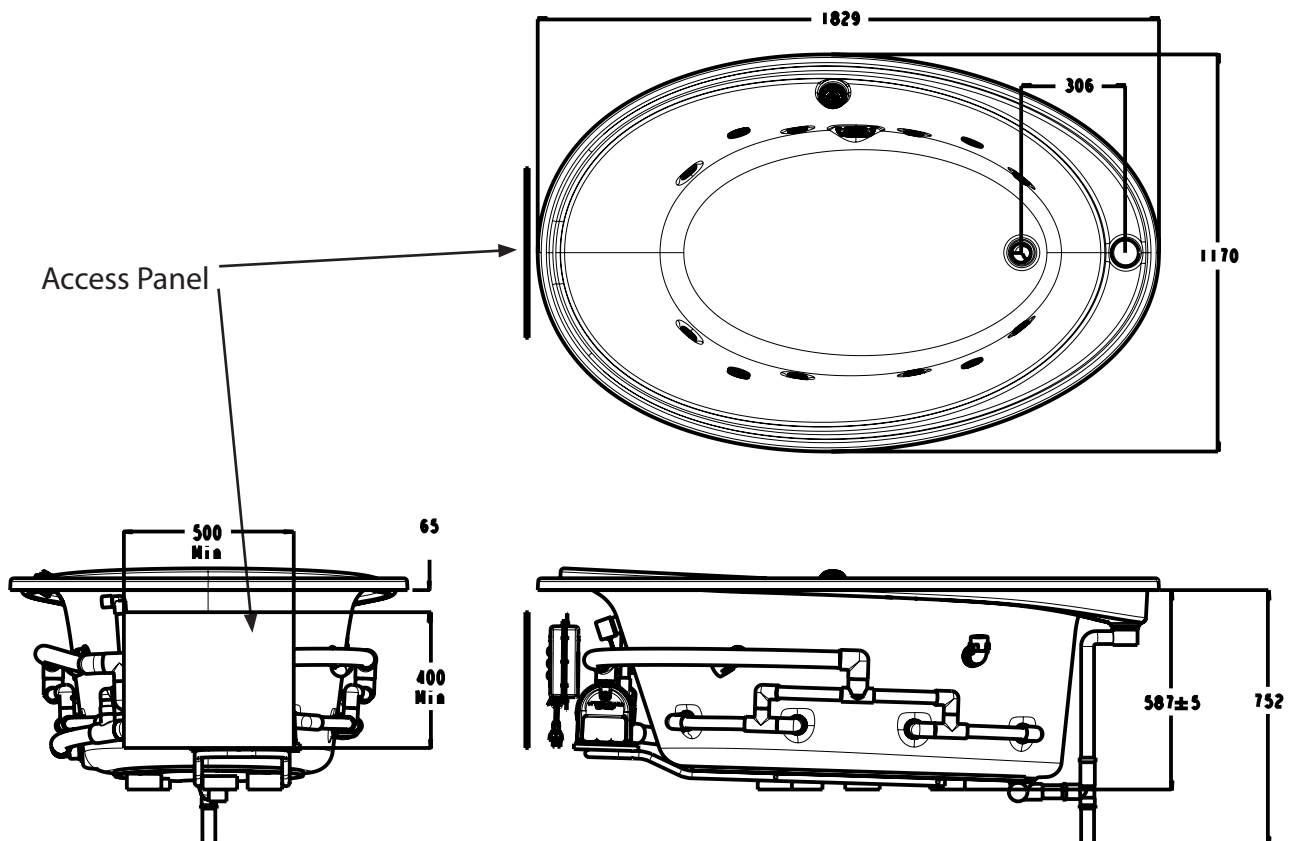

2.0 INSTALLATION.

2.1 PRODUCT INSPECTION

Your whirlpool has been manufactured to the highest possible standards and has been factory tested.

Carefully unpack the product and inspect for any transit damage.

NOTE: Warranty does not cover damage caused in transit or by mishandling.

When removing the whirlpool from protective packaging, DO NOT LIFT BY THE PIPE WORK.

Carefully protect the acrylic surface of the whirlpool during installation using a soft drop cloth.

2.2 ACCESS PANEL

Plan for access panels to simplify future maintenance.

These should be wide enough to provide unrestricted access to motor, air blower and adjacent plumbing.

Access panel must be secured by screws to prevent unauthorised tampering.

Where practical, locate the power point so it can be reached from the access panel.

2.0 INSTALLATION. Cond...

2.3

WHIRLPOOL INSTALLATION

IMPORTANT:

Whirlpool height may vary, do not build support box until product height can be measured

The Purist whirlpool has been designed for drop-in installation.

Floor should be flat, level and free of any bumps and protrusions.

Build stud framing as shown in diagrams, ensuring that the top is level. Whirlpool must be installed level at all top edges.

Ensure that the stud framing is not interfering with pump, controller and whirlpool plumbing.

Whirlpool must be supported both on the rim and on the wooden feet. Do not allow the whirlpool to be supported by the rim alone. Do not concrete in place.

Please remember to provide unrestricted access to the pump to assist with future maintenance. Access panels should be wide enough to allow access to motor, controller and adjacent plumbing and should be secured by screws to prevent unauthorised tampering.

IMPORTANT:



No motor access, no warranty service.

Use template provided to cut aperture for whirlpool.

2.4

TAPWARE AND DRAIN INSTALLATION

Install the tapware and drain, connect the plumbing to the faucets and waste fitting.

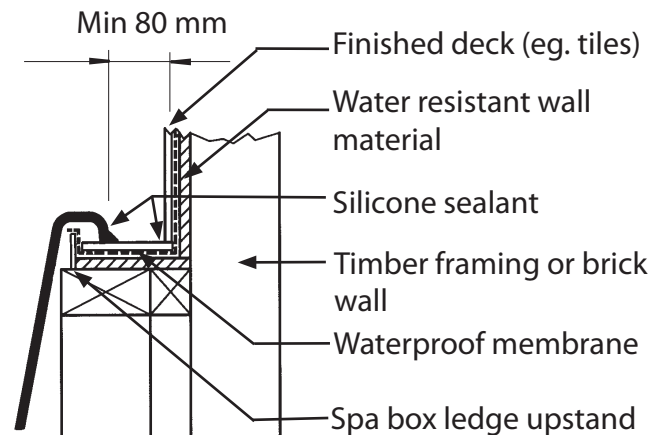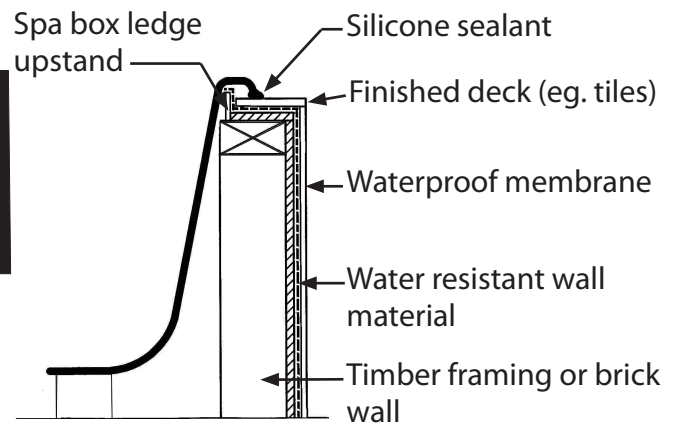

2.0 INSTALLATION. Cond...

2.5 ELECTRICAL CONNECTIONS

The Purist whirlpool, as a class 1 appliance, may be permanently connected to fixed wiring or connected using the 10A supply plug provided. This should be a separate line, direct from the switch board and should be protected by a residual current device (RCD) with a rated trip current not exceeding 30 mA/30 millisecond and a minimum current rating of 10 Amps.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

The parts containing live components must not be accessible to a person in the whirlpool. Exceptions to this are the whirlpool controls, light and remote control.


We recommend installing a PDL 596/56RCD-30 switch on the bathroom wall at a convenient height to prevent child tampering. This device would supply an RCD protected supply to the whirlpool controller or pump, depending on the whirlpool model, via a PDL 651 VWP permanent connection or PDL 691/15 wall socket located under the whirlpool surround.

Please note that the plugs and sockets on the blue control box are not user serviceable and should not be unplugged.

2.6 TESTING

Fill bath to 30mm above Jets, check for leaks in plumbing and test all functions on Keypad.

If a Remote Control is included, check all functions of Keypad using Remote Control

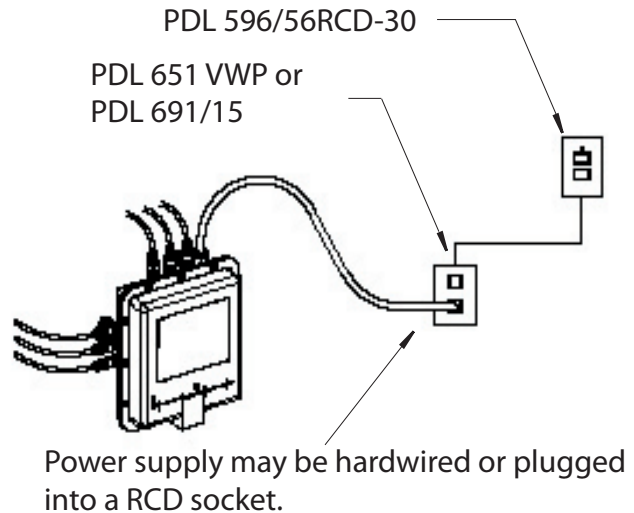

3.0 OPERATION.

3.1 EFFERVESCENCE MODE

As water flows through the pump, air is introduced into the pump and produces small champagne like bubbles at the jets. This effervescence is intended to be a relaxing and soothing experience.

3.2 CHROMATHERAPY OPTION (IF FITTED)

NOTE: Chromatherapy may be used with all modes of operation. Chromatherapy may also be used when the pump is not operating.

Chromatherapy Cycle- When this mode is activated, the chromatherapy lights will automatically and continuously cycle through the eight colours; white, violet, indigo blue, aqua blue, green, yellow, orange and red.

One cycle through all eight colours takes approximately one minute. Rotate the outer ring to select this mode and press "OK" to activate it. Press "OK" while the chromatherapy mode is active, to turn off the lights.









Chromatherapy Specific Colour Selection - When this mode is activated, you may choose a specific colour for the bath. Rotate the outer ring to select this mode, press "OK" to activate and use the up/down arrows to reach the desired colour. Press "OK" while the chromatherapy mode is active, to turn off the lights.

Colour	Mood
White	Pure, clarifying
Violet	Inspiring, Creative
Indigo Blue	Serene, peaceful
Aqua Blue	Calming
Green	Harmonious, Balancing
Yellow	Hopeful, illuminating
Orange	Joyful, spontaneous
Red	Courageous, energising

3.0 OPERATION. Cond...

3.3

KEYPAD ICONS

ICON	FUNCTION	ACTION	STATUS
		Turn the power on at the wall	The central bargraph will start flashing green after 10 seconds.
	Power ON/OFF	Press button	All icons on the User Inter face will light up blue ready for use.
	Effervescence Mode	Select icon with the dial ring.	Icon flashing blue.
		Press OK button.	Pump running. Pump icon flashing green. Heater on. Heater Icon green.
	Heater	Select icon with the dial ring.	Pump on. Pump icon green. Heater icon flashing green
		Press OK button.	Heater off. Heater icon flashing blue.
		Press OK button again.	Heater on. Heater icon flashing green.
		Rotate dial ring to select another function.	Heater stays on. Icon light stops flashing.
	Chromatherapy Cycle	Select icon with the dial ring.	Icon flashing blue.
		Press OK button.	Chromatherapy Cycle on. Chromatherapy Cycle icon flashing green.
		Press OK button.	Chromatherapy Cycle off. Chromatherapy Cycle icon flashing blue.
	Chromatherapy Specific Colour	Select icon with the dial ring.	Icon flashing blue.
		Press OK button.	Chromatherapy Specific Colour on. Chromatherapy Specific Colour icon flashing green.
		Press OK button.	Chromatherapy Specific Colour off. Chromatherapy Specific Colour icon flashing blue.
		Press Up button until the Light reaches the desired colour.	Chromatherapy increments through colour range.
		Press Down button until the Light reaches the desired colour.	Chromatherapy decrements through colour range.
	Power ON / OFF	Press button.	Spa stops operating. All functions off.
		Turn the power off at the wall.	

3.0 OPERATION. Cond...

3.4 OPERATING THE DIAL CONTROL

DIAL CONTROL OPERATION.

IMPORTANT:


Pump will not run if water is not present.
Do not operate the whirlpool without water.

The Purist whirlpool features a state of the art electronic controller. The system is controlled by a dial control that allows you to select many different functions.

The illustration to the below shows the dial control found on the Purist Relax controller.

NOTE:

Function availability will vary depending on model.

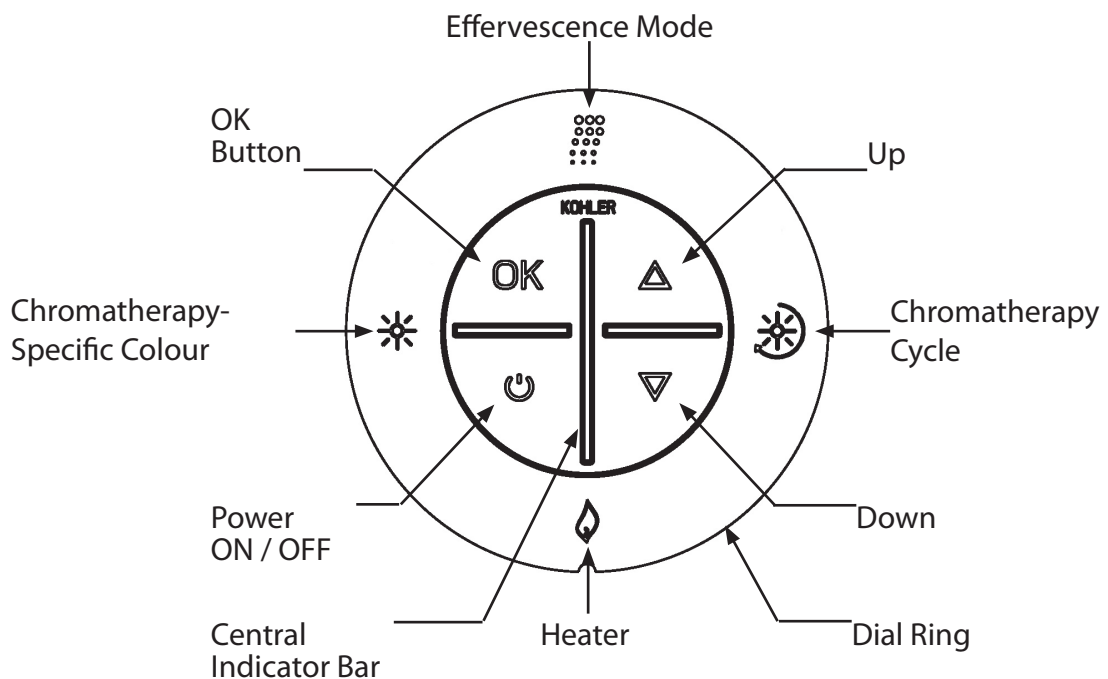

3.0 OPERATION. Cond...

3.5 OPERATING THE REMOTE CONTROL (OPTIONAL).

3.5.1. FUNCTIONS

The remote control can be used to control all the whirlpool functions.

The whirlpool can be turned on and off using the power button on the remote control.

The M (mode) key is used to scroll through the available functions.

The icons on the dial control indicate the functions as detailed on previous page.

Pressing O.K. or arrow up key on the remote control will select a particular function.


Two 1.5V AAA alkaline batteries are supplied fitted in the remote control. To replace, simply unscrew the bottom end cap and insert the batteries. Tighten the end cap securely making sure that the end cap makes contact with the seal.

3.5.2. PROGRAMMING

Programming your remote control is normally not required. If more than one device in your home, or in the near vicinity of your home, uses a remote control, it may be necessary to program this remote control to the user key pad. If you replace your remote control, or replace the controller, it may be necessary to program the remote control.

Programming steps:

1. Turn power on to the whirlpool.
2. Turn off all modes of operation. Wait approximately one minute until the dial control key pad darkens completely.
3. On the Dial Control press the up arrow, down arrow and the OK buttons simultaneously. The

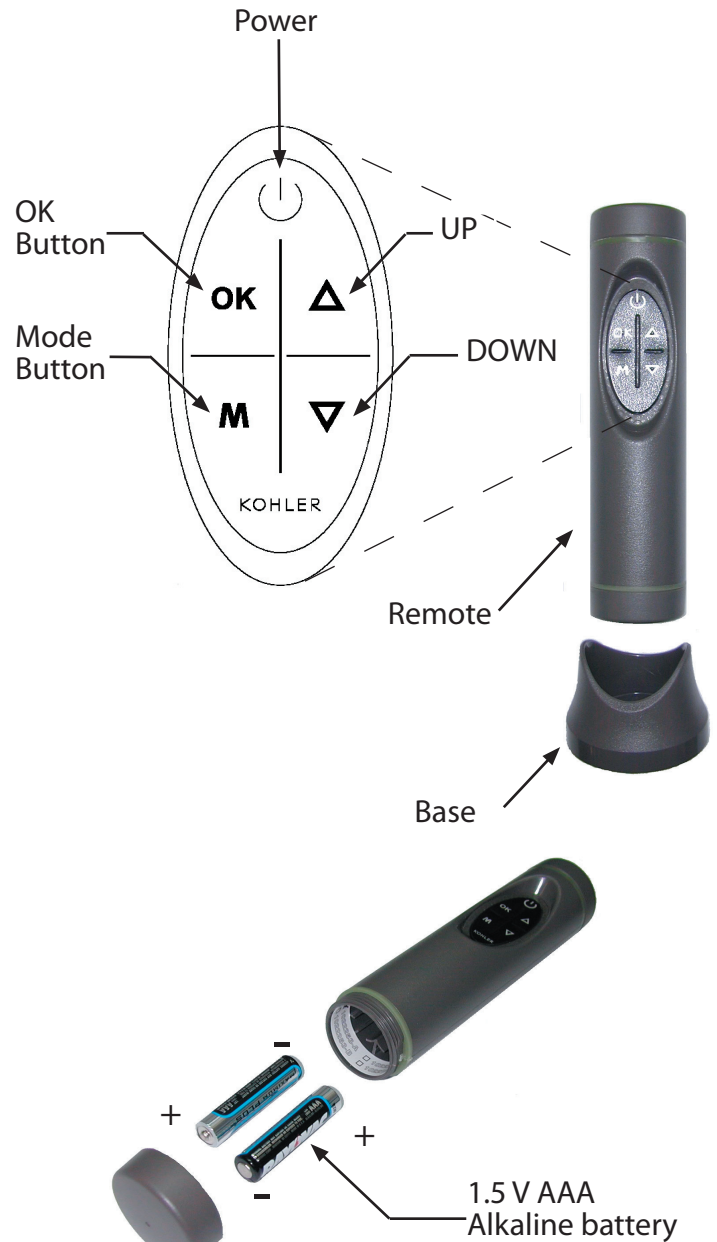

3.0 OPERATION. Cond...

bottom LED, on Dial Control central indicator bar, will begin flashing.

4. While the LED is flashing, press the OK button on the Dial Control. A light sequence will illuminate up and down the indicator bar.

5. While the indicator bar light sequence is active, press any button on the remote control. The program will download and the Dial Control will darken. The Dial Control will now respond only to this remote control.

3.6 AUTOMATED FUNCTIONS

AUTO TIMER

The auto safety timer will shut the whirlpool system down automatically after 30 minutes of continual operation and can be restarted by pressing the on / off switch.

3.7 CLEANING AND MAINTENANCE

When cleaning up, DO NOT use abrasive cleaners.

Use warm water and liquid detergent to clean the whirlpool.

DO NOT USE:

- harsh abrasive cleaners
- gritty scouring pads
- dry cleaning fluids
- window cleaning sprays or ammonia compounds
- solvents or cleaners containing solvents

Refer to the Cleaning Instruction Label attached to the bath for further information

3.0 OPERATION. Cond...

3.8 OPERATING THE WHIRLPOOL

Fill the whirlpool to the recommended level.
Turn the power on at the wall.
The Dial Control will come to life after 10 seconds displaying a flashing central bargraph.

When the flashing central bargraph has finished cycling, press the Power button on the User interface. The icons will all light blue ready for use.

A blue icon indicates the function ready for use.

A green icon indicates the function is operating.

A blue or green flashing icon indicates the function that is selected and can be activated.

While pump is running, you may select any other function by rotating the Dial Ring until the blue icon light flashes.

Press the O.K. button to activate the selected function. The icon will turn green, indicating that the selected function is operating.

To deactivate a function select it with the dial ring(the icon light will flash green) and press the O.K. button.

To turn off the whirlpool press the Power ON / OFF button.

You can have all functions running at the same time, except for the Chromatherapy-Specific Colour and Chromatherapy Cycle functions.

To cycle through the Chromatherapy-Specific Colours use Up and Down functions.

Effervescence Mode- Effervescence ports activate to provide a gentle, soothing bubbling action.



Power ON / OFF

OK

OK Button
(activates / deactivates selected functions)



Up / Down

CONTACT AND WARRANTY INFORMATION

For warranty information, please visit our website

Australia

www.au.kohler.com

New Zealand

www.kohler.co.nz

KOHLER

CALL US FOR HELP

NEW ZEALAND
KOHLER NZ LTD

Free Ph: 0800 564 537 (0800 KOHLER)
Free Fax: 0800 664 488
www.kohler.co.nz

AUSTRALIA
KOHLER CO.

Free Ph: 1 300 362 284
Free Fax: 1 300 652 284
www.au.kohler.com