


TANDBERG Gatekeeper Installation

Unpacking

User manual (on CD)
Ethernet/LAN Cable
Power Cables
Null-modem RS-232 Cable
Rack-ears and screws
Kit with 4 rubber feet



Connecting Cables

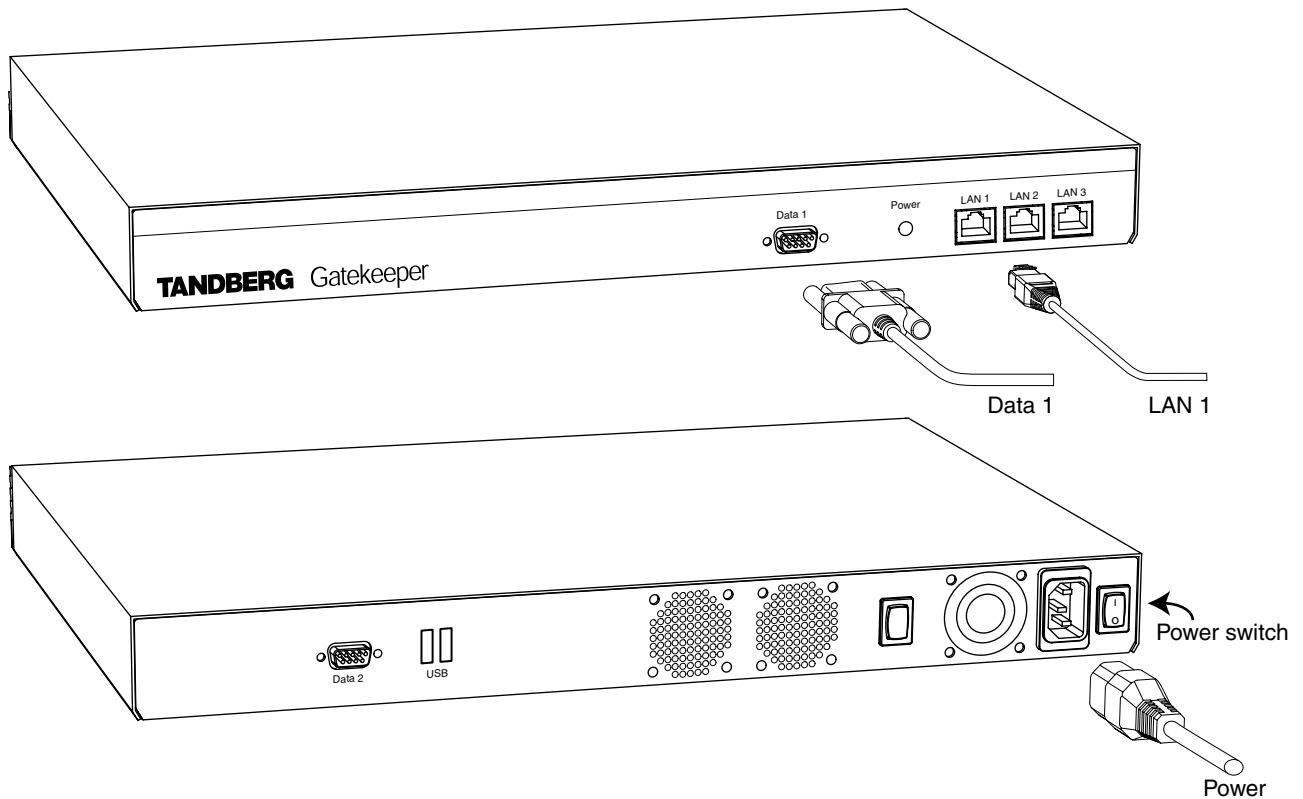

Configuration

1. Connect the null-modem RS-232 cable between the Gatekeeper (Data 1) and a PC.
2. Start a terminal program on the PC and configure it to: 115200, 8, 1, None.
3. Power on the unit by setting the power switch to '1',
4. When prompted for login, enter username 'admin', password 'TANDBERG'.
5. Type 'y' to start the installation wizard and press Enter.
6. When prompted, specify the password, IP settings, local prefix, SSH y/n, and Telnet y/n.
7. When prompted for login, enter username 'admin' and your new password.
8. Press Enter to skip the installation wizard.
9. Reboot the system by typing the command 'xcommand boot'