

1.0 Installation

For D5216 RAM Memory Card installation instructions, refer to the *D5200 Programmer Operation Manual* (P/N: 74-06176-000).

2.0 Battery Replacement

The *D5200 Programmer Operation Manual* (P/N: 74-06176-000) also provides instructions on replacing the D5216 battery without erasing the D5200 handlers and control panel account data.



RAM memory cards sold between August 2001 and August 2007 used rechargeable batteries instead of replaceable batteries. If any of your D5200 Programmers contain memory cards with rechargeable (non-removable) batteries, recharge the batteries by connecting the D5200 Programmer to a power source for 4 hours at least every 8 months.

The image below shows a D5216 RAM Memory Card with a replaceable battery.



