Service Manua

EY6101

Simplified

Please file and use this manual together with the service manual for Model No. EY6100-EY6181, Order No. MEW/PTD 9309-6100.

SPECIFICATIONS

DRILL/DRIVER

Motor voltage

: 12V DC

No load speed

LOW : $50 \sim 350 \text{ min}^{-1} \text{ (RPM)}$

 $HIGH: 180 \sim 1,300 \text{ min}^{-1} (RPM)$

Chuck capacity

: $1.0 \sim 13.0 \text{ mm}$

Maximum torque

LOW :199in. lbs (230kg-cm, 22.5Nm)

HIGH: 52 in. 1bs (60kg-cm, 5.9Nm)

Maximum clutch torque Overall length

: 39 in. 1bs. (45kg-cm, 4.4Nm)

: 229mm

Mass (Weight)

: 1.95kg

BATTERY PACK

Storage battery

: Ni-Cd battery

Battery voltage

: 12V DC (1.2V \times 10 cells)

BATTERY CHARGER

Input

: 120, 230, 240V AC separately available


Mass (Weight)

: 0.66kg (1.457bs.)

STANDARD EQUIPMENT

Battery charger , Battery pack

SCHEMATIC DIAGRAM

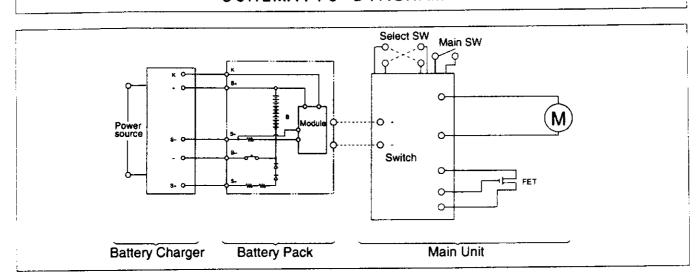


nasonic

© 1995 Matsushita Electric Works, Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service literature is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

EXPLODED VIEW

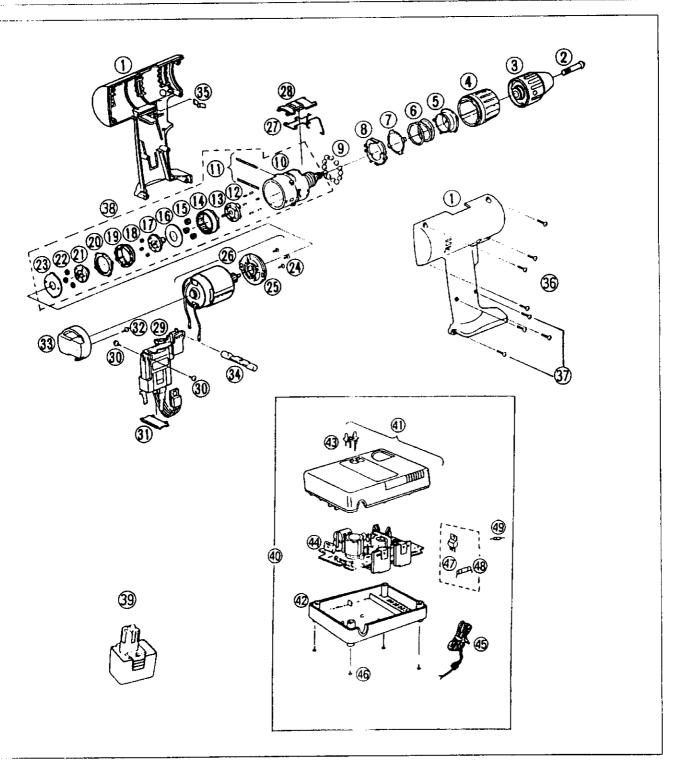

REPLACEMENT PARTS LIST

Note : *A ··· available as an optional accessory *B ··· only available as set

*C --- available individually

Ref No.	Parts No.	Parts Name & Descriptions	Per set	Remarks
	EY6101K3079	HOUSING AB SET	1	
2	EY6207B6807	CHUCK FASTENING SCREW	1	
3	EY6207B7917	KEYLESS DRILL CHUCK	1	
	EY6481H3227	CLUTCH HANDLE	1	
5	EY6481L0637	ADJUSTING SCREW	1	
6	EY6100L0168	SPRING FOR CLUTCH	1	
7	EY6481L0457	CLICK PLATE	1	
8	EYT184L0577	CLUTCH PLATE	1	
9	EY560B6967	STEEL BALL	12	*B
10	EY6481L1067	DRIVING BLOCK	1	J
11	EY6481L0357	THRUST PIN SET	2	*B
12	EY6283L0377	ROLLER PIN	6	*B
13	EY6207B1117	CARRIER	1	J
14	EY560B1457	RING GEAR A	1	
15	EY6207B1347	PLANET GEAR SET	3	*B
16		THRUST PLATE	1	J
17		CARRIER	1	
18		PLANET GEAR A	3	*B
		RING GEAR A	1	U
		RING GEAR B	ī	
		CARRIER A	1	
		PLANET GEAR B	ŝ	*B
		THRUST PLATE	1	^D
		SCREW FOR MOTOR	3	4 ^
		MOTOR MOUNTING PLATE	1	*C
	•	MOTOR	1	
		CHANGE-GEAR SPRING	1	
		CHANGE-GEAR HANDLE	1	
		SWITCH BLOCK	1	
		SCREW	2	**
		DUST PREVENTIVE PLATE	1	*C
		TAPPING SCREW	1	
		RADIATING PLATE (W/SCREW)	_	
		SELECTOR HANDLE	1	
		CLICK SPRING	1	
		TAPPING SCREW	1	
		TAPPING SCREW	6	*C
		GEAR BOX BLOCK	2	*C
		BATTERY PACK	1	
			1	*A
		BATTERY CHARGER	1	*A
		HOUSING A FOR CHARGER	1	
		HOUSING B FOR CHARGER	1	
		LAMP COVER	1	,
		MODULE	1	
		POWER CORD	1	
		TAPPING SCREW FOR CHARGER	4	
		FUSE	1	
		FUSE & FET SET	1	
		ZENER DIODE	1	
_	EY9592B	TOOL CASE	1	