

COMPETENCE 7660 B

The multi-function build-in single oven

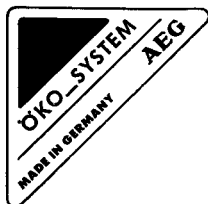
Instruction Book

Congratulations!

You are now the owner of a high quality, efficient and exciting cooking appliance.

From now on cooking should not only be made easier, but we believe you will find the new cooker a joy to use. The cooker will provide you with very good cooking results, is easy to use and maintain, if you take a little time to study the information contained in the instruction booklet, as well as in the lead-in pages of the accompanying recipe book. With just a little care the appliance will retain its superb appearance for many years to come.

You must read these instructions prior to using the appliance and retain them for future reference.



Contents

Safety instructions	
For the installer	4
For the user	4
Appliance description	
Features	5
First use	
Operating the controls	6
Push-in oven door handle	6
Switching on the electronic timer	7
Precleaning the oven	7
How to use the oven	
Operating the electronic timer	8-11
General	12
How to use the cooking functions for the oven	12/13
Switching on and off	14
Cookmatic	14
Baking	15/16
Roasting and stewing	17/18
Roasting, Rotitherm roasting/grilling using the meat thermometer	19-21
Grilling	21/22
Specialised applications of the hot air oven	
- Menu cooking	23
- Defrosting	24
- Bottling	25
Cleaning and care	
Oven	26-29
Optional extras	29
What to do if ...	30
Service	31

Safety instructions

For the installer

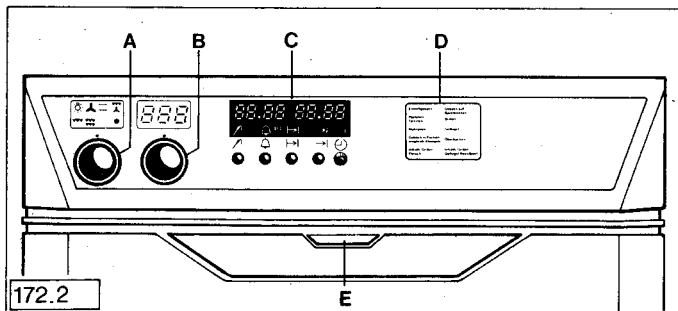
The safety requirements state that the following information be given:

When installing cooking appliances into kitchen furniture the enclosed installation instructions must be strictly adhered to.

For the user

- If the high quality ceramic roof develops cracks or it breaks, **do not use the oven at all.**
- In this event isolate the appliance from the electrical supply circuit. Contact AEG Service Department as soon as possible.
- **When you use the appliance to prepare your food, the oven doors and cooking plates become hot. Therefore keep small children well away from the appliance. This especially applies when you are grilling or pyrolytically cleaning the oven (where applicable).**
- Overheated fat and cooking oil may ignite. Prepare foods requiring fat or oil (chips) only under constant supervision.
- Do not use the appliance to heat your room.
- Take care when using small electrical appliances near the cooker. Connection leads should not come in contact with hot hobs/cooking zones or get trapped in the hot oven door.
- Do not line the oven base with aluminium foil or place any other cooking utensil on the base, as this will trap heat resulting in damage to the enamel interior. This invalidates the warranty.
- The vitreous enamel in your oven is very durable. However vitreous enamel is adversely affected by fruit acids (rhubarb, lemon, etc.) and tea which will discolour and dull the enamel. The performance of the oven is not affected. To prevent spillage of the above coming in contact with the enamel, place the cooking container on a baking sheet.
- **Do not place the grill/meat pan on the cooking plate to make gravy.** The direct heat will weaken the pan base resulting in warping and twisting of the pan when next used as a meat or grill pan.
- The appliance complies with radio interference suppression specifications EN 55014 (previously EEC Directive 87/308) and as appropriate with EN 60555 relating to the Retroactive Effect of the Mains Supply.

Appliance description



- A** Push-in cooking method selector with electronic display for:



Hot air cooking



Conventional electric cooking



Rotitherm roasting/grilling



Grilling



Dual-circuit grill

- B** Push-in temperature selector with electronic display
- C** Electronic clock with minute minder, auto-timer and temperature indicator for meat thermometer
- D** Cookmatic (electronic cooking guide)
- E** Push-in handle to open the oven door

Features

First use

Operating the control knobs

To operate the control knob press to release.

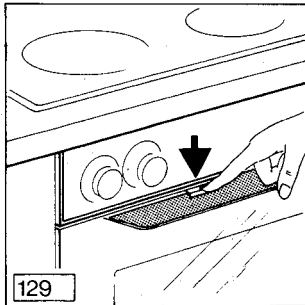
Control knob (A) can be turned clockwise or anti-clockwise to any position.

However, the oven temperature control knob (B) must be turned clockwise to set and anti-clockwise to turn off. The temperature control knob (B) can be set to maximum **280 °C**.


You can reduce soiling of the control knobs whilst the oven is in operation by pushing them in (child safety feature).

Push-in oven door handle

- Press button/arrow in the centre of the oven door handle.




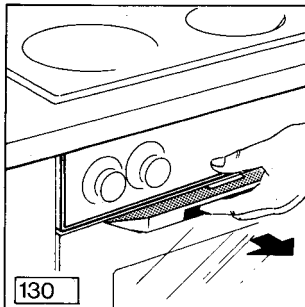- To open oven door, release the handle.
- To close the oven door and retract the handle push the handle and the button/arrow simultaneously.



As soon as the appliance is connected to the mains supply (and also after a power cut), the electronic timer flashes 00.00

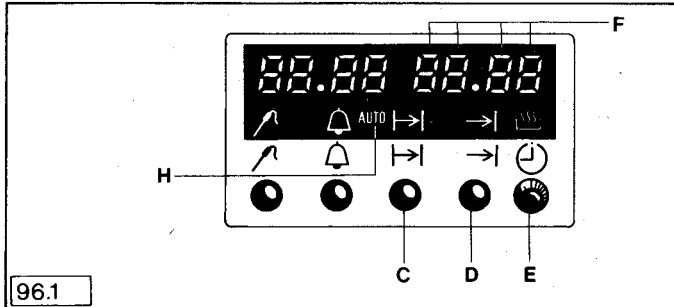Only when you have set the correct time of day on the timer is the oven ready for operation.



- Press knob E (⏻) to release.
- When finished with knob E (⏻) press to retract.
- Press buttons C (→) and D (←) at the same time, hold them in position, and set the actual time of day by turning knob E (⏻).

The time of day appears in display F.

Only now is the oven ready for operation.

Before using the oven for the first time, clean all accessories (shelf supports, wire shelves and pans) with warm water and washing-up liquid. Then switch the oven to the hot air cooking method and select the highest temperature and leave the oven on for at least one hour with the oven door closed.

During this period there is an unavoidable odour which is not harmful to your health. **We recommend that the room is well ventilated for your convenience.**

When the oven has cooled down, clean any parts not lined with catalytic self-cleaning panels with water and washing-up liquid.

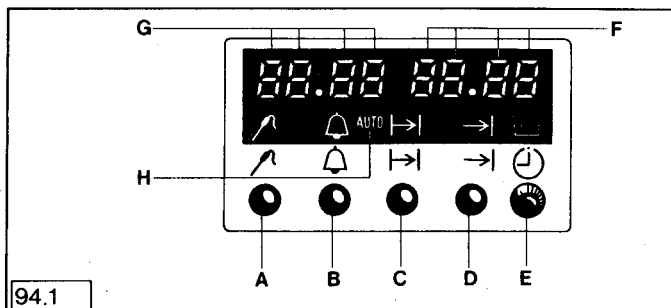
Switching on the electronic timer

Setting the time of day




 
 
Important note

Pre-cleaning the oven

Operating the electronic timer

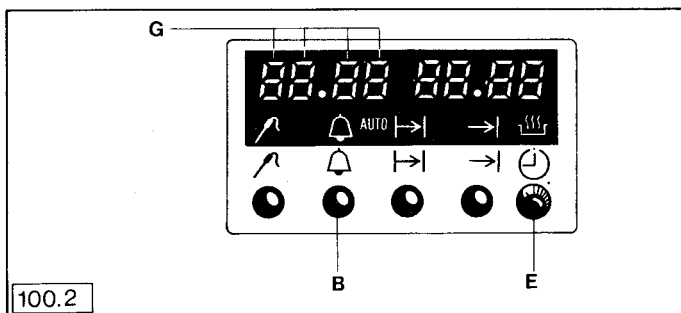





**The symbols
have
the following
meanings:**


-  Setting the **internal meat temperature in °C**
-  Setting the **minute minder**
(up to 99 minutes)
-  Setting the **cooking duration** of the oven
(up to 23 hours 59 minutes)
-  Setting the **end** of the cooking duration
(up to 23 hours 59 minutes in advance)
-  **Rotary control for time selections**

“AUTO” Indicator symbol, illuminated during time controlled cooking

Setting the minute minder



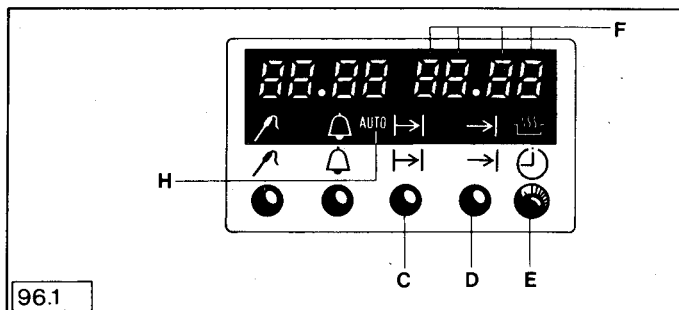
- Press button B , hold it in position and set the required time with knob E . The duration appears in display G.
- The time of day reappears in display F after release of button B.
- To check the cooking time, press button B . The remaining cooking time now appears in display G.

When the selected time has elapsed you will hear an audible signal which will switch off automatically after approximately 2 minutes. To switch this off manually press button B .



**Operating
the electronic
timer**

Note

The electronic timer is designed to switch the oven on and off automatically.




 How to programme the oven to switch off automatically

- Select the cooking method and temperature as required
- Press button C , hold it depressed, and enter the required **duration** with knob E . When button C is released, the time of day reappears in display F.
- **The word "AUTO" is illuminated indicating time controlled cooking is in progress.**



Note

 
The oven immediately switches on and automatically off after the elapsed duration.

At the end, an audible signal sounds for around two minutes. You can prematurely cancel it by pressing button C .


After time controlled cooking, set the cooking method selector and temperature control to the off position.

   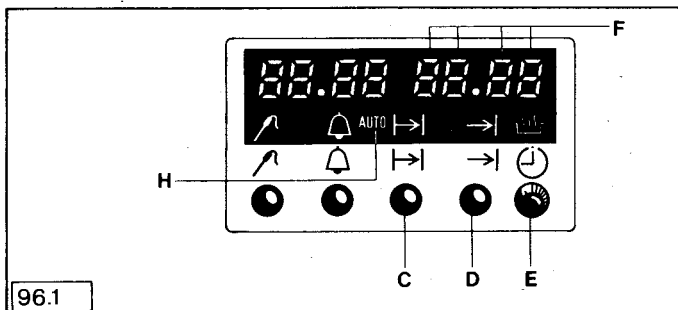- **The oven is only ready for manual operation after the "AUTO" has been cancelled.**
It is cancelled by pressing button D.

 

 


You can check on the remaining **cooking duration** and the **cooking end** at any time during time controlled cooking by pressing either button C  or D .

If you want to cancel automatic operation, press button C  and set the cooking duration to 00:00.

Set the cooking method selector and oven temperature control to the 0 and off position respectively.




96.1

- Set the cooking method selector and temperature control as required.
- Press button C , hold it depressed and enter the required **duration** with knob E , and then, by pressing button D , set the cooking end time.
- When buttons C  or D  are released, the time of day reappears in display F.


 
Automatic switch-on and -off of the oven


The oven switches on automatically at the correct time, having deducted the cooking duration from the cooking end. It then switches off automatically at the cooking end.

Note

At the end, an audible signal sounds for around two minutes. You can prematurely cancel it by pressing button C .

The oven is ready to operate manually again when the word "AUTO" is cancelled in the display. To do this press my button D.

 You can check the remaining **cooking duration** and the **cooking end** at any time during time controlled cooking by pressing either button C  or D .

If you want to cancel automatic operation, press button C  and set the cooking duration to 00:00.

Set the cooking method selector and oven temperature control to the 0 and off position respectively.

Oven

General

Before using for the first time, refer to the section describing pre-cleaning of the ovens.

The **oven** is a multi-function oven which features conventional cooking with top and bottom heat, hot air cooking, Rotitherm roasting/grilling and traditional grilling. For further details consult the relevant sections in this booklet.

Cooking methods for the main oven

The different cooking options

■ Conventional electric cooking

This method of cooking uniformly radiates heat from above and below. You should however make sure that you only cook on one level to ensure a uniform distribution of heat.

■ Hot air cooking

A fan ensures that hot air is continuously circulated around the oven allowing you to cook, bake and roast at several levels simultaneously. This cooking method also uses lower temperatures. This system saves you time and is highly energy efficient.



■ Rotitherm roasting/grilling

This cooking method combines the fan with the grill element. It replaces the rotisserie in your oven and is an excellent method of roasting/grilling meat and poultry on one level. It is also perfect for "au gratin" dishes.

■ Grilling

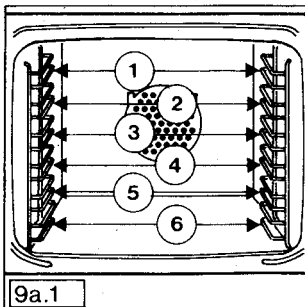
The grill element is used to grill foods such as steaks, chops, sausages, fish, etc.

■ Dual-circuit grill (where featured)



To grill large quantities of food use the large grill area . For smaller quantities e. g., 4 slices of toast, use the smaller grill area .

Shelf levels

The shelf positions feature 6 levels, the cooking tables supplied recommend the shelf position on which the oven will produce best results.

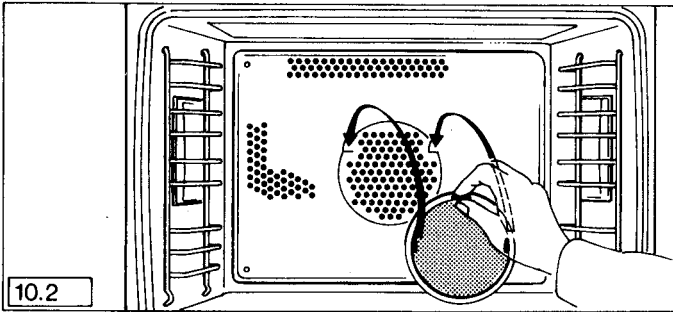


The fat filter supplied protects the fan against soiling. **It must always be in place when:**

- **Meat is cooked in uncovered containers using the hot air mode**  (do not insert when baking!);
- **During Rotitherm roasting/grilling**  (on multi-function ovens only) or traditional grilling.

How to insert the fat filter:


Hold the fat filter by the handle and insert the two tabs (see illustrations) into the slots in the back panel of the oven thereby covering the fan opening.



The fat filter must cover the opening completely.

Cleaning the fat filter:

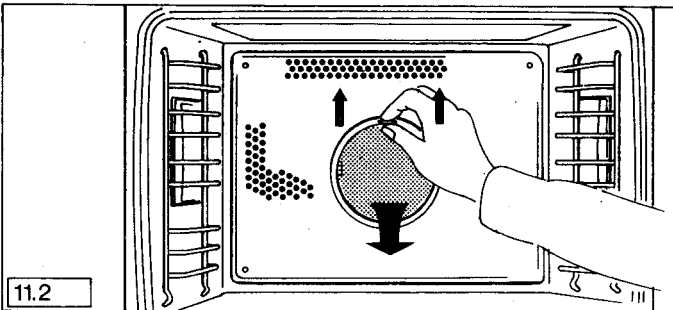
To clean the oven all oven controls must be set to the off position. The fat filter should be cleaned after every use. To remove the fat filter hold it by the handle and pull upwards.



How to clean the filter, see "Cleaning the fat filter" in this booklet. The fat filter must only be clipped into the oven when it is **totally dry**.

Using the oven

Switching on and off


Decide which cooking method you want to use and select the appropriate symbol on the cooking method selector, e. g.,  for Hot Air. Then select the required temperature with the temperature control. The red thermostat light is on for as long as the oven is pre-heating. The thermostat light cycles on and off during operation, indicating heating periods.

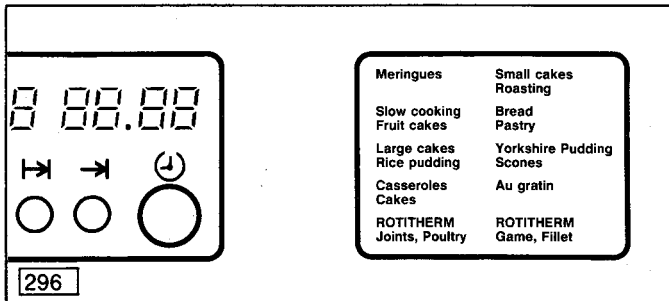
When pre-heating the oven (see information in the relevant cooking charts) position food in the oven after the red thermostat light has gone out for the first time. To utilise the residual heat in the oven switch the oven off 5-10 minutes before the end of the cooking time by returning both the cooking method selector and the temperature control to the off positions.

Cookmatic – Electronic Cooking Guide

The electronic cooking guide recommends the use of temperatures for the major food categories and for the different cooking methods available on the oven.

Cookmatic provides helpful instructions on the appliance which cannot get lost.

After selecting a cooking method, e. g., hot air  and a temperature, e. g., 180 °C, the electronic cooking guide gives a visual indication as to what can be cooked on this setting. To accommodate personal preferences it may be necessary to increase or decrease the recommended temperature.



Meringues	Small cakes
	Roasting
Slow cooking	Bread
Fruit cakes	Pastry
Large cakes	Yorkshire Pudding
Rice pudding	Scones
Casseroles	Au gratin
Cakes	
ROTITHERM	ROTITHERM
Joints, Poultry	Game, Fillet

■ Bakeware

Cakes are baked either in cake tins or alternatively on baking-sheets, full width baking sheets are available from AEG Spare Parts as an optional extra.

How bakeware affects browning:

1. Bakeware, which is dark in colour, has a non-stick coating or is made from aluminium is the best as heat is absorbed and then transferred to the cake resulting in shorter cooking times, lower energy consumption and better browning.
2. Bakeware which is light in colour or is made of tin reflect the heat resulting in longer cooking times and poorer browning. It is advisable not to use such bakeware when using conventional top and bottom heat.

■ Baking on one level provides the best results in the conventional mode.

The shallower the cake, the higher you should place it in the oven.

■ Baking times and temperatures

In many cases, it is not necessary to preheat. The recommended temperatures and times given in the enclosed chart are guidelines only. To suit personal taste it may be necessary to make small adjustments.

■ Recommendations

The hot air mode is recommended for all types of baking. However, you may prefer cooked cheesecakes, sponges, bread and rich fruit cakes cooked by the conventional method.

When you use the hot air cooking system you can cook on several levels simultaneously. This saves time, is convenient and energy efficient. You can also cook different cakes at the same time for instance a Victoria Sandwich and a Bakewell Tart or a Madeira Cake with a Dundee Cake. Simply make sure that the cooking temperatures are roughly the same and that sufficient space is left between the shelves to allow the air to circulate freely.

If baking cakes with a high moisture content such as several apple pies, it may be advisable to use only 2 shelves at the same time to prevent too much steam forming in the oven.

Baking – with conventional top/ bottom heat



With hot air



■ Baking times and temperatures

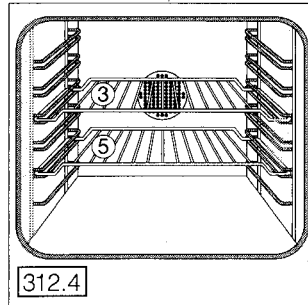
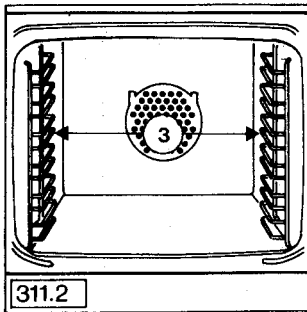
When baking with hot air it is often unnecessary to pre-heat the oven. For exceptions see enclosed baking charts.

If you use the oven for batch baking, choose cakes which require similar temperatures. Different cooking times can be overcome by either placing cakes into the oven later or by removing them earlier.

The baking chart is provided as a quick reference to keep near the oven.

When baking on more than one level the time given in the cooking charts has to be extended by 10–20 minutes.

■ Baking on one or more levels



You can bake on several levels simultaneously. Place cake tins centrally on the wire shelves to ensure even cooking results. Full width baking sheets and additional wire shelves are available as optional extras – see section “Optional Extras” in this booklet.

Cooking method

- Choose the most suitable cooking method from the various options:

Conventional top/bottom heat



Hot air



Rotitherm roasting/grilling



Where the attached cooking charts highlight shelf positions and temperatures in bold print the oven may give you the better result when using this cooking method. However you may wish to experiment and decide for yourself which cooking method gives the best result.

A note to Rotitherm roasting/grilling as this is a relatively new method of cooking meat and poultry although spit roasting which Rotitherm is replacing is not so new. Rotitherm is very much more convenient to use than a spit and once you have tried it you will be delighted with the results.

■ Recommendations

Wipe and weigh the meat. If stuffing is used, weigh the stuffed joint to calculate the cooking time. Place the joint in a suitable roasting dish, season with salt and pepper and brush lean joints with melted fat.

When cooking pies, place dish on a baking sheet to avoid spillage on to the floor of the oven.

- The times and temperatures given in the roasting chart provide a guide when cooking meat. Some adjustments may be necessary depending on the type of meat to be cooked. Cooking times have been given for meat which is at room temperature.
- Prime cuts can be cooked at higher temperatures than those which require a longer cooking time to tenderise the meat. A thick joint will require longer to cook through than a thinner one.
- A boned rolled joint will require a longer cooking time than one with the bone left in as bone is a conductor of heat.
- A small joint will require longer cooking time per 450 g (1 lb) than a large one. Allow an extra 30 minutes cooking time for joints up to and including 1.5 kg (3 lb).
- If the joint is cooked in foil the temperature has to be increased by 10 °C. To brown the joint, remove foil for the last 15 minutes or so of the cooking time.
- If cooking from frozen, place joint in a covered container and extend the calculated cooking time by approximately one third. To brown and crisp meat remove cover for the last 30 minutes of the cooking period.

Roasting, Rotitherm roasting/grilling and stewing in the oven

Cooking temperatures and times

Ovenware

Never use stainless steel ovenware in the oven, since it reflects the heat. Meat, poultry, and fish should be cooked in ovenproof dishes or in the meat pan for large quantities.

Choose a dish which is just a little larger than the joint itself. This will contain any fat in a smaller area and reduce splashing. If you wish to roast potatoes in the same dish around the joint rather than in a separate one you need to make allowances for this when selecting a suitable dish.

Never place cooking containers on the base of the oven, but on the wire shelf which you should insert on the 4th or 5th level from the top depending on the size of the food to be cooked.

When using the Rotitherm roasting/grilling method (where featured) place the joint on the wire shelf 3rd and 4th from the top (depending on size of roast) and slot the drip-pan into the 5th or 6th from the top to catch the juices. If you want to roast potatoes in the dripping, allow approximately 1-1¼ hours cooking time.

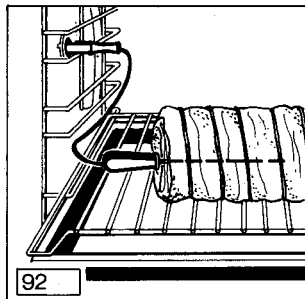
Turn the roast over halfway through cooking to ensure an all round crisp and brown joint.

The meat thermometer takes the guesswork out of roasting meat regardless of whether you use the conventional, hot air or Rotitherm roasting/grilling method.

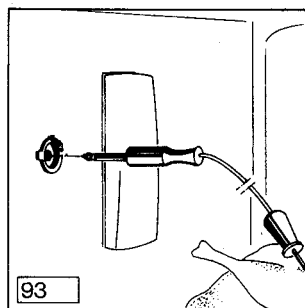
A thermo couple is located in the tip of the meat thermometer which "senses" the temperatures. When the meat thermometer is plugged into the side of the oven, the oven will work automatically until the temperature inside the meat is the same as the one you selected on the electronic timer.

WARNING: Only use the meat thermometer supplied with the oven. If a replacement becomes necessary only use a meat thermometer ordered from AEG Spare Parts Department.

1. Insert the meat thermometer horizontally into the thickest part of the joint and push the probe into the joint until the tip is as near to the centre of the joint as possible making sure to avoid bones and fat. Position meat pan in the oven.




 

2. Insert the meat thermometer plug firmly into the socket on the inside of the oven.




3. A temperature of 60 °C appears in display H of the electronic clock. This temperature can be increased or decreased as required.

Roasting meat using the meat thermometer


To switch on

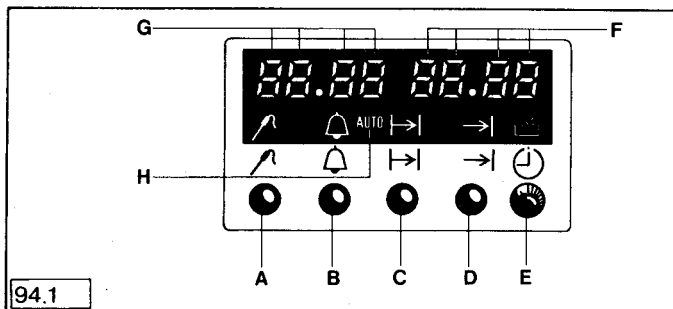- Press button A  on the electronic clock, hold it depressed and enter the required internal meat temperature with knob E , for example 85 °C. This temperature appears in the left display G of the electronic clock for as long as you keep button A  depressed. When you release button A, 30 °C appears in display G.




- Set the cooking method selector and the temperature control to the settings required using the cooking charts supplied as a guide (cooking charts for Roasting, Rotitherm roasting/grilling; cooking times and shelf positions).

Note

The display G on the electronic clock shows the internal temperature of the meat in °C as it continues to cook. To check what internal meat temperature you have selected press button A  on the electronic clock.

To switch off

 When the internal temperature in the meat has been reached the oven switches off automatically. When you unplug the meat thermometer from the oven, display G stops flashing.

You will also hear an audible signal for around 2 minutes and the display G flashes. To switch off the signal prematurely, press button A .

Return the cooking method selector and the temperature control to the off positions.

Roasting with the meat thermometer – temperature guide


Meat	Internal temperature selection
Beef	
rare	45–50 °C
medium	60–65 °C
well done	75–80 °C
meat loaf	75–80 °C
Pork	
	80–85 °C
Veal	
	80–85 °C
Lamb	
well cooked	80 °C
pink	70–75 °C
Game	
	75–80 °C
Poultry	
except goose	80–85 °C
	85–90 °C

Warning!

The handle must be removed whilst grilling. Failing to do so will result in overheating of the handle. This may cause damage leading to breakage of the handle.

Inserting the handle

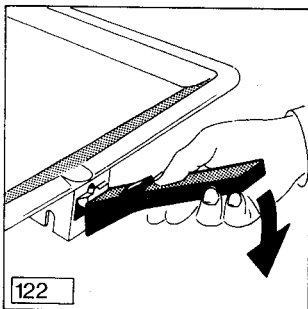Lock it into the grip at the front of the pan. See illustration.




Make sure that the handle is firmly attached to the pan!

**Inserting/
removing
grill handle**

Removing the handle

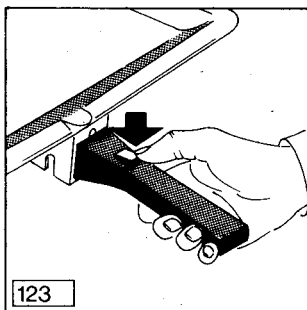Press the button on the handle. See illustration.



Traditional grilling





and

How to use the grill

Prime cuts of meat such as steaks and chops or fish weighing less than 1 kg can either be fried or grilled. Salt large pieces shortly before grilling and small ones just after grilling.

Turn meat/fish after half the grilling time so that both sides are uniformly browned. Turn thin pieces once; thicker pieces need turning more often.

You should set the grill to grill symbol  for small amounts and to symbol  for larger amounts.

Select the highest setting on the variable temperature selector to seal the food and then turn down to a lower temperature. Position the wire shelf with the projection facing upwards or downwards in a shelf position of your choice depending on the thickness of the food you wish to grill.

Place the grill pan on the wire shelf and remove the grill pan handle.

The oven door is closed during grilling

There is no need to pre-heat the grill unless you prefer to do so.

Grill pan and wire shelf can be cleaned more easily if soaked in the sink with water and washing-up liquid after grilling.

- The hot air oven is extremely versatile since you can cook a complete meal in it. You can cook different foods at the same time, such as fish and cakes, without any transfer of smell or taste from one to the other.
- When menu cooking try to choose foods which require similar cooking temperatures.
- When cooking meat in uncovered containers the **fat filter** must be inserted.

When cooking pies or cakes at the same time as a roast you can choose pies or cakes which normally cook at temperatures 20 °C lower than the roast. Temperature differences of 10 °C lower than the roast can be compensated by longer or shorter cooking times.

Shelf positions are chosen according to the food being cooked and in connection with the cooking guidelines in the recipe book supplied.

Menu suggestion:

Meat Loaf
Potato Bake
Buttered Carrots
Fruity Rice Pudding

Ovenware:

Oblong ovenproof dishes

Shelf positions:

Meat Loaf & Potato Bake
Side by side 3rd from top
Carrots and Fruity Rice Pudding
Side by side 5th from top

Cooking method:

Hot Air

Temperature:

170–180 °C

Time:

Approx. 60–75 minutes

Defrosting by hot air



in the oven

- Food in flat aluminium containers defrost especially well since aluminium is a good heat conductor. For freezing and subsequent defrosting of meat and vegetable dishes, flat aluminium containers should therefore be used. For defrosting uncooked frozen meat and fruit, closed ovenproof dishes are especially well suited.

Position the containers on the wire shelf or in the meat pan 4th from the top.


Food	Temp. °C	Time – Hours/minutes	
Ready-made meals 1–4 portions)	200	0.40–0.50	thawing and heating ready to serve
Small cakes without cream fillings or toppings (in foil)	200	0.15–0.20	ready to serve
Large cakes without cream fillings or toppings (in foil)	200	0.30–0.45	ready to serve
Un sliced bread in foil (approx. 450 g/1 lb)	200	0.15 + 0.30 at room temp.	ready to serve
Bread rolls	200	0.15 + 0.30 at room temp.	ready to serve
Fruit, e. g. 300 g strawberries, raspberries (in covered container)	200	0.15 + 0.15 at room temp.	ready to serve
Ready to cook foods (pizza, pies)	200	0.45–1.00	ready to serve
Uncooked joints (e. g. 1.5 kg)	180–200	2.00–3.00 depending on type of meat	thawed and cooked
Chicken approx. 1 kg (cover with greaseproof paper)	50	1.00–1.15	thawed, remove giblets and roast

Bottling in the oven

- For bottling, use only jars with rubber seals and glass lids. Never use jars with screw fittings or bayonet catches or metal tins. And make sure you use fresh foodstuffs!

The oven holds 6 bottling jars of 1–1.5 litres capacity.

Place 1 cup of hot water in the drip-pan so that the necessary humidity is retained in the oven.

- Position the jars in the enamelled pan on the 4th level from the top. The jars should not touch, must wherever possible be filled to the same level with the same contents and must be securely clamped.
- To **switch on**, turn the cooking method selector to hot air  and the oven temperature control to 160 °C.
- **Keep an eye** on the food being bottled.

As soon as the liquid in the first jars (when bottling **fruit** or **gherkins**) **begins** to bubble (after around 45 minutes for 1 litre jars) switch off the oven, but allow the jars to stand a further 30 minutes or so – around 15 minutes for soft fruit, e. g. strawberries – in the closed oven.

When bottling **vegetables** or **meat**, set back the oven temperature control to 100 °C as soon as the liquid in the first jars **begins** to bubble and allow the contents to **cook** for a further 60–90 minutes. Then switch off the oven and allow the jars to stand a further 30 minutes in the closed oven.

Cleaning and care

Your oven has catalytic self-clean liners on the sides and the back of the oven.

The liners help to keep the oven cleaner as they clean themselves to a great extent during roasting and baking at temperatures above 200 °C. As cleaning may be improved by exposure to a higher temperature it may be necessary to run the oven at 250 °C for 1 or 2 hours per week.

Before carrying out such a heat cycle, remove all oven equipment and make sure that you have cleaned the unlined surfaces to prevent any soil from baking on. The VITRATHERM oven roof can be cleaned with an oven spray or "Ovenpad".

For isolated stubborn stains on the catalytic liners use a soft brush and very hot soapy water. Never use abrasive cleaners or scouring powders.

From time to time you may like to take the side liners out and clean the vitreous enamel behind. For cleaning instructions for the vitreous enamel please see below.

When caring for the oven on a manual basis please follow instructions below.

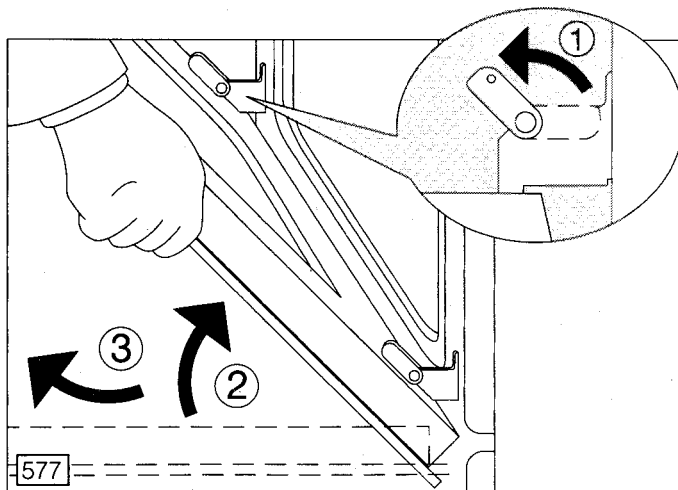
Before cleaning the oven

If the oven has been in use, switch it off and allow to cool down.


The following parts can be removed for cleaning:

Removing the oven door (main and/or secondary ovens)

- Removing the oven door
 - Fully open the oven door.
 - 1. Pull the door catch on both door hinges towards you (see illustration).
 - 2. Lift the door up and pull forward away from the oven (**grip the sides – do not pull on the door handle!**).




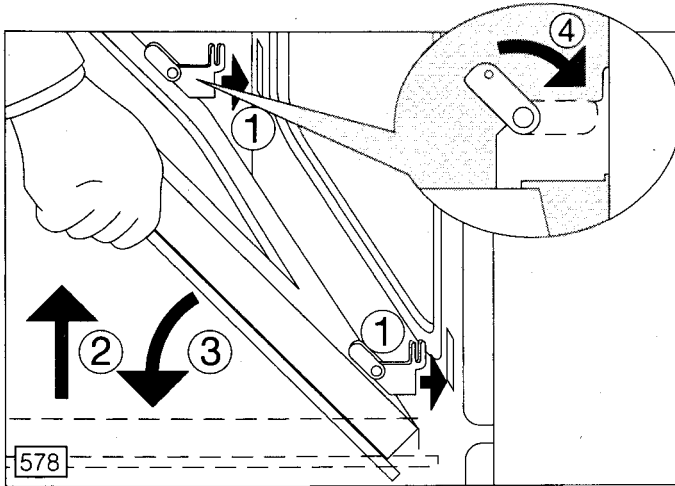- Replacing the oven door
 1. Insert both brackets into the oven frame.
 2. Fully open the door and return door catches to their working positions (see illustration).



- Shelf supports

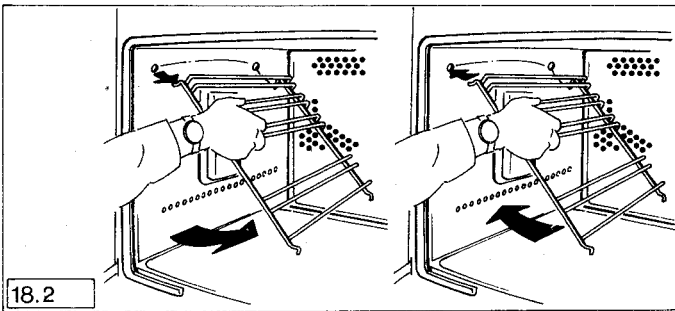To clean the sides of the oven, the shelf supports (see illustration) can be removed.



Pull the shelf support at the bottom, towards the centre of the oven and unhook from the top. Replace in reverse order.

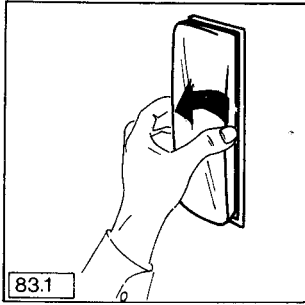
Removing the shelf supports

Cleaning the lamp cover or replacing the oven lamp in the oven

Warning! Isolate the oven from supply before replacing the oven lamp.

To clean the glass cover or change the oven lamp the glass cover should only be unclipped by hand. Do not use tools of any kind.

After cleaning the lamp cover or changing the light bulb refit the lamp cover.



Oven lighting

You can illuminate the oven for cleaning. To do this, turn the cooking method selector to the lamp position.

Manual cleaning

Ovens which are cleaned after every use need very little attention. If left and used again fat splashes will bake on and are then difficult to remove.

The outer glass of the oven door is not hermetically sealed, so take care when cleaning to prevent moisture from running down on the inside of the glass.

Clean **glass surfaces, oven trims and controls** with a soft damp cloth. Polish dry with a soft cloth.

Vitreous enamel interior surfaces can be cleaned with:

- a damp cloth and mild detergent
- cream cleaners such as “Jif” and a cloth.
- oven cleaners such as “Ovenpad”. Do follow the manufacturer’s instruction on the cleaning materials you use carefully.

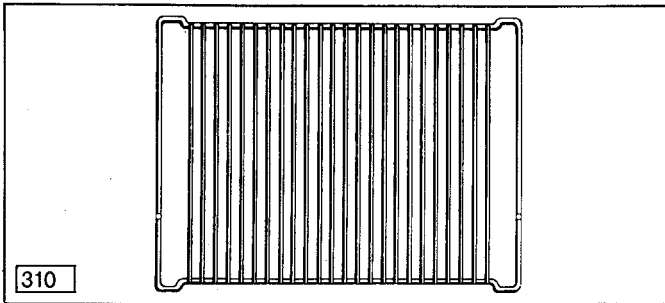
Take care that oven cleaners do not come in contact with the fan or any other part of the oven other than the vitreous enamel.

Do not use scouring pads or abrasive cleaning materials which may scratch the surface of any part of the appliance.


Cleaning the fat filter

The fat filter should be cleaned after every use. To remove filter, hold it by the handle and lift upwards. Place the fat filter in a saucepan, add approximately 1 tsp. of automatic washing powder or 1 tsp. of dishwasher powder and cover filter with water. Bring to the boil and leave to soak for approx. 30 mins. or longer depending on the degree of soiling. Make sure the solution does not boil over as it could mark your hob. Rinse filter in clear water and dry. For light soilage wash in a 65 °C dishwasher programme.


Optional extras



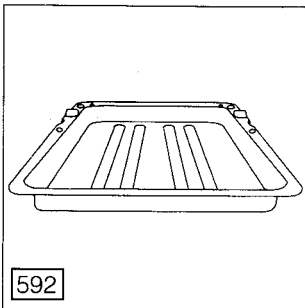Additional wire shelf
ET No. 661 307 541



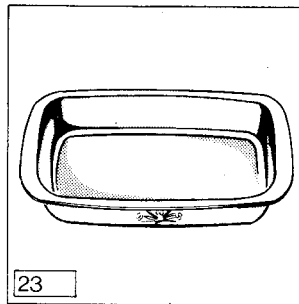Full width universal
roasting/baking pan
E No. 611 898 626



Ceramic oven dish
E No. 611 899 660

What to do if ... (something goes wrong?)

Faults you can rectify yourself

... the pilot lamps do not show?

... the oven does not heat?

1. You may well have not operated all relevant switches or
2. The fuse in the fuse box has blown.
3. **IMPORTANT – Make sure that the oven door is closed completely.**

... the fuses keep blowing?

Please call an approved and qualified electrician.

... the oven lamp fails?

See **Cleaning and care on page 28.**

Replacement lamps are not covered by warranty and are not free of charge.

... the oven cannot be switched on?

Check whether:

- ... **the clock display** is flashing! If yes reset the time of day.
- ... **the audible tone of the timer** is emitting a continuous tone. Then press the corresponding button to switch it off!
- ... **the timer display** does not show, but the pilot lamps of the appliance still show?
- ... **incorrect indications** appear in the display?
- ... **duration and end** cannot be entered!
The timer has been wrongly operated or there has been a short power cut. Isolate the oven from the power supply **wait 30 seconds** and then switch on the power. Reset the time of day on the electronic timer.

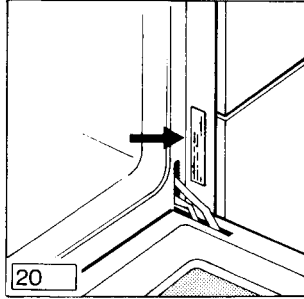
Please make sure that you are not able to rectify the fault yourself prior to calling a service engineer in connection with one of the aforementioned problems, as the cost involved will have to be passed on even during the warranty period.

Therefore, follow the instructions in this booklet and any additional information which may accompany this appliance carefully.

AEG electrical appliances comply with current safety regulations. Repairs to these appliances should only be carried out by qualified AEG engineers or AEG appointed service agents. Repairs carried out by unauthorised personnel could lead to considerable damage and could pose a considerable safety hazard to the user.

Service

Should you be unable to locate the cause of the problem in spite of the above check-list please contact your **AEG** service department quoting the **E** and **F** numbers or **KD** which you will find on the rating plate (see illustration/arrow).



Please transfer these numbers to the space provided below for your convenience.

These numbers enable the service department to prepare as far as possible any spare parts required to rectify the fault on first call. This may save you money.

E-No.

F-No.

KD 611 - /

AEG Service Locations in the United Kingdom

AEG UK Limited Head Office

217 Bath Road
Slough, Berks. SL1 4AW
Tel.: 0753 872506
Telex: 847541
Telefax: 0753 512271

AEG Northern Service Centre

Unit 20, Haigh Park
Haigh Avenue
Stockport
Gt. Manchester SK4 1QR
Tel.: 061 487 2205
Telefax: 061 474 1191

AEG Scottish Service Centre

Block 11, Unit 1
Dundyvan Industrial Estate
Coatbridge
Lanarkshire ML5 4AQ
Tel.: 0236 440387
Telefax: 0236 440256

Service Appointments

Bristol (call diverted to Slough) 0272 252880
Norfolk (call diverted to Slough) 0603 765515

AEG Hausgeräte AG
Postfach 1036
D-90327 Nürnberg

© Copyright by AEG

H 260 263 240 – 03940.5/03 –

AEG Domestic Appliances Ltd
Customer Care Department
55-77 High Street
Slough
Berkshire SL1 1DZ
Telephone: 08705 350350