Tanaka^{*}


Parts Catalog

Hedgetrimmer

Model: THT-212

All Units Prior To Serial Number F030676


FIG.1 ENGINE

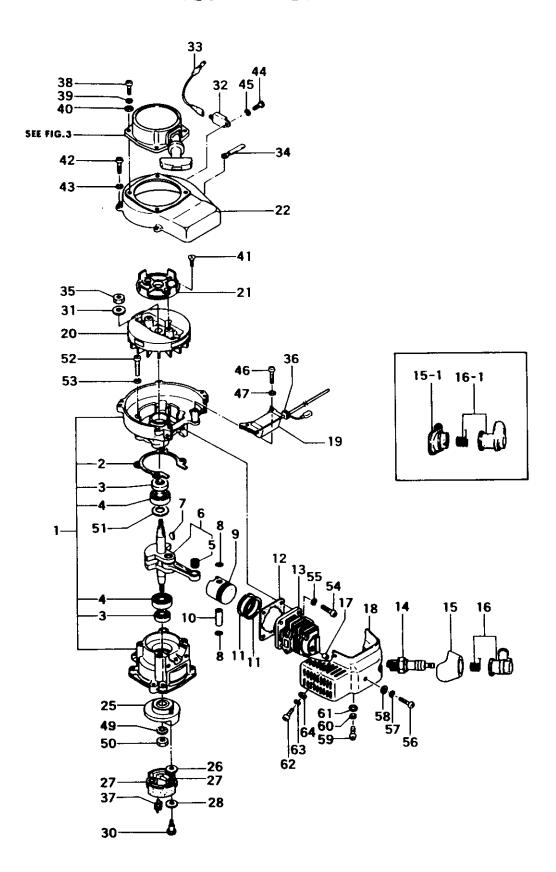

MER		/ ,		/// »	AR REMARKS
	PARNER	PARTAME		SERIANE	REMA
1-001 072-063 1-002 090-080 1-003 999-661 1-004 999-616 1-005 999-620	00-202 CRAN 22-266 OIL 00-100 BALL 71-127 NEED	K CASE ASS'Y K CASE GASKET	1 1 2 2 1		
1-008 1-009 1-009 1-010 031-060 037-060	00-200 W00D 00-200 CIR 97-200 PIST 97-201 PIST 97-200 PIST 00-200 PIST	ON ON ON PIN	1 2 1 1 1 2	R -D154695 D154696-	
1-012 017-060 1-013 002-063 1-013 002-060 1-014 018-005	91-200 CYLI 191-201 CYLI 2R-801 CYLI 92-803 CYLI 02-200 SPAR 8A-200 SPAR	NDER GASKET NDER COMP. NDER COMP.	1 1 1 1 1	T -E110591 E110592- D074939 D074940- -E272075	
1-016.1 157-040 1-016 157-042 1-017 011-063 1-018 738-063	00-900 SPAR 00-900 SPAR 0B-200 CYLI 2R-201 MUFF	K PLUG RUBBER COVER K PLUG CAP ASS'Y K PLUG CAP ASS'Y NDER COVER COLLAR LER PROTECTOR TION COIL COMP.	1 1 1 1 1	N E272076- -E272075 N E272076-	
1-021 798-063 1-022 112-063 1-025 347-063 1-026 359-021	9V-200 STAR 9V-200 FAN 9V-800 CLUT 03-200 CLUT	CASE CH FLANGE COMP.	1 1 1 2 2		
1-030 357-006 1-031 065-000 1-032 159-214 1-033 173-016	20-800 IGNI	BOLT	2 2 1 1 1 1		
1-036 203-100 1-037 342-005 1-038 990-110 1-039 992-100		W 4X12 Sher 4	1 1 4 4		
1-041 990-120 1-042 990-110 1-043 992-100 1-044 990-110	60-150 F.H. 60-151 F.H. 50-161 SCRE 50-012 S.WA 40-081 SCRE 40-012 S.WA	SCREW 6X15 V 5X16 SHER 5 V 4X8	2 2 4 4 1	М	
1-047 1-049 1-050 1-051 330-002	00-210 GEAR	SHER 4	2 2 1 1 V		
1-051 330-002 1-052 990-110 1-053 992-100 1-054 990-110		SHER 5 V 5x18	V V 4 4 4		
1-057 992-100	50-181 SCRE 50-012 S.WA 50-011 WASH	SHER 5	1 1 1		

AEF	MER PARTIER	PARNAME	SERIANBR REMARK	5
1-059 1-060 1-061	992-1050-121 992-10050-012 992-01050-011	SCREW 5X12 S.WASHER 5 WASHER 5		
1-062 1-063 1-064	990-11040-121 992-10040-012 992-01040-011	S.VASHER 4		
		·		:


FIG.2 ENGINE COMPONENTS

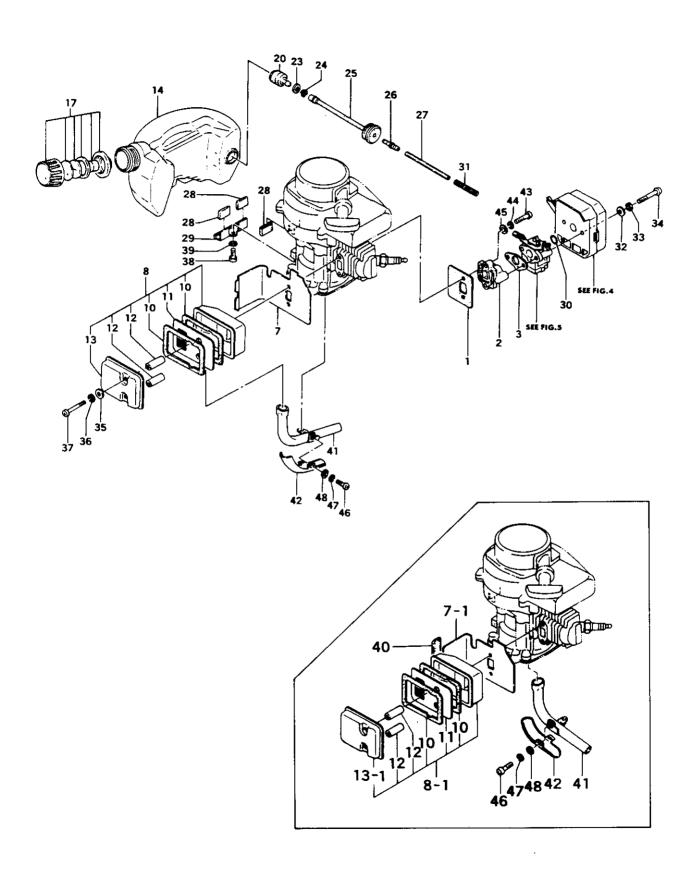

/	<u> </u>		7// / 15
REF	NEP PARTIER	PARMAME	SERIA HER REMARKS
2-001 2-002 2-003	403-0802K-201 404-0639W-801	INLET MANIFOLD GASKET CARBURETOR INSULATOR COMP. CARBURETOR GASKET HEAT SHIELD HEAT SHIELD	1 1 1 1 R -E110591 1 R -E272075 E272076-
2-008.1 2-008 2-010 2-011 2-012 2-013.1	706-0639T-900 739-06028-200 722-06028-800 740-06028-201	MUFFLER ASS'Y W/ARRESTER MUFFLER ASS'Y MUFFLER COUPLING GASKET MUFFLER PARTITION PLATE COMP. MUFFLER COLLAR MUFFLER BODY B	1 R -D154695 1 D154696- 2 1 R -D154695
2-013 2-014 2-017 2-017 2-020 2-023	591-0639W-201 595-0062A-910 595-0062A-901	TANK CAP ASS'Y, ORANGE TANK CAP ASS'Y PUMP FILTER BODY ASS'Y	1 D 154696-
2-024 2-025 2-026 2-027 2-028 2-029	655-06100-200	RUBBER PIPE	1 1 1 1 4 1
2-030 2-031 2-032 2-033 2-034 2-035	431-0602K-200 702-02004-200 992-01050-011 992-10050-012 990-11050-701 992-01050-011	S. WASHER 5 SCREW 5X70	1 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
2-036 2-037 2-038 2-039 2-040 2-040		SCREW 5X42 SCREW 5X14	2 2 1 1 1 1 1 1 1 D E110592-
2-041 2-042 2-043 2-044 2-045 2-046	752-0839T-200 990-11050-221 992-10050-012	S. WASHER 5 SWALL WASHER 5	1 1 2 2 2 2
2-047 2-048	992-10040-012 992-01040-011		1 1


.

FIG.3 RECOIL STARTER

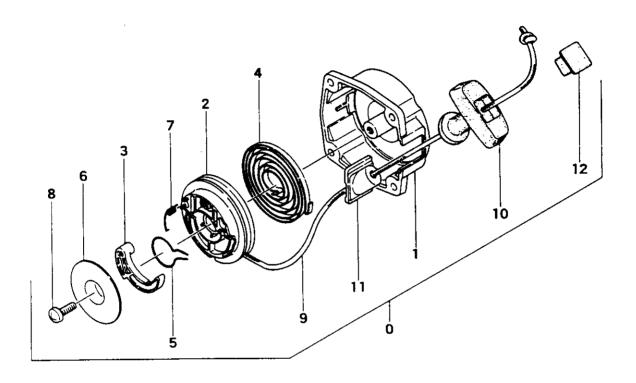


	NER PARNER	PARMAME	SERIANBR REMARK	t _e
3-000	1	RECUIL STARTER ASS'Y	1 N	
3-000		RECOIL STARTER BODY ASS'Y		
3-001		RECOIL STARTER BODY		
3-002	789-01250-200	STARTER ROPE REEL		
3-003	788-01250-200	STARTER PAVL		
3-004	779-01250-200	RECOIL SPRING		
ł				
3-005	836-01250-200	FRICTION SPRING	1	
3-005	836-06092-200	FRICTION SPRING	11	
3-006	837-01250-200	FRICTION PLATE	1 M {	
3-006	837-06092-200	FRICTION PLATE		
3-007	832-01250-200	RETURN SPRING	1	
3-008	990-15050-121	SCREW 5X12		
3-009	783-06150-200	ROPE 3.5X890L	1 N	
3-009	783-06092-200	ROPE 3.5X890L	[1]	
3-010	785-06150-200	STARTER HANDLE	1 N	
3-010	785-06097-200	STARTER HANDLE	1	
3-011	780-06150-200	ROPE GUIDE	11	
3-012	795-0602K-200	STARTER HANDLE CAP	11 1	

FIG.4 AIR CLEANER

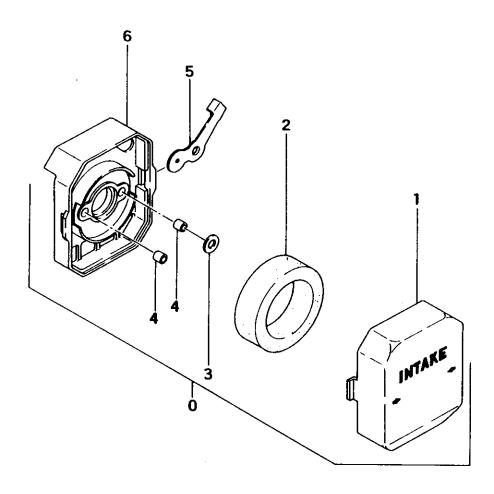


	NER PARNER	PARTIAME	SERIA NER REMARK	5
4-000 4-001 4-001 4-002 4-003 4-004	424-0602K-200 424-0602K-201		1	
4-005 4-006 4-006	528-0602D-200 423-0602K-200 423-0602K-210		1 N 1 1 N 1 1 N 1 N 1 N 1 N 1 N 1 N 1 N	

FIG.5 CARBURETOR

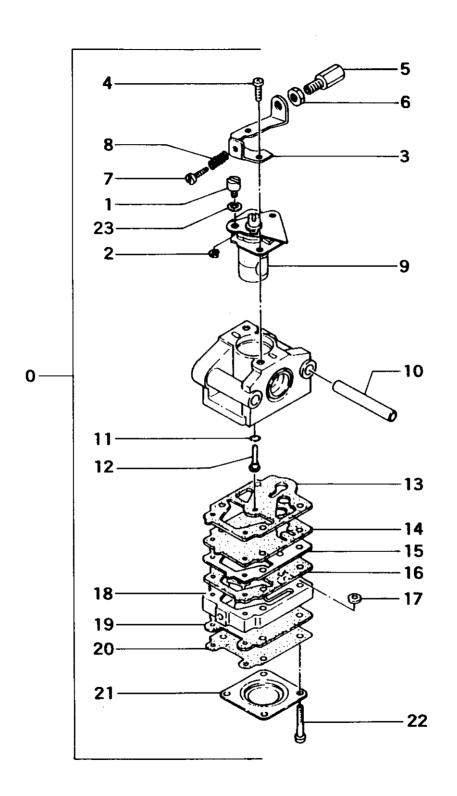


	JER		0K5
REF	NER PARTIER	PARWAME	SERMANER REMARKS
5-000 5-000 5-001 5-001 5-002 5-003	455-25102-900 455-25102-901 539-25100-200 539-25101-200 489-25100-200	CARBURETOR ASS'Y WY-8 SWIVEL SWIVEL	1 R -D154695 1 D154696- 1 N 1 1
5-004 5-005 5-006 5-007 5-007 5-008	614-25100-200 613-25100-200 462-25100-200 462-25100-201	THROTTLE SET SCREW CABLE ADJUSTER CABLE ADJUST NUT IDLE ADJUST SCREW IDLE ADJUST SCREW IDLE ADJUST SPRING	2 1 1 1 1 1 1 P - D154695 D154696-
5-009 5-010 5-011 5-012 5-012 5-012	488-25100-800 437-25100-200 550-25100-200 599-25100-200 599-25100-252 599-2000\(-520	O-RING MAIN JET MAIN JET #52	
5-013 5-014 5-015 5-015 5-016 5-017	523-25100-200 523-25100-201	PUMP DIAPHRAGH PUMP PLATE PUMP PLATE CIRCUIT PLATE	1 R -D154695 D154696-
5-018 5-019 5-020 5-021 5-021 5-022	475-25001-200 474-25001-800 476-25006-200	PUMP BODY COMP. DIAPHRAGM GASKET METERING DIAPHRAGM COMP. DIAPHRAGM COVER DIAPHRAGM COVER SET SCREW	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
5-022 5-023	548-25101-200 549-25100-200	SET SCREW THRUST WASHER	4 1 N D154696-

FIG.6 GEAR CASE & CUTTER

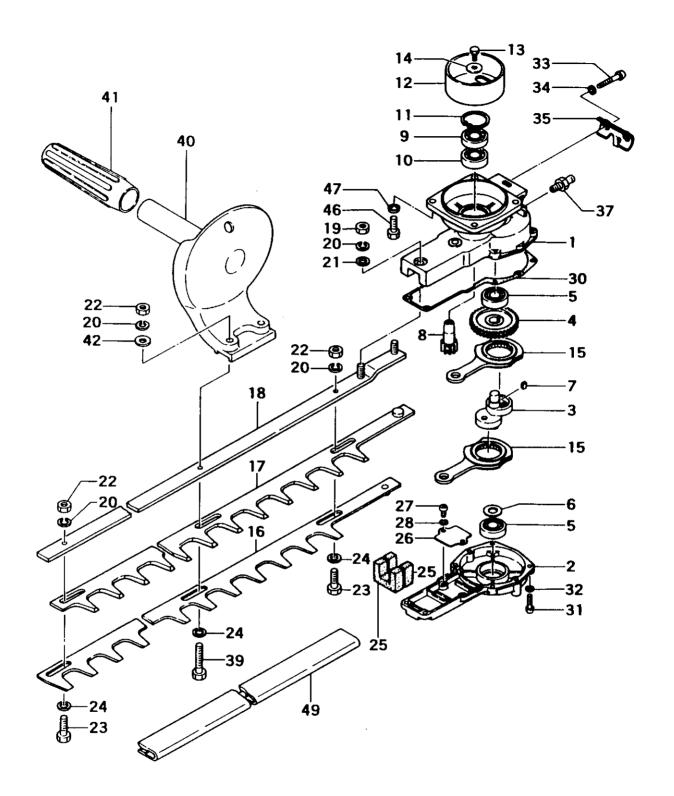


	NER PARTIER	1 &	SERIANDR REMARKS
REF	PARTIER - 23030-210	CEAR CASE A	
6-001 6-002 6-003 6-004 6-005 6-006	300-33230-210 301-33230-200 100-33210-203 307-33230-200 999-61629-000 015-35100-200	GEAR CASE B CAN SHAFT	
6-006 6-006 6-007 6-008 6-009 6-010	022-35100-200 068-00300-200 306-33230-210 999-61600-003	SHAFT SHIM 0.2 (9.3X18) SHAFT SHIM 0.3 (9.3X18) WOOD-RUFF KEY 3X10X3.7 GEAR 1 BALL BEARING 6000D, 26MM/OD BALL BEARING #6000, 26MM/OD	V V 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
6-011 6-012 6-013 6-014 6-015 6-016	288-0602W-821 990-21050-106 368-32350-200 101-33230-800	STOP RING C-26 IN CLUTCH DRUM COMP. H.T. BOLT 5X10 BRAKE SHAFT WASHER CAN ROD COMP. CUTTER A, L-675	
6-017 6-018 6-019 6-020 6-021 6-022	122-33230-200 991-01060-011 992-10060-012 992-01060-011	NUT 6 S.WASHER 6	1 2 6 2 4 4
6-023 6-024 6-025 6-026 6-027 6-028	129-33202-201 085-33230-200	GREASE SEAL A CAM ROD GUIDE PLATE SCREW 4X8	3 4 2 1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
6-030 6-031 6-032 6-033 6-034 6-035	990-11040-161 992-10040-012 990-11050-271 992-10050-012	S. WASHER 4 SCREW 5X27	1 6 6 2 2 1 1
6-037 6-039 6-040 6-041 6-042 6-046	125-33202-205 051-33210-820 165-35100-202 992-01060-011		
6-047 6-049 6-049		S.WASHER 6 CUTTER COVER, L-620 CUTTER COVER, L-620	4 1 1 1 R -D154695 D154696-

FIG.7 HANDLE

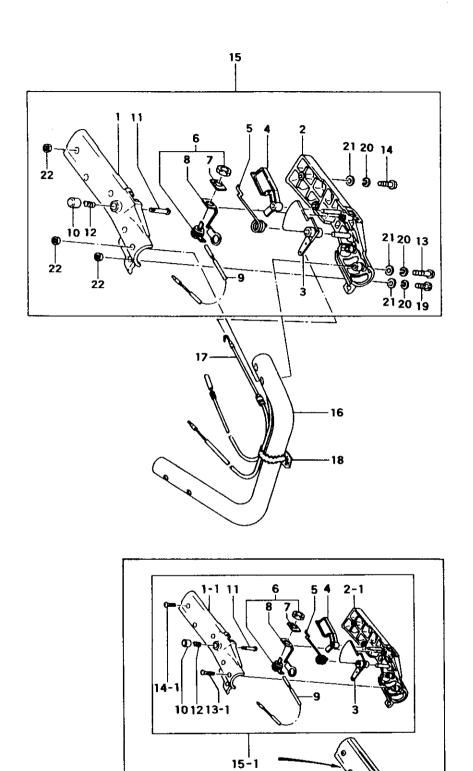

REF. NEP. PAS	HER PARTIAME	SET SERIANDA REMARKS
7-001.1 053-33231 7-001.1 053-33231 7-001 053-33231 7-002.1 054-33231 7-002.1 054-33231		1 R -D154895 -F030276 1 N F030277- 1 R -D154695 1 -F030276 1 N F030277-
7-003 230-33210 7-004 231-33210 7-005 061-32600 7-005 061-32600	-200 THROTTLE LEVER -201 THROTTLE LEVER -200 SAFETY LEVER -200 THROTTLE LEVER SPRING -201 THROTTLE LEVER SPRING -201 STOP SWITCH ASS'Y	1 I -F030276 F030277 - I -F030276 F030277 -
7-008 319-43225 7-009 178-33250 7-009 178-33250 7-010 725-32600	-200 SWITCH NAME PLATE -200 EARTH TERMINAL -800 STOP CORD -801 STOP CORD -202 PUSH PIN CAP -200 PUSH PIN	1
7-013,1 993-41040 7-013 990-11040 7-014,1 993-41040 7-014 990-11040	-201 STOPPER SPRING -251 HI-LO SCREW 4X25 -301 SCREW 4X30 -151 HI-LO SCREW 4X15 -251 SCREW 4X25 -900 HANDLE GRIP ASS'Y	1 3 -F030276 F030277F030277 - 1 R -D154695
7-015 7-016 7-017 885-0639 7-018 903-3220	-901 HANDLE GRIP ASS'Y -902 HANDLE GRIP ASS'Y -200 HANDLE A -800 THROTTLE WIRE COMP200 WIRE CLAMP BAND -141 SCREW 4X14	1 R -F030276 F030277-
7-021 992-0004	2-012 S.WASHER 4 2-011 SMALL WASHER 4 2-010 U-NUT 4	6 N F030277- 6 N F030277- 6 N F030277-

FIG.8 TOOLS

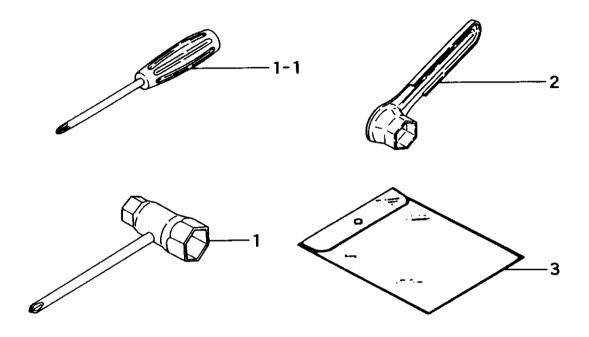

REF. NER PARNER	PARNAME	SERIANBER REMARKS
8-001 036-29331-500 8-001 036-29331-501	COMBI. BOX SPANNER 10X19 COMBI. BOX SPANNER 10X19 COMBI. BOX SPANNER 10X19 SPARK PLUG BOX SPANNER	,PLUS 1 R -D221800

FIG.9 MARKS



REF. NEP DARNER	PARMANE	SERIA NER REMARKS
9-001 906-0639T-200 NAME PLATE		1