



2609/2611/2613/2614 HAND BLENDER WITH BLENDING CUP
User Manual **2612/FPSTHB2615B HAND BLENDER WITH BLENDING CUP AND CHOPPER**
Manual de Instrucciones **2609/2611/2613/2614 MEZCLADORA MANUAL Y VASO PARA MEZCLAR**
2612/FPSTHB2615B MEZCLADORA MANUAL Y VASO PARA MEZCLAR Y HACHER
Manuel d'Instructions **2609/2611/2613/2614 MÉLANGEUR PORTATIF AVEC BOL À MÉLANGER**
2612/FPSTHB2615B MÉLANGEUR PORTATIF AVEC BOL À MÉLANGER ET À HACHER

MODELS/MODELOS 2609, 2611, 2612, 2613, 2614, FPSTHB2615B
MODÈLES



 
Visit us at www.oster.com P.N. 115031 Rev.C

BIENVENIDOS

¡Felicitaciones en su compra de un Mezcladora Manual OSTER®. Para aprender más sobre productos OSTER®, por favor visítenos a www.oster.com!

Muchas gracias por comprar la Mezcladora Manual OSTER®. Antes de usar este producto por primera vez, por favor tómeselo algunos minutos para leer estas instrucciones y guárdelas como referencia. Préstele particular atención a las instrucciones de Seguridad suministradas. Por favor revise las declaraciones de garantía y de servicio del producto. Para su referencia futura, por favor anote:

CARACTERÍSTICAS DE SU MEZCLADORA MANUAL

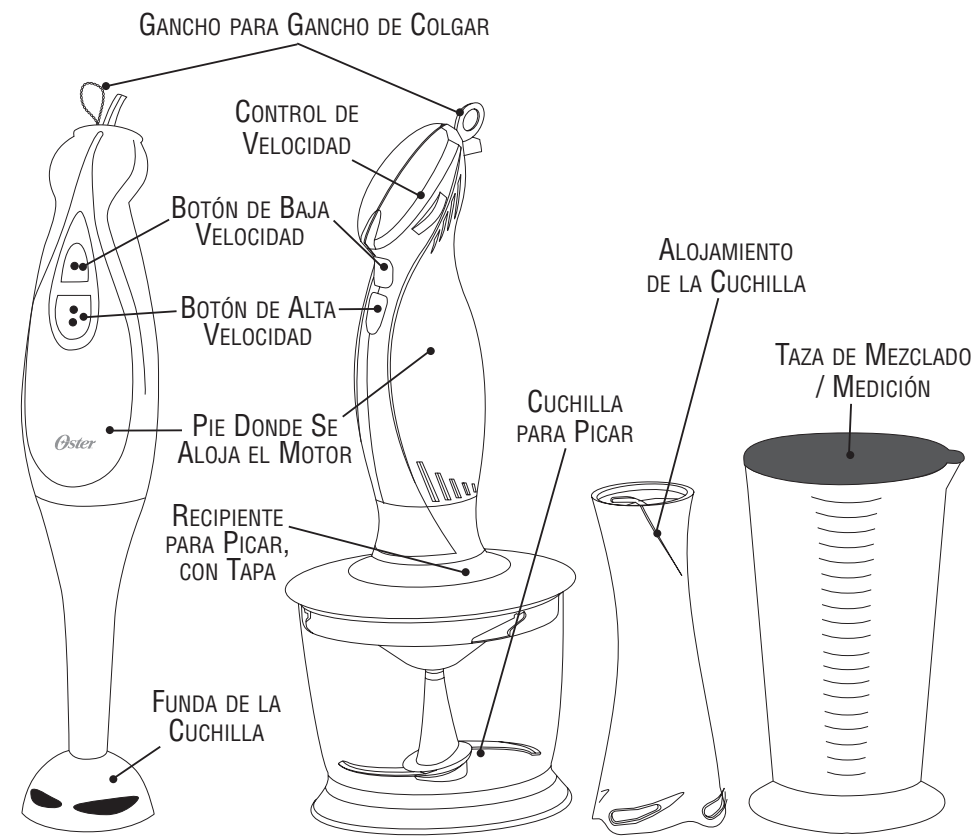

	2609	2611	2612	2613	2614	FPSTHB2615B
Taza de Mezclado	•	•	•	•	•	•
Picadora			•			•

Los dibujos pueden variar

- Al mezclar líquidos, especialmente líquidos calientes, use un recipiente alto o prepare cantidades pequeñas para evitar que se derrame.
- No coloque la batidora de inmersión sobre o cerca de un quemador caliente o dentro de un horno caliente.
- No lo use sobre una estufa u otra fuente de calor. Cuando mezcle sopas u otros alimentos o líquidos calientes, retire la cazuela de la fuente de calor antes de usar la batidora de inmersión.
- Este artefacto no fue diseñado para picar hielo. Agréguele el hielo a la bebida después de mezclarla.
- Las cuchillas están afiladas. Manipúelas con extremo cuidado.
- No use la batidora de inmersión para un uso diferente al indicado.
- No deje la batidora de inmersión sola mientras está operando.
- El uso de dispositivos no recomendados o vendidos por Sunbeam Products podrá causar un incendio, descarga eléctrica o heridas corporales.
- No permita que el cordón cuelgue por el borde de la mesa o mostrador.
- No la use en exteriores ni para propósitos comerciales.
- Este producto fue diseñado únicamente para uso doméstico normal.

PRECAUCIÓN: Las cuchillas están afiladas. Manipúelas con cuidado. Mantenga las manos y utensilios fuera del recipiente mientras opera la batidora con el fin de evitar la posibilidad de heridas corporales severas y/o daños al producto o a la propiedad.

ESTA UNIDAD ES SÓLO PARA USO DOMÉSTICO

UNICAMENTE PARA PRODUCTOS DE 120 Y 127 VOLTIOS

Con el fin de reducir el riesgo de una descarga eléctrica, este artefacto tiene un enchufe polarizado (*una pata es más ancha que la otra*) Este enchufe sólo le sirve a una toma de corriente polarizada; si el enchufe no entra en la toma de corriente, invierta las patas. Si aún no entra, póngase en contacto con un electricista calificado. No intente vencer este dispositivo de seguridad.

GUARDE ESTAS INSTRUCCIONES

- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
- Do not operate stick mixer with a damaged cord or plug; after the appliance malfunction or if it is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or replacement.
- Do not use stick mixer for other than intended use.
- Do not leave stick mixer unattended while it is operating.
- The use of attachments not recommended or sold by Sunbeam Products may cause fire, electrical shock or injury.
- Do not let cord hang over edge of table or countertop.
- Do not use outdoors or for commercial purposes.
- This product is intended for normal domestic household use only
- To protect against risk of electrical shock, do not put stick mixer motor in water or other liquid. This may cause personal injury and/or damage to the product.
- After each operation, allow the stick mixer to cool for 3 minutes before using it again.
- Do not process food containing hard objects that cannot be safely broken up by the blade.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- This stick mixer should not be used in the immediate vicinity of water, such as bathing, washbrows, etc., where the likelihood of immersion or splashing could occur.
- Switch off and unplug from outlet while not in use, before putting on and other utensils away from blade during operation to reduce the risk of injury to persons and/or damage to the stick mixer. A spatula or scraper may be used when the appliance is not in operation.
- Avoid contact with moving parts. Keep hands, clothing, as well as spatulas and other utensils away from blade during operation to reduce the risk of injury to persons and/or damage to the stick mixer.
- When the appliance is not in operation, use a tall container or make small quantities at a time to reduce spillage.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Do not place stick mixer on or near a hot burner or in a heated oven.
- Do not use over a stove or other heat source. When mixing soups or other hot foods or liquids, remove the saucepan from the heat source before using the stick mixer.
- Always operate the stick mixer from power source of the same voltage. Frequency and rating as indicated on the product identification plate.

READ ALL INSTRUCTIONS BEFORE USE

CAUTION: Blades are sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

THIS UNIT FOR HOUSEHOLD USE ONLY

FOR PRODUCTS PURCHASED IN THE U.S. AND CANADA ONLY

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. It will not fit.

 
contact a qualified electrician. Do not attempt to defeat this safety feature.

For your convenience, record the complete model number (located on the back of the motor) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that the warranty service is required.

SAVE THESE INSTRUCTIONS

Congratulations on your purchase of an OSTER® Hand Blender! To learn more about Oster® products, please visit us at www.oster.com. Please review the product service and warranty statements.

LEARNING ABOUT YOUR HAND BLENDER

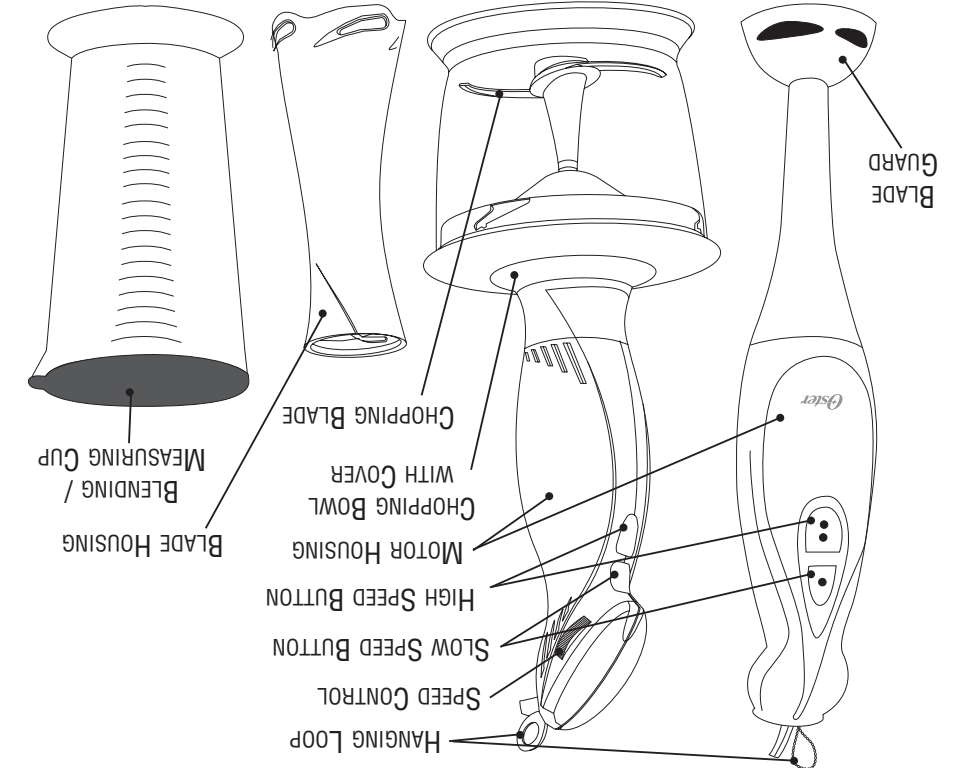

Blending Cup / Chopper	2609	2611	2612	2613	2614	FPSTHB2615B
Line art representation may vary	•	•	•	•	•	•

PREPARING TO USE YOUR HAND BLENDER FOR THE FIRST TIME

- CAUTION:** To extend the life of this appliance, never let it operate continuously for more than 1 minute at a time. After 3 minutes of continuous operation, release button and let appliance rest for 3 minutes before using it again.
- WARNING:** Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.
- When desired consistency has been reached, release button and lift the blender from mixture. To prevent splashing, always release button before removing hard foods, such as whole nutmegs, coffee beans, dried corn and grains.
- NOTE: Do not chop large ice cubes or extremely hard foods, such as whole nutmegs, coffee beans, dried corn and grains.
- For best results, cut large ingredients into pieces of approximately 1/2-inch cubed before chopping.
- NOTE: Do not chop large ice cubes or extremely hard foods, such as whole nutmegs, coffee beans, dried corn and grains.
- Secure the chopper cover by setting on the bowl and turning to the right until firmly locked into place. The upper shaft of the chopping blade will fit into the receiving hole in the underside of the cover.
- Attach the motor housing into the top of the bowl cover and turn to the right until the motor housing is firmly locked into place. Plug cord into the appliance.
- The chopper has two speeds*. Press and hold the appropriate button to switch the blender on. Release the button to switch the unit off.
- Variable speed for Model 2612.*

BLENDING CUP / MEASURING CUP INFORMATION

English-4 English-5 English-6

English-1 English-2 English-3

Spanish-1 Spanish-2 Spanish-3

English-1 English-2 English-3

English-4 English-5 English-6

English-1 English-2 English-3

English-4 English-5 English-6

English-1 English-2 English-3

English-4 English-5 English-6

English-1 English-2 English-3

English-4 English-5 English-6

English-1 English-2 English-3

English-4 English-5 English-6

English-1 English-2 English-3

English-4 English-5 English-6

English-1 English-2 English-3

English-4 English-5 English-6

English-1 English-2 English-3

English-4 English-5 English-6

PRECAUCIONES IMPORTANTES

Cuando use algún aparato eléctrico siempre deben seguirse precauciones básicas de seguridad incluyendo las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR

- Siempre opere la batidora de inmersión usando una fuente de energía del mismo voltaje, frecuencia y capacidad, tal como se indica en la placa de identificación del producto.
- No la use con un cable de extensión.
- Se requiere supervisión cuando la batidora de inmersión está siendo usada por un niño o cerca de ellos, o por personas incapacitadas. No permita que los niños la usen como un juguete.
- No opere la batidora de inmersión con un cordón o enchufe dañados, después de que el artefacto haya fallado o si se cae al suelo o se daña de cualquier otra manera. Devuelva el artefacto al Centro de Servicio Autorizado más cercano para examinarlo, repararlo o para ajustarlo mecánica o eléctricamente.
- No enrede, doble o enrolle el cordón de energía en el artefacto ya que esto puede causar que el aislante se debilite y se quiebre, particularmente donde entra en la unidad.
- Para protegerse contra el riesgo de una descarga eléctrica, no coloque el motor de la batidora de inmersión en agua o en ningún otro líquido. Esto podrá causar heridas corporales y/o daños al producto.
- Después de cada operación, deje que la batidora se enfríe durante 3 minutos antes de usarla de nuevo.
- No procese alimentos que contengan objetos duros que no puedan ser quebrados seguramente por la cuchilla.
- Para evitar un incendio, no opere la unidad en presencia de explosivos y/o gases inflamables.
- Esta batidora de inmersión no debe usarse cerca del agua, tal como la bañera, lavamanos, etc., donde exista el peligro de inmersión o salpicaduras.
- Apáguela y desenchúfela del tomacorriente cuando no la esté usando, antes de ponerle o quitarle piezas y antes de limpiarla. Desenchúfela agarrando el enchufe, no hale el cordón.
- Evite contacto con piezas en movimiento. Mantenga las manos, el cabello, la ropa, como también espátulas y otros utensilios alejados durante la operación con el fin de reducir el riesgo de heridas corporales y/o daños a la batidora de inmersión. Se puede usar una espátula o raspador cuando el artefacto no está en operación.

One-Year Limited Warranty

Sunbeam Products, Inc., doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What Are the Limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A. – If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada – If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourn Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9

English-1 English-2 English-3

English-4 English-5 English-6

English-7 English-8 English-9



For product questions contact:
Sunbeam Consumer Service

USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2013 Sunbeam Products, Inc., doing business as Jarden Consumer Solutions. All rights reserved.
In the U.S., distributed by Sunbeam Products, Inc., doing business as Jarden Consumer Solutions. Boca Raton, FL 33431
In Canada, imported and distributed by Sunbeam Corporation, Limited.

Pour les questions de produit:
Sunbeam Consumer Service

États-Unis : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2013 Sunbeam Products, Inc., faisant affaire sous la raison sociale Jarden Consumer Solutions. Tous droits réservés.

Aux États-Unis, distribué par Sunbeam Products, Inc., faisant affaire sous la raison sociale Jarden Consumer Solutions. Boca Raton, FL 33431
Au Canada, importé et distribué par Sunbeam Corporation, Limited.

Para preguntas sobre los productos llama:
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759
Canadá : 1.800.667.8623
www.oster.com


©2013 Sunbeam Products, Inc., operando bajo en nombre de Jarden Consumer Solutions. Todos los derechos reservados.
En los EE. UU., distribuido por Sunbeam Products, Inc., operando bajo en nombre de Jarden Consumer Solutions. Boca Raton, FL 33431
En Canadá, importado y distribuido por Sunbeam Corporation, Limited.

FPSTHB2615B_13FEF5M1
Printed in China

Imprimé en Chine

GCD5-OST30057-ZZ
Impreso en China

 English-6

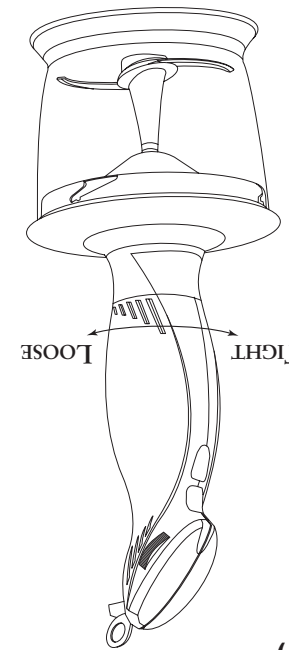

STORAGE

Unplug unit and store in a clean, dry place. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit as it could cause the cord to fray and break.

NOTE: Do not place hand blender components in dishwasher.

Make sure all parts are completely dry before attempting to use again.

CAUTION: Blades are sharp. Handle carefully.

After using your hand blender, the blades, blending cup and/or chopper bowl may be washed by hand with mild soap and water. Wash lid and/or chopper bowl cover by hand using warm, soapy water with a cloth or sponge.

Motor unit should be wiped clean with a damp cloth or sponge. NEVER immerse motor unit in water.

CLEANING YOUR HAND BLENDER

BE SURE UNIT IS UNPLUGGED BEFORE ATTEMPTING TO CLEAN.

CAUTION: Unplug the appliance before attaching the chopper attachment. Put the food ingredients in the chopper bowl, secure the bowl cover to the chopping bowl and attach the motor housing to it. Use the slow speed, especially if you are chopping lumps in the ingredients. The high speed can be used as a finishing touch.

NOTE: Do not clean blades with fingers but use a spoon or spatula to scrape the inner part of the bowl.

Release the speed control button and allow the blade to come to a complete stop before removing the bowl cover by turning cover to the left. Take care when removing the blade and hold only by the shaft handle as the metal blade is sharp.

If the ingredients stick to the chopper bowl sides, loosen them by adding a small amount of liquid or by using a spatula to scrape the food back into the inner part of the bowl.

You can adjust the speed of the unit with the speed control when using slow speed or high speed function.


Use the slow speed where possible especially if you want to chop the food into bigger pieces. The high speed can be used for chopping the food to small pieces or for pureed foods.

Use the slow speed where possible especially if you want to chop the food into bigger pieces. The high speed can be used for chopping the food to small pieces or for pureed foods.

MEASURING CHART FOR BLENDING CUP

OUNCES	CUPS	MILLILITERS
1.70	.21	50
3.40	.42	100
5.00	.63	150
6.76	.85	200
8.50	1.10	250
10.00	1.25	300
12.00	1.50	350
13.50	1.70	400
15.25	1.90	450
17.00	2.10	500
18.50	2.32	550
20.00	2.50	600
22.00	2.75	650
24.00	3.00	700

 OPERATING INSTRUCTIONS

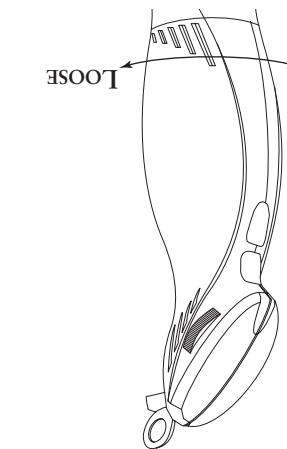

TO OPERATE YOUR HAND BLENDER

- Your blender is a three-part assembly. The upper part contains the motor housing and the speed control buttons. The lower part contains the Blade Hanging Loop.
- Blades are sharp. Handle with extreme care.
- This appliance is not intended to chop ice. Add ice to beverage after mixing.
- Do not use stick mixer for other than intended use.
- Do not leave stick mixer unattended while it is operating.
- The use of attachments not recommended or sold by Sunbeam Products may cause fire, electrical shock or injury.
- Do not let cord hang over edge of table or countertop.
- Do not use outdoors or for commercial purposes.
- This product is intended for normal domestic household use only
- To protect against risk of electrical shock, do not put stick mixer motor in water or other liquid. This may cause personal injury and/or damage to the product.
- After each operation, allow the stick mixer to cool for 3 minutes before using it again.
- Do not process food containing hard objects that cannot be safely broken up by the blade.
- To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
- This stick mixer should not be used in the immediate vicinity of water, such as bathing, washbrows, etc., where the likelihood of immersion or splashing could occur.
- Switch off and unplug from outlet while not in use, before putting on and other utensils away from blade during operation to reduce the risk of injury to persons and/or damage to the stick mixer.
- When the appliance is not in operation, use a tall container or make small quantities at a time to reduce spillage.

CONNECTION AND USE

NOTE: During blending use, it is normal for suction to be created at the bottom of the container.

When desired consistency has been reached, release button and lift the blender from mixture. To prevent splashing, always release button before removing hard foods, such as whole nutmegs, coffee beans, dried corn and grains.

CAUTION: To extend the life of this appliance, never let it operate continuously for more than 1 minute of continuous operation, release button and let appliance rest for 3 minutes before using it again.

WARNING: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

CAUTION: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.

NOTE: Do not use hand blender in saucpan directly on stove-top. Remove pan from heat before blending.