

Errata

Title & Document Type: 3577A Network Analyzer Service Manual

Manual Part Number: 03577-90012

Revision Date: June 1987

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, semiconductor products and chemical analysis businesses are now part of Agilent Technologies. We have made no changes to this manual copy. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A.

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

Support for Your Product


Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.tm.agilent.com

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.

SERVICE MANUAL

NETWORK ANALYZER 3577A

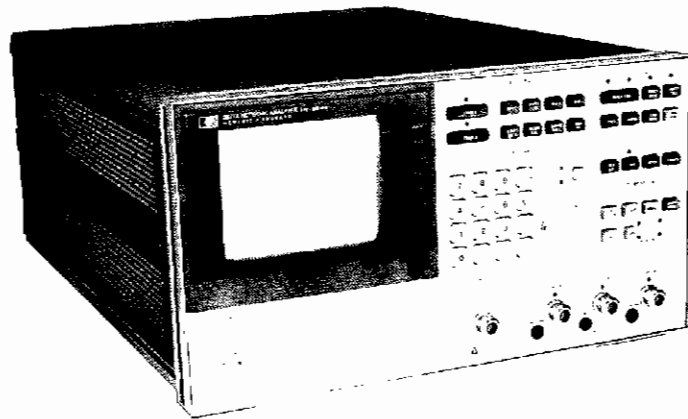

 HEWLETT
PACKARD



SERVICE MANUAL

MODEL 3577A NETWORK ANALYZER

Serial Number: 2702A12977

IMPORTANT NOTICE

This manual applies to instruments with the above serial number and greater. As changes are made in the instrument to improve performance and reliability, the appropriate pages will be revised to include this information.

WARNING

To prevent potential fire or shock hazard, do not expose instrument to rain or moisture.

Manual Part No. 03577-90012
Microfiche Part No. 03577-90212

Copyright ©, 1983, 1985, 1987 Hewlett-Packard Co.
8600 Soper Hill Road, Everett, Washington 98205-1298 U.S.A.

Printed: June 1987



SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements. This is a Safety Class 1 instrument.

GROUND THE INSTRUMENT

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

Dangerous voltages, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting.

SAFETY SYMBOLS

 
General Definitions of Safety Symbols Used On Equipment or In Manuals.



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect against damage to the instrument.




Indicates dangerous voltage (terminals fed from the interior by voltage exceeding 1000 volts must be so marked).



Protective conductor terminal. For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.



 Low-noise or noiseless, clean ground (earth) terminal. Used for a signal common, as well as providing protection against electrical shock in case of a fault. A terminal marked with this symbol must be connected to ground in the manner described in the installation (operating) manual, and before operating the equipment.



Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.



Alternating current (power line).



Direct current (power line).



Alternating or direct current (power line).

WARNING

The **WARNING** sign denotes a hazard. It calls attention to a procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in injury or death to personnel.

CAUTION

The **CAUTION** sign denotes a hazard. It calls attention to an operating procedure, practice, condition or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.

NOTE :

The **NOTE** sign denotes important information. It calls attention to procedure, practice, condition or the like, which is essential to highlight.

SECTION I GENERAL INFORMATION

Table of Contents

| | | |
|------|--|-----|
| 1-1 | Introduction | 1-1 |
| 1-2 | Manual/Instrument Identification | 1-3 |
| 1-3 | Accessories Supplied | 1-3 |
| 1-4 | Description | 1-3 |
| 1-5 | Options | 1-4 |
| 1-6 | Specifications | 1-4 |
| 1-7 | Safety Considerations | 1-4 |
| 1-8 | Grounding | 1-5 |
| 1-9 | Recommended Test Equipment | 1-5 |
| 1-10 | Operator Maintenance | 1-5 |

List of Tables

| | | |
|-----|----------------------------------|------|
| 1-1 | Specifications | 1-6 |
| 1-2 | Recommended Test Equipment | 1-12 |

List of Figures

| | | |
|-----|--|-----|
| 1-1 | 3577A Network Analyzer with Accessories Supplied | 1-2 |
|-----|--|-----|

SECTION I GENERAL INFORMATION


1-1 INTRODUCTION

This service manual contains all the information required by service personnel to test, adjust, and service the HP 3577A Network Analyzer.


Listed in the title page of this manual is a microfiche part number. This number can be used to order 4 by 6 inch microfilm transparencies of the manual. Each microfiche contains up to 96 photoduplicates of the manual pages. The microfiche package also includes the latest manual change supplements.

The manual is divided into eight sections. Each section and topic is listed below.

| Section | Topic | Includes |
|---------|----------------------|---|
| I | General Information | -Specifications -Test Equipment -Options |
| II | Fault Isolation | -Power-On Self Tests -Confidence Tests -Isolation to Board Level. |
| III | Performance Tests | -Verifies Specs in Table 1-1. |
| IV | Adjustments | -Adjusts to Specs in Table 1-1. |
| V | Replaceable Parts | -List of all parts in HP 3577A. |
| VI | Backdating | -Changes which adapts the manual to older units. |
| VII | Circuit Descriptions | -Explains Theory of Operation. |
| VIII | Service | -Individual circuit board troubleshooting data. |

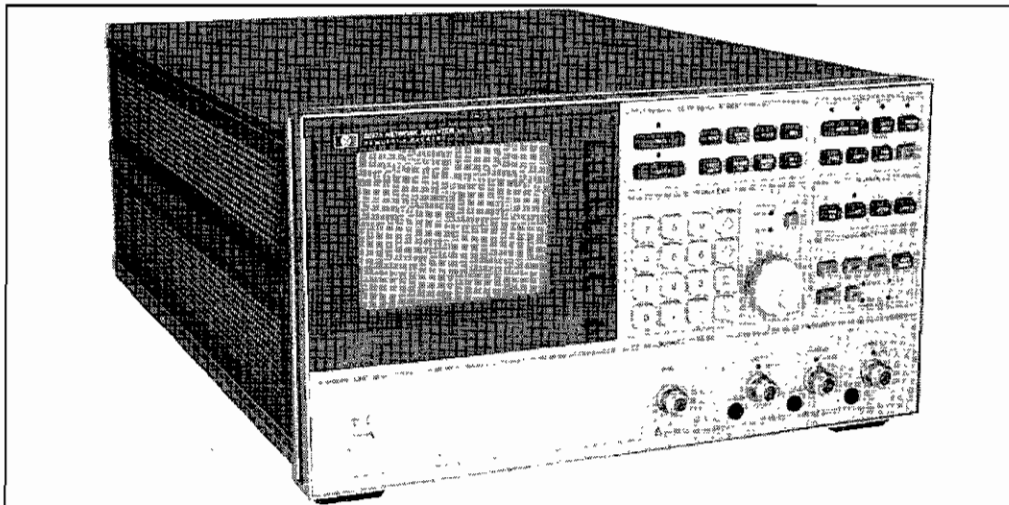

Model 3577A Network Analyzer

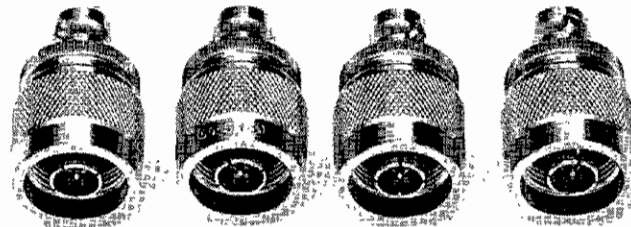

4(ea) N male to BNC female adapters
HP 1250-0780

WARNING

The power cable plug must be inserted into a socket outlet provided with a protective earth terminal. Defeating the protection of the grounded instrument cabinet can subject the operator to lethal voltages.

| | |
|--|--|
| <p>PLUG*: BS 1363A CABLE*: HP 5041-5807</p> <p>220V - 5A OPERATION</p> | <p>PLUG*: NZSS 198/AS C112 CABLE*: 5041-5808</p> <p>220V - 6A OPERATION</p> |
| <p>PLUG*: CEE7-V11 CABLE*: 5041-5809</p> <p>220V - 6A OPERATION</p> | <p>PLUG*: NEMA 5-15P CABLE*: 5041-5819</p> <p>125V - 10A** OPERATION</p> |
| <p>PLUG*: NEMA-G-15P CABLE*: 5041-5806</p> <p>250V - 6A** OPERATION</p> | <p>PLUG*: CEE22-V1 CABLE*: 5041-5838 30" 5041-5836 60"</p> <p>250V - 10A OPERATION</p> |
| <p>PLUG*: SEV 1011.1959-24507 TYPE 12 CABLE*: 5041-5812</p> <p>220V - 6A OPERATION</p> | <p>PLUG*: DHCR 107 CABLE*: 5041-5814</p> <p>220V - 8A OPERATION</p> |

*The number shown for the plug is the industry standard for the plug only.
The number shown for the cable is an HP part number for a complete cable including the plug.

**UL listed for use in the United States of America

Figure 1-1. 3577A Network Analyzer with accessories supplied.

1-2 MANUAL/INSTRUMENT IDENTIFICATION

The instrument identification serial number is located on the rear panel of the instrument. Hewlett-Packard uses a two-section serial number consisting of a four digit prefix and a five digit suffix separated by a letter designating the country in which the instrument was manufactured (A = U.S.A; G = West Germany; J = Japan; U = United Kingdom.). The prefix is the same for all identical instruments and changes only when a major instrument change is made. The suffix, however, is assigned sequentially and is unique to each instrument.

This manual applies to instruments with serial numbers indicated on the title page. If changes have been made since this manual was printed, a yellow "Manual Change" supplement will define the changes and explain how to adapt the manual to the newer instruments. In addition, backdating information contained in Section VI adapts the manual for instruments with serial numbers lower than those listed on the title page.

1-3 ACCESSORIES SUPPLIED

The following accessories are supplied with the HP 3577A Network Analyzer.

Line Power Cord see Figure 1-1
 Type N male to BNC female Adapters (4 each) HP 1250-0780

1-4 DESCRIPTION

The HP 3577A measures network performance in the frequency range of 5 Hz to 200 MHz. Each of the three test input ports, R, A and B, provide 100 dB of dynamic range. A front panel "line stretcher" is available with a readout in meters and centimeters. The line stretcher enables the electrical length of the R channel to be changed to match the electrical length of the test port used. This allows compensation for differences in test cable lengths and to measure the electrical length of networks under test.

Each of the three test inputs can be displayed on one or both traces. The traces are labeled Trace 1 and Trace 2. Trace data for each trace is digitally stored as complex data in a trace memory. This results in the ability to display the same data in any of seven display formats. The HP 3577A display has no etched lines. The graticule is drawn as a part of the display operation. No screen overlays are required for polar or Smith charts.

The trace storage capability allows the HP 3577A to perform complex trace arithmetic and one port correction routines. Other features include adjustable receiver bandwidth, complex trace averaging, and automatic plot routines.

The HP 3577A source output frequencies can be swept from 5 Hz to 200 MHz. The same synthesizer drives both the source and input channel tuners, whereby the source and receiver are always tuned to the same frequency. The source and receiver frequencies are coupled, therefore only linear devices can be characterized. The source output level can be set between +15 dBm and -49 dBm. The source amplitude level can also be swept.

The HP 3577A features menu-driven operation, using eight "softkeys." The menus are accessed by pressing the labeled hardkeys, and the appropriate softkeys select the desired parameters for the hardkey function. Marker and sweep parameters are presented on the 3577A display.

1-5 OPTIONS

There are no options for the HP 3577A which alter the electrical specifications. All options are standard exterior hardware options. The available options are:

| | | -hp- Part Number |
|-------------|---------------------------------|------------------|
| Option 907: | Front Handle Kit | 5061-9691 |
| Option 908: | Rack Mounting Kit | 5061-9679 |
| Option 909: | Front Handle and Rack Mount Kit | 5061-9685 |
| Option 910: | Additional Operating Manual | 03577-90000 |
| | Additional Service Manual | 03577-90012 |

If your instrument has a serial number prefix of 2333A or lower, see the Manual Backdating section for correct kit part numbers.

1-6 SPECIFICATIONS

The 3577A specifications are listed in Table 1-1, Specifications. The specifications describe the instrument's warranted performance. Specifications apply after a warm up period of one hour except as noted otherwise. Supplemental characteristics are intended to provide information useful in applying the instrument by giving typical, but non-warranted, performance specifications. Supplemental characteristics are denoted as "typical", "nominal", or "approximately."

1-7 SAFETY CONSIDERATIONS

The HP 3577A is a Safety Class 1 instrument (provided with a protective earth terminal). The instrument and manuals should be reviewed for safety markings and instructions before operation.

1-8 GROUNDING

The following connections on the HP-IB connector are tied to Protective Earth Ground: pins 12 and 18 through 24 of the edge connector, and the HP-IB cable shield. The instrument frame, chassis, covers, and all exposed metal surfaces are connected to the protective earth terminal. The output and receiver N-connector outer conductors are at earth ground. The maximum safe float voltage for these terminals is 25 Volts peak.

WARNING

DO NOT interrupt the protective earth ground or "float" the HP 3577A. This action could expose the operator to potentially hazardous voltages!

1-9 RECOMMENDED TEST EQUIPMENT

The equipment required to maintain the HP 3577A is listed in Table 1-2, Recommended Test Equipment. Other equipment may be substituted for the recommended model if it meets or exceeds the listed critical specifications. When substitutions are made, the user may have to modify the performance and adjustment procedures to accommodate the different operating characteristics.

1-10 OPERATOR MAINTENANCE

Operator maintenance is limited to replacing the line fuse, and cleaning the fan filter. There are no operator controls inside the HP 3577A.

WARNING

To avoid serious injury, be sure that the ac line power cord is disconnected before removing or installing the ac line fuse.

Only service trained personnel should perform any instrument repair.

WARNING

Under no circumstances should an operator remove any covers, screws, shields, or in any other way enter the HP 3577A. There are no operator controls inside the HP 3577A Network Analyzer.

Refer to the Safety Symbol chart in the preface section for all applicable instrument and manual safety symbols.

Table 1-1. Specifications

SOURCE CHARACTERISTICS

Frequency Characteristics

Frequency Range: 5 Hz to 200 MHz.
Frequency Resolution: 0.001 Hz.
Stability: $\pm 5 \times 10^{-8}$ /day, 0 to 55°C.

Output Characteristics

Level Range: +15 dBm to -49 dBm (1.26 Vrms to 793 μ Vrms; 2 dBV to -62 dBV) into a 50 Ω load.
Resolution: 0.1 dB.
Entry Units: dBm, dBV, V.
Accuracy: ± 1 dB at +15 dBm and 100 kHz. Below +15 dBm, add the greater of ± 0.02 dB/dB or 0.2 dB.
Flatness: 1.5 dBp-p from 5 Hz to 200 MHz.
Impedance: 50 Ω ; >20 dB return loss at all levels.
RF Output Connector: 50 Ω Type N female
Spectral Purity:
Phase Noise (in 1 Hz Bandwidth):
 < -70 dBc at offset frequencies from carrier of 100 Hz to 20 kHz.
Harmonics: < -30 dBc.
Non-Harmonic Spurious Signals:
 < -50 dBc or -70 dBm whichever is greater.
Reverse Power Protection: Output is automatically opened at a signal level of approximately +22 dBm (50 Ω), or ± 4 Vdc, or greater applied to the source output. Source output is reconnected with the Clear Trip function.

Sweep Characteristics

Linear Frequency:
Range: 5 Hz to 200 MHz.
Entry: Start/stop or center/span frequencies
Span: 0 Hz or 0.01 Hz to 200 MHz, phase continuous.
Sweep Time: 100 ms/span to 6553 s/span
Direction: Increasing or decreasing frequency
Log Frequency (segmented linear approximation):
Range: 5 Hz to 200 MHz.
Entry: Start/stop frequencies.
Span: 0.01 Hz to 200 MHz, phase continuous.
Log Accuracy: 2%.
Sweep Time: 200 ms/span to 6553 s/span.
Sweep Direction: Increasing frequency.
Alternate Frequency: Sweep alternates between two separate start/stop frequencies using linear sweep only.
CW: Frequency is fixed. Data is updated with a selectable sample time from 1ms to 16 s.

Log Amplitude (fixed frequency):

Range: +15 dBm to -49 dBm
Entry: Start/stop level in dBm or dBV.
Sweep Time: 1 ms/step to 16 s/step. Total sweep time/span depends upon total number of steps and time/step
Sweep Modes: Continuous, single, manual.
Trigger Modes: Free run, immediate, line, external.

RECEIVER CHARACTERISTICS

Input Characteristics

Frequency Range: 5 Hz to 200 MHz.
Inputs: Three receiver inputs (A, B and R)
Input Impedance: Selectable 50 Ω with >25 dB return loss, or 1 M Ω in parallel with approximately 30 pF.

Full Scale Input Level:

| Input Impedance | Input Attenuation | |
|-----------------|-------------------|------------------|
| | 0 dB | 20 dB |
| 50 Ω | -20 dBm | 0 dBm |
| 1 M Ω | -33 dBV (22.4 mV) | -13 dBV (224 mV) |

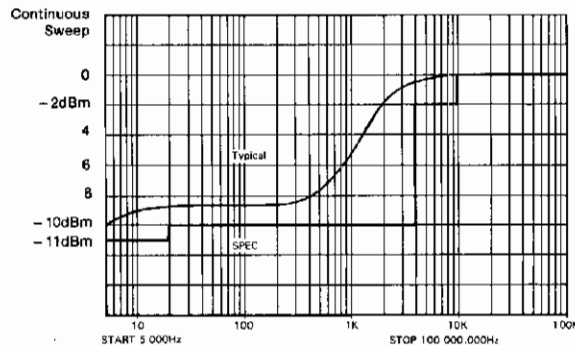
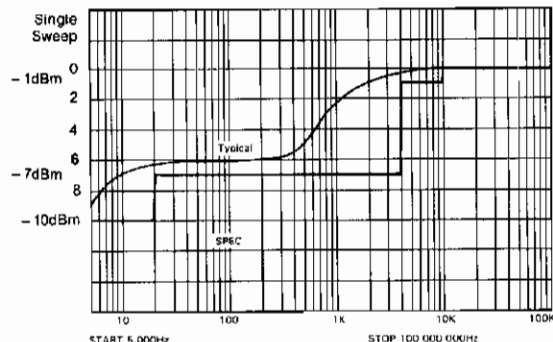



Table 1-1. Specifications (Cont)

Input Damage Level (approximate):
 50 Ω: +30 dBm or 25 Vdc.
 1 MΩ: +16.9 dBV(7 Vrms) or 25 Vdc
 The 50 Ω input impedance automatically switches to 1 MΩ at approximately +20 dBm, and can be reset with the clear trip function.
Input Connectors: 50 Ω Type N female.
Resolution Bandwidth: Selectable 1 kHz, 100 Hz, 10 Hz, or 1 Hz.
Sensitivity(Due to noise and internal crosstalk between source and receiver inputs):

| Resolution Bandwidth | Minimum Freq. | Minimum Freq. - 30 kHz | | 30 kHz - 200 MHz (50 Ω) 30 kHz - 20 MHz (1 MΩ) | |
|----------------------|---------------|-----------------------------------|------------------------------------|---|-----------------------------------|
| | | Full Scale Input | | Full Scale Input | |
| | | 0 dBm -13 dBV (20 dB atten) | -20 dBm -33 dBV (0 dB atten) | 0 dBm -13 dBV (20 dB atten) | 20 dBm -33 dBV (0 dB atten) |
| 1 Hz | 100 Hz | -110 dBm | -130 dBm | -110 dBm | -130 dBm |
| 10 Hz | 100 Hz | -100 dBm | -120 dBm | -110 dBm | -130 dBm |
| 100 Hz | 500 Hz | -90 dBm | -110 dBm | -105 dBm | -125 dBm |
| 1 kHz | 5 kHz | -80 dBm | -100 dBm | -95 dBm | -115 dBm |

Residual Responses: > 100 dB below full scale input, except for crosstalk error limits, L.O. feedthrough, and ac line and fan related spurious signals.

Crosstalk Error Limits: (>100 dB isolation between inputs)

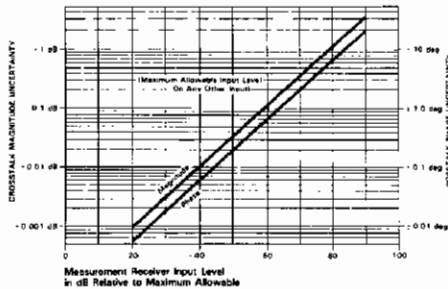

L.O. Feedthrough: < -33 dB below maximum input level.

AC Line and Fan Related Spurious Signals: < -100 dBm below 1 kHz input frequency.

Electrical Length/Reference Plane

Extension: Provides equivalent electrical line length, or delay at inputs A, B and R.
Range: -3 × 10⁸ m to +3 × 10⁸ m, or +1 s to -1 s.
Resolution: 5 digits or 0.1 cm (3.3 ps) whichever is greater.
Accuracy: ±0.1 cm or ±0.02% whichever is greater.

Magnitude Characteristics

Range: Full Scale Input to Sensitivity.
Resolution:
Marker: 0.001 dB (log); 5 digits (linear)
Display: 0.01 dB/div to 20 dB/div (log absolute);
 0.01 dB/div to 200 dB/div (log ratio),

0.1 nV/div to 10 V/div (linear absolute);
 10⁻¹⁰/div to 10²⁰/div (linear ratio).
Display Units: dB, dBm, dBV, V, and linear ratio.



Accuracy (at 100 kHz, 25° C, and Full Scale Input):

Absolute (A,B,R): ± 0.2 dB.
Ratio (A/R,B/R,A/B): ± 0.15 dB (50 Ω); ± 0.2 dB (1 MΩ).

Accuracy and frequency response errors, and effects of different input attenuation can be calibrated out with normalization.

Dynamic Accuracy:

| Error | | Input Level Relative to Full Scale Input |
|----------------------|----------|--|
| Resolution Bandwidth | | |
| 1 kHz, 100 Hz, 10 Hz | 1 Hz | |
| ±.04 dB | ±.04 dB | 0 dB to -10 dB |
| ±.02 dB | ±.02 dB | -10 dB to -50 dB |
| ±.05 dB | ±.05 dB | -50 dB to -80 dB |
| ±.15 dB | ±.25 dB | -60 dB to -80 dB |
| ±.75 dB | ±.75 dB | -80 dB to -90 dB |
| ±.75 dB | ±3.00 dB | -90 dB to -100 dB |

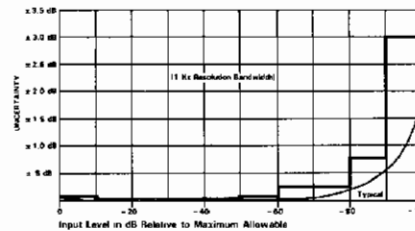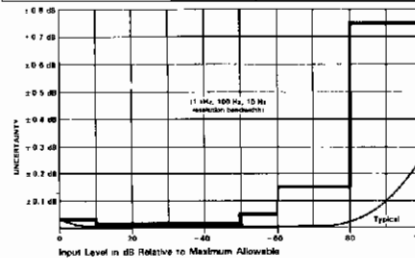

Frequency Response: Specifications apply when inputs are driven from a 50 Ω source impedance

Absolute (A,B,R):

| Frequency | Error | |
|-----------------|------------|------------|
| | 50 Ω Input | 1 MΩ Input |
| 20 Hz to 20 MHz | .3 dB pp | 5 dB pp |
| 5 Hz to 200 MHz | .6 dB pp | --- |
| 5 Hz to 20 MHz | --- | 1 dB pp |




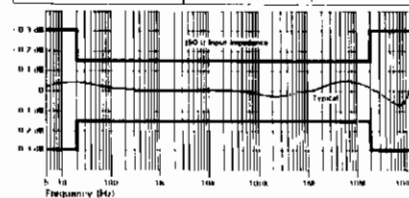


Table 1-1. Specifications (Cont)

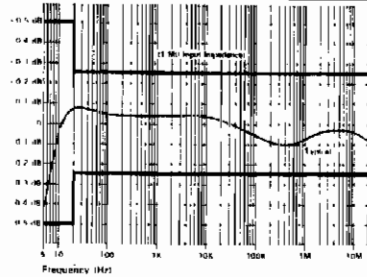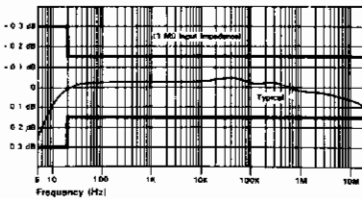

Ratio (A/R,B/R,A/B):

| Frequency | Error* | |
|-----------------|------------|------------|
| | 50 Ω Input | 1 MΩ Input |
| 20 Hz to 20 MHz | .3 dB pp | .3 dB pp |
| 5 Hz to 200 MHz | .4 dB pp | ---- |
| 5 Hz to 20 MHz | ---- | 6 dB pp |

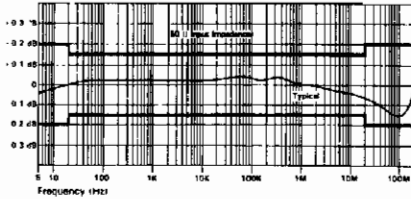

*For unequal 50 Ω input attenuation add 0.15 dB pp (20 Hz to 20 MHz), 0.3 dB pp (5 Hz to 200 MHz). For unequal 1 MΩ input attenuation add 0.2 dB pp (20 Hz to 20 MHz), 0.4 dB pp (5 Hz to 20 MHz).

Reference Level:

Range: -207 dBm to +33 dBm (-220 dBV to +20 dBV) (log absolute), -400 dB to +400 dB (log ratio); 0 V to 10 V (linear absolute); 0 to 10²⁰ (linear ratio).

Resolution: 0.001 dB (log); 5 digits (linear).

Stability:

Temperature: Typically < ±0.02 dB/°C.
Time: Typically < ±0.05 dB/hour at 25°C.

Phase Characteristics (A/R,B/R,A/B):

Range: ±180 deg.
Resolution:
Marker: 0.005 deg (0.0001 rad)
Display: 0.01 deg/div to 200 deg/div (0.00018 rad/div to 3.49 rad/div).
Display Units: degrees, radians.


Accuracy (at 100 kHz, 25° C, and Full Scale Input): ±2.0 deg

Accuracy and frequency response errors, and effects of different input attenuation can be calibrated out with normalization.

Dynamic Accuracy:

| Error* | Input Level Relative to Full Scale Input |
|----------|--|
| ±.4 deg | 0 dB to -10 dB |
| ±.2 deg | -10 dB to -50 dB |
| ±.5 deg | -50 dB to -60 dB |
| ±1.5 deg | -60 dB to -80 dB |
| ±7.5 deg | -80 dB to -100 dB |

*Specifications do not apply below -60 dB in a 1 Hz Resolution Bandwidth.

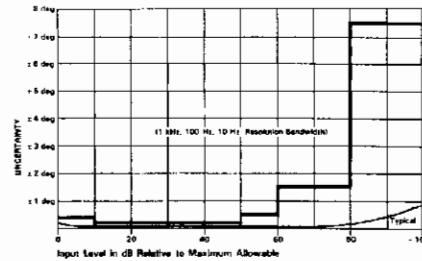

Frequency Response: Specifications apply when inputs are driven from a 50 Ω source impedance.

| Frequency | Error* | |
|-----------------|------------|------------|
| | 50 Ω Input | 1 MΩ Input |
| 20 Hz to 20 MHz | 2 deg pp | 5 deg pp |
| 5 Hz to 200 MHz | 10 deg pp | ---- |
| 5 Hz to 20 MHz | ---- | 10 deg pp |

*For unequal input attenuation add 8 deg pp.

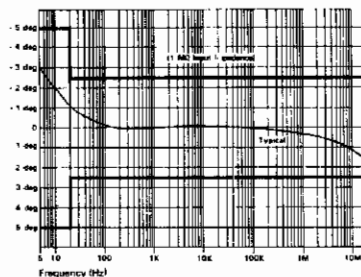
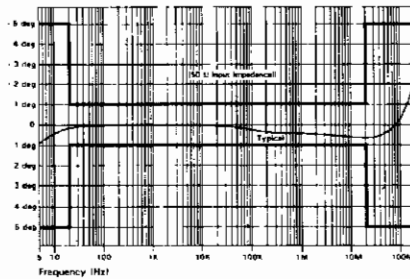


Table 1-1. Specifications (Cont)

Crosstalk: Specified under Input Characteristics.
Reference Level:
Range: -500 deg to +500 deg (-8.7 rad to +8.7 rad)
Resolution: 0.01 deg.
Stability:
Temperature: Typically $< \pm 0.05$ deg/ $^{\circ}$ C.
Time: Typically $< \pm 0.05$ deg/hour at 25 $^{\circ}$ C.

Polar Characteristics

Range, Resolution, Display Units, Dynamic Accuracy, Frequency Response, Uncertainty, Crosstalk, Reference Level, and Stability specifications are the same as the corresponding magnitude and phase characteristics.

Full Scale Magnitude Range:
Absolute (A,B,R): 0.1 nV to 10 V.
Ratio (A/R,B/R,A/B): 10^{-10} to 10^{20} .

Real/Imaginary Characteristics

Range, Dynamic Accuracy, Frequency Response, Uncertainty, Crosstalk, Stability specifications are the same as the corresponding magnitude and phase characteristics.

Resolution:
Marker: 5 digits.
Display: 0.1 nV/div to 10 V/div for absolute; 10^{-10} to 10^{20} for ratio.
Display Units: V and linear ratio.
Reference Level:
Range: ± 10 V for absolute; $\pm 10^{20}$ for ratio.
Resolution: 5 digits.

Delay Characteristics (Linear Frequency Sweep; A/R, B/R, A/B; 50 Ω input impedance)

Range: Group delay is a computed parameter, defined by the equation

$$t_g = -\frac{\Delta\phi}{2\pi\Delta f}$$

Minimum: The minimum delay time is given by the expression

$$\frac{1.4 \times 10^{-5}}{\text{Aperture [Hz]}}$$

Maximum: The maximum delay is given by the expression

$$\frac{N-1}{2 \times \text{Span [Hz]}}$$

where N = number of points per sweep (51, 101, 201, 401).

Effective Range: 1 ps to 20,000 s.

Resolution:
Marker: Same as minimum delay time or 5 digits, whichever is greater.
Display: 0.01 ns/div to 1000 s/div.
Aperture: Selectable 0.5%, 1%, 2%, 4%, 8%, 16% of frequency span.
Display Units: s.
Accuracy:

$$\frac{.13 \text{ s}}{(\text{freq [Hz]})^2} \pm 2 \text{ ns}$$

or

$$\frac{\text{Dynamic Phase Accuracy} \pm 2 \text{ ns}}{360 \times \text{Aperture [Hz]}}$$

whichever is greater.

The $\frac{.13 \text{ s}}{(\text{freq [Hz]})^2} \pm 2 \text{ ns}$ term can be

calibrated out with normalization.

Crosstalk: Determined by the expression

$$\frac{\text{Phase Crosstalk}}{360 \times \text{Aperture [Hz]}}$$

Reference Level:

Range: $\pm 10^3$ s.
Resolution: 5 digits.
Stability:

Temperature: Determined by the expression

$$\frac{\text{Phase Temperature Stability}}{360 \times \text{Aperture [Hz]}}$$

Time: Determined by the expression

$$\frac{\text{Phase Time Stability}}{360 \times \text{Aperture [Hz]}}$$

DISPLAY CHARACTERISTICS

Annotation: Start/stop, center/span or CW frequency, source level, scale/div, reference level, delay aperture, marker data, and soft key functions.

Graticules: Rectangular logarithmic and linear, polar, and Smith. All graticules are electronically generated.

Traces: Two simultaneous traces may be present with a rectangular graticule.

One trace with polar or Smith graticules

Markers: Each trace has one main marker and an offset marker. Markers indicate data at corresponding trace coordinates in the same units as used to set the Reference Level. Markers can be used to modify certain display parameters. Marker resolution is the same as horizontal display resolution

Reference Line Position:

Rectangular Graticule: 0% to 100% full scale deflection in 0.05% increments.

Polar/Smith Chart Graticule: ± 500 deg in 0.001 deg increments.

Data Storage: Measured data can be stored in vector format in non-volatile storage registers D1,D2,D3,D4. Stored data can be redisplayed later or operated on with Vector Math.

Table 1-1. Specifications (Cont)

Vector Math: Input Magnitude and Phase Data, Stored Data, and User Defined Constants and Functions can be mathematically combined into expressions which define displayed or stored data. Mathematical operations are: add, subtract, multiply, and divide.

Calibration:

Normalization: Both traces can be normalized to measured data with full accuracy, and resolution. Scale factors can be changed after normalization without affecting calibration.

Normalize(Short): Compensates for frequency response errors
Requires a short termination.

One Port Part Cal: Compensates for directivity errors and frequency response errors. Requires open and load terminations.
One Port Full Cal: Compensates for directivity, frequency response and source match errors. Requires open, short, and load terminations.

Noise Averaging:

Type: Exponentially weighted vector averaging on successive sweep data.

Averaging Factor: Selectable 1(off), 4, 8, 16, 32, 64, 128, 256.

The current trace A_n is always displayed and updated at the sweep rate according to the expression

$A_n = S_n/F + (F-1)(A_{n-1})/F$, where
 S_n = current input signal, F = averaging factor, A_{n-1} = previously averaged trace.

Averaging Factor is fixed at 1 in alternate sweep.

Linear Phase Slope Compensation: Provides linear phase slope offset in deg/span.

Range: -72,000 deg./span to +72,000 deg./span (-1256 rad/span to +1256 rad/span).

Resolution: 5 digits or 0.001 deg whichever is greater.

Accuracy: 0.02%.

Autoscale: Automatically adjusts the reference level and scale/div. of the displayed measurement

Measured No. of Points per Sweep:

Logarithmic frequency, 401;
linear frequency, 51, 101, 201, 401;
CW frequency, 1.

Measure No. of Steps per Sweep:

Logarithmic Amplitude Sweep, 5, 10, 20, 50, 100, 200, 400

Display Resolution: Horizontal and vertical.

Rectangular: 1600 points.

Polar: 1200 points.

PROGRAMMING CHARACTERISTICS

Capability: Remote programming is via the Hewlett-Packard Interface Bus (HP-IB)* for all 3577A front panel control functions, except the ac line switch, display intensity, entry knob, HP-IB address and talk-only on/off. The 35677A/B S-Parameter Test Sets are programmable through the 3577A interface only

Interface Functions: SH1, AH1, T5, TEØ, L4, LEØ, SR1, RL1, PP1, DC1, DT1, CØ, E1.

Output Data Transfer Time: 401 data points (single parameter) can be transferred directly to an HP 200 series computer in Basic language as follows:

ASCII Mode: Typically 1500 ms.

Binary Floating Point Mode: Typically 160 ms.

Graphics Capabilities:

Alphanumeric Characters: 12 lines of text with 40 characters per line can be displayed. Character set includes alphanumerics special characters and line vectors.

Vector Display: Trace lines can be drawn on the display between any two points with a resolution of 2048 points along the horizontal and vertical axes.

*HP-IB is Hewlett-Packard's implementation of IEEE Standard 488-1978.

Table 1-1. Specifications (Cont)

GENERAL CHARACTERISTICS

External Reference Frequency Input:

Frequency: 10 MHz/N (N is an integer from 1 to 100).

Level: 0 dBm \pm 10 dB, nominal.

Impedance: 50 Ω , nominal.

Connector: BNC female, rear panel.

Reference Frequency Output:

Frequency: 10 MHz.

Level: Typically 0 dBm.

Impedance: 50 Ω , nominal.

Connector: BNC female, rear panel.

External Trigger: Triggers on negative TTL transition or contact closure to ground.

Minimum Pulse Width: Typically 1 μ s.

Impedance: 50 Ω , nominal.

Connector: BNC female, rear panel.

Plotter Control: Directly compatible with HP-IB graphics plotters that use Hewlett-Packard Graphics Language (HP-GL) with listen only capability. Plotter may be controlled by the 3577A through the HP-IB connector without an external computer. Plotted data includes trace 1, trace 2, graticule, are annotation. Additional markers can be plotted, and pen numbers, pen speed, and line type can also be selected.

Display Adjustments: Astigmatism, x-axis position, y-axis position, alignment, focus, and intensity.

Save/Recall: Front panel setups can be stored in non-volatile memory locations 1 through 5. Last state is saved when power is removed.

Operating Conditions:

Temperature: 0°C to +55°C.

Relative Humidity: <95% at 40°C.

Altitude: <4,572 m (15,000 ft).

Non-Operating Conditions:

Temperature: -40°C to +75°C.

Altitude: <15,240 m (50,000 ft).

Accessories Included:

4 ea. Type N male to BNC female Adapter. (HP Part No. 1250-0780.)

1 ea. Operating Manual. (HP Part No. 03577-90000).

1 ea. Service Manual. (HP Part No. 03577-90012)

Power: 115V +10%, -25% (47 Hz to 440 Hz), or 230 V +10%, -15% (47 Hz to 66 Hz), 450 VA maximum.

Weight: 31 kg (67 lbs) net. 41 kg (90 lbs) shipping.

Dimensions: 222 mm H \times 426 mm W \times 578 mm D (8.75 in \times 16.75 in \times 22.75 in). Add 1 1/8 inch to depth to include front panel controls and connectors.

Table 1-2 Recommended Test Equipment

| Instrument | Critical Specifications | Recommended Model | Use* |
|-----------------------|--|--|---------|
| Ratio Transformer | ± 0.5 ppm Terminal Linearity worst case ± 0.01 ppm for 10 ppm ratio | ESI DT72A† | P |
| Spectrum Analyzer | Frequency Range: 10 Hz - 300 MHz Amplitude Measurement Range: -134 dBm to +30 dBm Dynamic Range: 70 dB | HP 8568B | F,P,A,O |
| Oscilloscope | Vertical Bandwidth: DC - 100 MHz Vertical Sensitivity: 10 mV/div Horizontal Sweep Rate: 0.01 μ s/div Input Coupling: AC, DC, 50 Ω Waveform Math: A-B Trigger: Ext, Int, Chop | HP 1980B Alternative HP 54201A/D | F,P,A |
| Digital Voltmeter | AC Range: 0 - 700 mVrms, 20 Hz - 250 kHz DC Range: 0 - 1000 V Accuracy: $\pm 1\%$ at 100 kHz, 1 Vrms | HP 3456A | F,P,A,O |
| Signal Generator | Frequency Range: 100 kHz - 300 MHz Power Range: -30 dBm to +10 dBm | HP 8660C HP 86602B | P,A |
| Synthesizer | Amplitude Accuracy: ± 0.15 dB at 100 kHz | HP 3335A | A |
| Synthesizer | Frequency Range: 100 kHz Amplitude Range: -30 dBm to 0 dBm | HP 3325A | O,P |
| Milliwatt Power Meter | Frequency Range: 10 Hz - 300 MHz Power Range: 0 dBm to -10 dBm Accuracy: ± 0.05 dB at 200 MHz | W&G EPM-1 | O,P† |
| Power Meter | Input Range: -10 to +20 dBm HP-IB compatible | HP 436A Opt. 022 | FO,AP† |
| Power Sensor | Flatness: ± 0.2 dB to 200 MHz | HP 8482A | O,F,AP† |
| Thermal Converter | Input Impedance: 50 Ω Input Voltage: 0.5 Vrms Frequency Response from DC to 20 MHz: ± 0.05 dB | HP 11051A Alternative 1395A-0.4§ with cable 12257A opt. 10 | P† |
| Controller | HP 9000 Series 200 computer Basic 3.0 or later version | | A,P† |
| Printer (optional) | HP 9000 Series 200 compatible | | P† |

*P = Performance Tests; A = Adjustments; F = Fault Isolation O = Operational Verification

† Alternate procedures which do not require the W&G EPM-1 power meter are included in this manual.

The series 200 controller, optional printer, thermal converter, and HP-IB option on the HP 436 power meter are required for the alternate tests.

‡ Electro Scientific Industries
13900 N.W. Science Park Drive
Portland, Oregon 97229

§ Ballantine Laboratories, Inc.
P.O. Box 97
Boonton, NJ 07005

Table 1-2 Recommended Test Equipment (Cont'd)

| Instrument | Critical Specifications | Recommended Model | Use* |
|--|---|---|-------------|
| Signature Multimeter | Setup Time: 15 ns Maximum Clock: 25 MHz | HP 5006A | F |
| Power Supply | 0 to 15 V, 500 mA | HP 6235A | P |
| Frequency Standard | Frequency: 10 MHz The 10 MHz Frequency Standard may be derived from the National Bureau of Standards station WWVB using a Spectracom 8160A NBS Frequency Standard Receiver, an HP 105B Quartz Oscillator, and an HP 5087A Distribution Amplifier (with options to provide 10 MHz output) or equivalent | | P,A |
| Power Splitter (2 required) | Frequency Range: DC - 200 MHz Impedance: 50 Ω Type N female connector | HP 11850A Alternative HP 11850C | P,O,A |
| Directional Bridge | Frequency Range: 100 kHz - 200 MHz Directivity: > 40 dB | HP 35677-63502 | P,A |
| 3 dB Coaxial Attenuator | Frequency Range: DC - 200 MHz Port Return Loss > 30 dB typical | HP 8491A Opt. 003 | P,A |
| 20 dB Coaxial Attenuator (3 required) | Frequency Range: DC - 200 MHz Port Return Loss > 30 dB typical | HP 8491A Opt. 020 | P,O,A |
| 10 dB Coaxial Attenuator (2 required) | Frequency Range: DC - 200 MHz Port Return Loss > 30 dB typical | HP 8491A Opt. 010 | P,A |
| Precision Termination (2 required) | Impedance: 50 Ω Return Loss: > 52 dB, DC - 200 MHz Connector: N male Connector: N female | HP 909C Opt. 200, 012 Opt. 200, 013 | P,A,O |
| Feedthrough Termination (3 required) | Impedance: 50 Ω BNC male 10 dB Return Loss | HP 11048C | P,O,A |
| RF Cable Kit (2 required) | Two 24 inch, 50 Ω cables | HP 35679A Alternative HP 11851A | F,P,O, A |
| RF Cable | 24 inch, 50 Ω | HP 8120-2292 | P,O |
| BNC Cable (3 required) | 12 inch, 50 Ω | HP 8120-1838 | P |

*P = Performance Tests; A = Adjustments; F = Fault Isolation
O = Operational Verification

Table 1-2 Recommended Test Equipment (Cont'd)

| Instrument | Critical Specifications | Recommended Model | Use* |
|------------------------------|--|--|-------|
| BNC Cable (3 required) | 24 inch, 50 Ω | HP 8120-1839 | P,O,A |
| BNC Cable (3 required) | 48 inch, 50 Ω | HP 8120-1840 | P,O,A |
| 1:1 Probe | DC - 200 MHz | HP 10021A | A,F |
| 10:1 Probe | DC - 200 MHz | HP 10040A | A,F |
| Adapter (7 required) | N male to BNC female, 50 Ω | HP 1250-0780 | P,O,A |
| Adapter | N female to N female, 50 Ω | HP 1250-1472 | P,O,A |
| Adapter (2 required) | BNC female to Banana male | HP 1251-2277 | P,O |
| Adapter | BNC female to alligator | Pomona 2631 | P |
| Adapter | BNC Tee | HP 1250-0781 | P |
| Adapter (2 required) | SMA male to BNC female | HP 1250-1200 | P,A |
| Adapter | N male to N male | HP 1250-0778 | P,A |
| Adapter | N male to N male | HP 1250-1475 | P |
| Adapter | BNC female to BNC female | HP 1250-0080 | P |
| Jumper | alligator to alligator | Pomona 3781-8 | A |
| Resistor | 1 Meg Ω , 1 % | HP 0698-7332 | A |
| Capacitor | 300 pF | HP 0160-5350 | A |
| Error Correction Cable | | HP 03577-61640 | P,O |
| Buffer Amplifier Kit | HP 3577A Performance Test Kit Kit Contents: OP Amp (NE5534) Capacitor, 22 μ F (2 each) Resistor, 475k Ω 1k Ω 499 Ω 100 Ω (4 each) BNC Connector (2 each) IC Socket Board Edge Connector Lug (2 each) Nut(2 each) Washer(2 each) Balun | HP 03577-84403 HP 1826-0715 HP 0180-0228 HP 0757-0481 HP 0757-0280 HP 0698-4123 HP 0757-0401 HP 1250-0083 HP 1200-0564 HP 5020-6893 HP 1251-0159 HP 0360-1190 HP 2950-0043 HP 2190-0016 HP 03577-84404 | P |

*P = Performance Tests; A = Adjustments; F = Fault Isolation O = Operational Verification

Table 1-2 Recommended Test Equipment (Cont'd)

| Instrument | Critical Specifications | Recommended Model | Use* |
|-----------------------|---|---|-------------|
| Service Accessory Kit | HP 3577A Service Kit Kit Contents: Cable Assembly Extender (7 each) Cable Assembly Adapter (2 each) Jack to Jack Adapter PC Extender Boards: (Dual 36/25 pin) 22-pin (2 each) | HP 03577-84401 HP 03585-61601 HP 03585-61616 HP 1250-0669 HP 03577-66541 HP 03577-66542 | F,A |

*P = Performance Tests; A = Adjustments; F = Fault Isolation O = Operational Verification

SECTION II FAULT ISOLATION

Table of Contents

| | | |
|------|--|------|
| 2-1 | Introduction | 2-1 |
| 2-2 | Safety Considerations | 2-1 |
| 2-3 | Recommended Test Equipment | 2-2 |
| 2-4 | Troubleshooting Hints | 2-2 |
| 2-5 | Getting Started | 2-2 |
| 2-6 | Overall Instrument Description | 2-2 |
| 2-7 | Power-on Self Tests | 2-5 |
| 2-8 | Continuously Monitored Diagnostics | 2-8 |
| 2-9 | Confidence Tests | 2-12 |
| 2-10 | Service Diagnostics | 2-16 |
| 2-11 | Covers Off Board Level Fault Isolation | 2-18 |

List of Tables

| | | |
|-----|--|------|
| 2-1 | Power-on Self Tests | 2-5 |
| 2-2 | Continuously Monitored Diagnostics | 2-8 |
| 2-3 | Confidence Tests | 2-12 |
| 2-4 | Service Diagnostics | 2-16 |
| 2-5 | Board Turn-On Hierarchy | 2-18 |
| 2-6 | Main Power Supply | 2-19 |
| 2-7 | Fault Isolation Test Signals | 2-20 |

List of Figures

| | | |
|-----|---|-----------|
| 2-1 | Fault Isolation Test Signal Locations | 2-21/2-22 |
| 2-2 | Fault Isolation Test Flow Diagram | 2-23/2-24 |
| 2-3 | 3577A Overall Block Diagram | 2-25/2-26 |
| 2-4 | 3577A Functional Block Diagram, | 2-27/2-28 |
| | Analog Frequency Generation: A5, A6, A7, and A31 | |
| 2-5 | 3577A Functional Block Diagram, | 2-29/2-30 |
| | Analog Input/Output and Power Supply: A1, A4, A8, and A21 | |
| 2-6 | 3577A Functional Block Diagram, | 2-31/2-32 |
| | Digital: A11, A12, A13, A15, A16, and 1345A | |

SECTION II

FAULT ISOLATION

2-1 INTRODUCTION

The fault isolation procedures found in this section are designed to assist the experienced service technician. Each assembly in these procedures is referred to as a functional block, since they serve a single electrical function. Component groups within each functional block are referred to as functional sub-blocks, since they also serve a single electrical function. The goal of these procedures is to determine which functional block has failed within the HP 3577A under test. Once the faulty functional block has been found, the schematics provide sample waveforms and voltages which allow isolation to the sub-block level. The technician's experience is then used to isolate the components which have failed within the functional sub-block.

These procedures assume that all power supplies in the instrument are good. Before excessive time is spent in troubleshooting, it is strongly recommended that all power supplies be checked for correct voltage and ripple. A listing of the power supplies in the HP 3577A is shown in Table 2-6.

The first tests performed in this procedure do not require inside access to the HP 3577A. Numerous self tests are performed at power-on. Additional diagnostics can be called from the self test menu under the hardkey labeled "SPCL FCTN" (SPECIAL FUNCTION). The first step should always be to run these self tests as they will isolate a majority of the problems encountered.

NOTE

When executing the diagnostics, refer to Figures 2-3 through 2-6 (3577A Overall and Functional Block Diagrams).

2-2 SAFETY CONSIDERATIONS

Some of the fault isolation procedures require access to the interior of the HP 3577A while power is supplied to the instrument. Extreme care should be exercised when servicing the instrument.

WARNING

Maintenance described herein is performed with power supplied to the instrument and protective covers removed. Such maintenance should be performed by service-trained personnel who are aware of the hazards involved (for example, fire and electrical shock). Where maintenance can be performed without power applied, the power cord should be removed.

2-3 RECOMMENDED TEST EQUIPMENT

The test equipment required for the fault isolation procedures is listed in Table 1-2. Any equipment which meets the critical specifications may be substituted for the recommended model. These procedures are designed to be performed with a minimum amount of equipment.

2-4 TROUBLESHOOTING HINTS

When troubleshooting the HP 3577A, keep the following hints in mind:

- Intermittant cables can appear to be hardware failures.
- Noise or spikes on the dc power supplies can cause instrument failure.
- Interpret front panel symptoms before extensive troubleshooting.
- It is possible that one circuit board can load another circuit board resulting in an apparent failure in the first circuit board.
- Whenever possible, divide the circuit under test in half.
- Measurements made in the Fault Isolation section are approximate values unless otherwise specified. Some tests are as simple as GO/NO GO.

2-5 GETTING STARTED

Fault isolation in the HP 3577A is basically split into two separate sections; analog and digital. Digital failures quite often will prevent the HP 3577A from turning on correctly. The Fault Isolation Flow Diagram found in Figure 2-2 illustrates a procedure to determine the faulty functional block if an instrument does not power up correctly. Each of the tests indicated in the procedure are described in detail in sections 2-7 through 2-11. If any of these tests fail, refer to the individual description for that test and the critical parameters checked for.

Analog failures usually will not effect the digital portions of the instrument and will show up as dead inputs or outputs, or specification failures. Fault isolation for these problems is best approached by running the Confidence Tests listed under the SPCL FCTN (SPECIAL FUNCTION) hardkey and described in Section 2-9. After running these tests, the Covers Off Board Level Fault Isolation explanation listed in section 2-11 should be performed.

2-6 OVERALL INSTRUMENT DESCRIPTION

An overview of the entire instrument operation is given here to illustrate to the service technician the interaction of the 3577A's individual boards and functional blocks. The information in this section should be used in conjunction with the fault isolation and self test information. Since many of the functional blocks interact heavily, the more information known about the interaction, the easier troubleshooting becomes. Study the following section before any work is done on the instrument. By interpreting the self test data and knowing the instrument operation, many problems can be isolated to the board level quite readily.

Refer to Figures 2-3 through 2-6 when reading the overall circuit description. Refer to Section VII (Circuit Descriptions) for more detailed descriptions of each board's operation.

The HP 3577A can be basically split into two sections; a signal source and a tuned receiver. There is only one area that the two overlap, and that is the source frequency is the same as the receiver tune frequency. Since the frequency generation section is common to both the source and the input, it will be explained first.

The "heart" of the frequency generation section is the frequency reference. The HP 3577A can be run from an external frequency reference by using the rear panel external reference input. The frequency reference board (A6) can be driven by either the oven board (A31) or an external reference. When an external reference is sensed by the external reference detector, the shutdown line on the oven board is toggled and the oven signal is switched off using the oven board switchable filter. The threshold detector on the oven board senses whether the oven has warmed up. If the oven is cold, the threshold detector switches the oven signal off. The reference signal, either the oven or external signal, is used to lock a 10 MHz phase-locked loop. When the oven is cold and no external reference is connected, the HP 3577A free runs on the uncorrected 10 MHz phase-locked loop signal. The 10 MHz phase-locked loop signal is used for two purposes. First, it is divided by 100 to form the 100 kHz signal used by the synthesizer board (A7). Second, it is used to drive a 300 MHz phase-locked loop. The 300 MHz signal is mixed and divided to form all the reference frequencies used in the HP 3577A.

The oven board (A31) provides a stable 10 MHz frequency reference signal. This signal is controlled by the frequency reference board (A6). When an external reference signal is used on the HP 3577A, the frequency reference board forces the control line SHUTDOWN to go low which turns off the 10 MHz oven output signal.

The synthesizer board (A7) produces frequencies from 300.25 to 500.25 MHz. The reference frequency for the synthesizer is 100 kHz obtained from the frequency reference board (A6). The synthesis method used in the HP 3577A is called Fractional-N synthesis. The synthesizer board has two synthesized outputs, one for the output board (A8) and one for the local oscillator board (A4).

The 250 kHz offset board (A5) takes the 300 MHz frequency reference board (A6) signal and creates a phase-locked 300.25 MHz signal. Note that the first IF used on the input board (A1) is the 250 kHz offset frequency. The 300.25 MHz signal is used by the output board (A8). The 300.25 MHz signal is mixed with the synthesizer board (A7) 300.25 to 500.25 MHz signal to create the source output frequencies of 5 Hz to 200 MHz. This mixing scheme minimizes the number of mixings done and keeps phase noise products as low as possible.

The local oscillator board (A4) combines the 300.25 to 500.25 MHz synthesizer board (A7) signal and the 300 MHz reference board (A6) signal to produce a 0.25 to 200.25 MHz signal. This signal is used to drive the first IF mixer. Note that the local oscillator output signal and the source output (A8) signal are always 250 kHz apart, even when the source is swept. This allows for a tuned input with fixed frequency IF sections.

The output board (A8) mixes the 300.25 to 500.25 MHz synthesizer board (A7) and the 300.25 MHz offset board (A5) signals to produce a 5 Hz to 200 MHz source signal. The 300.25 MHz signal is passed through a diode limiter before the mixing to allow leveling. After mixing, the 5 Hz to 200 MHz signal is filtered and amplified. The signal level at the input to the attenuator is variable between +11 and +15 dBm in

0.1 dB increments. The increments are set using a DAC in the Amplitude Reference. The leveling circuits correct for high frequency and low frequency source flatness errors. The low frequency errors are corrected by adjusting the gain of the first 20 dB amplifier after the mixer. The high frequency errors are corrected by the Amplitude Leveling. The attenuator is capable of attenuating between 4 and 60 dB in 4 dB steps. The 60 dB Step Attenuator also has a reverse power protection circuit. Whenever the peak voltage at the output connector is greater than 4 volts, the protection circuit disconnects the attenuator from the output connector.

The HP 3577A input board (A1) is a switchable 1M/50 ohm input. Relay K1 selects the input impedance of each channel. Note that only one input channel is shown in the block diagram. This is because all three input channels are electrically identical. The physical location in the instrument is the only distinguishable characteristic. Relays K2 and K3 set the input attenuation for each channel. Note that the two channel impedance paths have separate 20 dB attenuators. The signal is then mixed with the 0.25 to 200.25 MHz local oscillator (A4) signal in the first IF section. The output of the first IF is a constant 250 kHz signal whose instantaneous amplitude and phase are the same as the input signal. The 250 kHz signal is then converted to a 10 kHz signal by the second IF section and the 240 kHz frequency reference board (A6) signal. The 10 kHz signal, with the same amplitude and phase as the input signal, is then sampled at an 8 kHz rate with a sample and hold. This creates a 2 kHz "stairstep" third IF. The 2 kHz stairstep signal undergoes two Analog to Digital conversions. The first conversion is used to set the gain on the variable gain amplifier. This conversion is an 8-bit conversion. The gain of the variable gain amplifier is then set so the A to D is as near to its full scale input as possible. The A to D then undergoes a 12-bit conversion which is passed on to the digital filters. This A to D conversion technique allows for a 20-bit dynamic range with 12-bits of resolution. Note that this A to D sequence takes place during one stairstep level. The digital quadrature filters then process the data from the A to D converters. The quadrature filters separate the "real" and "imaginary" components of the A to D converter output. The resolution bandwidths are digitally implemented here.

The central intelligence of the HP 3577A Network Analyzer is the main processor-controller board (A13). The "heart" of the main processor is a 16-bit microprocessor. This board contains its own firmware (ROM) and RAM. The main processor bus of this board provides all the communication ports.

The keyboard (A15) is constantly being monitored by the main processor-controller via the keyboard data bus. If a key is stuck for a period longer than 10 seconds, an error message will then be displayed on the CRT.

The HP 1345A Digital Display is a 16-bit TTL data bus (positive logic) display. The display provides its own test pattern. This diagnostic is accessible under the SPCL FCTN (SPECIAL FUNCTION) hardkey. This function disconnects the 3577A digital section (main processor-controller) from the HP 1345A. When disconnected, the display module turns on its own resident test pattern which tests most of its display functions. This test pattern can also be shown by disconnecting the ribbon cable from the main processor-controller board (A13) to the display.

The HP-IB board (A16) provides an isolated link between the instrument's main processor-controller board (A13) and the "outside world." An HP-IB connector is provided at the rear panel of the instrument. This connector is used to connect the instrument to other instruments and controllers which have HP-IB (IEEE 488) capability.

The fast processor board (A11) performs floating point and fast numerical calculations (number crunching). This is done by taking data from the input boards (A1; Receivers R, A, B) and controlling the sweep timing of the HP 3577A. This board contains its own firmware (Micro Program ROMs), Micro Program Sequencer, and a Bit/Slice ALU (Arithmetic Logic Unit). The fast processor controls the accessibility of the Fast Data Bus. For example, the fast processor must grant the bus in order for the trace memory board (A12) to communicate with the main processor-controller board (A13).

The trace memory board (A12) provide the non-volatile storage capabilities. This board provides additional firmware (ROM) and RAM for the instrument. At turn-on, a ROM checksum and a marching ones test for the RAM section is performed.

2-7 POWER-ON SELF TESTS

The tests the HP 3577A performs when power is first applied are listed in Table 2-1.

As with any microprocessor based instrument, the "kernel" or microprocessor, ROM, RAM, clock, and common bus and buffers must be working for the instrument to turn on at all. At power-on, the HP 3577A tries to test its "kernel" and then gradually expands and tests the other branches of communication open to it. Please note that if the "kernel" is not functional, the HP 3577A will most likely not be able to run the self tests. On the other hand, if the HP 3577A passes the power-on self tests, there is an extremely high probability that the digital core of the instrument is functioning perfectly. The only digital sections not checked are the outermost I/O ports and buffers to the instrument measurement and control sections.

Table 2-1. Power-on Self Tests

| Self Test Number | Test Description | Test Location |
|------------------|---|--|
| 1 | LED Test | Front Panel |
| 2 | Main Processor-Controller ROM Test | A13U12,U19 - U30 A13U73 - U76 |
| 3 | Main Processor-Controller RAM Test | A13U9,U10,U15- U17,U71,U72 |
| 4 | Total Main Processor-Controller RAM Test (Optional) | A13U9,U10,U15- U17,U71,U72,U81 U82 |
| 5 | Keyboard Cable Test | A13U42,A15J1(8) |
| 6 | Timer Interrupt Test | A13U48,U49,U60, U78,U79 |
| 7 | Trace Memory Test | A13U33 - U36 A12 all circuits |
| 8 | One MegaHertz Test | A13U77(8) |
| 9 | Eight kiloHertz Test | A13U47(2) |
| 10 | Fast Processor Self Test | A13U31 and A13U32 |

Self Test Number 1, LED Test

Immediately after the microprocessor (A13U1) starts its program, all front panel LEDs are turned on. The LEDs are left on until Power-On Self Test number 2 is completed.

Self Test Number 2, Main Processor-Controller ROM Test

The main processor-controller (A13) computes a checksum for each ROM and compares it to a known value. Please note that if the ROMs are bad, the main processor-controller will most likely not operate. The checksums and the test code reside on blocks 1 and 2 of ROM. At the beginning of this test, the main processor will clear the display's memory by writing a NOP instruction to all the display's memory locations. The $\overline{\text{POP}}$ (Power On Preset) signal to the main processor-controller turns on the ROM and RAM test LEDs (A13CR6 and A13CR5, respectively). The checksums are then calculated for ROM, and if an error is found, a message will be written to the display. If all tests pass, the ROM test LED (A13CR6) will be extinguished, and the next test will be performed. If a failure occurs, the ROM test LED will be left on, the main processor-controller will pause for approximately 5 seconds, and the next test will be performed.

Self Test Number 3, Main Processor-Controller RAM Test

The main processor-controller (A13) performs tests on the areas of its RAM that do not have non-volatile requirements (i.e., the dynamic stack). First, a checksum is computed for the non-volatile sections. Then a marching ones test is performed on the stack area of RAM. A marching ones test pushes zeros, ones, HEX 55's and HEX AA's through RAM. Each block of RAM as labeled on the A13 board is tested and errors are reported by these block numbers. Data is written to one block and other blocks are read to determine block interaction errors. Block interaction errors generally indicate failed decoders or chip select lines. If an error occurs, an error message will be displayed for approximately 5 seconds before the next test is performed. If the RAM test passes, the RAM test LED (A13CR5) will be extinguished.

Self Test Number 4, Total Main Processor-Controller RAM Test

This test is invoked by pressing the SAVE and RECALL hardkeys on the front panel simultaneously after a power-on and holding them down until the RAM test is complete. All RAM memory locations are checked during this test, even memory with non-volatile requirements. All saved instrument states and trace data is lost during this test. The test procedure is the same as the procedure in SELF TEST NUMBER 3.

Self Test Number 5, Keyboard Cable Test

The main processor-controller (A13) tests to see if the keyboard cable is connected to the motherboard. The main processor-controller looks for the keyboard MSB (Most Significant Bit) to be pulled low through A13U42. The keyboard pulls this line low at A15J1(8). If this test fails, the keyboard interconnection should be suspect.

Self Test Number 6, Timer Interrupt Test

The main processor-controller (A13) will check to see that the timer interrupt occurs, which is a divided down version of the 16 MHz from the phase-locked loop circuit (A13U48). The 16 MHz clock is divided by A13U49, U60, and U78 so that the main

processor-controller can sense its presence. The timer interrupts are necessary for scanning the keyboard.

Self Test Number 7, Trace Memory Test

The main processor-controller tests the volatile portion of the trace memory board (A12). A marching ones test is then performed to the RAM section of trace memory. The marching ones test is described under SELF TEST NUMBER 3, MAIN PROCESSOR-CONTROLLER RAM TEST. This test checks blocks 1, 2, 3 and 4 of the trace memory RAM which corresponds to A12U5,U12,U6, and U13 respectively. A more exhaustive trace memory test is available using the SPCL FCTN (SPECIAL FUNCTIONS) menu and selecting the TRACE MEMORY test.

Self Test Number 8, 1 MHz Test

This test checks to see if a divided down version of the 1 MHz clock is present. A13U44 monitors U77(6) and waits for a transition to occur. This signal is generated on the frequency reference board (A6), and should be suspect if the test fails.

Self Test Number 9, 8 kHz Test

This test checks to see if the 8 kHz signal to the input board (A1) is present. This signal is generated on the frequency reference board (A6), and should be suspect if the test fails.

Self Test Number 10, Fast Processor Self Test

The fast processor board (A11) first tests its own logic for errors. It then tests its ability to access the trace memory board (A12) and the counter/receiver board interface. The following error messages are generated by this test:

1. NO REPOSE FROM FP

This indicates that the main processor-controller board (A13) cannot access the fast processor board (A11). This usually indicates a serious fast processor failure.

2. FP LOGIC FAILURE

This indicates the fast processor's associated logic circuitry is not operating correctly.

3. FP CNTR/RCVR FAILURE

This indicates that the sweep timer counter and receiver board (A1) interface is not operating correctly.

4. FP CANNOT ACCESS TRACE MEMORY

This indicates that the fast processor (A11) wrote data to trace memory (A12) and read the data back and the two were not the same.

5. FP-MP COMMUNICATION ERROR

This indicates that the main processor-controller wrote data to the fast processor, and read the data back and the two were not the same.

2-8 CONTINUOUSLY MONITORED DIAGNOSTICS

The tests listed in Table 2-2 are performed continuously while the HP 3577A is operating. The tests listed in Table 2-4 are obtainable from the 3577A front panel via the SPCL FCTN (SPECIAL FUNCTION) hardkey. For each of these tests, a test explanation is given and the suspect board identified for test failures. The continuously monitored tests are listed by the error message that is displayed on the HP 3577A.

Table 2-2. Continuously Monitored Diagnostics

| Error Message | Test Name | Test Location | Suspect Board |
|--|---|--------------------------------|---|
| Oscillator Unlocked Assembly A5,A6 or A7 | Phase-Locked Loop Unlocked | A6U9(6) A5U50(4) A7U6(6) | Reference (A6) Offset (A5) Synthesizer (A7) |
| Reference Unlocked | 10 MHz Reference Unlocked | A6U2(1) | Reference (A6) |
| Bus Error | Main Processor Hardware Error | A13U1(22) | Main Processor-Controller (A13) |
| Stack Overflow *Integer Overflow *Divide By Zero Real Math Overflow Real Math Underflow Spurious Interrupt Interrupt 1 | Main Processor Hardware Error | A13U1 Internal | Main Processor-Controller (A13) |
| Interrupt 2 | *Note: These error messages could be caused by data in registers D1, D2, D3, or D4. | | |
| Illegal Instruction | | | |
| Escape Code x | | | |
| System Error #x | Fast Processor/ System Errors | Software limit tests | Fast Processor (A11) |
| Front Panel Key Stuck | Keyboard | A15J1(8) | Keyboard (A15) |

Each of the continuously monitored diagnostics in Table 2-2 is listed below by test name. This information along with the schematics in Section VIII (Service) gives the service technician insight into the failure conditions.

Oscillator Unlocked, Assembly A5, A6 or A7

Each of the phase-locked loops in the HP 3577A is monitored by a loop unlock detector.

The frequency reference board (A6) is monitored by A6U10. If the output of A6U9 has an ac component, A6U10 detects the ac and pulls its output low. This causes an internal LED to turn-on and signals the main processor-controller (A13).

The synthesizer board (A7) phase-locked loop is monitored by A7U42. The output of the sample and hold is monitored. When the detector (A7U42) senses an out-of-range dc control voltage, it will then cause an internal LED to turn-on and interrupts the main processor-controller (A13). It is normal for the synthesizer to lose phase lock between sweeps due to the retrace.

The 250 kHz offset board (A5) phase-locked loop is monitored by U51. The output of the phase detector and loop filter is monitored. If an ac signal or a positive dc signal is present U51 pulls its output low. This causes an internal LED to turn-on and interrupts the main processor-controller (A13).

10 MHz Reference Unlock

The 10 MHz phase-locked loop has its own unlock detector and error message. This is because external signals can cause this loop to unlock. The 10 MHz phase-locked loop is monitored by A6CR3, CR4, and U2b. The diodes monitor the phase detector output. When an ac signal occurs at A6U2(1), the output of A6U2b runs to the positive supply voltage. This turns on an internal LED (A6CR20) and interrupts the main processor-controller (A13) through the inverter A6U1c.

Main Processor Hardware Error

The main processor-controller (A13) has error detection routines which are an integral part of the chip. Generally all these errors say is that something is wrong with the Address or Data Bus. Any components connected to the bus should be suspect.

The BUS ERROR message is generated when the processor writes to ROMs, writes outside the address space available, etc. A13U1(22) is the trigger for this error. When pin 22 is low, the main processor-controller trips. The following components are involved with the BUS ERROR decoding: A13U61, U64 through U67. It should be noted, however, that this error will occur for almost all failures on the address or data bus, therefore all components connected to either bus should be suspect.

All other main processor-controller hardware errors are detected by numerical software traps within the HP 3577A operating system. These errors cannot be used to isolate hardware problems easily and indicate a fault within the 3577A digital system.

Fast Processor/System Errors

The HP 3577A system errors are reported by the main processor-controller (A13). When the operating system senses an invalid instrument state or operation in the digital sections, a system error is generated. Since these errors are generated during a control or calculation operation, as opposed to a self test mode, the actual cause for an error cannot be exactly known. This information may be useful, along with other fault isolation data already received, for narrowing down digital failures. Each of the system errors are listed below, along with an explanation of what causes an error trip. Most of these errors indicate a problem with the fast processor (A11) and/or main processor-controller (A13) communication.

DATA ERROR #1

This error occurs when the main processor-controller gets a bad number after converting the fast processor's data from 32-bit floating point to 64-bit floating point format. Refer to the Proposed Floating Point Standard* for information as to which bits are invalid.

DATA ERROR #2

This error occurs after a bad 64-bit to 32-bit conversion in the main processor-controller resulting in a "Not A Number" error as outlined in the Proposed Floating Point Standard*. Refer to the standard for information as to which bits are invalid.

DATA ERROR #3

This error occurs after a bad 64-bit to 32-bit conversion in the main processor-controller resulting in an Underflow. Refer to the Proposed Floating Point Standard* for information as to which bits are invalid.

DATA ERROR #4

This error occurs after a bad 64-bit to 32-bit conversion in the main processor-controller resulting in an Overflow. Refer to the Proposed Floating Point Standard* for information as to which bits are invalid.

DATA ERROR #5

This error occurs after a bad 64-bit to 32-bit conversion in the main processor-controller resulting in Infinity. Refer to the Proposed Floating Point Standard* for information as to which bits are invalid.

DATA ERROR #6

This error occurs after a bad 32-bit to 64-bit conversion resulting in an Invalid Zero. Refer to the Proposed Floating Point Standard* for information as to which bits are invalid.

SYSTEM ERROR #7

This error occurs when a status interrupt occurs during the processing of a data interrupt. Possible failures include the main processor-controller interrupt decoding or the fast processor interface.

SYSTEM ERROR #8

This occurs when the fast processor interrupts the main processor-controller but the data given to define the interrupt does not match the valid table. The interrupt defines an overload condition at one of the receiver ports.

SYSTEM ERROR #9

This error occurs if the main processor-controller told the fast processor to start or to abort and the fast processor did not understand the command. This means the fast processor did not get the right data. This error occurs when the fast processor is in its main loop.

*This Proposed Floating Point Standard is explained in Chapter 4 of the Basic Programming Techniques with Extension 2.0 for the 200 Series Computers Documentation Manual. The -hp- part number for this manual is 09826-90011.

SYSTEM ERROR #10

This error occurs if the main processor-controller told the fast processor to start or abort and the fast processor did not understand the command. This error occurs when the fast processor is in its trigger loop.

SYSTEM ERROR #11

This error occurs if the main processor-controller told the fast processor to start or abort and the fast processor did not understand the command. This error occurs when the fast processor is in its process loop.

SYSTEM ERROR #12

This error occurs if the main processor-controller told the fast processor to start or abort and the fast processor did not understand the command. This error occurs when the fast processor is in its settling loop.

SYSTEM ERROR #13

This error occurs when the fast processor tries to execute a trace arithmetic instruction, passed it through buffers into trace memory and the data instruction received was bad.

SYSTEM ERROR #14

The fast processor is not reading the fast processor/main processor-controller interface after a command was written to the interface by the main processor-controller. Check to see if the 30 MHz fast processor clock is present.

SYSTEM ERROR #15

This error occurs when the fast processor does not acknowledge the receipt of an ABORT command from the main processor-controller. This occurs when U44(6) is still low.

SYSTEM ERROR #16

This error occurs when the main processor-controller has tried to send a HALT command to the fast processor and the fast processor echoed back a bit pattern which is not an appropriate response.

SYSTEM ERROR #17

This error occurs when the fast processor data and instructions create an overflow condition. This error usually indicates a fast processor communication problem.

SYSTEM ERROR #18

This error occurs when the fast processor data and instructions create an underflow condition. This error usually indicates a fast processor communication problem.

SYSTEM ERROR #19

This error occurs when the main processor-controller has tried to send a HALT command to the fast processor and the fast processor echoed back a bit pattern which is a valid reply but not the HALTED reply.

SYSTEM ERROR #20

This command occurs when the fast processor does not allow the main processor-controller to access the interconnecting bus between fast and main processors. The BUSGNT line did not go active low.

SYSTEM ERROR #21

This error occurs when the main processor-controller encounters a software error and usually indicates a main processor-controller failure.

SYSTEM ERROR #22

This error occurs when the main processor-controller encounters a software error and usually indicates a main processor-controller failure.

SYSTEM ERROR #23

This error occurs when the main processor-controller encounters a software terminator error in its commands. This error usually indicates a main processor-controller failure.

SYSTEM ERROR #24

This error occurs if at the end of a log sweep segment the Frac N limit line, A13U45(13), was not toggled high. This usually indicates a fault in the synthesizer board (A7) or an error in the control bus and associated control lines.

KEYBOARD

The main processor-controller (A13) scans the keyboard constantly for any inputs. If a key is held down for more than 10 seconds, the microprocessor sends an error message to the display. A pressed key is sensed through A15J1(8) by a TTL low. Due to decoding uncertainties, the keyboard ignores all inputs when it senses a key is stuck.

2-9 CONFIDENCE TESTS

The HP 3577A has the ability to run an analog self test on its input channels and its source. These tests essentially check to see if the source and input channel agree. As many single channel specifications as possible are checked in these tests. This self test does not check to the instrument specifications since a cable is required to connect the source and input channel and the characteristics of the cable can affect the measured results. Table 2-3 lists the Confidence Tests.

These tests are available under the SPCL FCTN (SPECIAL FUNCTION) hardkey on the 3577A front panel. To run these tests, first press the SPCL FCTN hardkey and select the CONF TEST softkey.

Table 2-3. Confidence Tests

| Test Number | Test Name | Error Message |
|-------------|-------------------------------|--|
| 1 | LOG SWEEP FLATNESS TEST | Is cable connected? |
| | | Failed: Log Sweep signal level test |
| | | Failed: Log Sweep flatness test |
| 2 | LINEAR SWEEP FLATNESS TEST | Failed: Linear Sweep signal level test |
| | | Failed: Linear Sweep flatness test |
| 3 | SYNTHESIZER AND L.O. TEST | Failed: Synthesizer and L.O. test |
| 4 | SOURCE AMPLITUDE TEST | Failed: Amplitude sweep accuracy test |
| 5 | OUTPUT LIMITER TEST | Failed: Output Limiter linearity test |
| 6 | IMPEDANCE AND ATTENUATOR TEST | Failed: Receiver Impedance test |
| | | Failed: Receiver Attenuator test |

Each of the Confidence Tests is described below. The description should be valuable in order to isolate any failures which occur with these tests. It is quite easy to isolate if a failure occurs on the input or output since the Confidence Tests can be run separately on each input channel. If a Confidence Test passes on one or two inputs, the problem is probably in the receiver.

The 3577A instrument state is also listed for each test. By repeating a test manually and varying the instrument setup, the faulty board can often be found. If repeating these tests manually, INSTR PRESET should be pressed between each test setup. If a Confidence Test fails, the test sequence stops, leaving the instrument in the failed test setup.

Due to the interactions mentioned previously, faulty boards for these tests cannot be determined in advance. The Confidence Tests are valuable when used with the overall block diagram and the overall circuit description. By running the tests manually, and varying the instrument state for each test slightly, faulty blocks can be isolated from the front panel.

Confidence Test Number 1, Log Sweep Flatness Test

Instrument State:

Sweep Type Log
 Display Function Log Magnitude
 Resolution Bandwidth Auto BW On
 Start Frequency 400 Hz
 Stop Frequency 200 MHz
 Source Amplitude -9.1 dBm
 Sweep Time 3 seconds

Test Procedure:

Trigger for a single sweep

Test Requirements:

- 1-(Maximum Amplitude) - (-9.1 dB) < 3.642 dB and (-9.1 dB)
 - (Minimum Amplitude) < 3.642 dB
 Error message: Failed: Log Sweep signal level test
- 2-(Maximum Amplitude) - (Minimum Amplitude) ≤ 2.16 dB
 Error message: Failed: Log Sweep Magnitude flatness test
- 3-(Maximum Amplitude) ≥ -60 dBm
 Error message: Is cable connected?

Confidence Test Number 2, Linear Sweep Flatness Test

Instrument State:

Sweep Type Linear
 Display Functions Log Magnitude
 Resolution Bandwidth 1 kHz
 Start Frequency 2 MHz
 Stop Frequency 200 MHz
 Source Amplitude -9.1 dBm
 Sweep Time 1 second

Test Procedure:
 Trigger for a single sweep.

Test Requirements:
 1-(Maximum Amplitude) - (-9.1 dBm) < 3.642 dB and (-9.1 dB)
 - (Minimum Amplitude) < 3.642 dB
 Error message: Failed: Linear Sweep signal level test
 2-(Maximum Amplitude) - (Minimum Amplitude) < 2.16 dB
 Error message: Failed: Sweep magnitude flatness test

Confidence Test Number 3, Synthesizer and L.O. Test

Instrument State:
 Sweep Type Linear
 Display Functions Log Magnitude
 Resolution Bandwidth 1 kHz
 Start Frequency 0 Hz
 Stop Frequency 50 MHz
 Source Amplitude -9.1 dBm
 Sweep Time 1 second

Test Procedure:
 Trigger for a single sweep.

Test Requirements:
 1-(0 Hz Marker Value) < -33 dBm or Absolute Value of (50 MHz Marker Value
 - (-9.1 dBm)) < 3.642 dBm
 Error message: Failed: Synthesizer and L.O. test

Confidence Test Number 4, Source Amplitude Test

Instrument State:
 Sweep Type Amplitude
 Display Function Log Magnitude
 Source Frequency 200 MHz
 Start Amplitude -49 dBm
 Stop Amplitude -5.1 dBm
 Steps per Sweep 50
 Time per Step 100 msec
 Resolution Bandwidth 1 kHz

Test Procedure:
 Trigger for a single sweep.

Test Requirements:

1-Absolute Value of ((X Marker Value) – (Y axis Amplitude))
 < 3.642 dB and Absolute Value of (bin N+1 value – bin N value – 0.878

dB)

< 1.28 dB

Error Message: Failed: Amplitude Sweep accuracy test

Confidence Test Number 5, Output Limiter Test

Instrument State:

Sweep Type Amplitude
 Display Function Log Magnitude
 Source Frequency 90 kHz
 Start Amplitude – 9 dBm
 Stop Amplitude – 5.1 dBm
 Steps Per Sweep 20
 Time Per Step 50 msec
 Resolution Bandwidth 1 kHz

Test Procedure:

Trigger for a single sweep.

Test Requirements and Suspect Block:

1-Absolute Value of (bin N+1 – bin N – 0.195 dB) < 0.2 dB

Error Message: Failed: Output Limiter linearity test

Confidence Test Number 6, Impedance and Attenuator Tests

Instrument State:

Sweep Type CW
 Display Function Log Magnitude
 Source Frequency 90 kHz
 Source Amplitude – 30 dBm
 Resolution Bandwidth 1 kHz

Test Procedure:

Take a data point on 50 ohm impedance, 20 dB input attenuation
 Record measured value.
 Switch impedance to 1 M ohm, 20 dB input attenuation.
 Record measured value.
 Switch impedance to 50 ohm, 0 dB input attenuation.
 Record measured value.

Test Requirements:

- 1- Absolute Value of ((1 M ohm, 20 dB attenuation value) – (50 ohm, 20 dB attenuation value – 6 dB)) < 0.2 dB
Error Message: Failed: Receiver impedance test
- 2- (50 ohm, 20 dB value) – (50 ohm, 0 dB value) < 0.1 dB.
Error Message: Failed: Receiver attenuator test

2-10 SERVICE DIAGNOSTICS

The HP 3577A has the ability to run several diagnostic and service routines on itself. Some of these tests are a more complete version of the power-on self tests described in Section 2-6, others are servicing aides such as Signature Analysis (SA) pattern routines.

The diagnostics are accessible under the SPCL FCTN (SPECIAL FUNCTION) hardkey. To enter the diagnostic routines, press the SPCL FCTN hardkey and select the Service Diag (Diagnostics) softkey. Softkeys available under the Service Diagnostics are listed in Table 2-4.

Table 2-4. Service Diagnostics

| Softkey Number | Diagnostic Name | Tests Location | Comments |
|----------------|-------------------|-----------------------|---|
| 1 | LEVELING ON/OFF | A8U20(10) | Breaks source leveling loop for troubleshooting. |
| 2 | SETTLING ON/OFF | None | Turns off dwell time before each sweep. |
| 3 | SYN DIAC ON/OFF | None | Changes source frequency. Readout to read synthesizer (A7) frequency (300.25 to 500.25 MHz) |
| 4 | TEST PATTERN | Display Module | Turns on the display module test pattern. |
| 5 | TRC MEM TEST | A13U33 - U36, A12 all | Tests all trace memory board (A12) ROM and RAM locations. |
| 6 | FASTPROC TEST | A13U31 - U36, U62 | Tests fast processor board (A11) logic and interfacing. |
| 7 | FAST BUS INT TEST | A13U31 - U36 | Tests bidirectional main (A13) and fast processor (A11) port. |
| 8 | MORE | None | Selects menu listed below. |
| 1 new menu | DISP MEM TEST | A13U39, U40 | Tests display module memory. Will destroy all data in memory. |
| 2 | DISP HP-IB | A16 all circuits | Reads state of HP-IB connector pins through HP-IB IC (U21). |
| 3 | HP-IB SA | A16 all circuits | Runs signature analysis routine on HP-IB circuits. |

Leveling On/Off

This function sets the output of A8U20(10) low and turns the high frequency source leveling loop off. This feature will aid in source output board (A8) troubleshooting.

Settling On/Off

This function turns off the settling time function implemented at the beginning of each sweep by the HP 3577A.

Syn Diag On/Off

This function allows programming of the HP 3577A in direct synthesizer frequencies (300.25 to 500.25 MHz). This feature will aid in synthesizer troubleshooting by offering simpler instrument programming.

Test Pattern

This function disconnects the 3577A digital section from the display module inside. When disconnected, the display module turns on its own resident test pattern which tests most display functions. Refer to the HP 1345A Digital Display Operating and Service Manual accompanying this manual.

TRC Mem Test

This function performs a checksum on the trace memory (A12). ROMs and a marching ones test on the trace memory RAMs. For explanation of marching ones and checksum tests, refer to the Power-On Self Test Number 3 in Section 2-7.

Fastsproc Test

This function performs the fast processor self test. This self test is described in detail in the Power-On Self Test Number 10 in Section 2-7.

Fast Bus Int (Interface) Test

This function tests the bidirectional port between the fast processor (A11) and the main processor-controller (A13). This test is performed by the main processor-controller. The main processor-controller writes information to the port, and then reads back the echoed data. The test is then repeated with the fast processor writing and reading.

Disp Mem Test

This function thoroughly tests the memory resident in the display module in the HP 3577A. The test is about 10 seconds long, with the display blank during this time. The instrument returns from the test in an INSTRUMENT PRESET state. The test performed is a marching ones test as described in the Power-ON Self Test in Section 2-7.

Disp HP-IB Test

This function draws an HP-IB connector facsimile on the 3577A display. All connector pins are labeled. A dot is printed on the connector when the main processor-controller (A13) senses the pin pulled low. This connector is accessible from the rear panel of the HP 3577A. In order to display a dot on the appropriate control line, the line must be tied to logic ground (lgnd - pin 24). This diagnostic is used to test the communication port to and from the main processor-controller board (A13) via the HP-IB board (A16).

HP-IB SA

This function turns on a signature analysis routine for the HP-IB (A16) circuit board. Refer to the HP-IB service section in Section VIII for valid signatures and test points.

2-11 COVERS OFF BOARD LEVEL FAULT

This section includes fault isolation tests where the instrument covers are removed. Since hazardous signals are present in the HP 3577A with the covers removed, be sure to take all necessary safety precautions.



Maintenance described herein is performed with power supplied to the instrument and protective covers removed. Such maintenance should be performed by service trained personnel who are aware of the hazards involved (for example, fire and electrical shock). Where maintenance can be performed without power applied, the power cord should be removed.

This section describes a procedure much like the factory procedure for bringing the HP 3577A to life for the first time. The procedure assumes that any board can be faulty. This procedure is written in a serial fashion but does not have to be performed in this order. If there is a strong suspicion that a particular functional area is faulty, that section of this procedure should be done first. If the HP 3577A passes all digital self tests, there is a high level of confidence that the digital section is working correctly. This section includes the Main Processor-Controller (A13), Trace Memory (A12), Fast Processor (A11) and HP-IB (A16) boards. If the digital self tests fail, then the area tested in each should be repaired before continuing with the fault isolation.

Table 2-5. Board Turn-On Hierarchy

| Board Description | Board Designator |
|------------------------|------------------|
| 1. Main Power Supply | A21 |
| 2. Digital Display | 1345A |
| 3. Main Processor | A13 |
| 4. Keyboard | A15 |
| 5. Frequency Reference | A6 |
| 6. Trace Memory | A12 |
| 7. Fast Processor | A11 |
| 8. HP-IB | A16 |
| 9. Input (R,A,B) | A1 |
| 10. Synthesizer | A7 |
| 11. Local Oscillator | A4 |
| 12. 250k Offset | A5 |
| 13. Output | A8 |
| 14. Oven | A31 |

Table 2-5 lists the turn-on hierarchy for the HP 3577A, given that all boards are suspect of being faulty. Table 2-6 lists all the power supplies in the HP 3577A. The power supplies should be checked before extensive troubleshooting is performed. Table 2-7 lists all input and output signals between individual boards in the HP 3577A which are available from the top of the boards by coaxial cables and test points. Signal parameters are listed for each signal. All parameters listed are required parameters unless denoted by a \cong character. All \cong parameters are typical performance parameters of the instrument and only serious deviations should be investigated.

Table 2-6. Main Power Supply

| Supply Name | Output Location | Return Location | Nominal Voltage | Voltage Tolerance | Ripple Tolerance |
|----------------|-----------------|-----------------|-----------------|-------------------|------------------|
| +15V | TP8 | Chassis | +15V | +0.05, -0.00 | 80 mVp-p |
| -15V | TP9 | Chassis | -15V | ± 0.05 | 80 mVp-p |
| +5V | TP26 | Chassis | +5.1 V | ± 0.02 | 60 mVp-p |
| +8V | TP10 | Chassis | +8V | ± 1 | 90 mVp-p |
| +5V (HP-IB) | TP11 | TP12 | +5V | ± 0.5 | 350 mVp-p |

Remove the 3577A bottom cover and check the supplies listed above with the power distribution cables connected and all circuit boards in the HP 3577A. If all supplies check good, continue with the Covers Off Board Level Fault Isolation. If any supplies are incorrect, then refer to Section VIII (Service) for troubleshooting information.



Do not remove or insert circuit boards in the HP 3577A with the power applied to the instrument. Damage may result when circuit boards are removed or inserted while instrument is powered on.

NOTE

The voltage levels and ripple tolerances listed above are for fully loaded supplies. When removing individual boards, the supply levels will change with the various loads. Keep this in mind when performing fault isolation.

Table 2-7. Fault Isolation Test Signals

| Board | Connector | Signal Parameters | | | |
|-------|-------------|----------------------------|-------------------------------|--------------------|-------------------------------|
| | | Frequency | Amplitude | Level Flatness | Harmonics |
| A4 | J3 | .25-200 .25 MHz | $\cong +7$ dBm | $\cong \pm 1.0$ dB | $\cong < -10$ dB |
| | J4 | .25-200 .25 MHz | $\cong +7$ dBm | $\cong \pm 1.0$ dB | $\cong < -10$ dB |
| | J5 | .25-200 .25 MHz | $\cong +7$ dBm | $\cong \pm 1.0$ dB | $\cong < -10$ dB |
| A5 | J1 | 300 .25 MHz | $\cong +7$ dBm | N/A | $\cong < -18$ dB |
| A6 | J2 | 10 MHz | $\cong 0$ dBm | N/A | $\cong < -40$ dB |
| | J3 | 300 MHz | $\cong -3$ dBm | N/A | $\cong < -10$ dB |
| | J4 | 300 MHz | $\cong -26$ dBm | N/A | $\cong < -15$ dB |
| | J5 | 100 kHz | $\cong 2$ Vpp 5 Vdc offset | N/A | $\cong < 30$ nS Pulsewidth |
| | J7 | 30 MHz | TTL Levels | N/A | $\cong < 7$ nS Risetime |
| A7 | J1 | 300.25 MHz – 500.25 MHz | $\cong -1$ dBm | $\cong \pm 1.5$ dB | $\cong < -10$ dB |
| | J2 | 300.25 MHz – 500.25 MHz | $\cong -1$ dBm | $\cong \pm 1.5$ dB | $\cong < -10$ dB |
| A31 | J1 | 10 MHz | $\cong -0$ dBm | N/A | $\cong < -25$ dB |
| A8 | Front Panel | 5 Hz-200 MHz | -49 to $+15$ dBm | ± 1.5 dB | < -30 dB |

NOTE

All amplitude measurements cited here are made using an HP 436A Power Meter and an HP 8482A Power Sensor. All flatness and harmonics measurements are made using an HP 8566A Spectrum Analyzer. All time domain measurements are made using an HP 1980B Oscilloscope.

SECTION III PERFORMANCE TESTS

Table of Contents

| | | |
|-------|--|------|
| 3-1 | Introduction | 3-1 |
| 3-2 | Equipment Required | 3-1 |
| 3-3 | Test Record | 3-1 |
| 3-4 | Calibration Cycle | 3-1 |
| 3-5 | Operational Verification Tests | 3-1 |
| 3-6 | Initial Control Settings | 3-2 |
| 3-7 | Receiver Residuals and Noise Test | 3-3 |
| 3-8 | On Carrier Return Loss Test | 3-5 |
| 3-9 | Magnitude and Phase Dynamic Accuracy Test | 3-7 |
| 3-10A | Receiver Level Flatness and Absolute Accuracy Test | 3-13 |
| 3-10B | Alternate Receiver Level Flatness and Absolute Accuracy Test (Does not require EPM-1 Power Meter) | 3-19 |
| 3-11 | Receiver Ratio Amplitude and Phase Accuracy Test | 3-28 |
| 3-12 | Receiver Crosstalk Test | 3-34 |
| 3-13 | Receiver Return Loss Test | 3-36 |
| 3-14A | Source Flatness and Absolute Accuracy Test | 3-38 |
| 3-14B | Alternate Source Flatness and Absolute Accuracy Test (Does not require EPM-1 Power Meter) | 3-42 |
| 3-15 | Source Attenuator Accuracy Test | 3-44 |
| 3-16 | Source Distortion and Spur Test | 3-45 |
| 3-17 | Source Phase Noise Test | 3-46 |
| 3-18 | API Spur Test | 3-48 |
| 3-19 | Time Base Stability Test | 3-49 |

List of Tables

| | | |
|------|--|------|
| 3-1 | Operational Verification Tests | 3-2 |
| 3-2 | Receiver Residual Test Points | 3-4 |
| 3-3 | Ratio Transformer Settings | 3-11 |
| 3-4 | Thermal Converter Test Frequencies | 3-25 |
| 3-5 | Power Meter Test Frequencies | 3-26 |
| 3-6 | Ratio Performance Inputs | 3-32 |
| 3-7 | Source Flatness Test Frequencies | 3-44 |
| 3-8 | Source Attenuator Accuracy Tests | 3-45 |
| 3-9 | Source Distortion Test Points | 3-46 |
| 3-10 | Test Record | 3-51 |

List of Figures

| | | |
|------|---|------|
| 3-1 | On Carrier Return Loss Test Set-Up | 3-6 |
| 3-2 | Buffer Amplifier | 3-8 |
| 3-3 | Suggested Layout for Buffer Amplifier | 3-8 |
| 3-4 | Dynamic Linearity Test Set-Up | 3-10 |
| 3-5 | Dynamic Linearity (Magnitude vs. Phase) Test Set Up | 3-12 |
| 3-6 | Calibration of Transmission Loss | 3-15 |
| 3-7 | Receiver Flatness and Absolute Accuracy Test Set-Up (50 Ω) | 3-16 |
| 3-8 | Receiver Flatness and Absolute Accuracy Test Set-Up (1 M Ω) | 3-17 |
| 3-9 | Receiver Power Splitter Calibration (50 Ω) | 3-21 |
| 3-10 | Thermal Converter Calibration | 3-22 |
| 3-11 | Absolute Accuracy and Flatness Test Set-Up (50 Ω) | 3-23 |
| 3-12 | Absolute Accuracy and Flatness Test Set-Up (1 M Ω) | 3-27 |
| 3-13 | Ratio Test Set-Up (50 Ω) | 3-31 |
| 3-14 | Ratio Test Set-Up (1 M Ω) | 3-34 |
| 3-15 | Receiver Return Loss Test Set-Up | 3-36 |
| 3-16 | Calibration of Transmission Loss from Power Splitter to Channel R | 3-39 |
| 3-17 | Channel R Calibration for Source Flatness and Accuracy | 3-40 |
| 3-18 | Source Flatness and Absolute Accuracy Test Set-Up | 3-41 |
| 3-19 | Alternate Source Flatness and Absolute Accuracy Test Set-Up | 3-43 |

SECTION III

PERFORMANCE TESTS

3-1 INTRODUCTION

The procedures in this section test the electrical performance of the instrument using the specifications of Table 1-1 as the performance standards. Most tests can be performed without access to the interior of the instrument. A shorter test is included in this section under the Operational Verification Test. The performance tests must be performed in the sequence given, since some procedures rely on satisfactory results in previous tests. If a test measurement is out of tolerance, go to Section IV (Adjustments).

3-2 EQUIPMENT REQUIRED

Equipment required for the performance tests is listed in Table 1-2. Any equipment which meets the critical specifications given in the table may be substituted for the recommended model.

3-3 TEST RECORD

Results of the performance tests may be tabulated on the Test Record, Table 3-10, at the end of this section. The test record lists all tested specifications, and their acceptable limits. The test record may be removed from the manual and used as a permanent record of the incoming inspection or of routine performance verification. The performance test record may be reproduced without the written permission of Hewlett-Packard.

3-4 CALIBRATION CYCLE

This instrument requires periodic verification of performance. Depending on the use and environment the instrument is subject to, the performance tests should be performed at least every 12 months.

3-5 OPERATIONAL VERIFICATION TESTS

The Operational Verification Tests for the HP 3577A are designed to be run with a minimum amount of equipment. A comparison of the required equipment to run the tests is presented in Table 1-2. These tests give the user a high level of confidence that the HP 3577A meets all specifications as listed in Table 1-1, but do not guarantee that all specifications are met. The Operational Verification Tests require about 3 hours time to perform.

Table 3-1. Operational Verification Tests

| Test Name | Paragraphs to Complete |
|--|------------------------|
| Receiver Residuals and Noise Test | All |
| Magnitude and Phase Dynamic Accuracy Test | x through ii |
| Source Distortion and Spur Test | All |
| Source Flatness and Absolute Accuracy Test | All |
| Confidence Test (internal) | |

3-6 INITIAL CONTROL SETTINGS

Each of the following performance tests assumes an initial condition of the 3577A control settings. This is due to the trace arithmetic and trace input functions possible with the HP 3577A. Initial conditions can be achieved by pressing the INSTR PRESET button. The setting of the INSTR PRESET are:

```

INPUT .....R
AMPTD ..... -10 dBm
FREQ
  START FREQ ..... 0 Hz
  STOP FREQ ..... 200 MHz
SWEEP TYPE ..... LIN FREQ SWEEP
SWEEP TIME ..... 1 sec
RESOLUTION BANDWIDTH ..... 1 kHz
SCALE
  REF LEVEL ..... 0 dBm
  dB/DIV ..... 10 dB
    
```

3-7 RECEIVER RESIDUALS AND NOISE TEST

SPECIFICATIONS:

Sensitivity:

| Resolution Bandwidth | Minimum Frequency to 30 kHz | | 30 kHz to 200 MHz(50 Ω) 30 kHz to 20 MHz(1 MΩ) | |
|----------------------|--------------------------------|---------------------------------|---|---------------------------------|
| | Maximum Input Level | | Maximum Input Level | |
| | 0 dBm -13 dBV (20dB att) | -20 dBm -33 dBV (0dB att) | 0 dBm -13 dBV (20dB att) | -20 dBm -33 dBV (0dB att) |
| 1 Hz | -110 dBm | -130 dBm | -110 dBm | -130 dBm |
| 10 Hz | -100 dBm | -120 dBm | -110 dBm | -130 dBm |
| 100 Hz | -90 dBm | -110 dBm | -105 dBm | -125 dBm |
| 1 kHz | -80 dBm | -100 dBm | -95 dBm | -115 dBm |

Residual Responses:

- Local Oscillator feedthrough: < -33 dB from maximum input.
- Line and Fan related spurious: < -100 dBm.
- Residual responses: < -100 dB from maximum input.

DESCRIPTION:

The receiver inputs to the HP 3577A are terminated in 50 Ω, and the receiver residual response is measured as indicated on the 3577A display. With the inputs still terminated, the average noise level is measured. The measurement consists of averaging the amplitude of eleven points in the linear magnitude of an amplitude sweep and converting to dBm.

EQUIPMENT:

- 50 Ω Termination (3 each) HP 11048C
- N male to BNC female Adapter (3 each) HP 1250-0780

PROCEDURE:

RECEIVER RESIDUALS TEST

- a. Preset the 3577A.
- b. Terminate the R, A, and B receivers of the 3577A with the 50 Ω terminations, using N male to BNC female adapters.
- c. Set the 3577A controls as shown below:

SWEEP TYPE CW
 SWEEP TIME (SAMPLE TIME) 0.1 sec
 AMPTD -48 dBm
 RES BW 10 Hz
 AVG 256
 ATTEN (all channels) 50 Ω, 20 dB

- d. Press the **FREQ** hardkey and enter a **FREQ** of 149.625 MHz.
- e. Press the **INPUT** hardkey and select **R**.
- f. The marker **MAG** on the 3577A display should read < -100 dBm. Enter the reading in the test record.
- g. Repeat steps e and f for inputs **A** and **B**.
- h. Repeat steps d through g for all the frequencies listed in Table 3-2. For all frequencies the noise must be < -100 dBm. For 0 Hz, the L.O. Feedthrough must be < -33 dB.

Table 3-2. Receiver Residual Test Points

| All frequencies listed are in MHz | | |
|-----------------------------------|--------|---------------|
| 149.625 | 89.5 | 0.0080 |
| 149.875 | 120.0 | 0.0160 |
| 99.666 666 666 | 149.5 | 0.0240 |
| 99.833 333 333 | 180.0 | 0.027 777 7 |
| 74.6875 | 0.480 | 0.10 |
| 74.8125 | 0.960 | 0.20 |
| 59.7 | 0.0040 | 0.000 000 000 |
| 59.8 | | |

NOISE TEST

- k. Preset the 3577A.
- l. Leave the 50 Ω terminations on the 3577A **A**, **B**, and **R** receivers.
- m. Set the 3577A controls as shown below:

```

SWEEP TYPE .....AMPTD SWEEP
SWEEP MODE .....SINGLE
SWEEP TIME .....0.5 sec
AMPLITUDE
  START AMPTD ..... -48 dBm
  STOP AMPTD ..... -48 dBm
  STEPS/SWEEP .....10 STEPS
RES BW .....10 Hz
DISPLY FCTN .....LIN MAG
SCALE
  /DIV .....200 nV
    
```

- n. Press the **FREQ** hardkey and enter a **FREQ** of 100 Hz.
- o. Press the **TRIG/RESET** hardkey.
- p. Press the **INPUT** hardkey and select **R**.
- q. Use the 3577A **RPC** knob to measure the magnitude of the eleven points starting at the left. The **RPG** knob will move the marker directly from one point to the next. Record the magnitude of each point on the test record.
- r. Calculate the noise level using the following equation:

$$\text{Noise Level (dBm)} = -150 + 10 \log_{10} \left[\frac{\sum_{n=1}^{11} (X_n^2)}{500} \right]$$

where X is the marker value in nV

- s. The noise level should be < -100 dBm (-110 dBm for 30 kHz and 199 MHz). Record the reading in the test record.
- t. Repeat steps q through s for the inputs A and B.
- u. Repeat steps n through t for the 3577A FREQs of 30 kHz and 199 MHz. The noise level for both these frequencies should be < -110 dBm.

3-8 ON CARRIER RETURN LOSS TEST

SPECIFICATIONS:

Source Return Loss > 20 dB

DESCRIPTION:

The HP 3577A source return loss is measured using a signal generator (generates the incident signal) and a directional bridge. The sum of the HP 3577A source output and the generator signal reflected from the HP 3577A source is measured by channel R. In order to distinguish the two signals, the signal generator frequency is offset from the HP 3577A frequency. (The offset frequency is chosen to be within the loop bandwidth of the HP 3577A source leveling loop. This guarantees that the source return loss includes the effect of the leveling loop.) The summation of these two signals appear as a carrier (HP 3577A output) and one sideband (generator signal reflected from the HP 3577A source). If the sideband level is 20 dB below the HP 3577A source level, the two signals can be synthesized as simultaneous AM and PM modulation of the carrier where the modulation frequency is the frequency difference between the signal generator and the HP 3577A. The display function of channel R is set to linear magnitude, so that channel R acts as an AM detector. The peak-to-peak level of the AM signal is a measure of the sideband signal (signal reflected from the source). Given the reflected signal level, the source return loss can be computed.

EQUIPMENT:

| | |
|--|------------------|
| 3 dB Attenuator..... | HP 8491A Opt 003 |
| 10 dB Attenuator..... | HP 8491A Opt 010 |
| Directional Bridge..... | HP 35677-63502 |
| Signal Generator..... | HP 8660C |
| SMA male to BNC female Adapter (2 each)..... | HP 1250-1200 |
| N male to N male Adapter..... | HP 1250-0778 |
| N male to BNC female Adapter (2 each)..... | HP 1250-0780 |
| BNC Cables-48 inch (3 each)..... | HP 8120-1840 |

PROCEDURE:

- a. Preset the 3577A.
- b. Set the 3577A as follows:

| | |
|-------------------|------------|
| SWEEP MODE | SINGLE |
| FREQ | |
| FREQ SPAN | 0 Hz |
| CENTER FREQ | 175 MHz |
| AMPTD | 12 dBm |
| RES BW | 10 Hz |
| DISPLY FCTN | LIN MAG |
| SCALE | |
| REF POSN | 50% |
| /DIV | 10 mV |
| SAVE | SAVE REG 1 |
- c. Connect the equipment as shown in Figure 3-1 except leave the HP 3577A source to directional bridge unconnected. (3577A EXT REF LED should be on.)
- d. Set the signal generator frequency to the HP 3577A center frequency.
- e. Set the signal generator amplitude to +10 dBm.
- f. Press the TRIG/RESET hardkey.

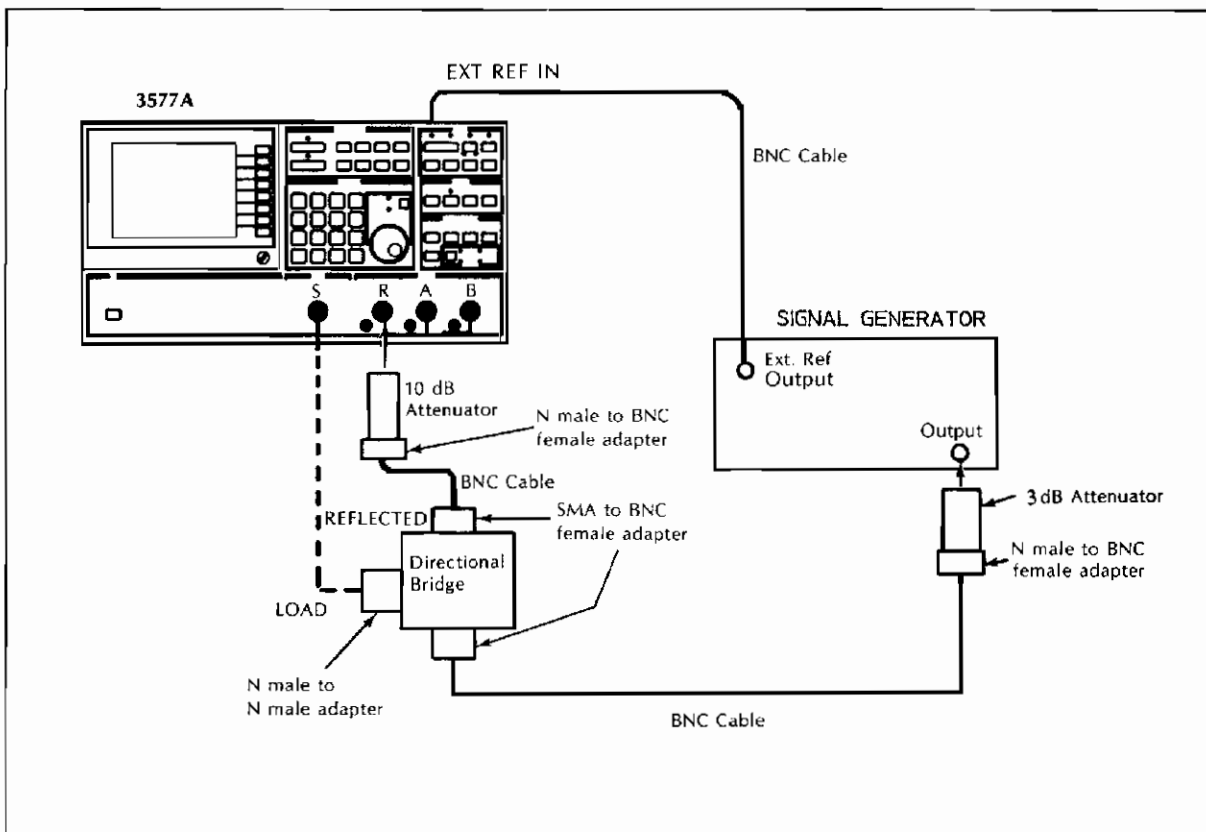


Figure 3-1 On Carrier Return Loss Test Set-Up

- g. Note the marker MAG of the 3577A and record this reference voltage (Vref) in the test record. (The voltage should be approximately 40 mV).
- h. Set the signal generator frequency 5 Hz above the HP 3577A frequency.
- i. Connect the 3577A source to the directional bridge load port using an N male to N male adapter as shown in Figure 3-1.
- j. Press the TRIG/RESET hardkey. Press the MKR→ hardkey and select MKR→REF LVL.
- k. Press the SCALE hardkey and enter a /DIV of 1 mV.
- l. Press the MKR→ hardkey and select MKR→MIN. Press the MKR hardkey and select ZERO MARKER. Using the 3577A RPC knob, set the marker to the next sinewave maximum and record this test voltage (Vtest) in the test record. (The voltage should be approximately 6 mV or less.)
- m. Calculate the on carrier return loss using the following equation:

$$\text{On Carrier Return Loss (dB)} = -(3 \text{ dB} + 20 \log_{10} (\frac{V_{\text{test}}}{2 V_{\text{ref}}}))$$

The 3 dB is added to compensate for the 3 dB insertion loss of a 5 Hz signal in a 10 Hz resolution bandwidth.
- n. The on carrier return loss should be > 20 dB. Record the value in the test record.
- o. Press the RECALL hardkey and select RECALL REG 1. Repeat steps c through n for a 3577A FREQ of 200 MHz.

3-9 MAGNITUDE AND PHASE DYNAMIC ACCURACY TEST

SPECIFICATIONS:

| Test or Reference Level | Tolerance 1 k,100,10 Hz res BW | | Tolerance 1 Hz res BW | |
|-------------------------|-----------------------------------|---------|--------------------------|---------|
| | Magnitude | Phase | Magnitude | Phase |
| 0 to -10 dB | 0.04 dB | 0.4 deg | 0.04 dB | 0.4 deg |
| -10 to -50 dB | 0.02 dB | 0.2 deg | 0.02 dB | 0.2 deg |
| -50 to -60 dB | 0.05 dB | 0.5 deg | 0.05 dB | 0.5 deg |
| -60 to -80 dB | 0.15 dB | 1.5 deg | 0.25 dB | N/A |
| -80 to -90 dB | 0.75 dB | 7.5 deg | 0.75 dB | N/A |
| -90 to -100 dB | 0.75 dB | 7.5 deg | 3.00 dB | N/A |

DESCRIPTION:

The dynamic accuracy test is a measure of receiver linearity or the ability of the receiver to measure a relative change in magnitude and/or phase. The measurement has a reference level of approximately -20 dBm (0 dBm maximum input level) at a phase of approximately 0 degrees. The test requires a source whose relative output level can be adjusted to an accuracy that exceeds the 3577A dynamic accuracy specification. This is done with the 3577A source and a ratio transformer with seven decimal place resolution.

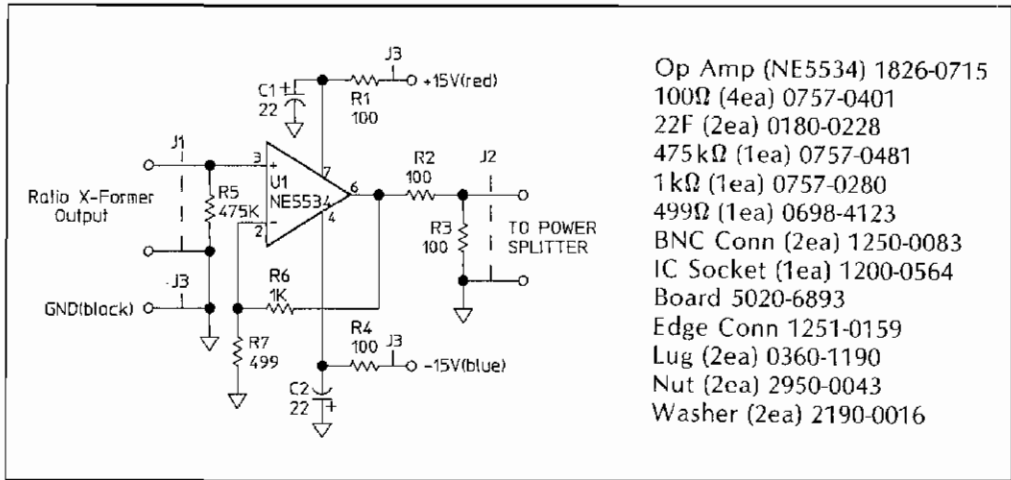


Figure 3-2 Buffer Amplifier

You will have to build a buffer amplifier to match the impedance of the ratio transformer to the 50 Ω input of the HP 3577A receivers. See Figures 3-2 and 3-3 for construction details.

EQUIPMENT:

- Ratio Transformer ESI DT72A
- Power Splitter HP 11850A/C
- Synthesizer HP 3325A
- 20 dB Attenuator HP 8491A Opt 020
- RF Cables-24 inch (3 each) HP 35679A
- BNC Cables-48 inch (3 each) HP 8120-1840
- N male to BNC female Adapter (2 each) HP 1250-0780
- BNC female to Banana Adapter (2 each) HP 1251-2277
- Power Supply HP 6235A
- Buffer Amplifier SEE FIGURE 3-2
- RF Balun HP 03577-84404

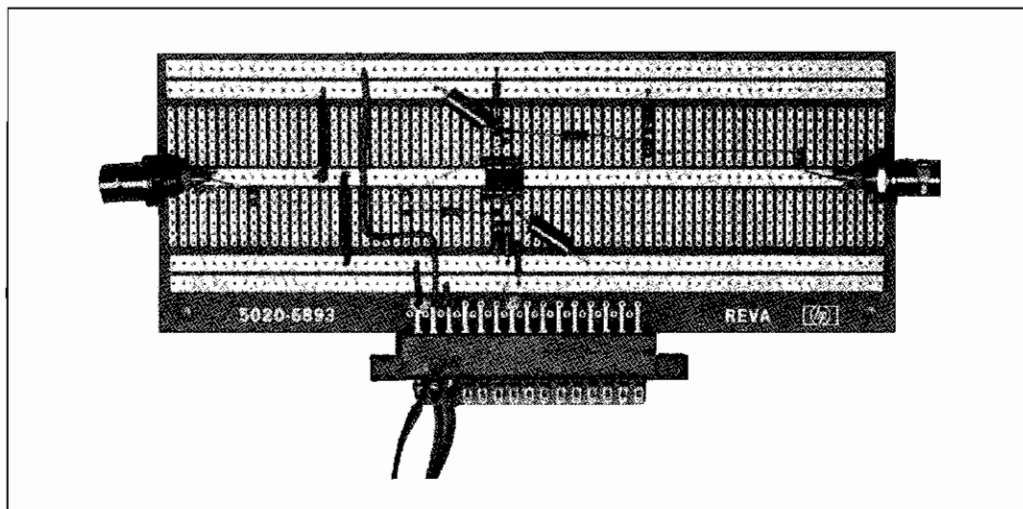


Figure 3-3 Suggested Layout for Buffer Amplifier

PROCEDURE:

- a. Preset the 3577A.
- b. Connect test equipment as shown in Figure 3-4.

NOTE

Test set up is critical to accurate results. Do not substitute equipment.

- c. Set the 3577A to the following conditions:

SWEEP TYPE CW
 SWEEP TIME (SAMPLE TIME) 0.1 sec
 FREQ 2.1 kHz
 RES BW 10 Hz
 AMPTD 6 dBm
 STEP SIZE 0.1 dB

- d. Set the Ratio Transformer to 0.1 and read the marker MAG of channel R.
- e. Press the AMPTD hardkey, select AMPTD, and use the ↑ and ↓ hardkeys until the marker MAG reads $-20.5 \text{ dBm} \pm 0.1 \text{ dBm}$.
- f. Change the following 3577A conditions:

AVG 256
 DEFINE MATH
 K1 REAL 0.1 UNITS
 TRACE ONE
 DISPLY FCTN LOG MAG
 INPUT
 USER DEF INPUT K1*R/D1
 (select USER DEF INPUT, K, 1, *, R, /, D, 1, ENTER)
 SCALE
 REF LEVEL 0 dB
 /DIV 20 dB
 TRACE TWO
 DISPLY FCTN PHASE
 INPUT COPY Trc 1→2
 SCALE
 /DIV 5 deg

- g. Press the SAVE hardkey and select SAVE REG 1.
- h. Press the INPUT hardkey and enter a USER DEF INPUT of K1*A/D2 (select USER DEF INPUT, K, 1, *, A, /, D, 2, ENTER).
- i. Press the TRACE 1 hardkey, then the INPUT hardkey. Select COPY Trc 2→1.
- j. Press the SAVE hardkey and select SAVE REG 2.

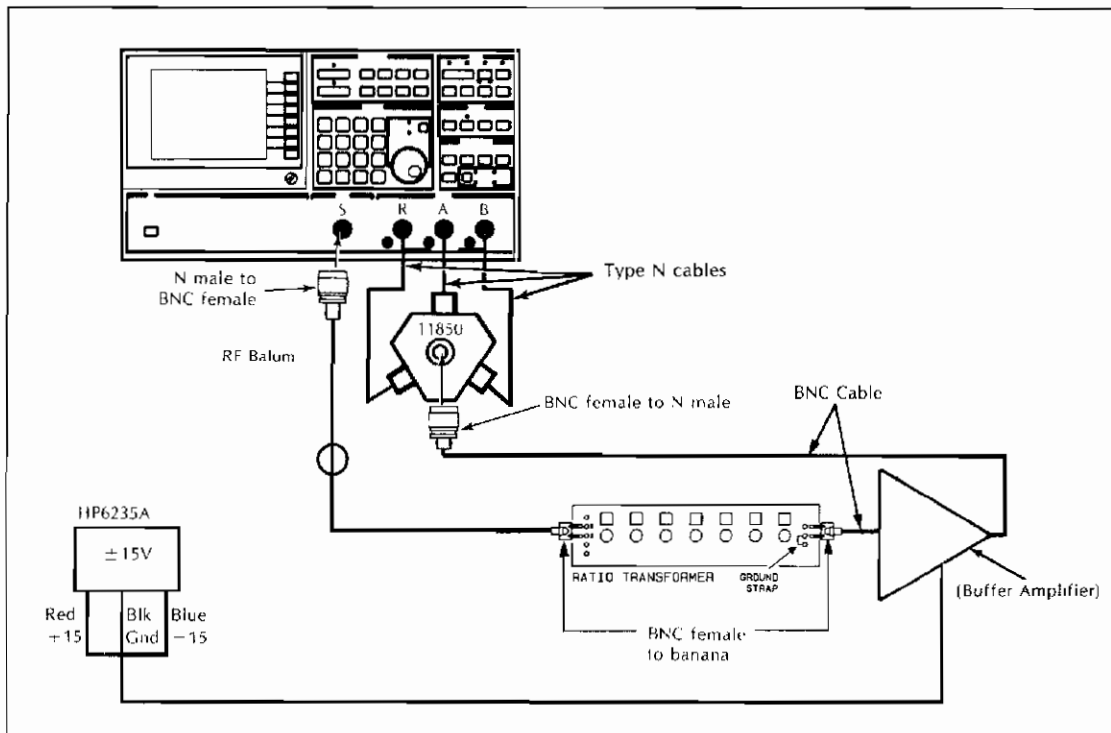


Figure 3-4 Dynamic Linearity Test Set-Up

- k. Press the INPUT hardkey and enter a USER DEF INPUT of $K1 \cdot B / D3$ (select USER DEF INPUT, K, 1, *, B, /, D, 3, ENTER).
- l. Press the TRACE 2 hardkey, then the INPUT hardkey. Select COPY Trc 1→2.
- m. Press the SAVE hardkey and select SAVE REG 3.
- n. Press the RECALL hardkey, select RECALL REG 1, and wait 10 sec.
- o. Press the STORE DATA hardkey and store R into USER DEF STORE register D1 (select USER DEF STORE, R, → D, → D1). Store A into D2 and B into D3 in the same manner. (RECALL REG 2 for A and RECALL REG 3 for B.)
- p. Press the RECALL hardkey, select RECALL REG 1, and wait 5 sec.

- q. The expected value of the MAG (Trace 1) should be -20.000 ± 0.003 dB and the PHASE (Trace 2) should be 0.00 ± 0.05 degrees. Record the values in the test record.

NOTE

This finishes the normalization procedure. If unable to normalize, repeat steps n through p until the magnitude at step q is -20.000 ± 0.003 dB.

- r. Repeat steps p and q for channels A and B (for channel A, RECALL REG 2 and for channel B, RECALL REG 3).
- s. Set the Ratio Transformer to 1.0.
- t. Press the RECALL hardkey, select RECALL REG 1, and wait 5 sec.
- u. The MAG should be 0.000 dB ± 0.04 dB and the PHASE should be 0.0 deg ± 0.4 deg. Record the values in the test record.
- v. Test this Ratio Transformer setting on channels A and B by recalling registers 2 and 3 as in step r. Record the readings in the test record.
- w. Repeat steps s through v for the Ratio Transformer settings in Table 3-3. The magnitude, phase and tolerances are listed in the table. For transformer settings below .01, wait 10 sec after recalling the registers, then press the SWEEP MODE hardkey and select SINGLE.

Table 3-3 Ratio Transformer Settings

| Ratio Transformer | Magnitude (dB) | Tolerance (dB) | Phase (deg) | Tolerance (deg) |
|-------------------|----------------|----------------|-------------|-----------------|
| 1.0 | 0.000 | .04 | 0.0 | .4 |
| .31623 | -10.000 | .02 | 0.0 | .2 |
| .2 | -13.979 | .02 | 0.0 | .2 |
| .05 | -26.020 | .02 | 0.0 | .2 |
| .025 | -32.041 | .02 | 0.0 | .2 |
| .01 | -40.000 | .02 | 0.0 | .2 |
| .0031623 | -50.000 | .02 | 0.0 | .2 |
| .001 | -60.000 | .05 | 0.0 | .5 |
| .0001 | -80.000 | .15 | 0.0 | 1.5 |
| .00001 | -100.000 | .75 | 0.0 | 7.5 |

- x. Set up the equipment as in Figure 3-5. Make sure the HP 3577A 10 MHz OUT is connected to the synthesizer external reference input. The EXT REF LED on the front panel of the synthesizer should be on.

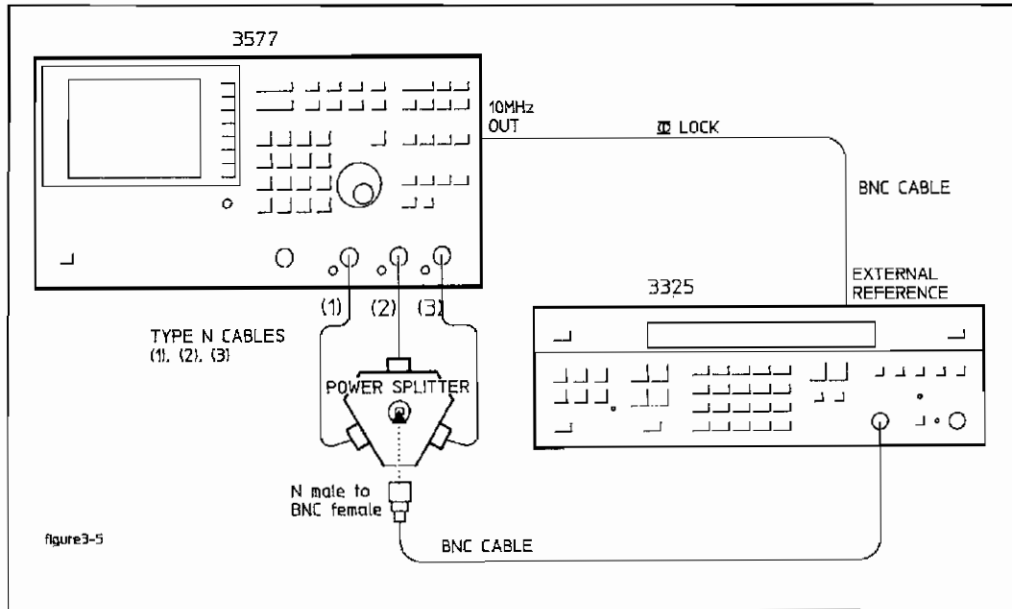


Figure 3-5 Dynamic Linearity (Magnitude vs. Phase) Test Set-Up

- y. Preset the 3577A.
- z. Set the 3577A to the following conditions:

| | |
|--------------------------------|----------|
| SWEEP MODE | SINGLE |
| SWEEP TIME (SAMPLE TIME) | 50 sec |
| FREQ | |
| START FREQ | 1.75 MHz |
| STOP FREQ | 1.75 MHz |
| AMPTD | -48 dBm |
| RES BW | 10 Hz |
| SCALE | |
| REF POSN | 50% |
- aa. Set the synthesizer amplitude to -29 dBm and frequency to 1.75 MHz.
- bb. Press the TRIG/RESET hardkey and let the 3577A complete a sweep.
- cc. The marker MAG on the 3577A should read approximately -39 dBm.
- dd. Press the SCALE hardkey and select AUTO SCALE.
- ee. Increase the synthesizer frequency by 0.02 Hz.
- ff. Press TRIG/RESET on the 3577A and let the 3577A complete a sweep.
- gg. Press the MKR→ hardkey and select MKR→ MIN. Press the MKR hardkey and select ZERO MARKER. Press the MKR→ hardkey and select MKR→ MAX.
- hh. The marker MAG should read < 0.04 dB. Record the reading in the test record.
- ii. Repeat step gg and hh for channels A and B.

3-10A RECEIVER LEVEL FLATNESS AND ABSOLUTE ACCURACY TEST**NOTE**

Perform test 3-10A (which uses a W&C EPM-1 power meter) or 3-10B (which uses a voltmeter, an HP 436A Opt. 022 power meter, and a thermal converter).

SPECIFICATIONS:

Absolute (at 100 kHz and full scale input): A B R Mode: ± 0.2 dB

Flatness (at full scale input):

| INPUT | MODE | 20 Hz to 20 MHz | 5 Hz to 20 MHz | 5 Hz to 200 MHz |
|--------------|-------|-----------------|----------------|-----------------|
| 50 Ω | A B R | 0.3 dB p-p | N/A | 0.6 dB p-p |
| 1 M Ω | A B R | 0.5 dB p-p | 1.0 dB p-p | N/A |

DESCRIPTION:

The flatness and absolute accuracy of each receiver (R, A, and B) is verified by leveling the HP 3577A source to a known accuracy and splitting the output with a three-port power splitter, each port driving a receiver channel. The 3577A source is externally leveled, using a W&C EPM-1 power meter as detector and reference level. The EPM-1 outputs an error correction signal to the source through connector W6 on the source board, maintaining 0 dBm at the EPM-1 power head. The three-way resistive power splitter is a 50 Ω splitter with equal incident power at each port. Assuming all ports are terminated in 50 Ω (reflected power is 0), the power output of the other two power splitter ports is equal to the power output of the EPM-1 port. The second power splitter divides the source into three equal outputs which become the test level inputs for each of the receivers. Knowing the transmission loss from the output of power splitter #1 (PS #1) to each receiver port allows the user to normalize the receiver input level to the EPM-1 level of PS #1. Because the transmission loss for each channel is equal (assuming a symmetrical power splitter), it is necessary to find only the transmission loss from PS #1 to channel R of PS #2 to normalize the receiver level for all channels. The transmission loss is stored in register D1 for the 5 Hz to 200 MHz frequency span and in register D2 for the 5 Hz to 20 MHz span.

Following calibration, the receiver input levels are normalized to the EPM-1 level, and the receiver input levels are measured and compared to the calibrated level. This procedure verifies the flatness and absolute accuracy for receiver input impedances of 50 Ω . The Hi-Z (1 M Ω) response is verified by installing a 50 Ω feed-through termination at each receiver input and repeating the procedure.

Because the 3577A receivers take data simultaneously, only one frequency sweep is necessary to verify receiver performance at a selected input level (0 dBm or -20 dBm). Therefore to measure the complete absolute frequency performance of the three receivers, it is necessary to complete only four sweeps—from 5 Hz to 200 MHz for each input level (50 Ω input impedance) and from 5 Hz to 20 MHz for each input level (1 M Ω input impedance).

EQUIPMENT:

| | |
|---|-----------------------|
| Power Meter | W & G EPM-1 |
| Power Splitter (2 each) | HP 11850A/C |
| RF Cables-24 inch (5 each) | HP 35679A |
| Precision Termination | HP 909C,Opt200,Opt012 |
| Error Correction Cable | HP 03577-61640 |
| 20 dB Attenuator | HP 8491A,Opt020 |
| N male to N male Adapter | HP 1250-1475 |
| Feedthrough Termination (3 each) | HP 11048C |
| N male to BNC female Adapter (6 each) | HP 1250-0780 |
| BNC Cables-12 inch (3 each) | HP 8120-1838 |

PROCEDURE:

NOTE

All information describing differences between the 50 Ω tests and 1 MΩ tests in steps d through ff is in parentheses.

- a. Preset the HP 3577A.
- b. Connect the EPM-1 power head to the port marked OUTPUT on the front panel of the power meter and adjust the CAL potentiometer for a 0 dBm level (red scale) on the EPM-1 meter. This calibrates the EPM-1.
- c. Connect a 24-inch type N cable from the 3577A source to receiver R.
- d. Set the 3577A controls for the following settings:

| | |
|----------------------------|----------------|
| SWEEP TYPE | LOG FREQ SWEEP |
| SWEEP MODE | SINGLE |
| SWEEP TIME for 50 Ω | 20 sec |
| (SWEEP TIME for 1 MΩ | 15 sec) |
| FREQ | |
| START FREQ | 5 Hz |
| STOP FREQ for 50Ω | 200 MHz |
| (STOP FREQ for 1 MΩ | 20 MHz) |
| RES BW | 100 Hz |
| SCALE | |
| REF POSN. | 50% |

- e. Press the TRIG/RESET hardkey and let the 3577A complete a sweep.
- f. Press the MEASR CAL hardkey and select NORMALIZE.
- g. Disconnect the 24-inch cable from receiver R and connect it to the 20 dB attenuator. Connect the equipment as shown in Figure 3-6.

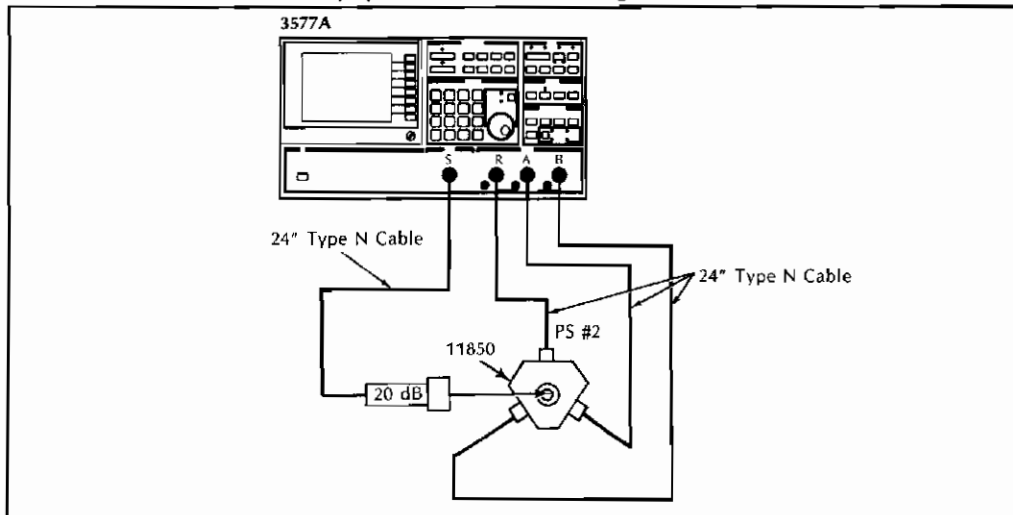


Figure 3-6 Calibration of Transmission Loss

- h. Press the SCALE hardkey and set the /DIV to 0.5 dB and the REF LEVEL to -29.5 dB.
- i. Press the TRIG/RESET hardkey to trigger a second sweep and store the data in register D1 (register D2 for 1 M Ω). The transmission loss should be approximately -30 dB.
- j. Press AMPTD hardkey and enter AMPTD of $+10$ dBm.
- k. Connect the equipment as shown in Figure 3-7 (Figure 3-8 for 1 M Ω). The EPM-1 Error Correction Cable connects to W6 at the top of the 3577A source board, A8, after removing the jumper. The EPM-1 level power meter will swing from -0.2 dBm to $+0.2$ dBm several times and settle to some level between the two points. Adjust the reference control on the front panel of the EPM-1 until the meter reads 0 dBm.

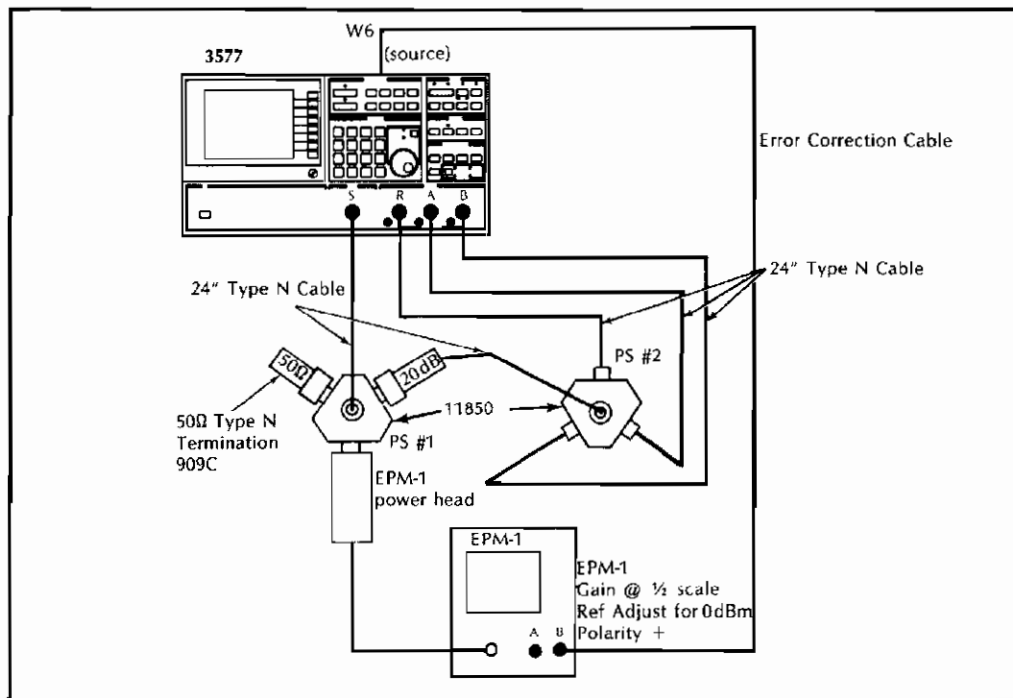


Figure 3-7 Receiver Flatness and Absolute Accuracy Test Set-Up (50 Ω)

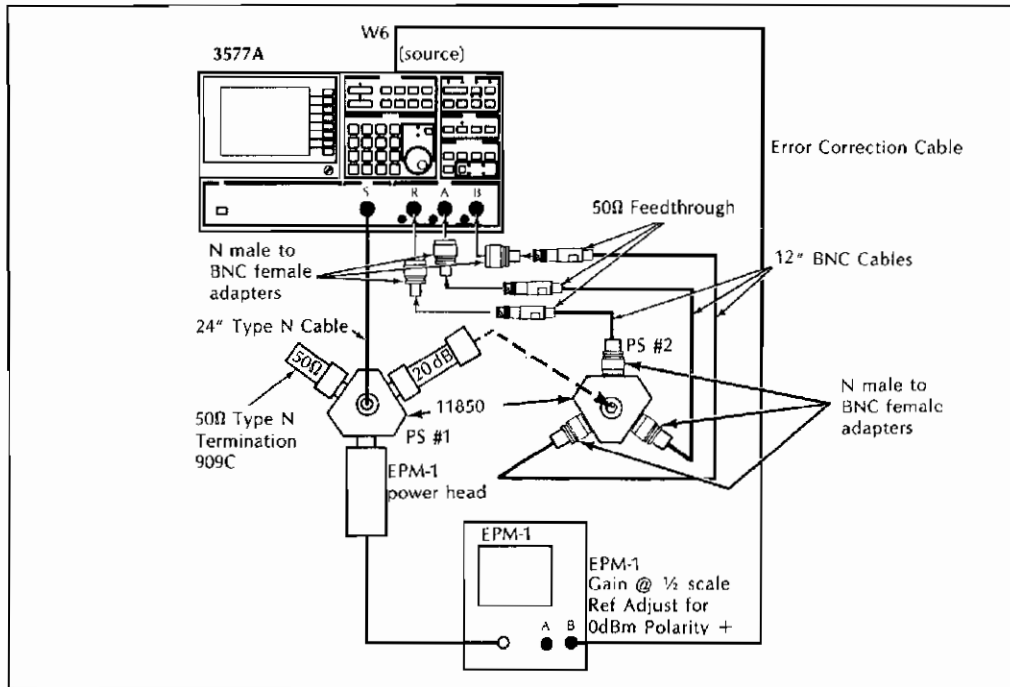


Figure 3-8 Receiver Flatness and Absolute Accuracy Test Set-Up (1 MΩ)

l. Preset the 3577A.

m. Set the 3577A controls to the following conditions:

| | |
|----------------------------|-------------------------|
| SWEEP TYPE | LOG FREQ SWEEP |
| SWEEP MODE | SINGLE |
| SWEEP TIME for 50 Ω | 100 sec |
| (SWEEP TIME for 1 MΩ | 120 sec) |
| FREQ | |
| START FREQ | 5 Hz |
| STOP FREQ for 50 Ω | 200 MHz |
| (STOP FREQ for 1 MΩ | 20 MHz) |
| ATTEN for 50 Ω | 50 Ω for IMPED R, A, B |
| (ATTEN for 1 MΩ | 1 MΩ for IMPED R, A, B) |
| AMPTD | + 8 dBm |
| RES BW for 50 Ω | 10 Hz |
| (RES BW for 1 MΩ | 1 Hz) |
| SCALE | |
| REF POSN | 50% |
| /DIV | 0.2 dB |

n. Press the DEFINE MATH hardkey and enter a value of 4.472 UNITS for K1 real.

o. Press the INPUT hardkey and enter a USER DEF INPUT of K1*R/D1 (K1*R/D2 for 1 MΩ).

- p. Press the TRIG/RESET hardkey and follow the sweep marker. When the sweep marker reaches approximately 10 MHz, enter a longer sweep time by pressing the SWEEP TIME hardkey and then the 1 hardkey twice. This increases the sweep time to 500 seconds for the remainder of the sweep. (This is not necessary for the 1 M Ω impedance.)
- q. Disregarding the "Sweep Rate Uncalibrated" message which may appear at the completion of the sweep, set the SWEEP TIME back to 100 sec. (Skip this step for 1 M Ω impedance.)
- r. Move the marker to 100 kHz. The marker MAG should read 0 ± 0.2 dB. Record the reading in the test record.
- s. Press the MKR \rightarrow hardkey and select MKR \rightarrow MIN.
- t. Press the MKR hardkey and select ZERO MARKER.
- u. Press the MKR \rightarrow hardkey and select MKR \rightarrow MAX.
- v. The marker MAG should read < 0.6 dB peak to peak (1.0 dB peak to peak for 1 M Ω). This is the flatness for channel R for the frequency range of 5 Hz to 200 MHz (frequency range of 5 Hz to 20 MHz for 1 M Ω). Record the reading in the test record.
- w. Press the MKR hardkey and turn the MKR OFFSET off.
- x. Move the marker to approximately 20 Hz.
- y. Press the MKR hardkey and select ZERO MARKER.
- z. Move the marker within the frequency range of 20 Hz to 20 MHz and find a minimum.
- aa. Press the MKR hardkey and select ZERO MARKER.
- bb. Move the marker within the frequency range of 20 Hz to 20 MHz and find a maximum -- should be close to 20 MHz.
- cc. The marker MAG should read < 0.3 dB peak-to-peak (0.5 dB peak-to-peak for 1 M Ω). Record the reading in the test record for the 20 HZ to 20 MHz range.
- dd. Press the MKR hardkey and turn MKR OFFSET off.
- ee. Select a USER DEF INPUT of K1*A/D1 (K1*A/D2 for 1 M Ω) and repeat steps r through dd for channel A.
- ff. Select a USER DEF INPUT of K1*B/D1 (K1*B/D2 for 1 M Ω) and repeat steps r through dd for channel B.
- gg. Press the ATTEN hardkey and change the attenuation of channels R, A, and B to the 0 dB mode.

- hh. Repeat steps o through ff. All specifications remain the same.
- ii. Repeat steps a through hh for 1 M Ω input impedance. Remember to replace the jumper on the source board for steps a through j. All settings will be the same except for those with a 1 M Ω option in parentheses.

3-10B ALTERNATE RECEIVER LEVEL FLATNESS AND ABSOLUTE ACCURACY TEST

(EPM-1 POWER METER NOT REQUIRED)

NOTE

Perform test 3-10A (which uses a W&G EPM-1 power meter) or 3-10B (which uses a voltmeter, an HP 436 Opt. 022 power meter, and a thermal converter).

SPECIFICATIONS:

Absolute (at 100 kHz and full scale input): A B R Mode: ± 0.2 dB

Flatness (at full scale input):

| INPUT | MODE | 20 HZ TO 20 MHZ | 5 HZ TO 20 MHZ | 5 HZ TO 200 MHZ |
|--------------|-------|-----------------|----------------|-----------------|
| 50 Ω | A B R | 0.3 dB p-p | N/A | 0.6 dB p-p |
| 1 M Ω | A B R | 0.5 dB p-p | 1.0 dB p-p | N/A |

DESCRIPTION:

This procedure is an alternate approach for verifying 3577A receiver performance. The EPM-1 power meter is replaced by a thermal converter at frequencies below 20 MHz and an HP 436A power meter at frequencies from 20 MHz to 200 MHz. Discrete measurements must be made rather than the swept measurements possible with the EPM-1. Knowing the source output allows the user to compute the input signal. The difference between the computed level and the measured level is the absolute error of the receiver. This method is essentially the same as that in section 3-10 except that the source level at the output port of the first power splitter is not held constant at 0 dBm. This requires that the computed receiver input level be adjusted for the varying source level. Because manual computation for each measurement is tedious, the test procedure includes a short program which will read the source level, compute a source correction constant, output the correction constant to the 3577A, read each receiver level, and output the results to a computer display and a printer. The program is written in HP BASIC (3.0) and requires the user to input the verification frequency in MHz.

Before measuring receiver performance, the thermal converter and the power splitter transmission loss must be calibrated. The thermal converter output at a frequency of 1 kHz and a level of 0 dBm is stored in register Y of the HP 3456A voltmeter as the thermal converter calibration constant. The voltmeter math function $(X - Y)/Z$ is used to display relative level of the thermal converter output. Transmission loss from the second power splitter input to each receiver input is measured and stored in registers D1, D2, and D3 for channels R, A, and B respectively.

EQUIPMENT:

| | |
|---|--------------------------|
| Controller | HP Series 200 Compatible |
| Printer (optional) | |
| Synthesizer | HP 3325A |
| Voltmeter | HP 3456A |
| Thermal Converter | HP 11051A |
| Power Meter | HP 436A, Opt022 |
| Power Head | HP 8482A |
| Power Splitter (2 each) | HP 11850A/C |
| RF Cables-24 inch (5 each) | HP 35679A |
| BNC Cables-12 inch (3 each) | HP 8120-1838 |
| BNC Cables-48 inch (2 each) | HP 8120-1840 |
| 20 dB Attenuator (3 each) | HP 8491A, Opt020 |
| BNC to dual banana Adapter (2 each) | HP 1251-2277 |
| BNC to alligator Adapter | Pomona 2631 |
| BNC Tee Adapter | HP 1250-0781 |
| N male to BNC female Adapter (7 each) | HP 1250-0780 |
| N male to N male Adapter | HP 1250-0778 |
| Precision Termination, 50 Ω | HP 909C, Opt200, Opt012 |
| BNC female to BNC female Adapter | HP 1250-0080 |
| N female to N female Adapter | HP 1250-1472 |

PROCEDURE:

CALIBRATE RECEIVER POWER SPLITTER

- a. Preset 3577A. Connect the 3577A source output to receiver R using a 24-inch type N cable.
- b. Set the 3577A to the following conditions:

| | |
|------------------|-------|
| SWEEP TYPE | CW |
| FREQ | 1 MHz |
| RES BW | 1 Hz |
- c. After the MAG reading on the 3577A has settled, store the R input level in register D1 (press STORE DATA hardkey, select STORE REG D1).
- d. Disconnect the cable from receiver R and connect it to receiver A. Press the INPUT hardkey and select A.
- e. Repeat step c, storing the A input level in register D2.
- f. Disconnect the cable from receiver A and connect it to receiver B. Press the INPUT hardkey and select B.
- g. Repeat step c, storing the B input level in register D3.
- h. Connect the equipment as shown in Figure 3-9, connecting the cable used in steps a through g between the 3577A source and the power splitter input.

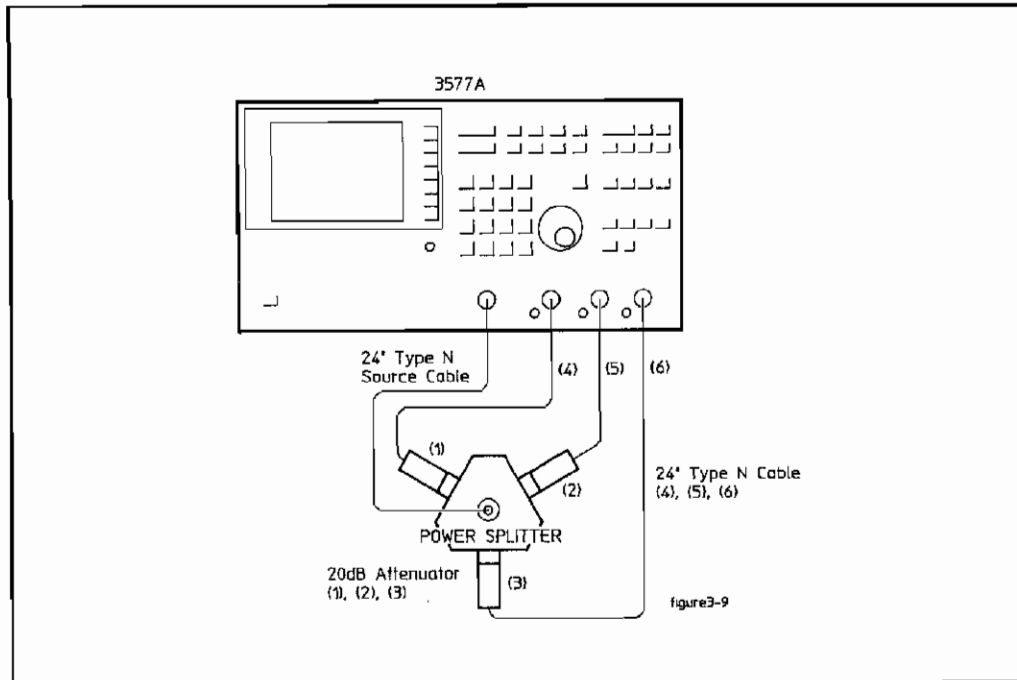


Figure 3-9 Receiver Power Splitter Calibration

- i. After the marker MAG reading has settled, store R/D1 in register D1 (press the STORE DATA hardkey and select USER DEF STORE, R, /, D₋₋₋, ① → D₋₋₋, → D1).
- j. Store A/D2 in register D2 and B/D3 in register D3 as in step i.
- k. Check the normalization data for receiver R by pressing the INPUT hardkey and selecting DATA REG and D1. The marker MAG should be $-29.5 \text{ dB} \pm .3 \text{ dB}$. Enter the reading in the test record.
- l. Check the normalization data for receivers A and B as in step k, selecting D2 for A and D3 for B.

CALIBRATE THERMAL CONVERTER

- m. Using a BNC female to female adapter, connect a BNC Tee to the input of the thermal converter. Connect a BNC cable from each of the BNC Tee female connectors to one of the 4-wire inputs of the voltmeter, using BNC to dual banana adapters at the voltmeter inputs.
- n. Set the voltmeter function to 4-wire ohms and record the reading in the test record (should be $50.0 \pm 0.2 \Omega$).
- o. Calculate the voltage reference level using the following equation and round the result to 4 decimal places:

$$\text{Voltage reference level} = \text{SQR} (.001 \times \text{resistance})$$
 The calculated level should be between 0.2232 and 0.2240 Vrms. Record the calculated level in the test record.

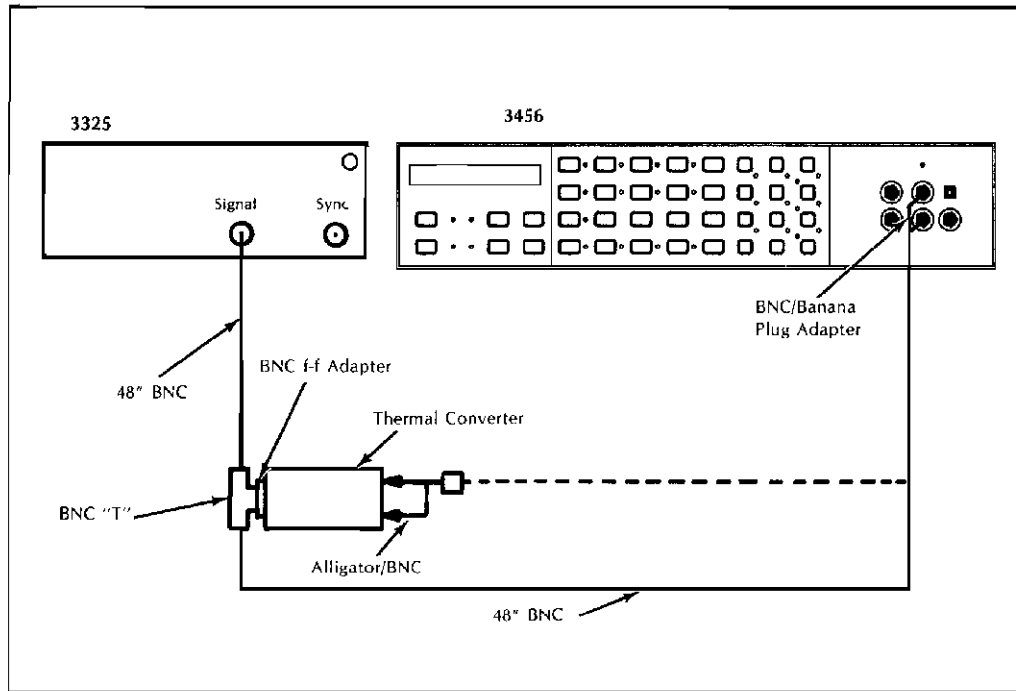


Figure 3-10 Thermal Converter Calibration

- p. Reset the voltmeter and select the AC volts function. Press the FILTER hardkey.
- q. Set the synthesizer frequency to 1 kHz, function to sine, and amplitude to 200 mVrms.
- r. Connect the equipment as shown in Figure 3-10. (Adjust the synthesizer amplitude until the voltmeter reads the voltage reference level calculated in step o.)

CAUTION

Do not exceed maximum input of 500 mV RMS to thermal converter.

- s. Disconnect the voltmeter BNC cable from the BNC Tee and connect it to the BNC-to-alligator adapter on the thermal converter. Set the number of digits displayed on the voltmeter to 6 (press the number 6 key, the STORE key, and the number 9 key).
- t. Set the voltmeter function to DC volts and store the reading in register Y (press the STORE key and the number 8 key). Turn on the math function $(X-Z)/Y$ (press the MATH key and the number 7 key). Reduce the number of digits displayed to 5 (press the number 5 key, the STORE key, and the number 9 key). The voltmeter display should read 1.0000 ± 0.0050 . This completes the calibration of the thermal converter.

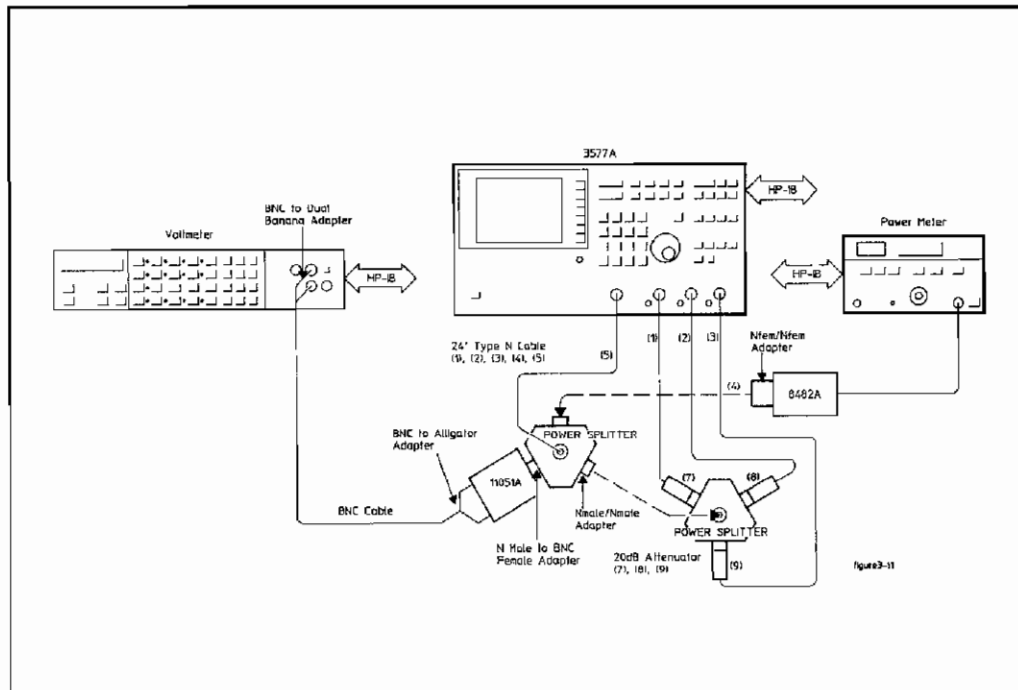


Figure 3-11 Absolute Accuracy and Flatness Test Set-Up (50 Ω)

FLATNESS AND ABSOLUTE ACCURACY TEST (50 Ω)

- u. Set the CAL FACTOR on the power meter to the value found for 10 MHz on the power head. Set the power meter to the dBm mode and press SENSOR ZERO.
- v. Connect the test equipment as shown in Figure 3-11. Also connect the voltmeter, power meter, and the HP 3577A to an HP-IB bus connected to a series 200 computer. The following addresses are used in the program:

| Instrument | HP-IB Address |
|-------------------|---|
| 3577A | 711 |
| Voltmeter | 722 |
| Power Meter | 713 |
| Printer | 706 (optional; if printout not desired, set print address to 1) |

w. Enter the following test program into the HP 200 series calculator:

```

10     INPUT "ENTER THE POWER METER CALIBRATION READING AT 10MHZ (DBM)...",Pm_1
0mhz
20     INPUT "ENTER THE VOLTMETER READING AT 10MHZ...",Tc_10mhz
30     Pm_10mhz=Pm_10mhz-9.8*LGT(Tc_10mhz)
40     OUTPUT 706 USING "#.0"
50     OUTPUT 706 USING "#.3/"
60     OUTPUT 706;"          FREQ (MHz)   CHANNEL R (dB)   CHANNEL A (dB)
CHANNEL B (dB)"
70     OUTPUT 706;"
80     Freq$=".1"
90     LOOP
100    OUTPUT 2 USING "#,K";Freq$;"#H"
110    LINPUT "ENTER THE FREQUENCY IN MHZ...",Freq$
120    OUTPUT 711;"SFR"&Freq$&"MHZ"
130    WAIT 10
140    IF VAL(Freq$)<21 THEN
150      ENTER 722;Vm
160      K1=SQR(20)*(ABS(Vm))^(.512)
170      IF VAL(Freq$)<.0001 THEN
180        OUTPUT 711;"BW1"
190      ELSE
200        OUTPUT 711;"BW2"
210      END IF
220    ELSE
230      OUTPUT 713;"9D-V"
240      ENTER 713;Pm
250      K1=10^((-Pm-Pm_10mhz)/20)*SQR(20)
260      PRINT TABXY(8,9),"SET THE POWER HEAD CALIBRATION FACTOR ON THE 436A.
.."
270    END IF
280    OUTPUT 711;"KR1"&VAL$(K1)&";"
290    OUTPUT 711;"UDI K1*R/D1; TKM"
300    GOSUB Marker_dump
310    R=Marker
320    PRINT TABXY(5,11),"CHANNEL R ACCURACY AT "&Freq$&"MHZ IS "&VAL$(PROUND
(Marker,-2))&"DB "
330    OUTPUT 711;"UDI K1*A/D2; TKM"
340    GOSUB Marker_dump
350    A=Marker
360    PRINT TABXY(5,13),"CHANNEL A ACCURACY AT "&Freq$&"MHZ IS "&VAL$(PROUND
(Marker,-2))&"DB "
370    OUTPUT 711;"UDI K1*B/D3; TKM"
380    GOSUB Marker_dump
390    B=Marker
400    PRINT TABXY(5,15),"CHANNEL B ACCURACY AT "&Freq$&"MHZ IS "&VAL$(PROUND
(Marker,-2))&"DB "
410    GOSUB Print_result
420    END LOOP
430 Marker_dump:OUTPUT 711;"DM1"
440    ENTER 711;Marker
450    RETURN
460 Print_result:PRINTER IS 706
470    PRINT "          ",Freq$,"          ",R,"          ",A,"          ",B
480    PRINTER IS 1
490    RETURN
500    END

```

NOTE

The "H" at the end of step 100 is actually entered as "SHIFT CTL —" simultaneously on the controller. For the 9816, disregard this as it is not available on that controller.

- x. Preset the 3577A.
- y. Set the 3577A to the following conditions:
 - SWEEP TYPE CW
 - FREQ 10 MHz
 - AMPTD
 - AMPTD 9.5 dBm
 - STEP SIZE1 dB
 - RES BW 10 Hz
 - INPUT K1*R/D1
- z. Press the HP 3577A AMPTD hardkey, select AMPTD, and vary the amplitude using the ↑ and ↓ keys until the power meter reads approximately 0 dBm. The HP 3577A amplitude should be 9.5 dBm ± 0.5 dB. The voltmeter should read 1.0000 ± 0.0500. Record the HP 3577A source amplitude level, the power meter reading, and the voltmeter reading in the test record.
 - aa. Press the RUN key on the 200 series controller and enter the reading of the power meter and of the voltmeter as directed by the program. Enter these readings on the test record as well.
 - bb. Disconnect the power head from the power splitter and terminate the power splitter port with a 50 Ω precision termination.
 - cc. Enter a frequency of .1 MHz on the controller (all frequencies must be entered in MHz).

NOTE

Each measurement takes approximately 10 seconds to complete. This allows time for the thermal converter, power meter, and voltmeter to settle.

- dd. Record the readings for channels R, A, and B in the test record as the absolute level at 100 kHz. The readings should be 0.0 ± .2 dB.
- ee. Enter each of the frequencies in Table 3-4 on the controller, recording the readings for channels R, A, and B in the test record or attach printout to the test record.

**Table 3-4
Thermal Converter Test Frequencies**

| | | |
|-------------|---------|--------|
| .000005 MHz | .01 MHz | 1 MHz |
| .00002 MHz | .02 MHz | 2 MHz |
| .0001 MHz | .05 MHz | 5 MHz |
| .001 MHz | .1 MHz | 10 MHz |
| .002 MHz | .2 MHz | 15 MHz |
| .005 MHz | .5 MHz | 20 MHz |

- ff. Disconnect the precision termination from the power splitter. Reconnect the power head through an N female to N female adapter and a 24" type N cable to the power splitter. Disconnect the thermal converter and terminate the power splitter with a precision termination.
- gg. Enter each frequency from Table 3-5 on the controller. Set the CAL FACTOR on the power meter to the value found for each frequency.
- hh. Record the readings for channels R, A, and B in the test record for each frequency or attach printout to test record.

Table 3-5
Power Meter Test Frequencies

| | | |
|---------|---------|---------|
| 50 MHz | 120 MHz | 180 MHz |
| 75 MHz | 140 MHz | 190 MHz |
| 100 MHz | 160 MHz | 200 MHz |
| | 170 MHz | |

- ii. To calculate the flatness from 5 Hz to 200 MHz for each channel, find the maximum reading in the test record column for that channel. Subtract the minimum reading from the column and record the result as the flatness (in dB) for the channel from 5 Hz to 200 MHz. The results should be < .6 dB.
- jj. To calculate the flatness from 20 Hz to 20 MHz for each channel, find the maximum reading between 20 Hz (.00002 MHz) and 20 MHz in the test record column. Subtract the minimum reading in the frequency range and record the result as the flatness for the channel from 20 Hz to 20 MHz. The results should be < .3 dB.
- kk. Press the LCL hardkey and set the 3577A input attenuation for all three channels to 0 dB (press the ATTEN hardkey and select ATTEN R 0 dB, ATTEN A 0 dB, and ATTEN B 0 dB).
- ll. Set the CAL FACTOR on the power meter to the value found for 10 MHz on the power head. Repeat steps bb through jj for input attenuation of 0 dB.

FLATNESS AND ABSOLUTE ACCURACY TEST (1 M Ω)

NOTE

If this test is performed independent of the preceding 50 Ω test the thermal converter and receiver power splitter must be calibrated (steps a through z). If the thermal converter and receiver power splitter have been calibrated for the 50 Ω test they need not be recalibrated for the 1 M Ω test. The program in step w must also be entered into the controller if the 1 M Ω test is run independently.

- mm. Connect the test equipment as shown in Figure 3-12.

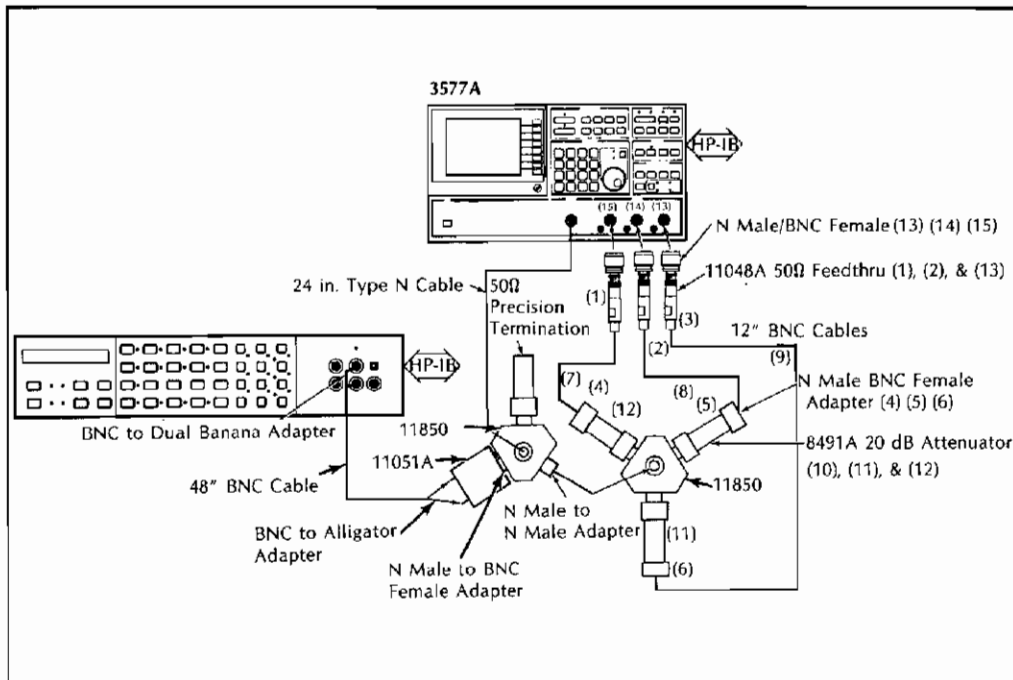


Figure 3-12 Absolute Accuracy and Flatness Test Set-Up (1 MΩ)

- nn. Preset the 3577A.
- oo. Set the 3577A to the following conditions:

| | |
|------------------|---------------------------|
| SWEEP TYPE | CW |
| FREQ | 100 kHz |
| AMPTD | level from step z |
| RES BW | 10 Hz |
| ATTEN | |
| IMPED | 1 MΩ for channels R, A, B |
- qq. Press RUN on the series 200 controller. Enter a 0 when the program asks for the power meter reading. Enter the voltmeter reading from step z when the program asks for the voltmeter reading.
- rr. Enter a frequency of 0.1 MHz on the controller. Record the receiver measurements in the test record as the absolute accuracy at 100 kHz. The reading should be 0.0 ± 0.2 dB.
- ss. Enter each frequency from table 3-4 on the controller and record the receiver measurements at each frequency in the test record or attach printout to test record.
- tt. To calculate the flatness from 5 Hz to 20 MHz for each channel, find the maximum reading in the test record in column for that channel. Subtract the minimum reading from the column and record the result in the test record. The flatness should be < 1.0 dB.

- uu. To calculate the flatness from 20 Hz to 20 MHz for each channel, find the maximum reading between 20 Hz (.00002 MHz) and 20 MHz in the test record column. Subtract the minimum reading in the frequency range and record the result in the test record. The flatness should be < .5 dB.
- vv. Press the LCL hardkey. Set the 3577A input attenuation for all three channels to 0 dB.
- ww. Repeat steps rr through uu for input attenuation of 0 dB.

3-11 RECEIVER RATIO AMPLITUDE AND PHASE ACCURACY

SPECIFICATIONS:

FLATNESS AND ABSOLUTE ACCURACY:

Absolute (at 100 kHz and full scale input):

Ratio: A/R B/R A/B Mode: 50 Ω input ±0.15 dB

1 MΩ input ±0.2 dB

Flatness (at full scale input):

Same Attenuator settings for ratio mode (column 1 of Table 3-6):

| INPUT | MODE | 20 Hz to 20 MHz | 5 Hz to 20 MHz | 5 Hz to 200 MHz |
|-------|-------------|-----------------|----------------|-----------------|
| 50 Ω | A/R,B/R,A/B | 0.3 dB p-p | N/A | 0.4 dB p-p |
| 1 MΩ | A/R,B/R,A/B | 0.3 dB p-p | 0.6 dB p-p | N/A |

Different Attenuator settings for ratio mode (column 2 Table 3-6):

50 Ω mode: add 0.15 dB to above for 20 Hz to 20 MHz

add 0.30 dB to above for 5 Hz to 200 MHz

1 MΩ mode: add 0.20 dB to above for 20 Hz to 20 MHz

add 0.40 dB to above for 5 Hz to 20 MHz

PHASE:

Absolute: ± 2 degree at 100 kHz

Flatness:

Same attenuator settings for ratio mode:

| FREQUENCY | 50 Ω INPUT | 1 MΩ INPUT |
|-----------------|------------|------------|
| 20 Hz to 20 MHz | 2 deg p-p | 5 deg p-p |
| 5 Hz to 200 MHz | 10 deg p-p | N/A |
| 5 Hz to 20 MHz | N/A | 10 deg p-p |

Different Attenuator settings for ratio mode: add 8 deg to above

DESCRIPTION:

Ratio amplitude and phase accuracy are verified using a resistive three-way power splitter (HP 11850) and four 24-inch Type N cables (not phase matched). A brief calibration procedure compensates for the electrical length of each receiver cable, and the power splitter is assumed to be ideal. As a result, the ratio amplitude and phase accuracy of the 3577A can be measured directly without further error correction. Amplitude correction is not required because the transmission loss of the cables is low and a ratio measurement cancels that low loss if the cable lengths are approximately equal. The ratio performance will be verified in two frequency ranges: 5 Hz to 200 MHz and 20 Hz to 20 MHz. Two sweeps will be made for each frequency span: one at 20 dB input attenuation and the other at 0 dB. Ratio performance will be checked with equal and unequal input attenuators.

EQUIPMENT:

| | |
|---|--------------|
| Power Splitter | HP 11850A/C |
| RF Cables-24 inch (4 each) | HP 35679A |
| Feedthrough Termination (3 each) | HP 11048C |
| BNC Cables-24 inch (3 each) | HP 8120-1839 |
| N female to N female Adapter | HP 1250-1472 |
| N male to BNC female Adapter (6 each) | HP 1250-0780 |

PROCEDURE:

NOTE

The four RF cables used in this test must be calibrated to determine their electrical length. The cables can be permanently marked with their name ("R", "A", "B", or "Source") and the length determined for each cable in steps b through t of this test procedure. If these marked cables are used for future 3577A calibration, steps a through t can be eliminated by presetting the 3577A, entering the length of the cables, and proceeding from step u.

- a. Preset the 3577A.
- b. Mark the four 24-inch RF cables "R", "A", "B", and "source". (See Note at the beginning of this procedure).
- c. Connect the "source" cable between the source and receiver B.
- d. Set the 3577A controls for the following settings:

| | |
|-------------------|---------|
| INPUT | B |
| FREQ | |
| START FREQ | 1 MHz |
| STOP FREQ | 200 MHz |
| DISPLY FCTN | PHASE |
| SCALE | |
| /DIV | 2 deg |
- e. Press the MEASR CAL hardkey and select NORMALIZE.
- f. Connect the "B" cable between the "source" cable and the receiver input B, using the N female to N female adapter between the two cables.

- g. Press the LENGTH hardkey, select LENGTH B, and enter a value of -97 cm. This is an estimate of the length of cable "B".
- h. Rotate the RPG to get the marker to 200 MHz.
- i. Press the ENTRY hardkey for the RPG and rotate it to achieve a phase marker reading of 0 degrees at 200 MHz. The negative length displayed is an equivalent length of cable removed from receiver B. Record this length in the test record. (See Note at the beginning of this procedure.)
- j. Press SWEEP MODE hardkey and select SINGLE.
- k. Press the MKR \rightarrow hardkey and select MKR \rightarrow MIN. Press the MKR hardkey and select ZERO MARKER. Press the MKR \rightarrow hardkey and select MKR \rightarrow MAX. The marker PHASE should read <1 degree. If not, try another "B" cable.
- l. Disconnect the "source" cable from the "B" cable, leaving the "B" cable connected to receiver B.
- m. Press the INPUT hardkey and select A.
- n. Press SWEEP MODE hardkey and select CONT. Press MKR hardkey and turn MKR OFFSET off. Press the RPG ENTRY hardkey to get back to the MARKER mode.
- o. Connect the "source" cable between the source and receiver A.
- p. Press the MEASR CAL hardkey and select the NORMALIZE.
- q. Connect the "A" cable between the "source" cable and the receiver A, using the N female to N female adapter between the two cables.
- r. Repeat steps g through l, replacing the A receiver where B is called out.
- s. Press the INPUT hardkey and select R.
- t. Repeat steps n through r, replacing the R receiver where B or A is called out.
- u. Connect the equipment as shown in Figure 3-13.

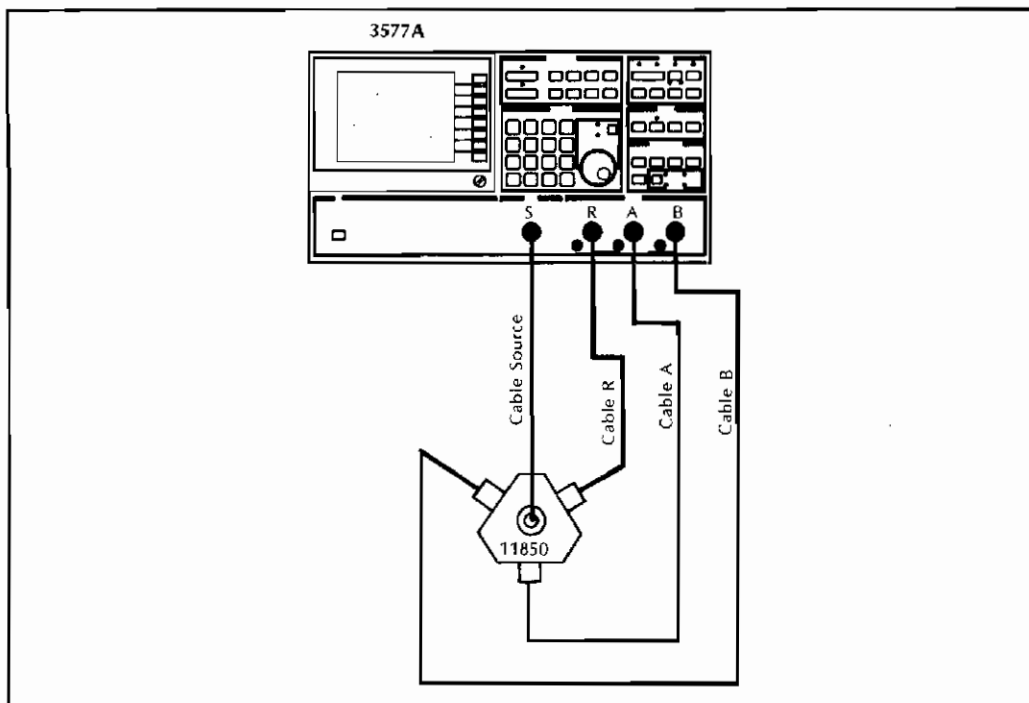


Figure 3-13 Ratio Test Set-Up (50 Ω)

v. Do not preset the 3577A. Change only the following 3577A settings:

| | |
|-----------------------------|----------------|
| SWEEP TYPE | LOG FREQ SWEEP |
| SWEEP MODE | SINGLE |
| SWEEP TIME | 25 sec |
| FREQ | |
| START FREQ | 5 Hz |
| STOP FREQ | 200 MHz |
| AMPTD | -20 dBm |
| RES BW | 100 Hz |
| DISPLY FCTN | LOG MAC |
| SCALE | |
| /DIV | 0.2 dB |
| REF POSN | 50% |
| INPUT | A/R |
| ATTEN (all receivers) | 0 dB |

NOTE

(Information pertaining to unequal attenuator settings is in parentheses.) [Information pertaining to the 1MΩ impedance tests is in brackets.]

- w. Press the TRIG/RESET hardkey and let the 3577A complete a sweep.
- x. Press the STORE DATA hardkey and enter a USER DEF STORE of R into D1. (Select USER DEF STORE, R, →D, →D1.)

- y. Enter a USER DEF STORE of A into D2.
- z. Enter a USER DEF STORE of B into D3.
- aa. Press the ATTEN hardkey and set the R, A, and B attenuators to 20 dB.
- bb. Press the TRIG/RESET hardkey and let the 3577A complete a sweep.
- cc. Move the marker to approximately 100 kHz.
- dd. The marker MAG should read 0 ± 0.15 dB [± 0.2 dB]. Enter the reading in the test record.
- ee. Press the DISPLY FCTN hardkey and select PHASE. Press the SCALE hardkey and change /DIV to 5 deg.
- ff. The marker PHASE should read 0 ± 2 degrees. Enter the reading in the test record.
- gg. Press the MKR→ hardkey and select MKR→ MIN. Press the MKR hardkey and select ZERO MARKER. Press the MKR→ hardkey and select MKR→ MAX.
- hh. The marker PHASE should read < 10 degrees (18 deg) peak-to-peak. Enter the reading in the test record.
- ii. Press the DISPLY FCTN hardkey and select LOG MAG.
- jj. Measure the amplitude flatness using the MKR→ and MKR hardkeys as in step 88.
- kk. The marker MAG should read < 0.4 dB (.7 dB) peak-to-peak [0.6 dB (1.0 dB)]. Enter the reading in the test record.
- ll. Press MKR hardkey and turn MKR OFFSET off.
- mm. Repeat steps cc through ll for the inputs in Table 3-6, using USER DEF INPUTS. The D1, D2, and D3 are for the 0 dB attenuator mode and R, A, and B are for the 20 dB attenuator mode. The specifications remain the same except for unequal attenuator settings (they are in parentheses). [The specifications for the 1 MΩ input impedance are in brackets.]

Table 3-6
Ratio Performance Inputs

| Equal Input Attenuators | Unequal Input Attenuators |
|-------------------------|---------------------------|
| B/R (20,20) | D2/R (0,20) |
| A/B (20,20) | A/D1 (20,0) |
| D2/D1 (0,0) | A/D3 (20,0) |
| D3/D1 (0,0) | D2/B (0,20) |
| D2/D3 (0,0) | B/D1 (20,0) |
| | D3/R (0,20) |

nn. Change the following 3577A settings:

| | |
|---------------------------------|---------|
| SWEEP TIME | 30 sec |
| FREQ | |
| START FREQ | 20 Hz |
| STOP FREQ | 20 MHz |
| RES BW | 10 Hz |
| DISPLY FCTN | LOG MAG |
| ATTEN (for all receivers) | 0 dB |
| INPUT | A/R |

oo. Repeat steps w through bb.

pp. Press the MKR hardkey and turn the MKR OFFSET off.

qq. Measure the amplitude flatness using the MKR→ and MKR hardkeys as in step gg.

rr. The marker MAG should read < 0.3 dB (.45 dB) peak-to-peak [0.3 dB (0.5 dB)]. Enter the reading in the test record.

ss. Press the DISPLY FCTN hardkey and select PHASE.

tt. Measure the phase flatness using the MKR→ and MKR hardkeys as in step gg.

uu. The marker PHASE should read < 2 degrees (10 deg) peak-to-peak [5 deg (13 deg)].

vv. Repeat steps pp through uu for the inputs in Table 3-6. (The unequal attenuators specifications are in parentheses.)

ww. Press the ATTEN hardkey and set the R, A, and B inputs to the 1 M Ω input impedance.

xx. Connect the equipment as shown in Figure 3-14 using the BNC cables and the 50 Ω Feedthrough Terminations.

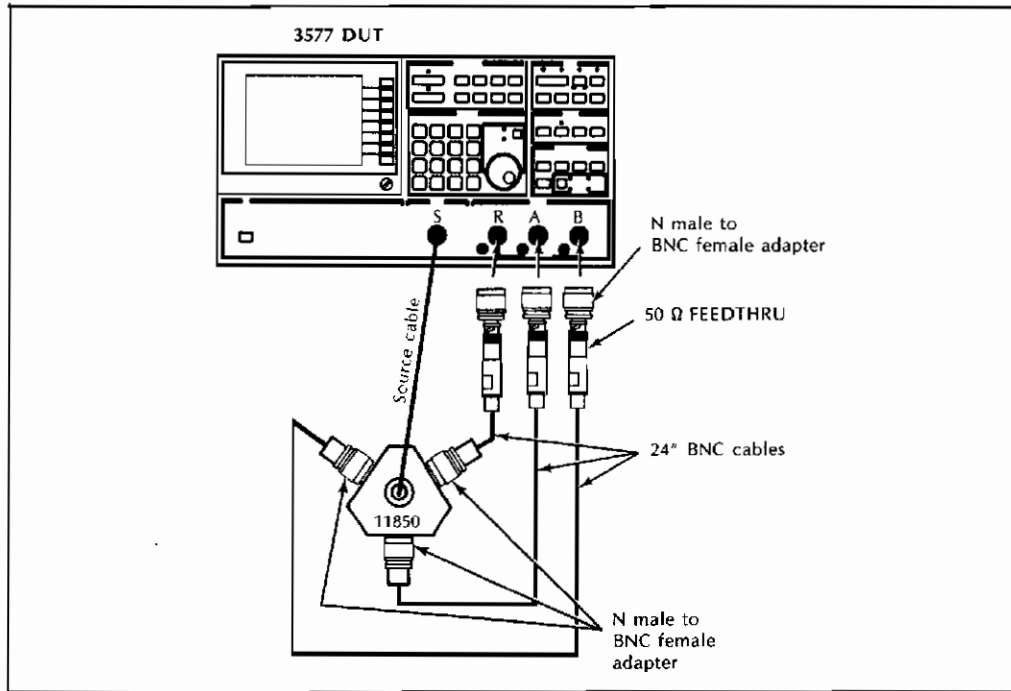


Figure 3-14 Ratio Test Set-Up (1 MΩ)

yy. Change the following 3577A settings:

| | |
|----------------------------|---------------|
| FREQ | |
| START FREQ | 5 Hz |
| STOP FREQ | 20 MHz |
| DISPLY FCTN | LOG MAG |
| INPUT | A/R |
| LENGTH (for all receivers) | 0 cm |
| ATTEN (for all receivers) | 0 dB |

zz. Repeat steps w through vv for the 1 MΩ input impedance. [The specifications for the 1 MΩ input impedance are in brackets.]

3-12 RECEIVER CROSSTALK TEST

SPECIFICATIONS:

Channel isolation > 100 dB below maximum input level

DESCRIPTION:

The 3577A source is input to one channel at a time and the isolation measured on the other two channels.

EQUIPMENT:

RF cable HP 35679A

PROCEDURE:

- a. Preset the HP 3577A.
- b. Connect an RF cable between the 3577A source and receiver R.
- c. Set the 3577A to the following conditions:

| | |
|------------------|----------------|
| SWEEP TYPE | LOG FREQ SWEEP |
| SWEEP TIME | 20 sec |
| FREQ | |
| START FREQ | 10 kHz |
| AMPTD | -1 dBm |
| RES BW | 10 Hz |
| SCALE | |
| REF POSN | 50 % |
| REF LEVEL | -100 dBm |
| AVG | 256 |
| INPUT | A |
- d. Save these instrument conditions in Register 1. (Press hardkey SAVE, select SAVE REG 1.)
- e. Allow the 3577A to complete two sweeps, then set SWEEP MODE to SINGLE.
- f. The noise level at all points across the sweep should be < -100 dBm. Press the MKR→ hardkey and select MKR→MAX. Record the marker MAC reading in the test record.
- g. Select an INPUT of B.
- h. Find the maximum level as in step f; enter the value in the test record.
- i. Move the RF cable from receiver R to receiver A.
- j. Press the RECALL hardkey and select RECALL REG 1. (This resets the 3577A to the conditions set up in step c.)
- k. Select an INPUT of B.
- l. Allow the 3577A to complete two sweeps, then set SWEEP MODE to SINGLE.
- m. Find the maximum level as in step f; enter the value in the test record.
- n. Select an INPUT of R.
- o. Find the maximum level as in step f; enter the value in the test record.
- p. Move the RF cable from receiver A to receiver B.
- q. Press the RECALL hardkey and select RECALL REG 1.
- r. Allow the 3577A to complete two sweeps, then set SWEEP MODE to SINGLE.

- s. Find the maximum level as in step f; enter the value in the test record.
- t. Select an INPUT of R.
- u. Find the maximum level as in step f; enter the value in the test record.

3-13 RECEIVER RETURN LOSS TEST

SPECIFICATIONS:

Return loss: Channels A, B, and R > 25 dB

DESCRIPTION:

A manual partial port calibration is performed to improve the accuracy of the measurements. Channels A and B are measured, using channel R as the reference. Channel A is then used as a reference to measure channel R.

EQUIPMENT:

| | |
|---|-----------------------|
| Directional Bridge | HP 35677-63502 |
| BNC Cables-24 inch (2 each) | HP 8120-1839 |
| 10 dB Attenuator | HP 8491A Opt 010 |
| Precision Termination | HP 909C,Opt200,Opt012 |
| SMA male to BNC female adapter (2 each) | HP 1250-1200 |
| N male to BNC female adapter (2 each) | HP 1250-0780 |
| N male to N male adapter | HP 1250-1475 |

PROCEDURE:

- a. Preset the HP 3577A.
- b. Connect the equipment as shown in Figure 3-15, leaving the load port of the directional bridge unconnected.

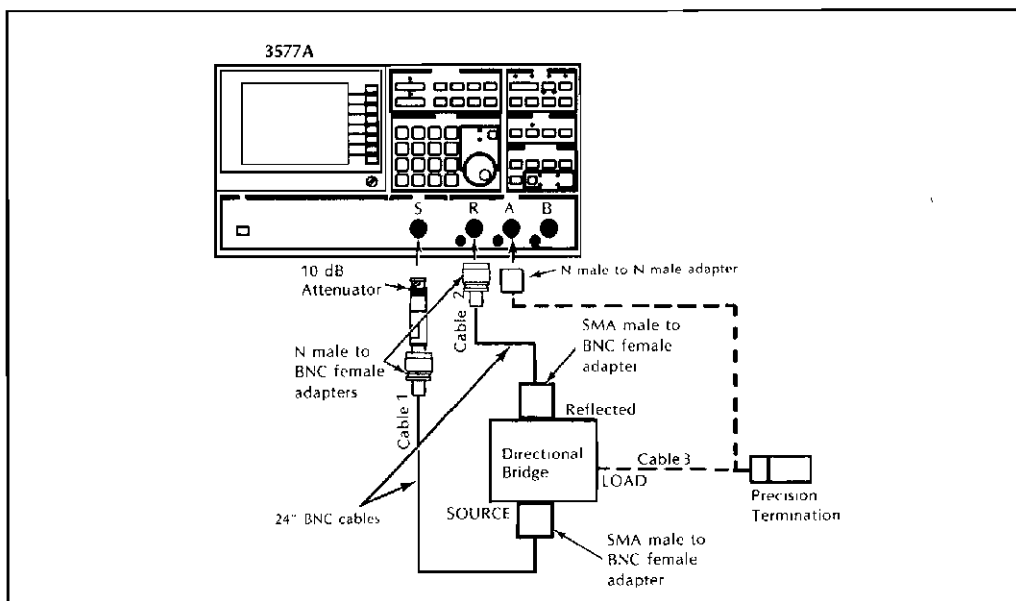


Figure 3-15 Receiver Return Loss Test Set-Up

- c. Set the 3577A to the following conditions:
- | | |
|------------------|-------------|
| SWEEP TIME | 5 sec |
| FREQ | |
| START FREQ | 100 kHz |
| AMPTD | -15 dBm |
| RES BW | 100 Hz |
| ATTEN | ATTEN R 0dB |
| INPUT | R |
- d. Allow the 3577A to complete one sweep.
- e. Press the STORE hardkey and select STORE REG D1.
- f. Terminate the directional bridge load port with the precision 50 Ω termination.
- g. Allow the 3577A to complete one sweep.
- h. Press the STORE DATA hardkey and select STORE REG D2.
- i. Remove the precision termination and connect the directional bridge load port to 3577A receiver A using the N male to N male adapter.
- j. Press the INPUT hardkey and enter a USER DEF INPUT of $(R - D2)/D1$ (select USER DEF INPUT, (, R, -, D_, 2,), /, D_, 1, ENTER).
- k. Allow the 3577A to complete one sweep.
- l. Press the MKR→ hardkey and select MKR→MAX.
- m. The marker MAG should read < -25 dB; enter the reading in the test record.
- n. Press the ATTEN hardkey and select ATTEN A 0dB.
- o. Repeat steps k through m.
- p. Connect the directional bridge load port to 3577A receiver B.
- q. Repeat steps k through o, selecting ATTEN B 0dB in step n.
- r. Move cable 2 from receiver R to receiver A and disconnect the directional bridge from receiver B.
- s. Press the INPUT hardkey and select A.
- t. Press the ATTEN hardkey and set ATTEN R to 20 dB.
- u. Repeat steps d through o for channel R using channel A as a reference. Use channel A whenever channel R is called out, even in the equation of step j, and use channel R whenever channel A is called out.

3-14A SOURCE FLATNESS AND ABSOLUTE ACCURACY TEST**NOTE**

Perform test 3-14A (which uses a W&G EPM-1 power meter) or test 3-14B (which uses a voltmeter and an HP 436 power meter).

SPECIFICATIONS:

Absolute Accuracy: ± 1 dB at +15 dBm and 100 kHz

Flatness: 1.5 dB peak-to-peak from 5 Hz to 200 MHz

DESCRIPTION:

Source flatness and absolute accuracy are verified using channel R (calibrated receiver) to measure the source error directly. Before proceeding with the source verification, channel R is calibrated to remove its frequency response errors. Channel R error correction terms are stored in register D1 and test system error correction terms are stored in registers D2 (error correction for the transmission loss from the power splitter to channel R) and D3 (error correction terms for cable loss of the source cable).

The test configuration used for calibration of channel R is very similar to that used for the receiver performance test. The EPM-1 power meter levels the 3577A source, maintaining an output of 0 dB at each of the power splitter ports. One output of the power splitter is attenuated by 20 dB and input to channel R. A single sweep is made and the error response of channel R is displayed after error correction for the transmission loss from the attenuator to channel R [Chan-R-error(freq)]. The results are stored in register D1. The final sweep is the source accuracy and flatness measurement, which is made without the EPM-1 (Figure 3-18) and is the product of the source and receiver error response [Source-error \times Chan-R-error]. The ratio of the final sweep with the receiver calibration sweep is the source frequency error.

$$\text{Source-error(freq)} = [\text{Source-error} \times \text{Chan-R-error}] / \text{Chan-R-error(freq)}$$

Flatness and absolute accuracy of the source are read directly from the 3577A display.

EQUIPMENT:

| | |
|--------------------------------------|-------------------------|
| Power Meter | W & G EPM-1 |
| 20 dB Attenuator | HP 8491A Opt 020 |
| Error Correction Cable | HP 03577-61640 |
| Power Splitter | HP 11850A/C |
| Precision Termination (2 each) | HP 909C, Opt200, Opt012 |
| RF Cables-24 inch (2 each) | HP 35679A |
| N female to N female adapter | HP 1250-1472 |

PROCEDURE:

- a. Preset the HP 3577A.

- b. Set the 3577A controls to the following settings:

| | |
|------------------|----------------|
| SWEEP TYPE | LOG FREQ SWEEP |
| SWEEP MODE | SINGLE |
| SWEEP TIME | 20 sec |
| FREQ | |
| START FREQ | 5 Hz |
| STOP FREQ | 200 MHz |
| RES BW | 100 Hz |
| INPUT | R/D1 |
| SCALE | |
| REF POSN | 50% |
| /DIV | 0.2 dB |
| REF LEVEL | 0 dB |
- c. Connect a 24-inch cable between the source and receiver R. This is labeled the "test" cable.
- d. Press the TRIG/RESET hardkey to trigger a sweep and let the 3577A complete the sweep.
- e. Press the MEASR CAL hardkey and select NORMALIZE.
- f. Connect another 24-inch cable between the first cable and receiver R, using an N female to N female adapter between the two cables. This second cable is labeled the "source" cable.
- g. Press the TRIG/RESET hardkey and let the 3577A complete a sweep.
- h. Press the STORE DATA hardkey and select STORE REG D3. This is the cable loss of the source cable.
- i. Connect the equipment as shown in Figure 3-16.

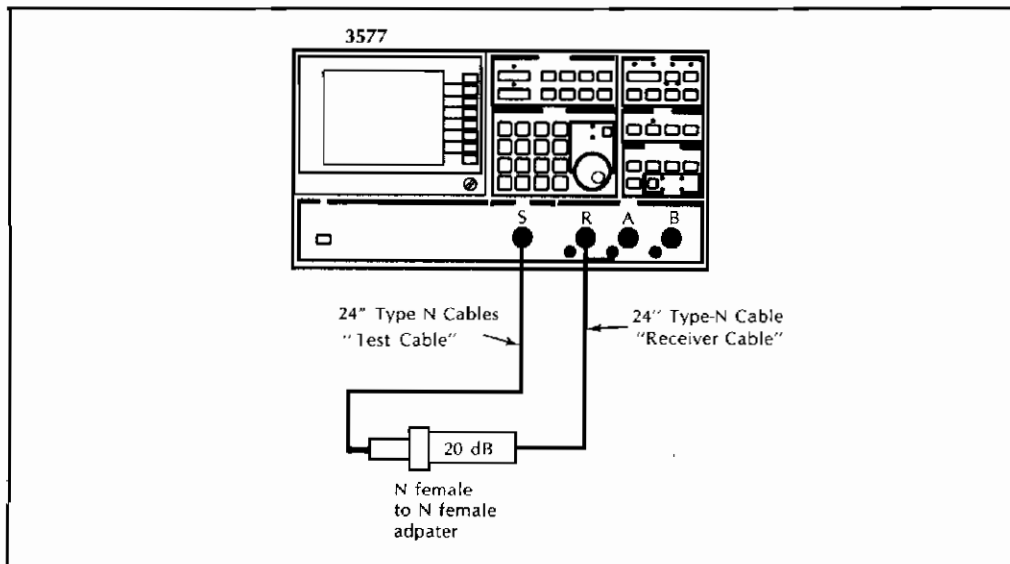


Figure 3-16 Calibration of Transmission Loss from Power Splitter to Channel R

- j. Press the SCALE hardkey and set the REF LEVEL to -20 dB.
- k. Press the TRIG/RESET hardkey and let the 3577A complete a sweep.
- l. Press the STORE DATA hardkey and select STORE REG D2. This is the transmission loss from the output of the power splitter to receiver R.
- m. Connect the equipment as shown in Figure 3-17.

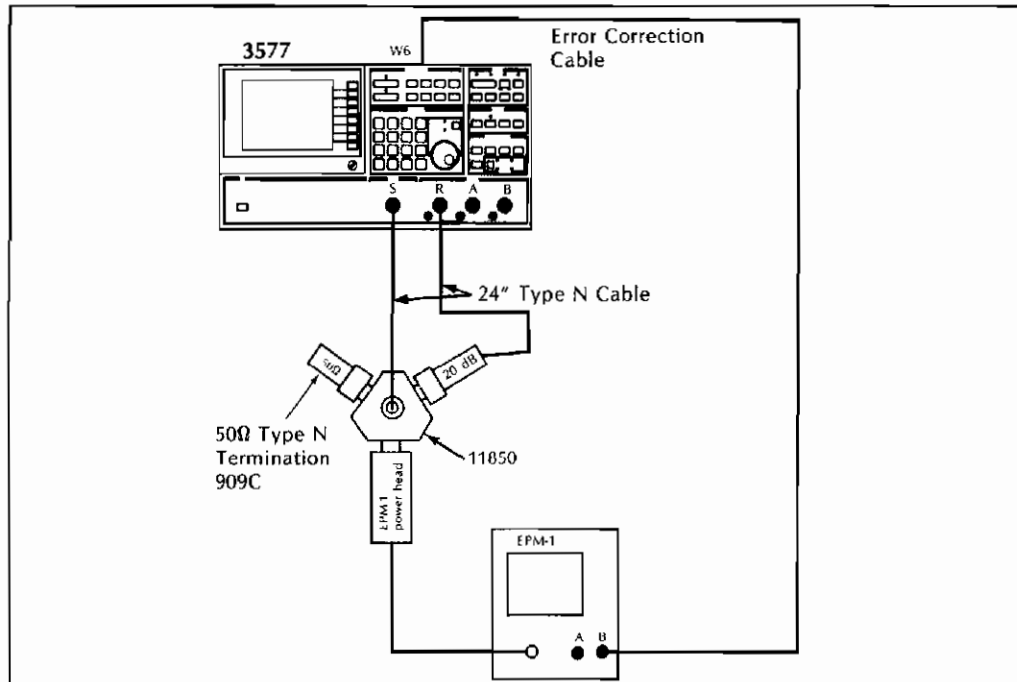


Figure 3-17 Channel R Calibration for Source Flatness and Accuracy

- n. Change only the following 3577A settings:

| | |
|------------------|-------------|
| SWEEP TIME | 100 sec |
| RES BW | 10 Hz |
| AMPTD | +10 dBm |
| SCALE | |
| /DIV | 0.5 dB |
| REF LEVEL | 0 dB |
| INPUT | K1*R/D2 |
| DEFINE MATH | |
| K1 REAL | 4.472 UNITS |
- o. Set the EPM-1 controls for the following settings:

| | |
|-----------------------|------------------------------------|
| RANGE | 0 dBm (red scale) |
| POLARITY SWITCH | POS |
| GAIN | Adjust to approximately half scale |
| REFERENCE | Adjust for 0 dBm meter reading |

- p. Wait until EPM-1 settles at approximately 0 dBm and press the 3577A TRIG/RESET hardkey. When the sweep marker reaches approximately 20 MHz, enter a longer sweep time by pressing the SWEEP TIME hardkey and then the \uparrow hardkey twice. This increases the sweep time to 500 seconds for the remainder of the sweep.
- q. At the completion of the sweep, set the sweep rate back to 100 seconds. (Disregard the "Sweep Rate Uncalibrated" message which may appear.)
- r. Press the STORE DATA hardkey and select STORE REG D1.
- s. Disconnect the EPM-1 (including the Error Correction Cable—remember to reinstall the factory installed jumper) and set up the equipment as shown in Figure 3-18.

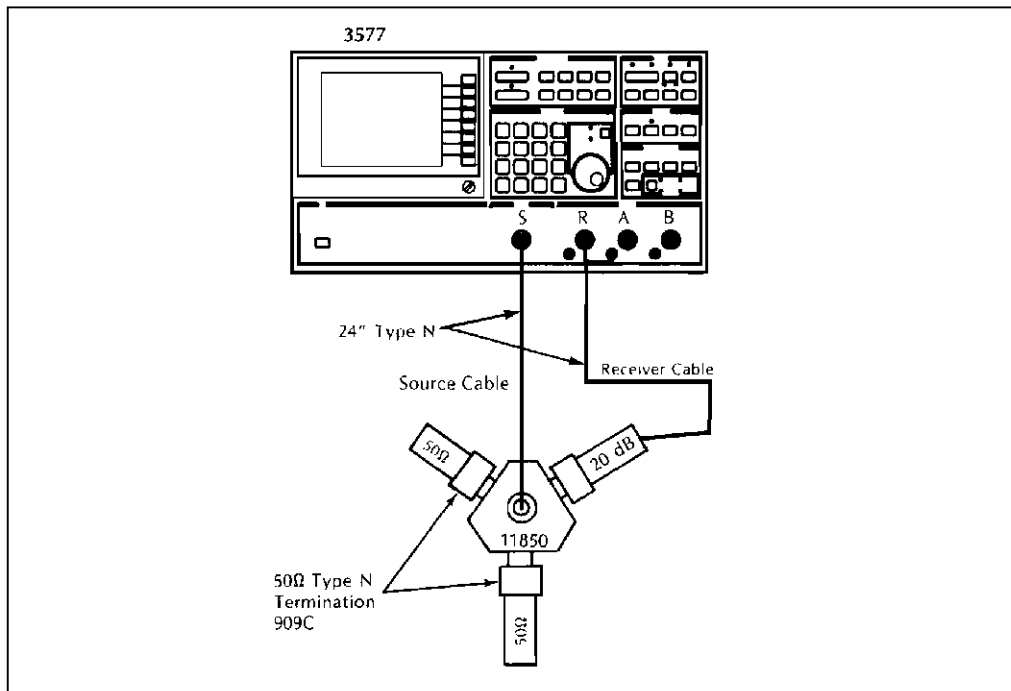


Figure 3-18 Source Flatness and Absolute Accuracy Test Set-Up

- t. Press the DEFINE MATH hardkey and enter a value of 2.3823 UNITS for K1 REAL.
- u. Press the INPUT hardkey and enter a USER DEF INPUT of $K1 * R / D1 / D2 / D3$ (select USER DEF INPUT, K, $_$, 1, *, R, /, D, $_$, 1, /, D, $_$, 2, /, D, $_$, 3, ENTER).
- v. Press AMPTD hardkey and enter an AMPTD of +15 dBm.
- w. Press the TRIG/RESET hardkey. When the sweep marker reaches approximately 20 MHz, enter a longer sweep by pressing the SWEEP TIME hardkey and then the \uparrow hardkey twice. This increases the sweep time to 500 seconds for the remainder of the sweep.

- x. Move the marker to 100 kHz. The marker MAG should read $< \pm 1.0$ dB. Enter the reading in the test record.
- y. Press the MKR→ hardkey and select MKR→MIN. Press the MKR hardkey and select ZERO MARKER. Press the MKR→ hardkey and select MKR→MAX. The marker MAG should read < 1.5 dB peak-to-peak. Enter the reading in the test record (5 Hz - 200 MHz).

3-14B ALTERNATE SOURCE FLATNESS AND ABSOLUTE ACCURACY TEST

Note

Perform test 3-14A (which uses a W&G EPM-1 power meter) or test 3-14B (which uses a voltmeter and an HP 436 power meter).

SPECIFICATIONS:

Absolute Accuracy: ± 1 dB at +15 dBm and 100 kHz
 Flatness: 1.5 dB peak-to-peak from 5 Hz to 200 MHz

DESCRIPTION:

This procedure is an alternate approach for verifying the 3577A source accuracy using a voltmeter and HP 436A power meter rather than the EPM-1 power meter. Discrete measurements must be made rather than the swept measurements possible with the EPM-1. For frequencies less than 100 kHz, the source level is verified by measuring the voltage across an 11048C 50 Ω feedthrough using an HP 3456A voltmeter. For frequencies of 100 kHz and above the levels are measured using an HP 436A power meter.

EQUIPMENT:

| | |
|--|--------------|
| Power Meter | HP 436A |
| Power Head | HP 8482A |
| Voltmeter | HP 3456A |
| BNC Cable-48 inch | HP 8120-1840 |
| Feedthrough Termination | HP 11048C |
| N male to BNC female adapter | HP 1250-0780 |
| BNC female to dual banana male adapter | HP 1251-2277 |

PROCEDURE:

- a. Preset the 3577A.
- b. Set the 3577A to the following conditions:
 - SWEEP TYPE
 - FREQ
 - AMPTD
- c. Connect the voltmeter to the HP 3577A source output using a BNC cable, feed-through termination, and N male to BNC female adapter as shown in Figure 3-19.

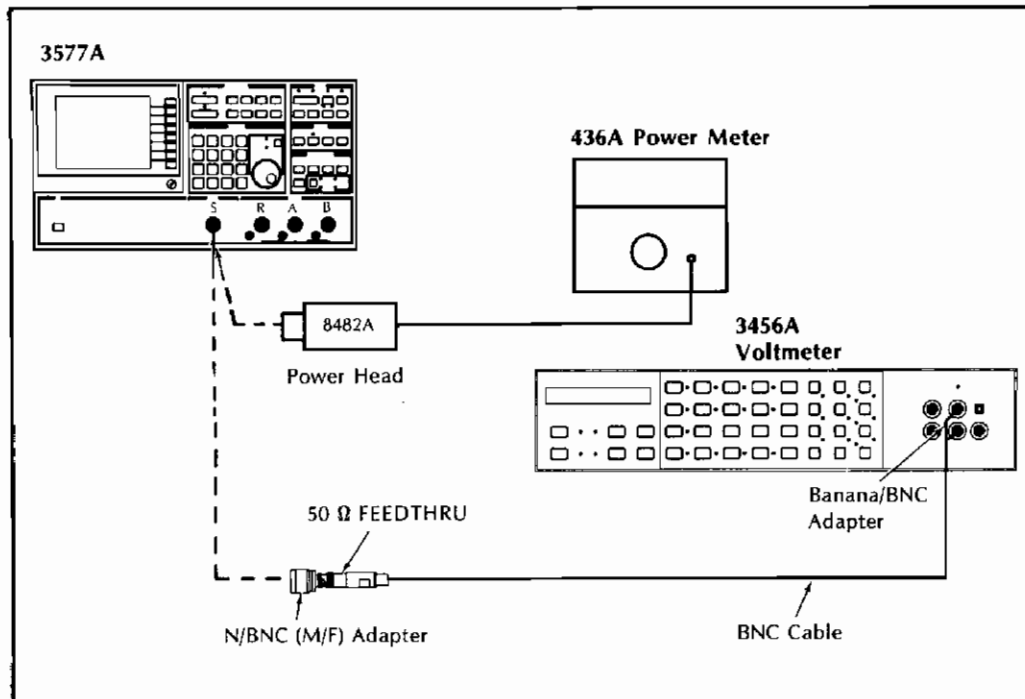


Figure 3-19 Alternate Source Flatness and Absolute Accuracy Test Set-Up

- d. Reset the 3456A and press the AC volts function key.
- e. Press the FILTER hardkey and enter the math dBm(R) function (press the blue MATH hardkey and the number 4 hardkey).
- f. Store 50 in the ohms register (press the numbers 5 and 0, STORE hardkey, and number 4 hardkey).
- g. The voltmeter display should read $15 \text{ dBm} \pm 1 \text{ dBm}$. (This is for information only. The absolute reading at 100 kHz will be made in a later step using the HP 436A power meter.)
- h. Enter the following frequencies on the 3577A and record the voltmeter reading for each frequency in the test record:

| | | | | | | |
|------|-------|--------|-------|--------|--------|--------|
| 5 Hz | 10 Hz | 100 Hz | 1 kHz | 10 kHz | 20 kHz | 50 kHz |
|------|-------|--------|-------|--------|--------|--------|
- i. Enter a frequency of 100 kHz on the 3577A. Disconnect the voltmeter from the 3577A source.
- j. Set the 436A function to dBm and the CALIBRATION FACTOR to the 100 kHz value found on the 8482A power head. Press SENSOR ZERO on the 436A.
- k. Connect the 8482A power head to the 3577A source as shown in Figure 3-19.
- l. Record the 436A reading in the test record for 100 kHz. This level should be $15 \text{ dBm} \pm 1 \text{ dBm}$.

- m. Enter each frequency from Table 3-7 on the 3577A, set the 436A CALIBRATION FACTOR to the level found on the calibration curve on the HP 8482A power head for each frequency, and enter the 436A reading on the test record.

Table 3-7
Source Flatness Test Frequencies

| | | | | |
|---------|-------|--------|---------|---------|
| 100 kHz | 1 Mhz | 10 MHz | 100 MHz | 160 MHz |
| 200 kHz | 2 MHz | 20 MHz | 120 MHz | 180 MHz |
| 500 kHz | 5 MHz | 50 MHz | 140 MHz | 200 MHz |

- n. To calculate the source flatness, find the maximum level from 5 Hz to 200 MHz and subtract from this level the minimum level in the frequency range. Enter the result in the test record as the flatness from 5 Hz to 200 MHz. The result should be < 1.5 dB.

3-15 SOURCE ATTENUATOR ACCURACY TEST

SPECIFICATIONS:

Attenuator Accuracy: ± 0.02 dB/dB or ± 0.2 dB, whichever is greater.

DESCRIPTION:

The 3577A R channel receiver is used to measure the attenuation of the source.

EQUIPMENT:

- RF Cable HP 35679A
- 10 dB Attenuator (2 each) HP 8491A Opt 010
- 3 dB Attenuator HP 8491A Opt 003

PROCEDURE:

- a. Preset the HP 3577A.
- b. Connect the 3577A source to 3577A receiver R through the RF Cable and all three attenuators.
- c. Set the 3577A to the following conditions:
 SWEEP TIME 5 sec
 FREQ
 START FREQ 1 kHz
 AMPTD +12 dBm
 RES BW 100 Hz
 INPUT R
- d. Allow the HP 3577A to complete a sweep. Press the MEASR CAL hardkey and select NORMALIZE.
- e. Press the AMPTD hardkey and enter an AMPTD of +8 dBm. This sets the attenuator to the 4 dB position without disturbing the leveling loop settings.
- f. Press the MKR— hardkey and select MKR—MAX. The marker MAG on the 3577A display should read -4 dB ± 0.2 dB. Record the reading in the test record.

- g. Press the MKR→ hardkey and select MKR→MIN. The marker MAG on the 3577A display should read $-4 \text{ dB} \pm 0.2 \text{ dB}$. Record the reading in the test record.
- h. Repeat steps e through g for the amplitude and attenuation settings as listed in Table 3-8. The marker MAG in steps f and g should read the attenuation value \pm the attenuation accuracy.

Table 3-8
Source Attenuator Accuracy Tests

| AMPLITUDE | ATTENUATION | ATTENUATION ACCURACY |
|-----------|-------------|-----------------------|
| +8 dBm | 4 dB | $\pm 0.2 \text{ dB}$ |
| +4 dBm | 8 dB | $\pm 0.2 \text{ dB}$ |
| -4 dBm | 16 dB | $\pm 0.32 \text{ dB}$ |
| -20 dBm | 32 dB | $\pm 0.64 \text{ dB}$ |
| -36 dBm | 48 dB | $\pm 0.96 \text{ dB}$ |

3-16 SOURCE DISTORTION AND SPUR TEST

SPECIFICATIONS:

Harmonic Distortion: $< -30 \text{ dB}$

Non-harmonic Spurious: $< -50 \text{ dBc}$ or $< -70 \text{ dBm}$, whichever is greater.

DESCRIPTION:

The HP 3577A is connected to a spectrum analyzer and the spurious signals measured.

EQUIPMENT:

- Spectrum Analyzer HP 8568B
- RF Cable HP 35679A

PROCEDURE:

- a. Preset the 3577A.
- b. Connect the HP 3577A source to the spectrum analyzer input.
- c. Press the SWEEP TYPE hardkey and select CW. Set the 3577A FREQ to the following frequencies, verifying that all harmonics are at least 30 dB below the fundamental:

| | | |
|---------|---------|---------|
| 250 kHz | 10 MHz | 150 MHz |
| 459 kHz | 100 MHz | 200 MHz |

Record the level of the largest harmonic for each frequency in the test record.

- d. Set the 3577A FREQ to 50 MHz.

- e. Adjust the spectrum analyzer to observe the frequencies listed in Table 3-9 for the 50 MHz 3577A frequency. These are spurious frequencies generated in the 3577A. While checking these frequencies, be sure to note any other spurious signals. All spurious signals other than harmonics should be < -50 dBc or < -70 dBm. Record the levels for the listed frequencies in the test record.
- f. Repeat steps d and e for all HP 3577 frequencies in Table 3-9.

Table 3-9 Source Distortion Test Points

| 3577A Frequency | Spectrum Analyzer Frequency | Maximum Allowable Level |
|-----------------|-----------------------------|-------------------------|
| 50 MHz | 250.25 MHz | -50 dBc |
| | 200.25 MHz | -50 dBc |
| | 100.25 MHz | -50 dBc |
| | 150.25 MHz | -50 dBc |
| 100 MHz | 200.25 MHz | -50 dBc |
| | 100.25 MHz | -50 dBc |
| | 99.75 MHz | -50 dBc |
| | 200.50 MHz | -50 dBc |
| | 0.25 MHz | -50 dBc |
| 150 MHz | 150.25 MHz | -50 dBc |
| | 0.25 MHz | -50 dBc |
| | 150.50 MHz | -50 dBc |
| | 0.50 MHz | -50 dBc |
| | 151.00 MHz | -50 dBc |
| | 149.75 MHz | -50 dBc |
| 200 MHz | 100.25 MHz | -50 dBc |
| | 99.75 MHz | -50 dBc |
| | 0.50 MHz | -50 dBc |
| | 199.50 MHz | -50 dBc |
| | 201.00 MHz | -50 dBc |
| | 199.00 MHz | -50 dBc |
| 0.75 MHz | 300.25 MHz | -50 dBc |
| | 301.00 MHz | -50 dBc |
| 99.75 MHz | 400.00 MHz | -50 dBc |

3-17 SOURCE PHASE NOISE TEST

SPECIFICATION:

SSB Phase Noise (1 Hz bandwidth, excluding spurious)

| | |
|------------------|-------------|
| Offset Frequency | Level |
| 100 Hz to 20 kHz | < -70 dBc |

DESCRIPTION:

The 3577A source phase noise is measured normalized to a 1 Hz bandwidth using the noise level function of the 8568B spectrum analyzer. Measurements are made with three offsets for each of two 3577A frequencies.

EQUIPMENT:

Spectrum Analyzer HP 8568B
 RF Cable-24 inch HP 35679A
 BNC Cable-48 inch HP 8120-1840

PROCEDURE:

- a. Preset 3577A.
- b. Connect the RF cable from the HP 3577A source to the spectrum analyzer input 2. Connect the 10 MHz REF OUT from the spectrum analyzer to the HP 3577A EXT REF IN. The EXT REF LED on the HP 3577A front panel should be on.
- c. Set the 3577A to the following conditions:

| | |
|--------------------------------|----------|
| SWEEP TYPE | CW |
| SWEEP TIME (SAMPLE TIME) | .10 sec |
| FREQ | 1.75 MHz |
- d. Preset spectrum analyzer.
- e. Set spectrum analyzer to the following conditions:

| | |
|------------------------|--------------------|
| CENTER FREQUENCY | same as 3577A FREQ |
| FREQUENCY SPAN | 1 kHz |
- f. Press the NORMAL key on the spectrum analyzer to obtain the marker mode.
- g. After one complete sweep press PEAK SEARCH on the spectrum analyzer.
- h. Select MKR—REF LEVEL on spectrum analyzer.
- i. Press shift key (blue key) then NORMAL key in the marker mode block (this is the noise level key).
- j. Move the spectrum analyzer marker to 100 Hz offset (first gradicule to the right of center). Record the marker reading and the ref level reading in the test record.
- k. Calculate the noise level using the following equation:

$$\text{Noise Level (dBc)} = \text{marker reading} - \text{ref level reading}$$
- l. The noise level should be < -70 dBc. Record the calculated value in the test record.
- m. Repeat steps j through l for spectrum analyzer frequency spans of 10 kHz (1 kHz offset in step j) and 100 kHz (10 kHz offset in step j)
- n. Repeat steps d through m for a 3577A frequency of 199.75 MHz.

3-18 API SPUR TEST

SPECIFICATIONS:

Fractional N spurs < -50 dBc

DESCRIPTION:

The API performance of the 3577A is verified by a measurement made with an spectrum analyzer to which the 3577A is phase locked.

EQUIPMENT:

- Spectrum Analyzer HP 8568B
- RF Cable-24 inch HP 35679A
- BNC Cable-48 inch HP 8120-1840

PROCEDURE:

- a. Preset the 3577A to its initial conditions.
- b. Connect the HP 3577A source to input 2 of the spectrum analyzer with the RF cable. Also connect the 10 MHz REF OUT from the spectrum analyzer to the HP 3577A EXT REF IN. The EXT REF LED on the HP 3577A front panel should be on.
- c. Set the 3577A to the following conditions:
 - SWEEP TYPE CW
 - FREQUENCY 1.7636 MHz
- d. Preset the spectrum analyzer.
- e. Set the spectrum analyzer to the following conditions:
 - CENTER FREQUENCY 3577A frequency
 - FREQUENCY SPAN 10 kHz
 - CENTER FREQ STEP SIZE 1360 Hz
- f. In the marker block on the front panel of the spectrum analyzer press the following hardkey sequence: NORMAL, PEAK SEARCH, Δ.
- g. Increase the spectrum analyzer center frequency 1360 Hz by pressing the CENTER FREQUENCY hardkey followed by the ↑ hardkey, and set the FREQUENCY SPAN to 100 Hz.
- h. Let the spectrum analyzer complete the sweep.
- i. Press the PEAK SEARCH hardkey in the marker block on the spectrum analyzer.
- j. Record the marker value in the test record in the 1360 Hz offset column.
- k. Increase the spectrum analyzer center frequency another 1360 Hz by pressing the CENTER FREQUENCY hardkey followed by the ↑ hardkey (total offset 2720 Hz).
- l. Let the spectrum analyzer complete a sweep, then press the PEAK SEARCH hardkey in the marker block.

- m. Record this value in the test record in the 2760 Hz offset column. The larger of the two offset columns is the API level for this frequency (test limit < -50 dBc).
- n. Set the 3577A FREQUENCY to 199.7636 MHz and repeat steps d through m.

3-19 FREQUENCY STABILITY TEST

DESCRIPTION:

The 3577A must be powered up for at least one hour before the frequency stability is verified. A frequency standard is connected to an oscilloscope external trigger. The 3577A 10 MHz REF OUT is connected to the oscilloscope input and the display triggered externally. The oscilloscope controls are adjusted so that one complete cycle fills the screen. The 10 MHz REF OUT is adjusted so that the signal on the screen is stable (indicating that the two frequencies are the same).

As the 3577A REF OUT ages, the signal on the oscilloscope display will drift across the screen. The rate at which the display drifts after one hour of aging is the fractional stability, calculated from the following equation:

$$\text{Fractional stability} = \frac{(\text{Time/Div setting}) (\# \text{ of div of signal drift})}{\text{drift time in seconds}}$$

The frequency stability is defined as the drift rate after one day and is equal to 24 times the fractional stability.

EQUIPMENT:

- Frequency Standard WWVB
- Oscilloscope HP 1980B
- BNC Cable-48 inch HP 8120-1840

PROCEDURE:

NOTE

The 3577A must be powered up for a minimum of one hour before testing.

- a. Preset the 3577A.
- b. Connect the 3577A rear panel 10 MHz OUT to the oscilloscope Channel A input.
- c. Set the oscilloscope controls as follows for Channel A:

- Volts/Div 0.02
- Time/Div 10 nS
- Trigger EXT

- d. Connect the frequency standard to the EXT TRIG connector on the oscilloscope.

- e. The display on the oscilloscope should be a sinewave that may drift across the screen. Adjust A31R2 and A31U1 for an oscilloscope display which does not drift.
- f. Allow the 3577A to age for 1 hour.
- g. Observe the drift rate of the signal. For the oscilloscope settings in step c, the display should not shift more than 1 division in five seconds ($\pm 5 \times 10^{-8}$ per day). Record the drift in the test record.

TABLE 3-10 PERFORMANCE TEST RECORD

| HP Model 3577A | | Tested by _____ | | | |
|---|---------------------|-----------------|----------|-------|------------|
| Network Analyzer | | | | | |
| Serial Number _____ | | Date _____ | | | |
| 3-7 RECEIVER RESIDUAL AND NOISE TEST | | | | | |
| RESIDUAL RESPONSE TEST | | | | | |
| Frequency | | R | Receiver | | Tolerance |
| | | | A | B | |
| 149.625 | MHz | _____ | _____ | _____ | < -100 dBm |
| 149.875 | MHz | _____ | _____ | _____ | < -100 dBm |
| 99.666 666 666 | MHz | _____ | _____ | _____ | < -100 dBm |
| 99.833 333 333 | MHz | _____ | _____ | _____ | < -100 dBm |
| 74.687 5 | MHz | _____ | _____ | _____ | < -100 dBm |
| 74.812 5 | MHz | _____ | _____ | _____ | < -100 dBm |
| 59.7 | MHz | _____ | _____ | _____ | < -100 dBm |
| 59.8 | MHz | _____ | _____ | _____ | < -100 dBm |
| 89.5 | MHz | _____ | _____ | _____ | < -100 dBm |
| 120.0 | MHz | _____ | _____ | _____ | < -100 dBm |
| 149.5 | MHz | _____ | _____ | _____ | < -100 dBm |
| 180.0 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.480 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.960 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.004 0 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.008 0 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.016 0 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.024 0 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.027 777 700 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.10 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.20 | MHz | _____ | _____ | _____ | < -100 dBm |
| 0.000 000 000 | MHz | _____ | _____ | _____ | < - 33 dBm |
| NOISE TEST | | | | | |
| Frequency | | R | Receiver | | Tolerance |
| | | | A | B | |
| 100 Hz | Magnitude point 1 | _____ | _____ | _____ | |
| | Magnitude point 2 | _____ | _____ | _____ | |
| | Magnitude point 3 | _____ | _____ | _____ | |
| | Magnitude point 4 | _____ | _____ | _____ | |
| | Magnitude point 5 | _____ | _____ | _____ | |
| | Magnitude point 6 | _____ | _____ | _____ | |
| | Magnitude point 7 | _____ | _____ | _____ | |
| | Magnitude point 8 | _____ | _____ | _____ | |
| | Magnitude point 9 | _____ | _____ | _____ | |
| | Magnitude point 10 | _____ | _____ | _____ | |
| | Magnitude point 11 | _____ | _____ | _____ | |
| | Average Noise Level | _____ | _____ | _____ | < -100 dBm |

$$-150 + 10 \log_{10} \left[\frac{\sum_{n=1}^{11} (X_n^2)}{500} \right], X = \text{magnitude of each point in nV}$$

| Frequency | | Receiver | | | Tolerance |
|-----------|---------------------|----------|-------|-------|------------|
| | | R | A | B | |
| 30 kHz | Magnitude point 1 | _____ | _____ | _____ | < -110 dBm |
| | Magnitude point 2 | _____ | _____ | _____ | |
| | Magnitude point 3 | _____ | _____ | _____ | |
| | Magnitude point 4 | _____ | _____ | _____ | |
| | Magnitude point 5 | _____ | _____ | _____ | |
| | Magnitude point 6 | _____ | _____ | _____ | |
| | Magnitude point 7 | _____ | _____ | _____ | |
| | Magnitude point 8 | _____ | _____ | _____ | |
| | Magnitude point 9 | _____ | _____ | _____ | |
| | Magnitude point 10 | _____ | _____ | _____ | |
| | Magnitude point 11 | _____ | _____ | _____ | |
| | Average Noise Level | _____ | _____ | _____ | |

$$-150 + 10 \log_{10} \left[\frac{\sum_{n=1}^{11} (X_n^2)}{500} \right], X = \text{magnitude of each point in nV}$$

| | | | | | |
|---------|---------------------|-------|-------|-------|------------|
| 199 MHz | Magnitude point 1 | _____ | _____ | _____ | < -110 dBm |
| | Magnitude point 2 | _____ | _____ | _____ | |
| | Magnitude point 3 | _____ | _____ | _____ | |
| | Magnitude point 4 | _____ | _____ | _____ | |
| | Magnitude point 5 | _____ | _____ | _____ | |
| | Magnitude point 6 | _____ | _____ | _____ | |
| | Magnitude point 7 | _____ | _____ | _____ | |
| | Magnitude point 8 | _____ | _____ | _____ | |
| | Magnitude point 9 | _____ | _____ | _____ | |
| | Magnitude point 10 | _____ | _____ | _____ | |
| | Magnitude point 11 | _____ | _____ | _____ | |
| | Average Noise Level | _____ | _____ | _____ | |

$$-150 + 10 \log_{10} \left[\frac{\sum_{n=1}^{11} (X_n^2)}{500} \right], X = \text{magnitude of each point in nV}$$

3-8 ON CARRIER RETURN LOSS TEST

| Test Frequency | Vref | Vtest | Return Loss $-\{3\text{dB} + 20 \log_{10} (\frac{V_{\text{test}}}{2V_{\text{ref}}})\}$ | Tolerance |
|----------------|-------|-------|---|-----------|
| 175 MHz | _____ | _____ | _____ | > 20 dB |
| 200 MHz | _____ | _____ | _____ | > 20 dB |

3-9 MAGNITUDE AND PHASE DYNAMIC ACCURACY TEST

DYNAMIC LINEARITY TEST

| Ratio Transformer | Magnitude/Phase | R | A | Receiver B | Tolerance |
|-------------------|-----------------|-------|-------|------------|------------------|
| 1.0 | Magnitude | _____ | _____ | _____ | 0.00 ± .04 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± .4 deg |
| .31623 | Magnitude | _____ | _____ | _____ | -10.00 ± .02 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± .2 deg |
| .2 | Magnitude | _____ | _____ | _____ | -13.979 ± .02 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± .2 deg |
| .05 | Magnitude | _____ | _____ | _____ | -26.020 ± .02 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± .2 deg |
| .025 | Magnitude | _____ | _____ | _____ | -32.041 ± .02 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± .2 deg |
| .01 | Magnitude | _____ | _____ | _____ | -40.000 ± .02 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± .2 deg |
| .0031623 | Magnitude | _____ | _____ | _____ | -50.000 ± .02 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± .2 deg |
| .001 | Magnitude | _____ | _____ | _____ | -60.000 ± .05 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± .5 deg |
| .0001 | Magnitude | _____ | _____ | _____ | -80.000 ± .15 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± 1.5 deg |
| .00001 | Magnitude | _____ | _____ | _____ | -100.00 ± .75 dB |
| | Phase | _____ | _____ | _____ | 0.0 ± 7.5 deg |

DYNAMIC LINEARITY (MAGNITUDE VS PHASE)

| R | Receiver A | B | Tolerance |
|-------|------------|-------|-----------|
| _____ | _____ | _____ | < 0.04 dB |

3-10A RECEIVER LEVEL FLATNESS AND ABSOLUTE ACCURACY TEST

Input Mode: 50 Ω, 20 dB

| Frequency | R | Receiver A | B | Tolerance |
|----------------|-------|------------|-------|-----------|
| 100 kHz | _____ | _____ | _____ | ±0.2 dB |
| 5 Hz - 200 MHz | _____ | _____ | _____ | ±0.6 dB |
| 20 Hz - 20 MHz | _____ | _____ | _____ | ±0.3 dB |

Input Mode: 50 Ω, 0 dB

| Frequency | R | Receiver A | B | Tolerance |
|----------------|-------|------------|-------|-----------|
| 100 kHz | _____ | _____ | _____ | ±0.2 dB |
| 5 Hz - 200 MHz | _____ | _____ | _____ | ±0.6 dB |
| 20 Hz - 20 MHz | _____ | _____ | _____ | ±0.3 dB |

Input Mode: 1 MΩ, 20 dB

| Frequency | R | Receiver A | B | Tolerance |
|----------------|-------|------------|-------|-----------|
| 100 kHz | _____ | _____ | _____ | ±0.2 dB |
| 5 Hz - 200 MHz | _____ | _____ | _____ | ±1.0 dB |
| 20 Hz - 20 MHz | _____ | _____ | _____ | ±0.5 dB |

Input Mode: 1 MΩ, 0 dB

| Frequency | R | Receiver A | B | Tolerance |
|----------------|-------|------------|-------|-----------|
| 100 kHz | _____ | _____ | _____ | ±0.2 dB |
| 5 Hz - 200 MHz | _____ | _____ | _____ | ±1.0 dB |
| 20 Hz - 20 MHz | _____ | _____ | _____ | ±0.5 dB |

3-10B ALTERNATE RECEIVER LEVEL FLATNESS AND ABSOLUTE ACCURACY TEST

Power splitter calibration

Tolerance

D1 ____ dB D2 ____ dB D3 ____ dB

- 29.5 ± .3 dB

Thermal converter calibration

Resistance _____ Ω
 AC Reference level (SQR(.001 x Resistance)) _____ Vrms

50 ± .1 Ω
 .2236 ± .0002 Vrms

Flatness and absolute accuracy

3577A source AMPTD _____
 Power meter reading at 10 MHz _____
 Voltmeter reading at 10 MHz _____ 1.000 ± .0500

Input impedance = 50 Ω, attenuation = -20 dB

| Frequency | Receiver | | | Tolerance |
|---|----------|-------|-------|-------------|
| | R | A | B | |
| Thermal converter measurements (enter readings or attach printout) | | | | |
| Absolute level at .1 MHz | _____ | _____ | _____ | 0.0 ± .2 dB |
| .000005 MHz | _____ | _____ | _____ | |
| .00002 MHz | _____ | _____ | _____ | |
| .0001 MHz | _____ | _____ | _____ | |
| .001 MHz | _____ | _____ | _____ | |
| .002 MHz | _____ | _____ | _____ | |
| .005 MHz | _____ | _____ | _____ | |
| .01 MHz | _____ | _____ | _____ | |
| .02 MHz | _____ | _____ | _____ | |
| .05 MHz | _____ | _____ | _____ | |
| .1 MHz | _____ | _____ | _____ | |
| .2 MHz | _____ | _____ | _____ | |
| .5 MHz | _____ | _____ | _____ | |
| 1 MHz | _____ | _____ | _____ | |
| 2 MHz | _____ | _____ | _____ | |
| 5 MHz | _____ | _____ | _____ | |
| 10 MHz | _____ | _____ | _____ | |
| 15 MHz | _____ | _____ | _____ | |
| 20 MHz | _____ | _____ | _____ | |

Power meter measurements (enter readings or attach printout)

| | | | |
|---------|-------|-------|-------|
| 50 MHz | _____ | _____ | _____ |
| 75 MHz | _____ | _____ | _____ |
| 100 MHz | _____ | _____ | _____ |
| 120 MHz | _____ | _____ | _____ |
| 140 MHz | _____ | _____ | _____ |
| 160 MHz | _____ | _____ | _____ |
| 170 MHz | _____ | _____ | _____ |
| 180 MHz | _____ | _____ | _____ |
| 190 MHz | _____ | _____ | _____ |
| 200 MHz | _____ | _____ | _____ |

Flatness (maximum - minimum)

5 Hz - 200 MHz _____ < .6 dB
 20 Hz - 20 MHz _____ < .3 dB

Input impedance = 50 Ω, attenuation = 0 dB

| Frequency | Receiver | | | Tolerance |
|---|----------|-------|-------|-------------|
| | R | A | B | |
| Thermal converter measurements (enter readings or attach printout) | | | | |
| Absolute level at .1 MHz | _____ | _____ | _____ | 0.0 ± .2 dB |
| .000005 MHz | _____ | _____ | _____ | |
| .00002 MHz | _____ | _____ | _____ | |
| .0001 MHz | _____ | _____ | _____ | |
| .001 MHz | _____ | _____ | _____ | |
| .002 MHz | _____ | _____ | _____ | |
| .005 MHz | _____ | _____ | _____ | |
| .01 MHz | _____ | _____ | _____ | |
| .02 MHz | _____ | _____ | _____ | |
| .05 MHz | _____ | _____ | _____ | |
| .1 MHz | _____ | _____ | _____ | |
| .2 MHz | _____ | _____ | _____ | |
| .5 MHz | _____ | _____ | _____ | |
| 1 MHz | _____ | _____ | _____ | |
| 2 MHz | _____ | _____ | _____ | |
| 5 MHz | _____ | _____ | _____ | |
| 10 MHz | _____ | _____ | _____ | |
| 15 MHz | _____ | _____ | _____ | |
| 20 MHz | _____ | _____ | _____ | |

Power meter measurements (enter readings or attach printout)

30 MHz _____
 50 MHz _____
 75 MHz _____
 100 MHz _____
 120 MHz _____
 140 MHz _____
 160 MHz _____
 170 MHz _____
 180 MHz _____
 190 MHz _____
 200 MHz _____

Flatness (maximum – minimum)

5 Hz - 200 MHz _____ < .6 dB
 20 Hz - 20 MHz _____ < .3 dB

Input impedance = 1 MΩ, attenuation = -20 dB

| Frequency | Receiver | | | Tolerance |
|---------------------------------------|----------|-------|-------|-------------|
| | R | A | B | |
| Thermal converter measurements | | | | |
| (enter readings or attach printout) | | | | |
| Absolute level at .1 MHz | _____ | _____ | _____ | 0.0 ± .2 dB |
| .000005 MHz | _____ | _____ | _____ | |
| .00002 MHz | _____ | _____ | _____ | |
| .0001 MHz | _____ | _____ | _____ | |
| .001 MHz | _____ | _____ | _____ | |
| .01 MHz | _____ | _____ | _____ | |
| .002 MHz | _____ | _____ | _____ | |
| .005 MHz | _____ | _____ | _____ | |
| .01 MHz | _____ | _____ | _____ | |
| .02 MHz | _____ | _____ | _____ | |
| .05 MHz | _____ | _____ | _____ | |
| .1 MHz | _____ | _____ | _____ | |
| .2 MHz | _____ | _____ | _____ | |
| .5 MHz | _____ | _____ | _____ | |
| 1 MHz | _____ | _____ | _____ | |
| 2 MHz | _____ | _____ | _____ | |
| 5 MHz | _____ | _____ | _____ | |
| 10 MHz | _____ | _____ | _____ | |
| 15 MHz | _____ | _____ | _____ | |
| 20 MHz | _____ | _____ | _____ | |

Flatness (maximum – minimum)

5 Hz - 20 MHz _____ < 1.0 dB
 20 Hz - 20 MHz _____ < .5 dB

Input impedance = 1 MΩ, attenuation = 0 dB

| Frequency | Receiver | | | Tolerance |
|---------------------------------------|-------------------------------------|-------|-------|-------------|
| | R | A | B | |
| Thermal converter measurements | (enter readings or attach printout) | | | |
| Absolute level at .1 MHz | _____ | _____ | _____ | 0.0 ± .2 dB |
| .000005 MHz | _____ | _____ | _____ | |
| .00002 MHz | _____ | _____ | _____ | |
| .0001 MHz | _____ | _____ | _____ | |
| .001 MHz | _____ | _____ | _____ | |
| .002 MHz | _____ | _____ | _____ | |
| .005 MHz | _____ | _____ | _____ | |
| .01 MHz | _____ | _____ | _____ | |
| .02 MHz | _____ | _____ | _____ | |
| .05 MHz | _____ | _____ | _____ | |
| .1 MHz | _____ | _____ | _____ | |
| .2 MHz | _____ | _____ | _____ | |
| .5 MHz | _____ | _____ | _____ | |
| 1 MHz | _____ | _____ | _____ | |
| 2 MHz | _____ | _____ | _____ | |
| 5 MHz | _____ | _____ | _____ | |
| 10 MHz | _____ | _____ | _____ | |
| 15 MHz | _____ | _____ | _____ | |
| 20 MHz | _____ | _____ | _____ | |
| Flatness (maximum - minimum) | | | | |
| 5 Hz - 20 MHz | _____ | _____ | _____ | < 1.0 dB |
| 20 Hz - 20 MHz | _____ | _____ | _____ | < .5 dB |

3-11 RECEIVER LEVEL RATIO AMPLITUDE AND PHASE ACCURACY TEST

Length of Cables: B _____ A _____ R _____

Input Impedance = 50 Ω

Frequency = 100 kHz, Equal Attenuators

| | A/R | B/R | A/B | D2/D1 | D3/D1 | D2/D3 | Tolerance |
|-----------|-------|-------|-------|-------|-------|-------|-----------|
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | ±0.15 dB |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | ±2.0 deg |

Frequency = 5 Hz - 200 MHz, Equal Attenuators

| | A/R | B/R | A/B | D2/D1 | D3/D1 | D2/D3 | Tolerance |
|-----------|-------|-------|-------|-------|-------|-------|--------------|
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | < 10 deg p-p |
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | < 0.4 dB p-p |

Frequency = 100 kHz, Unequal Attenuators

| | D2/R | A/D1 | A/D3 | D2/B | B/D1 | D3/R | Tolerance |
|-----------|-------|-------|-------|-------|-------|-------|-----------|
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | ±0.15 dB |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | ±2.0 deg |

Frequency = 5 Hz - 200 MHz, Unequal Attenuators

| | D2/R | A/D1 | A/D3 | D2/B | B/D1 | D3/R | Tolerance |
|-----------|-------|-------|-------|-------|-------|-------|--------------|
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | < 18 deg p-p |
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | < 0.7 dB p-p |

Frequency = 20 Hz - 20 MHz, Equal Attenuators

| | A/R | B/R | A/B | D2/D1 | D3/D1 | D2/D3 | Tolerance |
|-----------|-------|-------|-------|-------|-------|-------|--------------|
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | < 0.3 dB p-p |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | < 2 deg p-p |

Frequency = 20 Hz - 20 MHz, Unequal Attenuators

| | D2/R | A/D1 | A/D3 | D2/B | B/D1 | D3/R | Tolerance |
|-----------|-------|-------|-------|-------|-------|-------|---------------|
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | < 0.45 dB p-p |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | < 10 deg p-p |

| | | | | | | | |
|--|-------------|-------------|-------------|--------------|--------------|--------------|------------------|
| Input Impedance = 1 MΩ | | | | | | | |
| Frequency = 100 kHz, Equal Attenuators | | | | | | | |
| | A/R | B/R | A/B | D2/D1 | D3/D1 | D2/D3 | Tolerance |
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | ±0.2 dB |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | ±2.0 deg |
| Frequency = 5 Hz - 20 MHz, Equal Attenuators | | | | | | | |
| | A/R | B/R | A/B | D2/D1 | D3/D1 | D2/D3 | Tolerance |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | < 10 deg p-p |
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | < 0.6 dB p-p |
| Frequency = 100 kHz, Unequal Attenuators | | | | | | | |
| | D2/R | A/D1 | A/D3 | D2/B | B/D1 | D3/R | Tolerance |
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | ±0.2 dB |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | ±2.0 deg |
| Frequency = 5 Hz - 20 MHz, Unequal Attenuators | | | | | | | |
| | D2/R | A/D1 | A/D3 | D2/B | B/D1 | D3/R | Tolerance |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | < 18 deg p-p |
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | < 1.0 dB p-p |
| Frequency = 20 Hz - 20 MHz, Equal Attenuators | | | | | | | |
| | A/R | B/R | A/B | D2/D1 | D3/D1 | D2/D3 | Tolerance |
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | < 0.3 dB p-p |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | < 5 deg p-p |
| Frequency = 20 Hz - 20 MHz, Unequal Attenuators | | | | | | | |
| | D2/R | A/D1 | A/D3 | D2/B | B/D1 | D3/R | Tolerance |
| Amplitude | _____ | _____ | _____ | _____ | _____ | _____ | < 0.5 dB p-p |
| Phase | _____ | _____ | _____ | _____ | _____ | _____ | < 13 deg p-p |

3-12 RECEIVER CROSSTALK TEST

| Input Channel | Receivers | | Maximum |
|---------------|-----------|---------|-----------|
| R | A _____ | B _____ | < -100 dB |
| A | B _____ | R _____ | < -100 dB |
| B | A _____ | R _____ | < -100 dB |

3-13 RECEIVER RETURN LOSS TEST

| Receiver | Actual | Maximum |
|----------|--------|----------|
| A | _____ | < -25 dB |
| B | _____ | < -25 dB |
| R | _____ | < -25 dB |

3-14A SOURCE FLATNESS AND ABSOLUTE ACCURACY TEST

| Frequency | Actual | Tolerance |
|---------------------------|--------|---------------------|
| 100 kHz (Absolute) | _____ | ±10 dB |
| 5 Hz - 200 MHz (Flatness) | _____ | 1.5 dB peak-to-peak |

3-14B ALTERNATE SOURCE FLATNESS AND ABSOLUTE ACCURACY TEST

| Frequency | Amplitude | Tolerance |
|------------------------|-----------|---------------|
| 5 Hz | _____ | 15 dBm ± 1 dB |
| 10 Hz | _____ | |
| 100 Hz | _____ | |
| 1 kHz | _____ | |
| 10 kHz | _____ | |
| 20 kHz | _____ | |
| 50 kHz | _____ | |
| 100 kHz | _____ | |
| 200 kHz | _____ | |
| 500 kHz | _____ | |
| 1 MHz | _____ | |
| 2 MHz | _____ | |
| 5 MHz | _____ | |
| 10 MHz | _____ | |
| 20 MHz | _____ | |
| 50 MHz | _____ | |
| 100 MHz | _____ | |
| 120 MHz | _____ | |
| 140 MHz | _____ | |
| 160 MHz | _____ | |
| 180 MHz | _____ | |
| 200 MHz | _____ | |
| Flatness (max. - min.) | _____ | < 1.5 dB |

3-15 SOURCE ATTENUATOR ACCURACY

| Amplitude | Attenuation | Max | Min | Tolerance |
|-----------|-------------|-------|-------|-----------|
| +12 dBm | 0 dB | Ref | Ref | |
| + 8 dBm | -4 dB | _____ | _____ | ± 0.2 dB |
| + 4 dBm | -8 dB | _____ | _____ | ± 0.2 dB |
| -4 dBm | -16 dB | _____ | _____ | ± 0.32 dB |
| -20 dBm | -32 dB | _____ | _____ | ± 0.64 dB |
| -36 dBm | -48 dB | _____ | _____ | ± 0.96 dB |

3-16 SOURCE DISTORTION AND SPUR TEST

Harmonics

| 3577A Frequency | Actual | Maximum |
|-----------------|--------|----------|
| 250 kHz | _____ | < -30 dB |
| 459 kHz | _____ | < -30 dB |
| 10 MHz | _____ | < -30 dB |
| 100 MHz | _____ | < -30 dB |
| 150 MHz | _____ | < -30 dB |
| 200 MHz | _____ | < -30 dB |

| HP 3577A Frequency | Test Frequency | Actual | Maximum |
|--------------------|----------------|--------|-----------|
| 50 MHz | 250.25 MHz | _____ | < -50 dBc |
| | 200.25 MHz | _____ | < -50 dBc |
| | 100.25 MHz | _____ | < -50 dBc |
| | 150.25 MHz | _____ | < -50 dBc |
| | 200.25 MHz | _____ | < -50 dBc |
| 100 MHz | 100.25 MHz | _____ | < -50 dBc |
| | 99.75 MHz | _____ | < -50 dBc |
| | 200.50 MHz | _____ | < -50 dBc |
| | 0.25 MHz | _____ | < -50 dBc |
| 150 MHz | 150.25 MHz | _____ | < -50 dBc |
| | 0.25 MHz | _____ | < -50 dBc |
| | 150.50 MHz | _____ | < -50 dBc |
| | 0.50 MHz | _____ | < -50 dBc |
| | 151.00 MHz | _____ | < -50 dBc |
| 200 MHz | 149.75 MHz | _____ | < -50 dBc |
| | 100.25 MHz | _____ | < -50 dBc |
| | 99.75 MHz | _____ | < -50 dBc |
| | 0.50 MHz | _____ | < -50 dBc |
| | 199.50 MHz | _____ | < -50 dBc |
| 0.75 MHz | 201.00 MHz | _____ | < -50 dBc |
| | 199.00 MHz | _____ | < -50 dBc |
| | 300.25 MHz | _____ | < -50 dBc |
| 99.75 MHz | 301.00 MHz | _____ | < -50 dBc |
| | 400.00 MHz | _____ | < -50 dBc |
| 10.75 MHz | 11.25 MHz | _____ | < -50 dBc |
| 98.75 MHz | 99.25 MHz | _____ | < -50 dBc |
| 198.75 MHz | 190.25 MHz | _____ | < -50 dBc |

3-17 SOURCE PHASE NOISE TEST

| 3577A Source Frequency | Offset Frequency | Marker Reading | Ref Level | Noise Level | Maximum Level |
|------------------------|------------------|----------------|-----------|-------------|---------------|
| 1.75 MHz | 100 Hz | _____ | - _____ | = _____ | < -70 dBc |
| | 1 kHz | _____ | - _____ | = _____ | < -70 dBc |
| | 10 kHz | _____ | - _____ | = _____ | < -70 dBc |
| 199.75 MHz | 100 Hz | _____ | - _____ | = _____ | < -70 dBc |
| | 1 kHz | _____ | - _____ | = _____ | < -70 dBc |
| | 10 kHz | _____ | - _____ | = _____ | < -70 dBc |

3-18 API SPUR TEST

| 3577A Frequency | 1360 Hz Offset | 2720 Hz Offset | Maximum Level |
|-----------------|----------------|----------------|---------------|
| 1.7636 MHz | _____ | _____ | < -50 dBc |
| 199.7636 MHz | _____ | _____ | < -50 dBc |

3-19 TIMEBASE TEST Actual Maximum

10 MHz Drift (1 hour) _____ < 1 Div/5 sec

SECTION IV ADJUSTMENTS

Table of Contents

| | | |
|------|--|------|
| 4-1 | Introduction | 4-1 |
| 4-2 | Equipment Required | 4-1 |
| 4-3 | Safety Considerations | 4-1 |
| 4-4 | Related Adjustments | 4-2 |
| 4-5 | Power Supply Adjustments | 4-8 |
| 4-6 | Synthesizer Tuning Range Adjustment | 4-10 |
| 4-7 | Synthesizer 100 kHz Null Adjustment | 4-11 |
| 4-8 | API Adjustments | 4-12 |
| 4-9 | Local Oscillator Leveling Loop Adjustments | 4-14 |
| 4-10 | Local Oscillator 300 MHz Filter Adjustments | 4-15 |
| 4-11 | Local Oscillator 200 MHz Filter Adjustments | 4-16 |
| 4-12 | Oven Board 10 MHz Reference Frequency Adjustment | 4-18 |
| 4-13 | Oven Heater Shutdown Adjustment | 4-18 |
| 4-14 | Reference Board 10 MHz Oscillator Adjustment | 4-19 |
| 4-15 | 300 MHz Output Level Peaking Adjustment | 4-20 |
| 4-16 | Offset Board Oscillator Tuning Range Adjustment | 4-20 |
| 4-17 | Source Flatness Adjustment | 4-21 |
| 4-18 | Source Output Board Filter Adjustment | 4-22 |
| 4-19 | Source Amplitude and Step Adjustments | 4-23 |
| 4-20 | On Carrier Return Loss Adjustment | 4-24 |
| 4-21 | Receiver Return Loss Adjustment | 4-25 |
| 4-22 | Input 50 Ω Gain Adjustment | 4-26 |
| 4-23 | Input 1 M Ω Gain Adjustment | 4-27 |
| 4-24 | Input 1 M Ω Attenuator Adjustment | 4-28 |
| 4-25 | Input 1 M Ω Capacitance Adjustment | 4-29 |
| 4-26 | Input Local Oscillator Feedthrough Adjustment | 4-30 |
| 4-27 | Input Notch Filter Adjustment | 4-30 |
| 4-28 | Input Variable Gain Amplifier DC Offset Adjustment | 4-32 |
| 4-29 | Input 250 kHz Filter Adjustment | 4-34 |
| 4-30 | Input Phase Zero Adjustment | 4-36 |
| 4-31 | Input Level Flatness Adjustment | 4-38 |
| 4-32 | 300 MHz Band Pass Filter Adjustment | 4-42 |

List of Tables

| | | |
|-----|--|------|
| 4-1 | Adjustment List..... | 4-2 |
| 4-2 | Post Repair/Interactive Adjustments..... | 4-4 |
| 4-3 | Performance Test Adjustments..... | 4-6 |
| 4-4 | Reference Board Phase Offset..... | 4-37 |

List of Figures

| | | |
|-----|--|------|
| 4-1 | On Carrier Return Loss Test Set Up..... | 4-25 |
| 4-2 | 14 kHz Filter Response..... | 4-31 |
| 4-3 | 250 kHz Filter Response..... | 4-35 |
| 4-4 | Input Level Calibration Test Set Up..... | 4-38 |
| 4-5 | Input Level Flatness Test Set Up..... | 4-41 |
| 4-6 | Adjustment Locations..... | 4-43 |
| 4-7 | Individual Board Adjustment Locations..... | 4-45 |

SECTION IV ADJUSTMENTS

4-1 INTRODUCTION

This section describes adjustments and checks required to bring the instrument within the specifications listed in Table 1-1. These procedures should only be performed if the specifications of Table 1-1 are not met, if instructed to do so in the troubleshooting section, or after part and/or component replacement. These procedures should not be performed as a routine maintenance procedure.

Table 4-1 lists the adjustment procedure in tabular form and the adjustment functions. Figures 4-4 and 4-5 illustrate the adjustment locations within the instrument. Table 4-2 lists all interrelated and interactive adjustments. Table 4-3 lists possible solutions for failing performance tests.

NOTE

Before performing any adjustments, allow the instrument to warm up for 1 hour. Adjustments must be made with all internal shields and covers in place and the instrument in thermal equilibrium.

4-2 EQUIPMENT REQUIRED

Table 1-2 lists the equipment required for the adjustment procedures. Any equipment which meets the critical specifications given in the table may be substituted for the recommended model.

4-3 SAFETY CONSIDERATIONS

Although the -hp- 3577A is designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure operation and to keep the unit in safe condition. Service and adjustments should be performed only by qualified personnel who are aware of the hazards involved.

WARNING

Any interruption of the protective (grounding) conductor inside or outside the unit, or disconnection of the protective earth terminal is likely to make the unit hazardous. Capacitors inside the -hp- 3577A may still be charged even though the -hp- 3577A has been removed from mains supply.

Only fuses with the required rated current and specified type should be used for replacement. The use of repaired fuses and short circuiting of fuse holders is not permitted. Whenever it is likely that the protection offered by the fuse has been impaired, the -hp- 3577A must be made inoperative and secured against unintended operation.

Adjustments described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

4-4 RELATED ADJUSTMENTS

The following adjustment procedures are written so that all interactive adjustments are made in the same paragraph. Adjustments in paragraphs which interact with those in other paragraphs are listed in Table 4-2. Also listed in Table 4-2 are the Performance Tests which should be run after an adjustment has been made to be sure the instrument meets the specifications listed in Table 1-1. Table 4-3 lists adjustment procedures, possible problems, and padding parts to correct failing performance tests.

Table 4-1 Adjustment List

| Adjustment Name | Reference Designator | Adjustment Paragraph | Service Sheet | Description |
|----------------------|----------------------|----------------------|---------------|---------------------------|
| | A1R44 | 4-28 | | VGA DC Offset |
| | A1C112 | 4-25 | | Input Capacitance |
| | A1C114 | 4-24 | | 20 dB Attenuation |
| PHASE ADJ | A1R74 | 4-30 | | Input Phase Zero |
| RTN LOSS ADJ | A1R172 | 4-21 | | Return Loss |
| FLATNESS ADJ | A1R173 | 4-31 | | Level Flatness |
| LO FEED THRU ADJ | A1R141 | 4-26 | | L.O. Feedthrough |
| | A1L3 | 4-29 | | 250 kHz Filter |
| | A1L4 | 4-29 | | 250 kHz Filter |
| | A1L5 | 4-29 | | 250 kHz Filter |
| 50 Ω GAIN ADJ | A1R71 | 4-22 | | 50 Ω Gain |
| | | | | |
| HI Z GAIN ADJ | A1R76 | 4-23 | | HI Z Gain |
| | A1C26 | 4-27 | | 10 kHz Filter |
| | A1C20 | 4-27 | | 10 kHz Filter |
| R PHASE ADJ | A4C50 | 4-9 | | R Channel LO Output Level |
| A PHASE ADJ | A4C70 | 4-9 | | A Channel LO Output Level |
| B PHASE ADJ | A4C90 | 4-9 | | B Channel LO Output level |
| | A4L2 | 4-10 | | 300 MHz Filter 1 |
| | A4L3 | 4-10 | | 300 MHz Filter 1 |
| | A4L4 | 4-10 | | 300 MHz Filter 2 |
| | A4L5 | 4-10 | | 300 MHz Filter 2 |
| | A4L7 | 4-11 | | 200 MHz Filter Zero |
| | A4L8 | 4-11 | | 200 MHz Filter Zero |
| | A4L9 | 4-11 | | 200 MHz Filter Flatness |
| | A4L100 | 4-11 | | 200 MHz Filter Zero |
| | A4L101 | 4-11 | | 200 MHz Filter Zero |
| | A4L102 | 4-11 | | 200 MHz Filter Flatness |
| | A5R9 | 4-16 | | Offset Tuning Range |

Table 4-1 Adjustment List (Cont'd)

| Adjustment Name | Reference Designator | Adjustment Paragraph | Service Sheet | Description |
|-------------------|----------------------|----------------------|---------------|-----------------------|
| 10 MHz ADJ | A6R12 | 4-14 | | 10 MHz Tuning Range |
| | A6L33 | 4-15 | | 300 MHz peaking |
| API 1 ADJ | A7R76 | 4-8 | | API 1 |
| API 2 ADJ | A7R74 | 4-8 | | API 2 |
| API 3 ADJ | A7R73 | 4-8 | | API 3 |
| API 4 ADJ | A7R88 | 4-8 | | API 4 |
| 100 kHz NULL ADJ | A7R161 | 4-6 | | VCO Tuning Range |
| | A7R107 | 4-7 | | 100 kHz Pedestal Null |
| STEP 1 | A8R142 | 4-19 | | Step Cal 1 |
| LVL 1 | A8R144 | 4-19 | | Level Cal 1 |
| STEP 2 | A8R157 | 4-19 | | Step Cal 2 |
| LVL 2 | A8R156 | 4-19 | | Level Cal 2 |
| HIGH FREQ | A8C155 | 4-17 | | Source Flatness |
| RTN LOSS | A8C71 | 4-20 | | Output Return Loss |
| | A8L11 | 4-18 | | 200 MHz Filter 1 |
| | A8L12 | 4-18 | | 200 MHz Filter 1 |
| | A8L13 | 4-18 | | 200 MHz Filter 1 |
| | A8L14 | 4-18 | | 200 MHz Filter 2 |
| | A8L15 | 4-18 | | 200 MHz Filter 2 |
| | A8L123 | 4-18 | | 300 MHz Filter 2 |
| | A8L124 | 4-18 | | 300 MHz Filter 2 |
| | A8L223 | 4-18 | | 300 MHz Filter 1 |
| | A8L224 | 4-18 | | 300 MHz Filter 1 |
| +15 V ADJ | A21R122 | 4-5 | | +15 V Output Level |
| -15 V ADJ | A21R124 | 4-5 | | -15 V Output Level |
| + 5 V ADJ | A21R22 | 4-5 | | + 5 V Output Level |
| OVEN SHUT OFF ADJ | A31R9 | 4-13 | | Shutdown Level |
| FINE FREQ ADJ | A31R2 | 4-12 | | Fine Frequency |
| COARSE FREQ ADJ | A31U1 | 4-12 | | Coarse Frequency |

TABLE 4-2 POST REPAIR/INTERACTIVE ADJUSTMENTS

| Repaired/Adjusted sub-block | Recommended Performance Check and/or Adjustment procedure | Paragraph Number |
|--|--|--|
| All A1 board analog repairs | <ol style="list-style-type: none"> 1. All receiver adjustments 2. All receiver performance tests | 4-21 through 4-31 3-7 & 3-9 through 3-13 |
| All A1 board digital repairs | <ol style="list-style-type: none"> 1. All Operational Verification tests for the receiver board 2. Input 50 Ω Gain Adjustment 3. Input 1 MΩ Gain Adjustment | 3-5 4-22 4-23 |
| All A4 board repairs | <ol style="list-style-type: none"> 1. Receiver Level Flatness 2. Input 50 Ω Gain Adjustment 3. Input 1 MΩ Gain Adjustment 4. Input Phase Zero Adjustment | 3-10 4-22 4-23 4-30 |
| All A5 board repairs | <ol style="list-style-type: none"> 1. Check A5 Fault Isolation Signals 2. Source Distortion & Spur Test | 2-11 3-16 |
| All A6 board repairs | <ol style="list-style-type: none"> 1. Check A6 Fault Isolation Signals | 2-11 |
| All A7 API and VCO repairs and adjustments | <ol style="list-style-type: none"> 1. Receiver Residuals & Noise Test 2. Source Distortion and Spur Test 3. Source Phase Noise Test 4. API Spur Test 5. Synthesizer 100 kHz Null Adjustment 6. API Adjustments | 3-7 3-16 3-17 3-18 4-7 4-8 |
| All A8 Filter and Amplifier repairs and adjustments | <ol style="list-style-type: none"> 1. Source Distortion and Spur Test 2. Source Flatness and Absolute Accuracy Test 3. Source Amplitude and Step Adjustments 4. Source Flatness Adjustment | 3-16 3-14 4-19 4-17 |
| A8 Freq Gain Error Correction and Amplitude leveling repairs | <ol style="list-style-type: none"> 1. Source Flatness and Absolute Accuracy Test 2. On Carrier Return Loss Test 3. Source Amplitude and Step Adjustments 4. On Carrier Return Loss Adjustment | 3-14 3-8 4-19 4-20 |

Table 4-2 POST REPAIR/INTERACTIVE ADJUSTMENTS (Cont'd)

| Repaired/Adjusted sub-block | Recommended Performance Check and/or Adjustment procedure | Paragraph Number |
|-----------------------------|--|---|
| All A11 board repairs | <ol style="list-style-type: none"> 1. All Power On Self Tests 2. All Service Diagnostics | <p style="text-align: right;">2-7</p> <p style="text-align: right;">2-10</p> |
| All A13 board repairs | <ol style="list-style-type: none"> 1. All Power On Self Tests 2. All Service Diagnostics | <p style="text-align: right;">2-7</p> <p style="text-align: right;">2-10</p> |
| All A16 board repairs | <ol style="list-style-type: none"> 1. DISP HP-IB Service Diagnostic | <p style="text-align: right;">2-10</p> |
| All A21 board repairs | <ol style="list-style-type: none"> 1. Main Power Supply Fault Isolation | <p style="text-align: right;">2-11</p> |
| All A31 board repairs | <ol style="list-style-type: none"> 1. Time Base Stability Test 2. Oven Board 10 MHz Reference Frequency Adjustment | <p style="text-align: right;">3-19</p> <p style="text-align: right;">4-12</p> |

Table 4-3 Performance Test Adjustments

| FAILING PERFORMANCE TEST | ADJUSTMENT PROCEDURE | POSSIBLE PROBLEM OR PADDING PART |
|---|--|---|
| 3-7 step h: frequency 0.0277777 MHz 0.000 MHz Other step s: frequency 100 Hz 30 kHz 199 MHz | 4-8 A7R76 4-26 4-26 | Low output from A4 A1 first IF mixer A1 before the first mixer A11U61 Boards not screwed into card nest Improperly seated input shield on receiver board Broken RF cables |
| 3-8 | 4-20 | 60 dB attenuator on A8 |
| 3-9 step u: magnitude step w: lower ratio transformer settings step hh | 4-28 4-28 A1R44 adj. until the test passes or do adj. 4-28 | A1 first IF to third IF (mixer, op amps in 10 kHz IF) A4 local oscillator levels Check for ground loops before doing any adjustments. Set up must be as specified in Fig. 3-3 Low power supply |
| 3-10A step r: 50 Ω step r: 1 M Ω | 4-22 4-23 | A1 input buffer relay A1 input buffer A1 first mixer A4 low local osc. levels |
| step v | 4-31 | A1 first mixer to input connector inclusive A1R140 |
| step v: 1 M Ω frequencies <10 MHz | 4-24 | |

Table 4-3 Performance Test Adjustments(cont)

| FAILING PERFORMANCE TEST | ADJUSTMENT PROCEDURE | POSSIBLE PROBLEM OR PADDING PART |
|---------------------------------------|----------------------|--|
| 3-10B | | |
| step dd | 4-22 | |
| step ii | 4-31 | Same as 3-10A step v |
| step rr | 4-23 | Same as 3-10A step r |
| step tt: 1 MΩ frequencies < 10 MHz | 4-24 | |
| 3-11 | | |
| step dd | 4-22 | |
| step ff | 4-30 | |
| step hh | | Cables in the box not properly hooked up If parts were replaced, see service notes HP 3577A-11/13 |
| step kk | 4-31 | If parts were replaced, see service note HP 3577A-12 |
| step rr | | Vary the length of A1R140 |
| step uu | | Same as 3-11 step hh |
| step uu: frequencies < 100 Hz | | A1C101 |
| 3-12 | | A1U43 |
| 3-13 | 4-21 | If A1K1 or A1K2 was replaced, lead length can affect return loss |
| 3-14A | | |
| step y | 4-17 | |
| step x | 4-19 | |
| 3-14B | | |
| step g | 4-19 | |
| step h | | A8 |
| step m | 4-17 | |
| 3-15 | | 60 dB attenuator on A8 |
| 3-16 | | |
| step c: 2nd harmonic of 100MHz | | A8Q45 and A8Q46 |
| step f | 4-6 | |
| 3-17 | 4-6 | A7 voltage regulators A7 VCO |
| 3-18 | 4-8 | |

4-5 POWER SUPPLY ADJUSTMENTS

DESCRIPTION:

This procedure checks and adjusts all power supplies on the A21 Main Power Supply board for correct voltage and minimum line related ripple.

EQUIPMENT:

DC Voltmeter HP 3456A

PROCEDURE:

WARNING

Adjustments made to the power supply are in close proximity to terminals with AC voltages capable of causing personal injury. The main power supply filter capacitors are charged to approximately 250 V. Even with the power switch in the OFF position, these voltages may be present. Before making equipment connections to the FET POWER and FET DRIVE circuits, turn OFF the instrument's power switch, remove the power cord, and place jumpers A21W1 and A21W2 into the TEST position using insulated pliers. The jumpers must remain in the TEST position for approximately 2 minutes to insure the capacitors are fully discharged. After performing these steps, make all equipment connections and connect the instrument to the power line.

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the bottom cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Set the voltmeter as follows:
 - Function DC
 - Range AUTO
 - Trigger Internal
 - Math OFF
 - Sample Rate Maximum
- c. The switching power supply monitors the +5 V power supply, so this supply must be loaded nominally when making adjustments. Verify connection of power supply cables to A21J1, A21J2, and A21J8.
- d. Connect the voltmeter negative terminal to the instrument chassis.
- e. Connect the voltmeter positive terminal to TP26. If necessary, adjust A21R22 for $+5.10 \pm 0.02$ V.

NOTE

The +15 V and -15 V power supplies derive their reference from the +5 V supply. If the +5 V supply is not within specifications, do not adjust the 15 V supplies.

- f. Connect the voltmeter positive terminal to TP8. If necessary, adjust A21R122 for +15.00 (0.00, +0.05) V.
- g. Connect the voltmeter positive terminal to TP9. If necessary, adjust A21R124 for -15.00 \pm 0.05 V.
- h. Connect the voltmeter positive terminal to TP10. The voltmeter should read +8.0 \pm 1.0 V.

NOTE

The +8 V power supply is not adjustable. This power supply feeds unregulated DC voltage to the A6 Reference and A7 Synthesizer boards. If the voltage is not correct, turn the POWER switch OFF and remove the A6 and A7 boards. Turn the POWER switch ON, and check the +8 V supply again. If there is no change in the supply voltage after the boards are removed, the problem is most likely on the A21 Main Power Supply board.

- i. Move the voltmeter negative terminal to TP12.

NOTE

The isolated +5 V supply is isolated from the other instrument power supplies by transformer T1. Be sure to use the correct ground when checking this supply.

- j. Connect the voltmeter positive terminal to TP11. The voltmeter should read +5.00 \pm 0.25 V.

NOTE

The isolated +5 V supply is not adjustable. If the voltage is not correct, disconnect the cable from A21J2 while monitoring the supply to determine if the A16 HP-IB board is affecting the supply. If there is no change in the supply voltage when the cable is removed, the problem is most likely on the A21 Main Power Supply board.

- k. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-6 SYNTHESIZER TUNING RANGE ADJUSTMENT

DESCRIPTION:

This procedure adjusts the A7 Synthesizer board tuning range. This insures that the A7 Synthesizer can tune to all required frequencies during environmental extremes.

EQUIPMENT:

| | |
|-----------------------------|----------------|
| Spectrum Analyzer | HP 8568B |
| BNC Cable-48 inch | HP 8120-1840 |
| Service Accessory Kit | HP 03577-84401 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Place the A7 Synthesizer board on the extender board. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the spectrum analyzer 10 MHz REF OUT to the HP 3577A EXT REF IN using a BNC cable. The EXT REF LED on the HP 3577A front panel should be lit.
- c. Check that the green LED on the A7 Synthesizer board is lit. This indicates that the +8 V power supply is operational.
- d. With J3 on the A7 board disconnected, the red Unlock LED should be lit.
- e. Connect A7J3 to A6J5 (normal connection) using the extender cable. The Unlock LED should go out.
- f. Connect the spectrum analyzer to A7J1 using the BNC to SMA cable.
- g. Set the spectrum analyzer as follows:

| | |
|----------------------------|---------|
| Center Frequency | 400 MHz |
| Frequency Span | 300 MHz |
| Reference Level | 0 dBm |
| Input Attenuation | 10 dB |
| Resolution Bandwidth | Auto |
- h. Press and hold down the reset button on the A13 Main Processor board. The output frequency should be 290 ± 8 MHz. When the reset pushbutton is released, the signal should jump to the high end of the VCO tuning range for approximately 2 seconds.
- i. Using the spectrum analyzer, note the frequency of the largest signal when the reset pushbutton is released.
- j. Adjust A7R161 (within the shield) for a signal frequency of 515 ± 10 MHz when the pushbutton is released and the VCO is running at the high end of the frequency range.
- k. Check to see that the low end is below 298 MHz. Repeat steps h through j until both the lower and upper frequencies are within specification.

- l. Disconnect the cable at A7J3. The frequency of the largest signal on the spectrum analyzer should be 290 ± 8 MHz.
- m. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-7 SYNTHESIZER 100 kHz NULL ADJUSTMENT

DESCRIPTION:

This procedure adjusts the 100 kHz synthesizer reference frequency sideband present on the synthesized signal to an acceptable level. This is required for proper signal purity of the A7 Synthesizer board.

EQUIPMENT:

| | |
|-----------------------------|----------------|
| Spectrum Analyzer | HP 8568B |
| BNC Cable-48 inch | HP 8120-1840 |
| Service Accessory Kit | HP 03577-84401 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Place the A7 Synthesizer board on the extender board and connect A7J3 to A6J5. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the spectrum analyzer 10 MHz REF OUT to the HP 3577A EXT REF IN using a BNC cable. The EXT REF LED on the HP 3577A front panel should be lit.
- c. Set the HP 3577A sweep type to CW and frequency to 750 kHz.
- d. Set the spectrum analyzer as follows:

| | |
|------------------------|---------|
| Center Frequency | 301 MHz |
| Frequency Span | 225 kHz |
| Reference Level | + 5 dBm |
- e. Connect the spectrum analyzer to A7J1. Note the level measured at 301 MHz.
- f. Adjust A7R107 until the signal levels at 300.9 MHz and 301.1 MHz are at least 65 dB below the level seen at 301 MHz.
- g. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-8 API (ANALOG PHASE INTERPOLATION) ADJUSTMENTS**DESCRIPTION:**

This procedure adjusts the API circuits on the A7 Synthesizer board. This is required for proper operation of the fractional N circuits.

EQUIPMENT:

| | |
|---|--------------|
| Signal Generator | HP 8660C |
| BNC Cable-48 inch | HP 8120-1840 |
| N male to BNC female Adapter (2 each) | HP 1250-0780 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the signal generator 10 MHz REF OUT to the HP 3577A EXT REF IN. The EXT REF LED on the HP 3577A front panel should be lit.
- c. Set the HP 3577A as follows:

| | |
|------------------|-------------|
| Sweep Type | CW |
| Res BW | 1 Hz |
| FREQ | 1.75038 MHz |
- d. Set the signal generator as follows:

| | |
|-----------------|-------------|
| Amplitude | -5 dBm |
| Frequency | 1.75038 MHz |
- e. Connect the signal generator output to Receiver Input R.
- f. Press the MKR hardkey and the MKR ZERO softkey.
- g. Increase the signal generator frequency 38 Hz to 1.750418 MHz.
- h. Adjust A7R76 (API 1) for a marker level at least 50 dB below the reference level set in step f. Do not fine tune this if the level is in spec, as it may throw the API circuit out of balance and many adjustments may have to be made.
- i. Increase the signal generator frequency 38 Hz twice and verify that the marker level is at least 50 dB below the reference level set in step f. The two check frequencies are 1.750456 MHz and 1.750494 MHz. Adjust A7R76 only as necessary.
- j. Repeat steps c through i for 199.75038 MHz. The reference frequencies and test frequencies for both HP 3577A frequencies are listed below.

| HP 3577A Frequency | Reference Frequency | First Test Frequency | Second Test Frequency | Third Test Frequency |
|-----------------------|------------------------|-------------------------|--------------------------|-------------------------|
| 1.75038 | 1.75038 | 1.750418 | 1.750456 | 1.750494 |
| 199.75038 | 199.75038 | 199.750418 | 199.750456 | 199.750494 |

- k. Repeat steps c through i for the following frequencies, but increase the signal generator in steps of 1.36 kHz rather than 38 Hz. Adjust A7R76 only when necessary.

| HP 3577A Frequency | Reference Frequency | First Test Frequency | Second Test Frequency | Third Test Frequency |
|-----------------------|------------------------|-------------------------|--------------------------|-------------------------|
| 1.7636 | 1.7636 | 1.76496 | 1.76632 | 1.76768 |
| 199.7636 | 199.7636 | 199.76496 | 199.76632 | 199.76768 |

- l. Repeat steps c through k as necessary until the HP 3577A meets specification for all frequencies listed without adjustment.

NOTE

This adjustment is a compromise for each HP 3577A frequency and test frequency. The adjustment must be made so that all test points meet specifications simultaneously.

- m. Set the signal generator frequency to 98.750038 MHz.
- n. Change the HP 3577A frequency to 98.750038 MHz. Press the MKR hardkey and the MKR ZERO softkey. Increase the frequency 38 Hz to 98.750076 MHz.
- o. Adjust API 2, A7R74, for a marker reading of less than -50 dB (typically -53 dB).
- p. Increase the frequency 380 Hz from the value in step n to 98.750418 MHz.
- q. Adjust API 3, A7R73, for a marker reading of less than - 50 dB.
- r. Increase the frequency 3800 Hz from the value in step n to 98.753838 MHz.
- s. Adjust API 4, A7R88, for a marker reading of less than - 50 dB.
- t. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-9 LOCAL OSCILLATOR LEVELING LOOP/FLATNESS ADJUSTMENT

DESCRIPTION:

This procedure adjusts the A4 Local Oscillator board output for maximum level flatness with respect to frequency. This adjustment is required by the A1 Receiver boards in order to meet the dynamic accuracy and absolute amplitude accuracy specifications.

EQUIPMENT:

| | |
|-----------------------------|----------------|
| Power Meter | HP 436A |
| Power Sensor | HP 8482A |
| Service Accessory Kit | HP 03577-84401 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Place the A4 Local Oscillator board on the extender board. Leave all interconnecting cables disconnected unless instructed to do otherwise in this procedure.
- c. Connect A4J1 to A6J3 (normal connection), A4J2 to A7J1 (normal connection), and A6J5 to A7J3 (normal connection) using extender cables.
- d. Connect the power sensor to A4J4 using the proper adapters. Terminate A4J3 and A4J5 into their normal A1 connections.
- e. Connect the instrument to the power line, and turn the POWER switch ON.
- f. Set the HP 3577A sweep type to CW and frequency to 1 MHz.
- g. With the proper cal factor selected on the power meter, adjust A4R49 for a power meter reading of $+7.00 \text{ dBm} \pm 0.05 \text{ dB}$. Record the final amplitude measured.
- h. Connect the power sensor to A4J3 and terminate A4J4 into its normal connection. Record the power meter reading. It should be $+7.0 \text{ dBm} \pm 0.2 \text{ dB}$.
- i. Connect the power sensor to A4J5 and terminate A4J3 into its normal connection. Record the power meter reading. It should be $+7.0 \text{ dBm} \pm 0.2 \text{ dB}$.
- j. Turn OFF the instrument's power switch, remove the power cord, and place the A4 Local Oscillator board back into the instrument.



DO NOT insert or remove the circuit boards from the HP 3577A with power applied to the instrument. Power surges to circuit boards may cause unknown instrument states and/or damage the circuitry.

- k. Connect the instrument to the power line, and turn the POWER switch ON.
- l. Set the HP 3577A sweep type to CW and frequency to 200 MHz.
- m. Connect the power sensor to A4J4. Terminate A4J3 and A4J5 into their normal A1 board connections.
- n. With the proper cal factor selected on the power meter, adjust A4C70 for the same amplitude $\pm 0.05 \text{ dB}$ as read at 1 MHz in step g above.
- o. Connect the power sensor to A4J3 and terminate A4J4 into its normal connection.

- p. Adjust A4C50 for the same amplitude ± 0.05 dB as read at 1 MHz in step h above.
- q. Connect the power sensor to A4J5 and terminate A4J3 into its normal connection.
- r. Adjust A4C90 for the same amplitude ± 0.05 dB as read at 1 MHz in step i above.
- s. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-10 LOCAL OSCILLATOR 300 MHz FILTER ADJUSTMENTS

DESCRIPTION:

This procedure adjusts both of the 300 MHz filters on the A4 Local Oscillator board. These filters eliminate upper harmonics that can interfere with the peak detecting leveling loop.

EQUIPMENT:

| | |
|-----------------------------|-----------------|
| Signal Generator | HP 8660C |
| Spectrum Analyzer | HP 8568B |
| 3 dB Attenuator | HP 8491A Opt003 |
| Service Accessory Kit | HP 03577-84401 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Remove the A4 Local Oscillator board. Remove the shield and place the A4 board on the extender board. Move jumper A4W1 to the top right position.
- c. Connect the signal generator output to A4J1 and the spectrum analyzer input to A4J6 through the 3 dB attenuator.
- d. Connect the instrument to the power line, and turn the POWER switch ON.
- e. Set the signal generator for a 0 dBm, 300 MHz, CW signal.
- f. Set the spectrum analyzer as follows:

| | |
|----------------------------|---------|
| Center Frequency | 300 MHz |
| Frequency Span | 0 Hz |
| Resolution Bandwidth | 300 Hz |
| Reference Level | 0 dBm |
| dB/Div | 2 dB |
| Sweep Time | 10 sec |
- g. Adjust A4L2 and A4L3 for a maximum reading on the spectrum analyzer.
- h. Increase the spectrum analyzer dB/Div to 10 dB, and wait for a complete sweep. Then press Marker Normal, Marker Δ , and increase the center frequency to 600 MHz.
- i. Increase the signal generator frequency to 600 MHz.
- j. The spectrum analyzer reading should be at least 40 dB below the reading in step g.
- k. Set jumper A4W1 to the bottom right position and jumper A4W2 to the bottom left position.
- l. Connect the signal generator output to A4J6 and the spectrum analyzer input to A4J7 through the 3 dB attenuator.
- m. Change the signal generator frequency to 300 MHz and the amplitude to +10dBm.

- n. Change the spectrum analyzer center frequency to 300 MHz, the dB/div to 2dB, and the reference level to +5 dBm.
- o. Adjust A4L4 and A4L5 for a maximum spectrum analyzer reading.
- p. Increase the spectrum analyzer dB/Div to 10 dB, and wait for a complete sweep. Then press Marker Normal, Marker Δ , and increase the center frequency to 600 MHz.
- q. Increase the signal generator frequency to 600 MHz.
- r. The spectrum analyzer reading should be at least 35 dB below the reading in step o.
- s. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-11 LOCAL OSCILLATOR 200 MHZ FILTER ADJUSTMENTS

DESCRIPTION:

This procedure adjusts the 200 MHz filters on the A4 Local Oscillator board. These filters eliminate the upper mixer harmonics that can interfere with the peak detecting leveling loop.

EQUIPMENT:

| | |
|-----------------------------|-----------------|
| Spectrum Analyzer | HP 8568B |
| Signal Generator | HP 8660C |
| 3 dB Attenuator | HP 8491A Opt003 |
| Service Accessory Kit | HP 03577-84401 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Remove the A4 Local Oscillator board. Remove the shield and place the A4 board on the extender board. Move both A4W4 and A4W5 to the bottom left position.
- c. Connect the signal generator output to A4J9 and the spectrum analyzer to A4J10 through the 3 dB attenuator.
- d. Connect the instrument to the power line, and turn the POWER switch ON.
- e. Set the signal generator for a +10 dBm, 200 MHz, CW signal.
- f. Set the spectrum analyzer as follows:

| | |
|----------------------------|---------|
| Center Frequency | 200 MHz |
| Frequency Span | 0 Hz |
| Resolution Bandwidth | 300 Hz |
| Reference Level | +5 dBm |
| dB/Div | 1 dB |
| Sweep Time | 10 sec |
- g. Adjust A4L7 and A4L9 for a maximum reading on the spectrum analyzer.
- h. Increase the spectrum analyzer dB/Div to 10 dB, and wait for a complete sweep. Then press Marker Normal, Marker Δ , and increase the center frequency to 300 MHz.
- i. Increase the signal generator frequency to 300 MHz.
- j. Adjust A4L8 for a minimum reading on the spectrum analyzer.

- k. Repeat steps e through j until no further improvement can be made. The final 300 MHz level should be at least 55 dB below the 200 MHz level.
- l. Set A4W5 to the bottom right position and A4W6 to the top left position.
- m. Connect the signal generator to A4J10 and the spectrum analyzer to A4J11 through the 3 dB attenuator.
- n. Return the signal generator frequency to 200 MHz.
- o. Change the spectrum analyzer center frequency to 200 MHz, dB/div to 1 dB, and sweep time to 20 sec.
- p. Adjust A4L100 and A4L102 for a maximum reading on the spectrum analyzer.
- q. Increase the spectrum analyzer dB/div to 10 dB and wait for a complete sweep. Then press Marker Normal, Marker Δ , and increase the center frequency to 300 MHz.
- r. Increase the signal generator frequency to 300 MHz.
- s. Adjust A4L101 for a minimum reading on the spectrum analyzer.
- t. Repeat steps n through s until no further improvement can be made. The final 300 MHz level should be at least 55 dB below the 200 MHz level.
- u. Move A4W6 to the top right position and A4W7 to the bottom left position.
- v. Set the signal generator for -40 dBm, 200 MHz, CW signal.
- w. Connect the signal generator to A4J11 and the spectrum analyzer to A4J12.
- x. Set the spectrum analyzer as follows:

| | |
|----------------------|---------|
| Center Frequency | 200 MHz |
| Frequency Span | 0 Hz |
| Resolution Bandwidth | 300 Hz |
| Video Bandwidth | 300 Hz |
| Sweep Time | 10 sec |
| dB/Div | 2 dB |
- y. Adjust A4L201 for a maximum reading. If necessary, adjust the reference level on the spectrum analyzer for a mid screen display.
- z. Increase the spectrum analyzer dB/div to 10 dB and wait for a complete sweep. Then press Marker Normal, Marker Δ and increase the center frequency to 300 MHz.
- aa. Increase the signal generator frequency to 300 MHz.
- bb. The 300 MHz level should be at least 25 dB below the 200 MHz level.
- cc. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-12 OVEN BOARD 10 MHz REFERENCE FREQUENCY ADJUSTMENT

DESCRIPTION:

This procedure adjusts the absolute frequency of the 10 MHz A31 Oven board. This is the absolute frequency reference in the HP 3577A.

EQUIPMENT:

Oscilloscope HP 1980B
 Frequency Standard WWVB

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON. NOTE: THE HP 3577A MUST BE WARMED UP FOR AT LEAST 8 HOURS BEFORE THE ADJUSTMENT IS MADE.
- b. Connect the frequency standard to the oscilloscope external trigger connector. Terminate the frequency standard as required.
- c. Connect the HP 3577A REF OUT, located on the rear panel, to the oscilloscope channel 1 input. Terminate the channel 1 input in 50 Ω .
- d. Set the oscilloscope time/div control to 0.1 μ s per division.
- e. Remove the screw on A31U1 and set the coarse frequency adjust for a stable (i.e., not moving) display as seen on the oscilloscope.
- f. Set the oscilloscope time/div control to 10 ns per division.
- g. Set the fine frequency adjust (A31R2) for a stable display as seen on the oscilloscope.
- h. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-13 OVEN HEATER SHUTDOWN ADJUST

DESCRIPTION:

This procedure adjusts the heater shutdown trip point on the A31 Oven board. This is required so that the HP 3577A is disconnected from the oven reference when the oven is cold and connected when the oven has warmed up.

EQUIPMENT:

Spectrum Analyzer HP 8568B
 Service Accessory Kit HP 03577-84401

PROCEDURE:

- a. Turn OFF the instrument's power switch, and remove the power cord. Remove the top cover, and the cover above A31. Connect the instrument to the power line, but DO NOT turn the POWER switch ON.
- b. Connect the spectrum analyzer to A31J1 and set as follows:

| | |
|------------------------|--------|
| Center Frequency | 10 MHz |
| Reference Level | 0 dBm |
| Span | 1 MHz |

- c. Turn the HP 3577A line power ON. When the oven is cold, the 10 MHz signal on the spectrum analyzer should be approximately -100 dBm or lower. To check, set the spectrum analyzer reference level to -80 dBm and the span to 1 kHz.
- d. After approximately 20 minutes, when the oven is sufficiently warm, the 10 MHz signal on the spectrum analyzer should be approximately 0 dBm. Adjust A31R9 until the 10 MHz signal on the spectrum analyzer drops out, then back off A31R9 (counter-clockwise) about 10 degrees or until the signal just appears.
- e. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-14 REFERENCE BOARD 10 MHz OSCILLATOR ADJUSTMENT

DESCRIPTION:

This procedure adjusts the 10 MHz oscillator on the A6 Reference board. This 10 MHz oscillator is phase locked to the 10 MHz oven or external reference and is the source of all frequencies in the HP 3577A.

EQUIPMENT:

| | |
|-------------------------|--------------|
| Spectrum Analyzer | HP 8568B |
| BNC Cable-48 inch | HP 8120-1840 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Remove the cable from A6J6 and any external reference from the rear panel.
- c. Connect the spectrum analyzer to the rear panel 10 MHz output.
- d. Set the spectrum analyzer to track the input signal and count its frequency.
- e. Place the jumper A6W1 in the test position. This places the switchable loop filter in the wideband mode and allows the 10 MHz VCXO to free run.
- f. Adjust A6R12 for a spectrum analyzer frequency reading of 10 MHz \pm 5 Hz.
- g. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-15 300 MHz OUTPUT LEVEL PEAKING ADJUSTMENT

DESCRIPTION:

This procedure adjusts the 300 MHz output filter pass element on the A6 Reference board. Adjusting the filter center frequency controls the 300 MHz output level.

EQUIPMENT:

Spectrum Analyzer HP 8568B
 Service Accessory Kit HP 03577-84401

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Place the A6 Reference board on the extender board. Reconnect the cables to their proper position using extender cables.
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. Connect the spectrum analyzer to A6J3.
- e. Adjust A6L33 for the maximum 300 MHz spectrum analyzer reading. (This adjustment is inside the shielded assembly and can be made through the top cover of the shield.) This reading should be between -5 and -2 dBm (check 2nd [600MHz] harmonic to see if it is less than -40 dBm).
- f. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-16 OFFSET BOARD OSCILLATOR TUNING RANGE ADJUSTMENT

DESCRIPTION:

This procedure adjusts the 300.25 MHz oscillator voltage controlled tuning range on the A5 Offset board. This is required to ensure that the oscillator remains phase-locked under all environmental conditions.

EQUIPMENT:

Spectrum Analyzer HP 8568B
 Service Accessory Kit HP 03577-84401

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Place the A5 Offset board on the extender board.
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. Connect A5J2 to A6J4 (normal connection) using extender cables. Set A5W3 to the test position.
- e. Connect the spectrum analyzer to A5J1 and set as follows:

| | |
|------------------------|------------|
| Center Frequency | 300.25 MHz |
| Reference Level | +10 dBm |
| Span | 50 MHz |
- f. Press the Max Hold function, if available, on the spectrum analyzer. The VCO ramps over its tuning range, and the spectrum analyzer display should show a waveform similar to a bandpass filter.

- g. Adjust A5R9 (inside the shield) for a spectrum analyzer display where the range of the waveform is two-thirds above and one-third below 300.25 MHz. After any adjustment is performed, the spectrum analyzer Max Hold values must be reset. On the HP 8568B, this is done by pressing the Clear Write control.
- h. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-17 SOURCE FLATNESS ADJUSTMENT

DESCRIPTION:

This procedure adjusts the source output level flatness with respect to frequency on the A8 Source board.

EQUIPMENT:

| | |
|--------------------|----------|
| Power Meter | HP 436A |
| Power Sensor | HP 8482A |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the power sensor to the A8 Source Output.
- c. Adjust the cal factor on the power meter for 1 MHz.
- d. Set the HP 3577A as follows:

| | |
|------------------|-------|
| Sweep Type | CW |
| AMPTD | 0 dBm |
| FREQ | 1 MHz |
- e. Press dB[REF] on the power meter.
- f. Increase the HP 3577A frequency to 200 MHz.
- g. Adjust the cal factor on the power meter for 200 Mhz.
- h. Adjust A8C155 for 0.00 dB(REF) ± 0.02 dB on the power meter.
- i. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and replace the top cover.

4-18 SOURCE OUTPUT BOARD FILTER ADJUSTMENT**DESCRIPTION:**

This procedure adjusts the 200 and 300 MHz low pass filters on the A8 Source board. These filters are required for the specified spectral purity of the output and for the peak detectors in the amplitude leveling loop.

EQUIPMENT:

| | |
|-----------------------------|-----------------|
| Power Meter | HP 436A |
| Power Sensor | HP 8482A |
| Service Accessory Kit | HP 03577-84401 |
| Signal Generator | HP 8660C |
| Spectrum Analyzer | HP 8568B |
| 3 dB Attenuator | HP 8491A Opt003 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Remove the A8 Source circuit board shields and place the board on the extender board. Connect A7J2 to A8J1 and A5J1 to A8J2 using extender cables.
- c. Connect the power meter to A8J3.
- d. Set the HP 3577A as follows:

| | |
|------------------|---------|
| SWEEP TYPE | CW |
| FREQ | 99 kHz |
| AMPTD | +15 dBm |

- e. Adjust A8L124 and A8L123 for a maximum reading on the power meter. These adjustments interact, so repeat until a common maximum is obtained.
- f. Adjust A8L224 and A8L223 for a maximum reading on the power meter. These adjustments interact, so repeat until a common maximum is obtained.
- g. Increase the HP 3577A frequency to 200 MHz. Press the SPCL FCTN hardkey and the SERVICE DIAG softkey. Toggle LEVELING to the OFF state.
- h. Adjust A8L14 and A8L15 for a maximum reading on the power meter.
- i. Set A8W5 to the bottom right position. Connect the spectrum analyzer to A8J8 through the 3 dB attenuator.
- j. Move A8W4 to the bottom left position, and connect the output of the signal generator to A8J7.
- k. Set the signal generator for a 0 dBm, 200 MHz, CW signal.
- l. Set the spectrum analyzer as follows:

| | |
|----------------------------|---------|
| Center Frequency | 200 MHz |
| Frequency Span | 0 Hz |
| Resolution Bandwidth | 300 Hz |
| dB/Div | 1 dB |
| Sweep Time | 10 sec |

- m. Adjust A8L11 and A8L13 for a maximum spectrum analyzer reading.
- n. Change the spectrum analyzer dB/div to 10 dB. Wait for a complete sweep, then press Marker Normal, Marker Δ. Increase the center frequency to 300 MHz.
- o. Increase the signal generator frequency to 300 MHz.
- p. Adjust A8L12 for a minimum reading on the spectrum analyzer.

- q. Repeat steps k through p until the adjustments cannot be improved. With the final adjustment, the 300 MHz spectrum analyzer reading in step p should be at least 55 dB below the 200 MHz reading in step m.
- r. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

4-19 SOURCE AMPLITUDE AND STEP ADJUSTMENTS

DESCRIPTION:

This procedure adjusts the A8 Source board leveling circuits. The step adjustment sets the increments of the DAC controlled "vernier". These adjustments are necessary for the instrument to meet output level specifications.

EQUIPMENT:

- Power Meter HP 436A
- Power Sensor HP 8482A

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the power sensor to the A8 Source Output.
- c. Adjust the cal factor on the power meter for 100 kHz.
- d. Set the HP 3577A as follows:
 - SWEEP TYPE CW
 - FREQ 101 kHz
 - AMPTD +11 dBm
- e. Adjust A8R144, LVL 1, for a power meter reading of 11.00 dBm ± 0.01 dB.
- f. Increase the HP 3577A amplitude to +15 dBm.
- g. Adjust A8R142, STEP 1, for a power meter reading of +15.00 dBm ± 0.01 dB.
- h. Decrease the HP 3577A amplitude to +11 dBm and the frequency to 99 kHz.
- i. Adjust A8R156, LVL 2, for a power meter reading of +11.00 dBm ± 0.01 dB.
- j. Increase the HP 3577A amplitude to +15.00 dBm.
- k. Adjust A8R157, STEP 2, for a power meter reading of +15.00 dBm ± 0.01 dB.
- l. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and replace the top cover.

4-20 ON CARRIER RETURN LOSS ADJUSTMENT

DESCRIPTION:

This procedure adjusts the A8 Source board output impedance.

EQUIPMENT:

| | |
|---|------------------|
| Signal Generator | HP 8660C |
| Directional Bridge | HP 35677-63502 |
| 3 dB Attenuator | HP 8491A Opt 003 |
| 10 dB Attenuator | HP 8491A Opt 010 |
| SMA male to BNC female Adapter (2 each) | HP 1250-1200 |
| N male to BNC female Adapter (2 each) | HP 1250-0780 |
| N male to N male Adapter | HP 1250-0778 |
| BNC Cables-48 inch (3 each) | HP 8120-1840 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the equipment as shown in Figure 4-1 except leave the A8 Source Output to the directional bridge unconnected.
- c. Set the HP 3577A as follows:

| | |
|-------------------|---------|
| FREQ | |
| FREQ SPAN | 0 Hz |
| CENTER FREQ | 200 MHz |
| AMPTD | 12 dBm |
| RES BW | 10 Hz |
| DISPLY FCTN | LIN MAG |
| SCALE | |
| REF POSN | 50% |
| /DIV | 10 mV |
- d. Set the signal generator for a 200 MHz, 5 Hz step size, +10 dBm, CW signal.
- e. Note the MARKER MAG on the HP 3577A. It should read approximately 33 mV.
- f. Step the signal generator frequency up 5 Hz.
- g. Connect the A8 Source Output to the directional bridge load port using a N male to N male adapter.
- h. Change the HP 3577A scale /div to 1 mV. Press the MKR → hardkey and the MKR → REF LVL softkey.
- i. Adjust A8C71 for a minimum peak-to-peak sine wave (must be less than 2.5 mV peak-to-peak). Press MKR → REF LVL if necessary to keep the signal on the screen.
- j. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

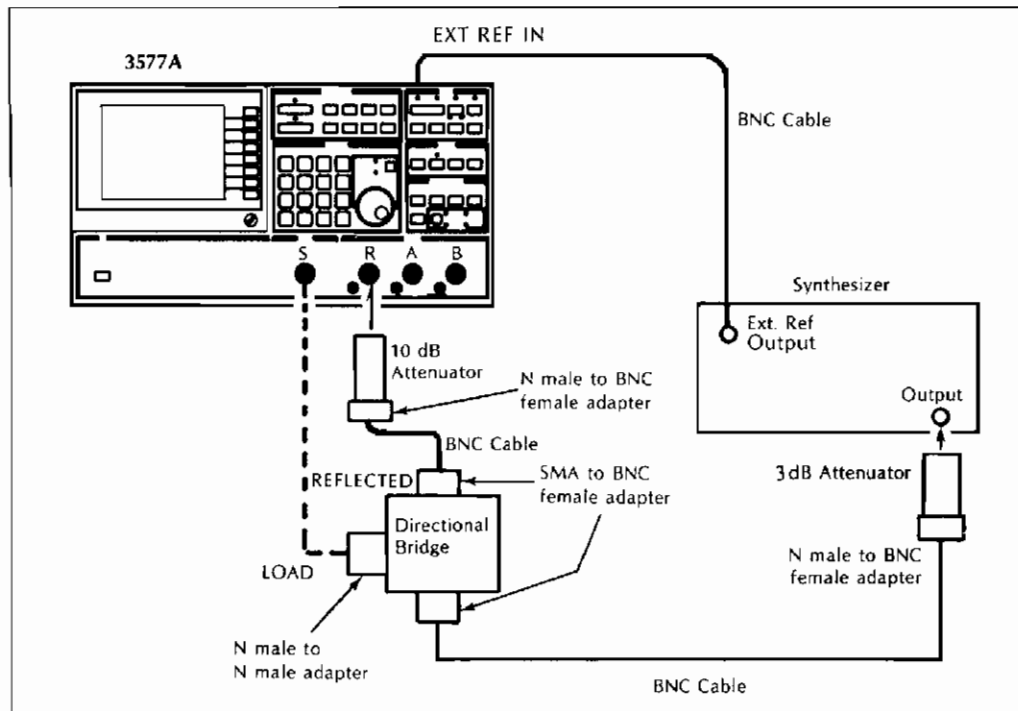


Figure 4-1. On Carrier Return Loss Adjustment Test Set Up

4-21 RECEIVER RETURN LOSS ADJUSTMENT

DESCRIPTION:

This procedure adjusts the A1 Receiver board return loss. An external return loss bridge, driven by the A8 Source board and measured by the A1 Receiver board in channel R, is used to verify the Receivers in channels A and B. The Receiver in channel R is then verified using the Receiver in channel A as the measurement channel.

EQUIPMENT:

| | |
|--------------------------------------|-------------------------|
| Directional Bridge | HP 35677-63502 |
| RF Cable-24 inch (3 each) | HP 35679A |
| 10 dB Attenuator | HP 8491A, Opt 010 |
| Precision Termination (female) | HP 909C, Opt200, Opt013 |

PROCEDURE:

- Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- Connect the A8 Source Output to the source input of the directional bridge through the 10 dB attenuator.
- Set the HP 3577A as follows:
 FREQ
 START FREQ 100 kHz
 AMPTD 0 dBm
- Connect the reflected output port on the directional bridge to Receiver Input R. Connect an RF cable to the load port on the directional bridge and leave the other end of the RF cable open.

- e. Press the INPUT hardkey and select the R channel softkey.
- f. Allow the HP 3577A to make 2 complete sweeps. Press the STORE hardkey and the D2 softkey. This is the load port open reference.
- g. Connect the precision termination to the end of the load port cable.
- h. Allow the HP 3577A to make two sweeps and store the display in register D1.
- i. Press the INPUT hardkey and enter a USER DEFINED input of (R-D1)/D2. This is the one port partial cal error correction for the directional bridge.
- j. Connect the load port cable to Receiver Input A.
- k. Allow the HP 3577A to make two sweeps. Press the ATTEN hardkey and toggle the channel being adjusted to 0 dB. Press the MKR \rightarrow hardkey and the MKR \rightarrow MAX softkey. Adjust A1R172 for a minimum marker reading.
- l. Repeat steps j and k for Receiver Input B.
- m. Repeat steps d through k for Receiver Input R. All control settings will be the same except Input A must be used whenever Input R is specified (even in equations).
- n. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and replace the top cover.

4-22 INPUT 50 Ω GAIN ADJUSTMENT

DESCRIPTION:

This procedure adjusts the A1 Receiver board IF gain when the input is in the 50 Ω termination mode. This is necessary for the instrument to meet absolute amplitude accuracy specifications.

EQUIPMENT:

| | |
|------------------------------------|--------------|
| Synthesizer | HP 3335A |
| BNC Cables-48 inch (2 each) | HP 8120-1840 |
| BNC female to N male Adapter | HP 1250-0780 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the spectrum analyzer 10 MHz REF OUT to the HP 3577A EXT REF IN using a BNC cable. The EXT REF LED on the HP 3577A front panel should be lit.
- c. Set the synthesizer as follows:

| | |
|-----------------|---------|
| Frequency | 100 kHz |
| Amplitude | -30 dBm |
- d. Set the HP 3577A as follows: (RUT = Receiver under test)

| | |
|-----------------------------|---------|
| INPUT | <RUT> |
| SWEEP TYPE | CW |
| FREQ | 100 kHz |
| SCALE | |
| REF LEVEL | -30 dBm |
| REF POSN | 50 % |
| / DIV | 0.1 dB |
| ATTEN (all receiver inputs) | |
| ATTEN | 0 dBm |
| RES BW | 10 Hz |

- e. Connect the synthesizer output to Receiver Input <RUT> using a BNC cable and adapter.
- f. Adjust A1R71 for a marker reading of -30.00 dBm ± 0.01 dB.
- g. Repeat steps d through f for all A1 Receiver boards requiring adjustment.
- h. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and replace the top cover.

4-23 INPUT 1 MΩ GAIN ADJUSTMENT

DESCRIPTION:

This procedure adjusts the A1 Receiver board IF gain when the input is in 1 MΩ terminate mode. This is necessary for the instrument to meet absolute amplitude specifications.

EQUIPMENT:

| | |
|------------------------------------|--------------|
| Synthesizer | HP 3335A |
| BNC Cables-48 inch (2 each) | HP 8120-1840 |
| BNC female to N male Adapter | HP 1250-0780 |
| Feedthrough Termination | HP 11048C |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the spectrum analyzer 10 MHz REF OUT to the HP 3577A EXT REF IN using a BNC cable. The EXT REF LED on the HP 3577A front panel should be lit.
- c. Set the synthesizer as follows:

| | |
|-----------------|---------|
| Frequency | 100 kHz |
| Amplitude | -30 dBm |
- d. Set the HP 3577A as follows: (RUT = Receiver under test)

| | |
|-----------------------------|---------|
| INPUT | <RUT> |
| SWEEP TYPE | CW |
| FREQ | 100 kHz |
| SCALE | |
| REF LEVEL | -30 dBm |
| REF POSN | 50 % |
| / DIV 0.1 | dB |
| ATTEN (all receiver inputs) | |
| ATTEN | 0 dBm |
| IMPED | 1 MΩ |
| RES BW | 10 Hz |
- e. Connect a cable from the synthesizer output to the feedthrough termination. Connect the open end of the feedthrough termination to Receiver Input <RUT> using a BNC cable and adapter.
- f. Adjust the 1 Meg level adjust, A1R76, for a marker reading of -30 dBm ± 0.01 dB.
- g. Repeat steps d through f for all A1 Receiver boards requiring adjustment.
- h. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and replace the top cover.

4-24 INPUT 1 M Ω ATTENUATOR ADJUSTMENT

DESCRIPTION:

This procedure adjusts the attenuation value of the 1 Meg, 20 dB attenuator on the A1 Receiver board.

EQUIPMENT:

| | |
|---|----------------|
| BNC female to N male Adapter | HP 1250-0780 |
| 50 Ω Feedthrough Termination | HP 11048C |
| Service Accessory Kit | HP 03577-84401 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Connect the feedthrough termination to the A8 Source Output with the adapter.

NOTE

When adjusting the Receiver board in channel A, place the board on an extender board in channel R or B. Adjusting a Receiver board on an extender in channel A may cause the signal to jump erratically. Return the Receiver to channel A after completing the adjustment.

- c. Connect A1J2 to the feedthrough termination with the proper cable and adapter. Place the Receiver under test on an extender board. Connect A1J1 to A4J3, J4, or J5 using an extender cable.
- d. Connect the instrument to the power line, and turn the POWER switch ON.
- e. Set the HP 3577A as follows: (RUT = Receiver Under Test)

| | |
|-------------------|---------|
| INPUT | <RUT> |
| SWEEP TYPE | CW |
| AMPLITUDE | -25 dBm |
| FREQ | 100 kHz |
| ATTEN | |
| ATTEN (RUT) | 0 dB |
| IMPED (RUT) | 1 Meg |
| RES BW | 10 Hz |
- f. Allow the HP 3577A to settle, then press the MEASR CAL hardkey and the NORMALIZE softkey. Press the ATTEN hardkey, and select an ATTEN (RUT) of 20dB.
- g. Adjust A1C114 for 0.00 ± 0.03 dB.
- h. Repeat steps c through g for all A1 Receiver boards requiring adjustment. Remember to disconnect power to the HP 3577A before removing a A1 Receiver board.
- i. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the instrument to its original state.

4-25 INPUT 1 MΩ CAPACITANCE ADJUSTMENT**DESCRIPTION:**

The procedure adjusts the input capacitance of the Hi-Z (1 Meg) input mode on the A1 Receiver board. There is only a typical specification for input capacitance, but lower capacitance allows better high impedance, high frequency measurements.

EQUIPMENT:

| | |
|------------------------------------|----------------|
| BNC female to N male Adapter | HP 1250-0780 |
| 1 Meg Series Resistor | HP 0698-7332 |
| Service Accessory Kit | HP 03577-84401 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Connect the 1 Meg series resistor to the A8 Source Output with the adapter.

NOTE

When adjusting the Receiver board in channel A, place the board on an extender board in channel R or B. Adjusting a Receiver board on an extender in channel A may cause the signal to jump erratically. Return the Receiver to channel A after completing the adjustment.

- c. Connect A1J2 to the 1 Meg series resistor with a cable and adapter. Place the Receiver under test on an extender board. Connect A1J1 to A4J3, J4, or J5 using an extender cable.
- d. Connect the instrument to the power line, and turn the POWER switch ON.
- e. Set the HP 3577A as follows: (RUT = Receiver Under Test)

| | |
|-------------------|---------|
| INPUT | <RUT> |
| SWEEP TYPE | CW |
| AMPTD | -25 dBm |
| FREQ | 10 kHz |
| ATTEN | |
| ATTEN (RUT) | 0 dB |
| IMPED (RUT) | 1 Meg |
| RES BW | 10 Hz |
- f. Allow the HP 3577A to settle, then press the MEASR CAL hardkey and the NORMALIZE softkey. Press the ATTEN hardkey and select an ATTEN (RUT) of 20dB.
- g. Adjust A1C112 for 0 dB.
- h. Repeat steps c through g for all A1 Receiver boards requiring adjustment. Remember to disconnect power to the HP 3577A before removing a Receiver board.
- i. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the instrument to its original state.

NOTE

The 1M Ω Capacitance and 1M Ω Attenuator Adjustments interact. For best results, repeat both tests several times to obtain the optimum settings.

4-26 INPUT LOCAL OSCILLATOR FEEDTHROUGH ADJUSTMENT

DESCRIPTION:

This procedure adjusts the local oscillator feedthrough for the first IF mixer on the A1 Receiver board. This adjustment is necessary for the instrument to meet the receiver level flatness and dynamic accuracy specification.

EQUIPMENT:

None

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Set the HP 3577A as follows: (RUT = Receiver under test)

| | |
|------------------|-------|
| INPUT | <RUT> |
| SWEEP TYPE | CW |
| FREQ | 0 Hz |
- c. Adjust A1R141, LO feedthrough adjust, for a minimum marker amplitude reading. This reading must be at least 33 dB below the maximum input level.
- d. Repeat steps b and c for all Receiver boards requiring adjustment.
- e. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and replace the top cover.

4-27 INPUT NOTCH FILTER ADJUSTMENT

DESCRIPTION:

This procedure adjusts the 10 kHz IF filter notch on the A1 Receiver board. This filter rejects input image and noise signals. This is required for the A1 Receiver board to meet the flatness and dynamic accuracy specifications.

EQUIPMENT:

| | |
|---|--------------|
| 1:1 Probe | HP 10021A |
| 10:1 Probe | HP 10040A |
| BNC female to N male Adapter (2 each) | HP 1250-0780 |

PROCEDURE:

NOTE

This procedure requires that one of the A1 Receiver boards is operating within specification. This minimizes the required equipment list and simplifies the adjustment procedure.

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Place the Receiver, which requires adjustment, on an extender board into channel B. Note each Receiver board's original position in the unit.

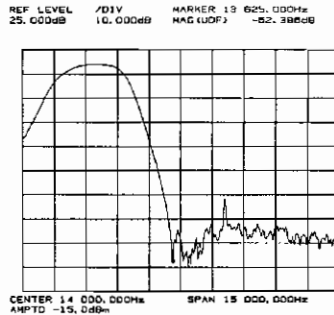


Figure 4-2: 14 kHz Filter Response

- c. Place the operational Receiver board into channel R and connect A1J1 to A4J3.
- d. Connect the instrument to the power line, and turn the POWER switch ON.
 ATTEN
 IMPED (R) 1 MEG
 FREQ
 CENTER FREQ 14 kHz
 FREQ SPAN 5 kHz
- f. Connect the A8 Source Output to A1TP5 (channel B) using the 1:1 probe.
- g. Connect Receiver Input R to the top of A1R28 (channel B) using the 10:1 probe.
- h. Set the 10 kHz filter adjust, A1C20, for a null at 14 kHz.
- i. Move the 1:1 Probe to the top of A1R28 and the 10:1 probe to A1TP6.
- j. Set the 10 kHz filter adjust, A1C26, for a null at 14 kHz.
- k. Move the 1:1 probe to A1TP5.
- l. Change the HP 3577A frequency span to 15 kHz, resolution bandwidth to 100 Hz, and sweep time to 2 sec.
- m. The HP 3577A display should resemble the wave shape shown in Figure 4-2. The most critical part of this filter is that the 14 kHz response should be at least 70 dB below the response at 10 kHz.
- n. Repeat this procedure for all A1 Receiver boards requiring adjustment.
- o. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the instrument to its original state.

4-28 INPUT VARIABLE GAIN AMPLIFIER DC OFFSET ADJUSTMENT

DESCRIPTION:

This procedure adjusts the DC offset for the variable gain amplifier and the sample and hold output on the A1 Receiver board. A1R44 is adjusted for an equal DC offset in both the A/D converter and the variable gain amplifier. A1R187 is adjusted for an offset of \pm LSB so that the transition point of the MSB is not 0 V input. This adjustment is necessary for the instrument to meet the absolute amplitude specifications.

EQUIPMENT:

| | |
|-----------------------------|--------------------|
| Computer | HP 9000 Series 200 |
| Jumper | Pomona 3781-8 |
| 300 pF Capacitor | HP 0160-5350 |
| Service Accessory Kit | HP 03577-84401 |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.

NOTE

When adjusting the Receiver board in channel A, place the board on an extender board in channel R or B. Adjusting a Receiver board on an extender in channel A may cause the signal to jump erratically. Return the Receiver to channel A after completing the adjustment.

- b. Remove the A1 Receiver board requiring adjustment. Move A1W2 and A1W3 to the test position. Solder the 300 pF capacitor between pins two and six of A1U15 and place a jumper across A1C30. Place the A1 Receiver board on an extender board.
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. Connect the HP-IB cable from the computer to the HP 3577A.
- e. Load and run the DC offset adjustment program.
- f. Enter the A1 Receiver board channel you wish to adjust when prompted.
- g. Adjust A1R44 for center screen (if measurement jumps erratically, try connecting a jumper from A1 ground to the chassis or moving the Receiver board to a different channel).
- h. Press the softkey START OVER on the computer and turn the HP 3577A OFF.
- i. Remove the jumper across A1C30 and the capacitor across A1U15.
- j. Turn the instrument on and select the channel to be adjusted using the computer keyboard.
- k. Adjust A1R187 for three divisions above or below the reference level.
- l. Repeat this procedure for all A1 Receiver boards requiring adjustment.
- m. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the instrument to its original state.

```

10 !RE-STORE "USERS/DH/HIP_HOG_ADJ:REMOTE"
20 ASSIGN @Net_an1 TO 711
30 ASSIGN @0 TO 711;FORMAT OFF
40 CDM /Flag/ Exit_flag
50 DIM Input_data(0:1),Output_data(0:1)
60 Start: !
70 CALL Clear_screen
80 PRINT TABXY(5,8);"PLACE CHANNEL UNDER TEST ON EXTENDER BOARD"
90 PRINT TABXY(5,9);"MOVE W2 AND W3 TO TEST"
100 OUTPUT 2 USING "#,K";"R";CHR$(255)&"H"
110 LINPUT "Enter the channel under test (R. A. or B ).",Input$
120 Input$=TRIM$(Input$)
130 CALL Clear_screen
140 PRINT TABXY(10,2);"NOTE: R44 must be adjusted before adjusting R187"
150 PRINT TABXY(16,3);"Response to adjustments will be slow due to averaging"
160 PRINT TABXY(5,5);"CONNECT A JUMPER ACROSS C30 AND A 300pf CAP FROM U15 PIN 2
    TO U15 PIN 6"
170 PRINT TABXY(5,6);"ADJUST R44 TO REFERENCE LINE"
180 PRINT TABXY(5,8);"REMOVE JUMPER AND CAP"
190 PRINT TABXY(5,9);"ADJUST R187 TO THREE DIVISIONS ABOVE OR BELOW REFERENCE LI
    NE"
200 PRINT TABXY(5,12);"PRESS SOFTKEY 45 (START OVER) TO CHANGE CHANNEL"
210 OUTPUT @Net_an1;"UDS A/R TD1 ID1 DF3 ST5 SM2 MSR .5MSC "
220 OUTPUT @Net_an1;"REF 2048; DIV 1; FM2 BP0 "
230 Read_ad: !
240 Const=2.05669908*2048
250 Mask=-32768
260 OUTPUT @Net_an1;"BP0 FM2 SE0"
270 REPEAT
280   ON KEY 5 LABEL "START OVER" CALL Flag
290   OUTPUT @Net_an1;"DR"&Input$
300   ENTER @0 USING "#,2(A)";Dummy$:Dummy2$
310   ENTER @0;Input_data(*)
320   A_d=Const*Input_data(0)
330   WAIT .2
340   A_d=16*A_d
350   A_d=BINEDR(Mask,A_d)
360   A_d=A_d/16
370   A_d=2048+A_d
380   IF Avg_ad<2040 OR Avg_ad>2055 THEN
390     Avg_ad=.50*Avg_ad+.50*A_d
400   ELSE
410     Avg_ad=.95*Avg_ad+.05*A_d
420   END IF
430   OUTPUT @0 USING "#,K";"LD1#I"
440   Output_data(0)=Avg_ad
450   OUTPUT @0;Output_data(*)
460   OUTPUT @Net_an1;"TKM"
470 UNTIL Exit_flag>0
480 Exit_flag=0
490 GOTO Start
500 END
510 SUB Flag
520   CDM /Flag/ Exit_flag
530   Exit_flag=1
540 SUBEND
550 SUB Clear_screen
560   OUTPUT 2 USING "#,K";CHR$(255)&"K"
570 SUBEND

```

4-29 INPUT 250 kHz FILTER ADJUSTMENT

DESCRIPTION:

This procedure adjusts the 250 kHz filter shape on the A1 Receiver board. This filter rejects upper mixer products after the first IF mixing. This is required for the Receiver to meet absolute level and flatness specifications.

EQUIPMENT:

| | |
|---|--------------|
| 1:1 Probe | HP 10021A |
| 10:1 Probe | HP 10040A |
| BNC female to N male Adapter (2 each) | HP 1250-0780 |

PROCEDURE:

NOTE

This procedure requires that one of the A1 Receiver boards is operating within specifications. This minimizes the required equipment list and simplifies the adjustment procedure.

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Place the A1 Receiver board, which requires adjustment, on an extender board into channel B. Note each Receiver board's original position.
- c. Place the operational Receiver board into channel R and connect A1J1 to A4J3.
- d. Connect the instrument to the power line, and turn the POWER switch ON.
- e. Connect the Source Output to A1TP3 (channel B) using the 1:1 probe.
- f. Connect Receiver Input R to A1TP4 (channel B) using the 10:1 probe.
- g. Set the HP 3577A as follows:

| | |
|------------------|---------|
| AMPTD | +10 dBm |
| ATTEN | |
| ATTEN (R) | 0 dBm |
| IMPED (R) | 1 Meg |
| SWEEP TYPE | CW |
| FREQ | 230 kHz |
- h. Adjust A1L4 (channel B) for a minimum marker reading.
- i. Change the HP 3577A frequency to 250 kHz. Press the MKR→ hardkey and the MKR→ REF LVL softkey. Press the SCALE hardkey and enter a REF POSN of 50 % and a /DIV of 0.1 dB.
- j. Adjust A1L3 and A1L5 (channel B) for a maximum as read by the marker readout.
- k. Connect both the 1:1 and 10:1 probes to A1TP3 (channel B).
- l. Press the HP 3577A DISP FCTN hardkey and the PHASE softkey. Press the MEASR CAL hardkey and the NORMALIZE softkey.
- m. Move the 10:1 probe to A1TP4. Note the phase reading on the marker readout.
- n. Adjust A1L5 (channel B) for a marker phase reading halfway between the value noted in step m and 90°. Adjust A1L3 for a marker reading of 90 degrees.

NOTE

This adjusts A1L3 and A1L5 for exactly the same value which is necessary if the A1 Receiver board is to meet its phase specifications.

- o. Move the 10:1 probe to A1TP3 (channel B).
- p. Make the following changes to the HP 3577A.
 - SWEEP TYPE LIN FREQ
 - FREQ
 - FREQ SPAN 100 kHz
 - CENTER FREQ 250 kHz
 - DISPLY FCTN LOG MAG
 - SCALE
 - REF LEVEL 3 dB
 - /DIV 6 dB
 - REF POSN 100%
 - MEASR CAL NORMALIZE
- q. Move the 10:1 probe to A1TP4. The HP 3577A display should be similar to that shown in Figure 4-3.
- r. Repeat this procedure for all A1 Receiver boards requiring adjustment.
- s. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the instrument to its original state.

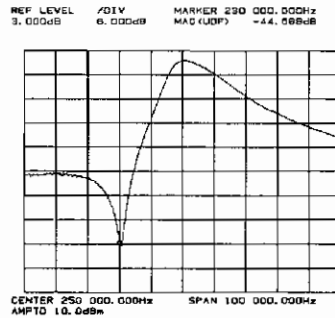


Figure 4-3. Input 250 kHz Filter Frequency Response

4-30 INPUT PHASE ZERO ADJUSTMENT

DESCRIPTION:

This procedure adjusts the A1 Receiver board phase circuits for a zero phase reference. This is required for the A1 Receiver board to meet phase specifications.

EQUIPMENT:

N male to BNC female Adapter (2 each) HP 1250-0780
 BNC Cable-24 inch HP 8120-1839

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.

NOTE

All Receivers must be adjusted for the HP 3577A to meet the channel-tochannel ratio specifications.

- b. Set the HP 3577A as follows:

| | |
|------------------|---------|
| INPUT | R |
| SWEEP TYPE | CW |
| FREQ | 100 kHz |
| DISP FCTN | PHASE |
| SCALE | |
| /DIV | 0.5 deg |
- c. Using a short cable, connect the Source Output to Receiver Input R.
- d. Adjust the Phase Adjust, A1R74, for a marker phase reading of 0.0 ± 0.5 degrees.
- e. Repeat steps b through d for Receiver Inputs A and B.
- f. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the instrument to its original state.

NOTE

If you were unable to adjust the phase to zero, use the following procedure to select the switch setting in the phase initialization circuit on the A6 board (see steps 1 through 6).

1. Set the Phase Adjust, A1R74, on the Receiver in channel R for a midrange, multiple of 30 degrees phase reading. Note the Receiver R phase reading.
2. Turn OFF the instrument's power switch, remove the power cord, and remove the A6 Reference board.

- Determine the current phase offset by comparing the A6S1 switch setting to Table 4-4.

Table 4-4 Reference Board Phase Offset

| Switch Number | Phase Offset |
|---------------|---------------------|
| 4 3 2 1 | |
| 0 0 0 0 | 0 |
| 0 1 0 1 | 0 |
| 0 0 1 0 | 30 |
| 1 1 1 0 | 30 |
| 0 0 1 1 | 60 |
| 1 1 1 1 | 60 |
| 1 1 0 0 | 90 |
| 1 1 0 1 | 120 |
| 1 0 1 0 | 150 |
| 1 0 1 1 | 180 |
| 1 0 0 0 | 210 |
| 1 0 0 1 | 240 |
| 0 1 1 0 | 270 |
| 0 1 1 1 | 300 |
| 0 1 0 0 | 330 |
| 0 0 0 1 | Not a valid setting |

KEY 0 = closed

1 = open

No. 4 switch is at the bottom of A6S1

No. 1 switch is at the top of A6S1

- Compute the new phase offset by subtracting the Receiver R phase reading from the current phase offset.
 $(\text{current phase offset}) - (\text{R phase reading}) = \text{new phase offset}$
- Use the table to determine the new switch setting and set A6S1 accordingly.
 An example follows:
 Receiver R phase reading is approximately -30 degrees. A6S1 is presently set at "1 0 1 1" or 180 degrees of phase offset.
 $(\text{current phase offset}) - (\text{R phase reading}) = \text{new phase offset}$
 $(180) - (-30) = 210$
 Match the new phase offset of 210 degrees to Table 4-4, and set A6S1 to the corresponding "1 0 0 0" switch number.
- Replace the A6 Reference board and connect the instrument to the power line. Return to step b.

4-31 INPUT LEVEL FLATNESS ADJUSTMENT

DESCRIPTION:

This procedure adjusts the A1 Receiver board amplitude flatness with respect to frequency. The source output and power splitter are calibrated using a power meter. The calibration data is then stored into a data register in the HP 3577A. This allows you to display the receiver flatness on the HP 3577A.

EQUIPMENT:

| | |
|------------------------------------|--------------------|
| Computer | HP 9000 Series 200 |
| Power Meter | HP 436A Opt 022 |
| Power Sensor | HP 8482A |
| Power Splitter | HP 11850A/C |
| 20 dB Attenuator | HP 8491A Opt 020 |
| N female to N female Adapter | HP 1250-1472 |
| RF Cables-24 inch (4 each) | HP 35679A |

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Set the power meter cal factor for 1 MHz and press SENSOR ZERO. (The power sensor must have a flatness of two percent or less from 1 MHz to 200 MHz.)
- c. Connect the equipment as shown in Figure 4-4.
- d. Load and run the receiver flatness adjustment program.

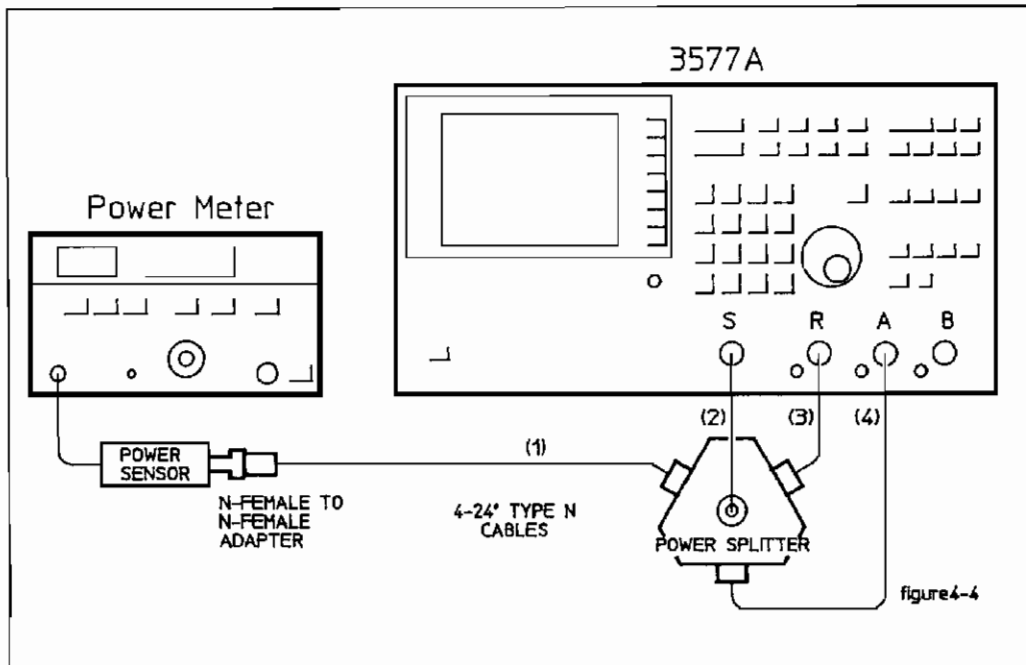


Figure 4-4 Input Level Calibration Test Set Up

```

10!RE-STORE "USERS/DH/RCVR_FLAT_ADJ:REMOTE"
20  IRCVR FLATNESS ADJ. USING 436A TO CAL THE SOURCE
30  DIM Sour_amptd(0:10)
40  COM Atten_label$(10)
50  COM /Input/ Input$(10)
60  Bin=0
70  Atten_label$="ATTEN_OUT"
80  Input$="R"
90  PRINTER IS 1
100 CALL Clear_screen
110 OUTPUT 711;"IPR:ST5;BW3;SAM00BM;SFR1MHZ"
120 PRINT TABXY(5,5);"CONNECT 3577A SOURCE TO INPUT OF POWER SPLITTER"
130 PRINT TABXY(5,6);"CONNECT POWER METER TO ONE OUTPUT OF THE POWER SPLITTER TH
RU AN N TYPE CABLE"
140 PRINT TABXY(5,7);"CONNECT THE REMAINING TWO OUTPUTS TO TWO 3577A INPUTS"
150 PRINT TABXY(5,9);"SET THE CAL FACTOR ON THE 436A FOR 1 Mhz"
160 PRINT TABXY(5,10);"PRESS 'CONTINUE' WHEN READY"
170 PAUSE
180 CALL Clear_screen
190 DISP "PLEASE WAIT APPROX. 3 MINUTES FOR CAL DATA COLLECTION"
200 FOR Freq=1.0 TO 200 STEP 3.98
210  OUTPUT 711;"SFR",Freq,"MHZ"
220  WAIT .2
230  FOR N=1 TO 5
240    WAIT .20
250    OUTPUT 713;"SD-U"
260    ENTER 713;Pm_level
270    Sour_amptd(Bin)=10^(Pm_level/10)+Sour_amptd(Bin)
280  NEXT N
290  Sour_amptd(Bin)=SQR(Sour_amptd(Bin)/5)
300  Bin=Bin+2
310 NEXT Freq
320 OUTPUT 711;"ST1;RS1;SWTSSEC;FRA1MHZ;FRB200MHZ;UDI;R/D1"
330 OUTPUT 711;"FMI;LD1"
340 OUTPUT 711;Sour_amptd(*)
350 OUTPUT 711;"DIV.10BR;RP55%"
360 DISP " "
370 PRINT TABXY(5,5);"INSTALL A 20 dB PAD BETWEEN THE 3577A SOURCE AND THE CABLE
"
380 PRINT TABXY(5,6);"MOVE THE CABLE FROM THE POWER METER TO THE REMAINING 3577A
INPUT"
390 PRINT TABXY(5,8);"PRESS 'CONTINUE' WHEN READY"
400 PAUSE
410 OUTPUT 711;"TKM;MTR;RST"
420 CALL Clear_screen
430 CALL Delta
440 LOOP
450 PRINT TABXY(5,3);"ADJUST AIR173 OF SELECTED INPUT FOR AN ABSOLUTE FLATNES
S OF < 0.6dB P-P"
460 PRINT TABXY(5,4);"(NORMALLY 1 Mhz = 200 Mhz)"
470 PRINT TABXY(5,6);"THEN CHECK RATIO FLATNESS FOR < 0.4dB P-P AND ADJUST AS
REQUIRED"
471 PRINT TABXY(5,9);"USE SOFTKEYS TO: CHANGE SELECTED INPUT"
472 PRINT TABXY(22,10);"CHANGE ATTENUATOR POSITION"
473 PRINT TABXY(22,11);"CHECK P-P FLATNESS"
480 PRINT TABXY(1,15);"SELECTED INPUT IS ";Input$; "
490 IF Atten_label$="ATTEN_IN" THEN
500  PRINT TABXY(1,17);"20 dB ATTENUATORS ARE OUT"
510  ELSE
520  PRINT TABXY(1,17);"20 dB ATTENUATORS ARE IN "
530  END IF
540 ON KEY 5 LABEL " R " CALL Input_r
550 ON KEY 6 LABEL " A " CALL Input_a
560 ON KEY 7 LABEL " B " CALL Input_b
570 ON KEY 0 LABEL " A/R " CALL Input_ar
580 ON KEY 1 LABEL " B/R " CALL Input_br

```

ADJUSTMENTS

MODEL 3577A

```
590 ON KEY 2 LABEL " A/B " CALL Input_ab
600 ON KEY 9 LABEL Atten_label$ CALL Atten
610 ON KEY 8 LABEL " DELTA P-P " CALL Delta
620 END LOOP
630 END

640 SUB Input_r
650 COM /Input/ Input$
670 DISP "PLEASE WAIT..."
680 OUTPUT 711;"UDIR/D1;TKM;MTR"
690 Input$="R"
700 CALL Delta
710 SUBEND

720 SUB Input_a
730 COM /Input/ Input$
750 DISP "PLEASE WAIT..."
760 OUTPUT 711;"UDIA/D1;TKM;MTR"
770 Input$="A"
780 CALL Delta
790 SUBEND

800 SUB Input_b
810 COM /Input/ Input$
830 DISP "PLEASE WAIT..."
840 OUTPUT 711;"UDIB/D1;TKM;MTR"
850 Input$="B"
860 CALL Delta
870 SUBEND

880 SUB Input_ar
890 COM /Input/ Input$
900 OUTPUT 711;"IAR;MTR"
910 Input$="A/R"
920 CALL Delta
930 SUBEND

940 SUB Input_br
950 COM /Input/ Input$
960 OUTPUT 711;"IBR;MTR"
970 Input$="B/R"
980 CALL Delta
990 SUBEND

1000 SUB Input_ab
1010 COM /Input/ Input$
1020 OUTPUT 711;"UDIA/B;MTR"
1030 Input$="A/B"
1040 CALL Delta
1050 SUBEND

1060 SUB Delta
1070 OUTPUT 711;"MTN;ZMK;MTX;DM1"
1080 ENTER 711;Marker_delta
1090 DISP "FLATNESS IS ";Marker_delta;"dB P-P"
1100 SUBEND

1110 SUB Atten
1120 COM Atten_label$
1130 SELECT Atten_label$
1140 CASE "ATTEN_IN"
1150 OUTPUT 711;"AR2;AA2;AB2;RST"
1160 Atten_label$="ATTEN_OUT"
1170 CASE "ATTEN_OUT"
1180 OUTPUT 711;"AR1;AA1;AB1;RST"
1190 Atten_label$="ATTEN_IN"
1200 END SELECT
1210 DISP "PLEASE WAIT..."
1220 WAIT 5.5
1230 CALL Delta
1240 SUBEND

1250 SUB Clear_screen
1260 OUTPUT 2 USING "#,K";"K"
1270 SUBEND
```

- e. After the calibration data has been collected, connect the equipment as shown in Figure 4-5.

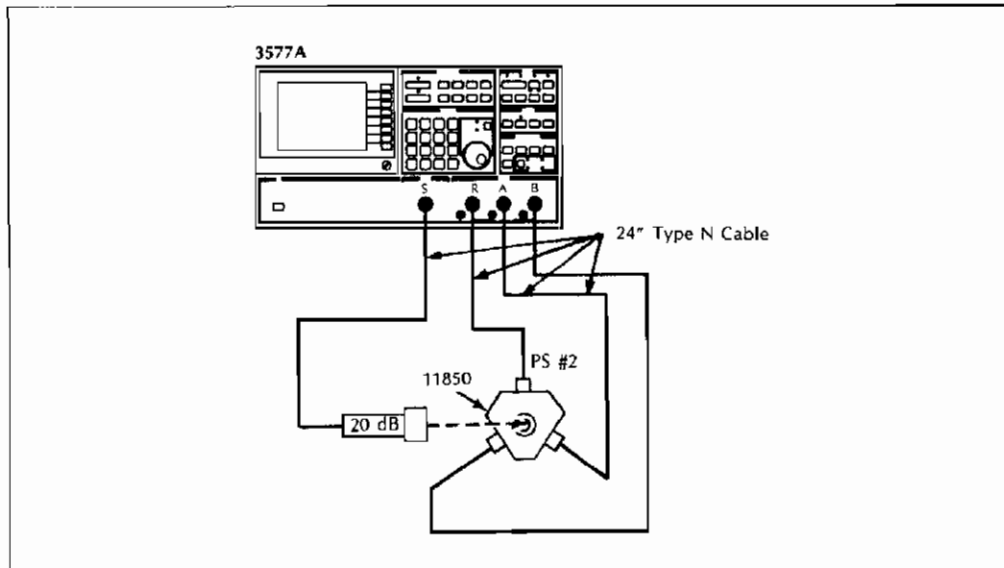


Figure 4-5 Input Level Flatness Test Set Up

- f. Adjust A1R173 on the selected Receiver for the flattest response. (Normally 200 MHz level equal to the 1 MHz level.) Absolute flatness must be less than 0.6 dB peak-to-peak.
- g. Verify that all ratios meet a flatness of less than 0.4 dB peak-to-peak and adjust if necessary.
- h. Repeat steps f and g until all specs are met.
- i. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and replace the top cover.

4-32 300 MHz BAND PASS FILTER ADJUSTMENT

DESCRIPTION:

This procedure adjusts the 300 MHz band pass filter on the A25 board. This filter eliminates 30 MHz harmonics.

EQUIPMENT:

Spectrum Analyzer HP 8568B
 Service Accessory Kit HP 03577-84401

PROCEDURE:

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Remove the cable connecting A25J2 to A4J1 and connect the spectrum analyzer to A25J2.
- c. Set the spectrum analyzer as follows:

| | |
|----------------------------|---------|
| Center Frequency | 300 MHz |
| Frequency Span | 0 Hz |
| Resolution Bandwidth | 300 Hz |
| Video Bandwidth | 300 Hz |
| Sweep Time | 10 sec |
- d. Adjust A25L1 for a maximum reading on the spectrum analyzer.
- e. This completes the adjustment. Turn OFF the instrument's power switch, remove the power cord, and return the instrument to its original state.

SECTION V REPLACEABLE PARTS

Table of Contents

| | | |
|-----|------------------------------|-----|
| 5-1 | Introduction | 5-1 |
| 5-2 | Replaceable Parts List | 5-1 |
| 5-3 | Ordering Information | 5-1 |
| 5-4 | Direct Mail System | 5-2 |
| 5-5 | Special Handling | 5-2 |

List of Tables

| | | |
|-----|----------------------------------|--------|
| 5-1 | Abbreviations Used | 5-2 |
| 5-2 | Code List of Manufacturers | 5-2a/b |
| 5-3 | Replaceable Parts List | 5-3 |

List of Figures

| | | |
|------|---|-----------|
| 5-1 | Cabinet Parts, Exploded View | 5-49/5-50 |
| 5-2 | Cabinet Parts, Exploded View | 5-49/5-50 |
| 5-3 | Mechanical Parts Identification, Cables and Shields | 5-51/5-52 |
| 5-4 | Mechanical Parts Location, Cables and Shields | 5-51/5-52 |
| 5-5 | Mechanical Parts Identification, Covers | 5-53/5-54 |
| 5-6 | Mechanical Parts Location, Covers | 5-53/5-54 |
| 5-7 | Mechanical Parts Identification, Bottom | 5-55/5-56 |
| 5-8 | Mechanical Parts Location, Bottom | 5-55/5-56 |
| 5-9 | Mechanical Parts Identification, Chassis | 5-57/5-58 |
| 5-10 | Mechanical Parts Location, Chassis | 5-57/5-58 |

SECTION V REPLACEABLE PARTS

5-1 INTRODUCTION

This section contains information for ordering parts. Table 5-1 lists abbreviations used in Table 5-3 (Replaceable Parts and throughout this manual). Table 5-2 lists the manufacturer's name and address by manufacturer's code numbers.


5-2 REPLACEABLE PARTS LIST

In Table 5-3, the Replaceable Parts List is organized as follows:

1. PC Board Assemblies: A1,A2,A3,...
2. Chassis Mounted Components
3. Chassis Components
4. Hardware

Table 5-3 headings include:

1. REFERENCE DESIGNATOR

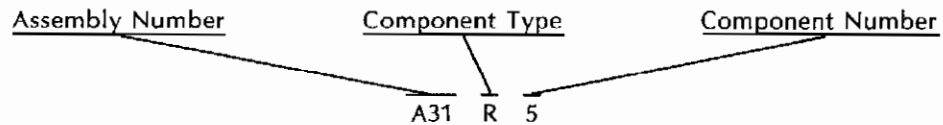

2. HP PART NUMBER
3. CD - The Check Digit is used by -hp- to verify the order has been transmitted correctly.
4. QTY - The total quantity in the instrument.
5. DESCRIPTION - The -hp- description of the part.
6. MFR CODE - The manufacturer's code (see Table 5-2).
7. MFR PART NUMBER - The manufacturer's part number.

5-3 ORDERING INFORMATION

To order a part listed in Table 5-3, quote the -hp- part number, check digit, quantity required and address the order to the nearest Hewlett-Packard Sales and Service Office.

To order a part that is not listed in Table 5-3, describe the part, its function, the instrument model and serial number, the quantity required and address the order to the nearest Hewlett-Packard Sales and Service Office.

5-4 DIRECT MAIL SYSTEM

Within the U.S.A., Hewlett-Packard can supply parts through a direct mail order system. Advantages of using this system are:

- Direct ordering and shipment from the -hp- Parts Center in Mountain View, California.
- No maximum or minimum on any mail order. There is a minimum order amount for parts ordered through a local -hp- sales and service office when the orders require billing and invoicing.
- Transportation charges are prepaid. A small handling charge is added to each order.
- No invoicing. A check or money order must accompany each order.

Mail order forms and specific ordering information are available through your local Hewlett-Packard sales and service office. Addresses and phone numbers are located at the back of this manual.

5-5 SPECIAL HANDLING

The HP 3577A contains many static sensitive components. Use the appropriate precautions when removing, handling and installing all parts to avoid unnecessary damage.

Table 5-1 Abbreviations Used

| ABBREVIATIONS | | | |
|------------------|---|----------|---|
| Ag | silver | Hz | hertz (cycles) per second |
| Al | aluminum | ID | inside diameter |
| A | ampere(s) | imp | impregnated |
| Au | gold | incd | incandescent (insulationless) |
| C | capacitor | ins | insulation |
| car | ceramic | kΩ | kiloohm(s) = 10 ⁺³ ohms |
| coef | coefficient | kHz | kilohertz = 10 ⁺³ hertz |
| com | common | l | inductor |
| comp | composition | lin | linear taper |
| conn | connection | log | logarithmic taper |
| dep | deposited | mA | milliampere(s) = 10 ⁻³ ampere(s) |
| DPDT | double-pole double-throw | MHz | megahertz = 10 ⁺⁶ hertz |
| DPST | double-pole single-throw | MΩ | megohm(s) = 10 ⁺⁶ ohms |
| elect | electrolytic | met film | metal film |
| encap | encapsulated | mfg | manufacturer |
| F | feral(s) | ms | millisecond |
| FET | field effect transistor | mtg | mounting |
| fxd | fixed | mV | millivolt(s) = 10 ⁻³ volt(s) |
| GaAs | gallium arsenide | μF | microfarad(s) |
| GHz | gigahertz = 10 ⁺⁹ hertz | μs | microsecond(s) |
| gd | guard(ed) | μV | microvolt(s) = 10 ⁻⁶ volt(s) |
| Ge | germanium | my | Mylar® |
| gnd | ground(ed) | nA | nanampere(s) = 10 ⁻⁹ ampere(s) |
| H | henry(ies) | NC | normally closed |
| Hg | mercury | NO | normally open |
| NPO | negative positive zero (zero temperature coefficient) | ns | nanosecond(s) = 10 ⁻⁹ seconds |
| nsr | not separately replaceable | OD | outside diameter |
| Ω | ohm(s) | o | order by description |
| pA | picoampere(s) | p | peak |
| pc | primed circuit | PIV | peak inverse voltage |
| pF | picofarad(s) = 10 ⁻¹⁴ farads | p/o | part of |
| pin | peak to peak | pos | position(s) |
| pot | potentiometer | poly | polystyrene |
| p-p | peak to peak | pr | precision (temperature coefficient, long term stability and/or tolerance) |
| prts per med'n | parts per million | R | resistor |
| rh | rhodium | Rh | rhodium |
| rms | root-mean-square | rot | rotary |
| rot | rotary | Se | selenium |
| sect | section(s) | SI | silicon |
| SI | silicon | st | slide |
| SPDT | single-pole double-throw | SPST | single-pole single-throw |
| Ta | tantalum | Tc | temperature coefficient |
| TiO ₂ | titanium dioxide | tog | toggle |
| tol | tolerance | trm | trimmer |
| trm | trimmer | TSTR | transistor |
| V | volt(s) | vacw | alternating current working voltage |
| var | variable | vdcw | direct current working voltage |
| W | watt(s) | w | with |
| w | with | w/i | working inverse voltage |
| w/o | without | w/w | wirewound |
| ww | wirewound | | |
| | | * | optimum value selected at factory |
| | | ** | average value shown (part may be omitted) |
| | | | no standard type number assigned |
| | | | selected or special type |
| | | | © Dupont de Nemours |
| DESIGNATORS | | | |
| A | assembly | FL | filter |
| B | motor | HR | heater |
| BT | battery | IC | integrated circuit |
| C | capacitor | J | jack |
| CR | diode or thyristor | K | relay |
| DL | delay line | L | inductor |
| DS | lamp | M | meter |
| E | misc electronic part | MP | mechanical part |
| F | fuse | P | plug |
| Q | transistor | QCR | transistor-diode |
| R | resistor | Rsp | resistor-pack |
| RT | thermistor | S | switch |
| T | transformer | T | transformer |
| TB | terminal board | TC | thermocouple |
| TC | thermocouple | TP | test point |
| TS | terminal strip | U | microcircuit |
| V | vacuum tube, neon bulb, photocell, etc. | W | wire |
| X | socket | X | socket |
| XDS | lampholder | XF | fuseholder |
| Y | crystal | Y | crystal |
| Z | network | Z | network |

Table 5-2. Manufacturers Code List

| MFR NO. | MANUFACTURER NAME | ADDRESS | STATE | ZIP CODE |
|---------|-------------------------------------|---------------|-------|----------|
| H9027 | Schurter A G H | Luzern | SW | |
| 01121 | Allen-Bradley Co | Milwaukee | WI | 53204 |
| 01295 | Texas Instr Inc Semicond Cmpnt Div | Dallas | TX | 75222 |
| 02111 | Spectrol Electronics Corp | City of Ind | CA | 91745 |
| 03508 | GE Co Semiconductor Prod Dept | Auburn | NY | 13201 |
| 03888 | K D I Pyrofilm Corp | Whippany | NJ | 07981 |
| 04713 | Motorola Semiconductor Products | Phoenix | AZ | 85008 |
| 06665 | Precision Monolithics Inc | Santa Clara | CA | 95050 |
| 07263 | Fairchile Semiconductor Div | Mountain View | CA | 94042 |
| 11236 | CTS of Berne Inc | Berne | IN | 46711 |
| 13103 | Thermalloy Co | Dallas | TX | 75234 |
| 13606 | Sprague Elect Co Semiconductor Div | Concord | NH | 03301 |
| 14099 | Semtech Corp | Newbury Park | CA | 91320 |
| 15454 | Ametek/Rodan Div | Anaheim | CA | 92806 |
| 17856 | Siliconix Inc | Santa Clara | CA | 95054 |
| 18324 | Signetics Corp | Sunnyvale | CA | 94086 |
| 19701 | Mepco/Electra Corp | Mineral Wells | TX | 76067 |
| 20932 | Emcon Div ITW | San Diego | CA | 92129 |
| 24546 | Corning Glass Works (Bradford) | Bradford | PA | 16701 |
| 25403 | N.V. Philips-Elcoma Department | Eindhoven | HL | 02876 |
| 27014 | National Semiconductor Corp | Santa Clara | CA | 95051 |
| 27167 | Corning Glass Works (Wilmington) | Wilmington | NC | 28401 |
| 28480 | Hewlett-Packard Co Corporate HQ | Palo Alto | CA | 94304 |
| 3L585 | RCA Corp Solid State Div | Somerville | NJ | |
| 32997 | Bourns Inc Trimpot Prod Div | Riverside | CA | 92507 |
| 34335 | Advanced Micro Devices Inc | Sunnyvale | CA | 94086 |
| 34371 | Harris Semicon Div Harris-Intertype | Melbourne | FL | 32901 |
| 52063 | Exar Integrated Systems Inc. | Sunnyvale | CA | 94086 |
| 56289 | Sprague Electric Co | North Adams | MA | 01247 |
| 72136 | Electro Motive Corp | Florence | SC | 06226 |
| 72982 | Erie Technological Products Inc | Erie | PA | 16512 |
| 73138 | Beckman Instruments Inc Helipot Div | Fullerton | CA | 92634 |
| 75915 | Littelfuse Inc | Des Plaines | IL | 60016 |
| 84411 | TRW Capacitor Div | Ogallala | NE | 69153 |
| 91637 | Dale Electronics Inc | Columbus | NE | 68601 |

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|----------------------------|
| | 3577A | 7 | 1 | NETWORK ANALYZER | 26480 | 3577A |
| A1 | 03577-66501 | 2 | 3 | RECEIVER BD | 28480 | 03577-66501 |
| A1C1 | 0160-4571 | 8 | 14 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A1C2 | 0160-2724 | 9 | 1 | CAPACITOR-FXD 3800PF +-2% 500VDC MICA | 09023 | |
| A1C3 | 0140-0157 | 6 | 1 | CAPACITOR-FXD 1857PF +-1% 500VDC MICA | 00853 | |
| A1C4 | 0160-2724 | 9 | 8 | CAPACITOR-FXD 3800PF +-2% 500VDC MICA | 09023 | |
| A1C5 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A1C6 | 0180-0210 | 6 | 3 | CAPACITOR-FXD 3.3UF+-20% 15VDC TA | 13606 | 150D335X0015A2-DYS |
| A1C7 | 0180-4571 | 8 | 3 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A1C8 | 0180-0309 | 4 | 3 | CAPACITOR-FXD 4.7UF+-20% 10VDC TA | 13606 | 150D475X0010A2-DYS |
| A1C11-C12 | 0180-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A1C13 | 0160-5349 | 0 | 1 | CAPACITOR-FXD 200PF +-5% 100VDC CER | 13606 | 29200CG201J100B |
| A1C14-C17 | 0160-6514 | 3 | 10 | C-F 4700PF 1% 50V CERMLr | 04222 | SR215A472FAAHTR |
| A1C18 | 0160-4591 | 2 | 1 | CAPACITOR-FXD .018UF +-1% 200VDC | 84411 | HEW-249 |
| A1C19 | 0180-6514 | 3 | 2 | C-F 4700PF 1% 50V CERMLr | 04222 | SR215A472FAAHTR |
| A1C20 | 0121-0491 | 1 | 1 | CAPACITOR-V TRMR-CER 5-30PF 50V PC-MTG | 74970 | 274-0030-005 |
| A1C21 | 0160-2646 | 4 | 2 | CAPACITOR-FXD 168.9PF +-1% 300VDC MICA | 09023 | |
| A1C22-C23 | 0160-6514 | 3 | 2 | C-F 4700PF 1% 50V CERMLr | 04222 | SR215A472FAAHTR |
| A1C24 | 0160-4591 | 2 | 2 | CAPACITOR-FXD .018UF +-1% 200VDC | 84411 | HEW-249 |
| A1C25 | 0180-6514 | 3 | 3 | C-F 4700PF 1% 50V CERMLr | 04222 | SR215A472FAAHTR |
| A1C26 | 0121-0491 | 1 | 1 | CAPACITOR-V TRMR-CER 5-30PF 50V PC-MTG | 74970 | 274-0030-005 |
| A1C27 | 0160-4082 | 2 | 1 | CAPACITOR-FXD 1000PF +-2.5% 180VDC POLYP | 25088 | B33062-A1102-H |
| A1C28-C29 | 0160-6513 | 2 | 2 | C-F 88PF 5% 200V CERMLr | 28480 | RPE121-978CG680J200V |
| A1C30 | 0160-2187 | 0 | 1 | CAPACITOR-FXD 10PF +-5% 300VDC MICA | 00853 | |
| A1C31-C32 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A1C33 | 0180-0210 | 6 | 6 | CAPACITOR-FXD 3.3UF+-20% 15VDC TA | 13606 | 150D335X0015A2-DYS |
| A1C34 | 0160-0127 | 2 | 1 | CAPACITOR-FXD 1UF +-20% 25VDC CER | 13606 | 2C37Z5U105M050A |
| A1C35 | 0180-0309 | 4 | 1 | CAPACITOR-FXD 4.7UF+-20% 10VDC TA | 13606 | 150D475X0010A2-DYS |
| A1C36 | 0180-0553 | 0 | 1 | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A1C37-C38 | 0160-1743 | 2 | 4 | CAPACITOR-FXD .1UF +80-20% 35VDC TA | 13606 | 150D104X9035A2-DYS |
| A1C39 | 0180-0553 | 0 | 0 | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A1C40 | 0160-6508 | 5 | 2 | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978CG220J200V |
| A1C41-C42 | 0160-1743 | 2 | 2 | CAPACITOR-FXD .1UF+-10% 35VDC TA | 13606 | 150D104X9035A2-DYS |
| A1C43-C44 | 0160-4787 | 8 | 8 | CAPACITOR-FXD 22PF +-5% 100VDC CER 0+-30 | 04222 | SA106A220JAA |
| A1C45 | 0160-0309 | 4 | 4 | CAPACITOR-FXD 4.7UF+-20% 10VDC TA | 13606 | 150D475X0010A2-DYS |
| A1C46 | 0160-4819 | 7 | 1 | CAPACITOR-FXD 2200PF +-5% 100VDC CER | 04222 | SA301A222JAA |
| A1C47-C49 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A1C50 | 0160-2646 | 4 | 3 | CAPACITOR-FXD 168.9PF +-1% 300VDC MICA | 09023 | |
| A1C51-C52 | 0160-6514 | 3 | 4 | C-F 4700PF 1% 50V CERMLr | 04222 | SR215A472FAAHTR |
| A1C53-C55 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A1C88-C99 | 0160-4532 | 1 | 2 | CAPACITOR-FXD 1000PF +-20% 50VDC CER | 13606 | 592CX7R102M050B |
| A1C100 | 0160-6515 | 4 | 1 | C-F 10PF +-% 200V CERMLr | 26480 | RPE121-978CG100D200V |
| A1C101 | 0180-2616 | 0 | 1 | CAPACITOR-FXD 80UF+-20% 6VDC TA | 13606 | 186D004 |
| A1C102 | 0160-8511 | 0 | 1 | C-F 15PF 5% 200V CERMLr | 28480 | RPE121-978CG150J200V |
| A1C103-C104 | 0160-6506 | 3 | 11 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A1C105 | 0180-0291 | 3 | 1 | CAPACITOR-FXD .1UF+-10% 35VDC TA | 13606 | 150D105X9035A2-DYS |
| A1C106 | 0160-0337 | 6 | 1 | CAPACITOR-FXD 180PF +-1% 300VDC MICA | 09023 | |
| A1C107 | 0160-6508 | 3 | 3 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A1C108 | 0160-4507 | 0 | 1 | CAPACITOR-FXD 1800PF +-2% 100VDC CER | 54583 | FD12C0G2A182G |
| A1C109 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A1C110-C111 | 0160-6510 | 9 | 6 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A1C112 | 0121-0449 | 9 | 9 | CAPACITOR-V TRMR-CER 3.5-10PF 63V PC-MTG | 52763 | 5S-TRIKO-04 3.5-10 PF-N470 |
| A1C113 | 0160-6521 | 2 | 1 | C-F 2.2PF +-% 200V CERMLr | 26480 | RPE121-978CG2R2C200V |
| A1C114 | 0121-0449 | 9 | 2 | CAPACITOR-V TRMR-CER 3.5-10PF 63V PC-MTG | 52763 | 5S-TRIKO-04 3.5-10 PF-N470 |
| A1C115 | 0180-6524 | 6 | 1 | C-F 6.8PF +-% 200V CERMLr | 28480 | RPE121-978CG6R8D200V |
| A1C116 | 0160-6506 | 3 | 3 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A1C118 | 0180-0210 | 6 | 6 | CAPACITOR-FXD 3.3UF+-20% 15VDC TA | 13606 | 150D335X0015A2-DYS |
| A1C119 | 0160-6510 | 9 | 9 | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978X7R104M50V |
| A1C120-C127 | 0160-6506 | 3 | 3 | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| A1C129 | 0160-6523 | 4 | 1 | C-F 1PF +-% 200V CERMLr | 26480 | RPE121-978CG010C200V |
| A1C130 | 0180-6510 | 9 | 9 | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978X7R104M50V |
| A1C131 | 0160-5041 | 9 | 1 | CAPACITOR-FXD .015UF +-10% 100VDC CER | 04222 | SR201C153KAA |
| A1C132-C133 | 0160-3914 | 1 | 1 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 04222 | SR201C103KAA |
| A1C137 | 0180-6524 | 5 | 1 | C-F 6.8PF +-% 200V CERMLr | 28480 | RPE121-978CG6R8D200V |
| A1C139-C140 | 0160-6506 | 3 | 3 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A1C141-C142 | 0180-3767 | 4 | 2 | C-F 3.3UF 20% 25V TADPr | 26480 | T350B335M025AS C-6310 |
| A1C143 | 0180-1746 | 5 | 1 | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|-----------------------|
| A1C144 | 0160-0127 | 2 | | CAPACITOR-FXD 1UF +/-20% 25VDC CER | 13606 | 2C37Z5U105M050A |
| A1C145 | 0160-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-97BC0G220J200V |
| A1C146 | 0160-0127 | 2 | | CAPACITOR-FXD 1UF +/-20% 25VDC CER | 13606 | 2C37Z5U105M050A |
| A1C147 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-97BZ5U104M50V |
| A1C148-C149 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-976X7R104M50V |
| A1C150 | 0160-6505 | 2 | 1 | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A1C200-C201* | 0160-4361 | 8 | | CAPACITOR-FXD 1.5PF +/-25PF 200VDC CER | 54563 | FD11C0G2D1R5C |
| A1C200-C201* | 0160-6521 | 2 | | C-F 2.2PF +/-% 200V CERMLr | 28480 | RPE121-978C0G2R2C200V |
| A1C200-C201* | 0160-4362 | 9 | | CAPACITOR-FXD 3.3PF +/-25PF 200VDC CER | 54563 | FD12C0G2D3R3C |
| A1C200-C201* | 0160-3873 | 1 | | CAPACITOR-F 4.7PF +/-25PF 200VDC CER | 54563 | FD11C0G2D4R7C |
| A1CR1 | 1902-0953 | 7 | 6 | DIODE-ZNR 6.2V 5% DO-35 PD=4W TC=+.053% | 04713 | SZ30035-11RL |
| A1CR2-CR3 | 1901-0376 | 6 | 2 | DIODE-GEN PRP 35V 50MA DO-35 | 9N171 | NDP202 |
| A1CR4 | 1902-0951 | 5 | 1 | DIODE-ZNR 5.1V 5% DO-35 PD=4W TC=+.035% | 04713 | SZ30035-9RL |
| A1CR5 | 1902-0953 | 7 | | DIODE-ZNR 6.2V 5% DO-35 PD=4W TC=+.053% | 04713 | SZ30035-11RL |
| A1CR6 | 1901-0050 | 3 | 2 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 630B |
| A1CR7-CR8 | 1901-1068 | 6 | 1 | DIODE-SCHOTTKY SM SIG | 28480 | 1901-1068 |
| A1CR9 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 630B |
| A1CR10 | 0122-0085 | 1 | 1 | DIODE-VVC 2.2PF 7% C3/C25-MIN=4.5 | 50545 | 1S220B(E) |
| A1CR11-CR12 | 1901-1068 | 5 | | DIODE-SCHOTTKY SM SIG | 28480 | 1901-1068 |
| A1CR13 | 1901-0040 | 1 | 4 | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1089 |
| A1CR14-CR16 | 1902-0953 | 7 | | DIODE-ZNR 6.2V 5% DO-35 PD=4W TC=+.053% | 04713 | SZ30035-11RL |
| A1CR17 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1089 |
| A1CR16 | 1902-0953 | 7 | | DIODE-ZNR 6.2V 5% DO-35 PD=4W TC=+.053% | 04713 | SZ30035-11RL |
| A1CR18-CR20 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1089 |
| A1CR21 | 1902-0957 | 1 | 1 | DIODE-ZNR 9.1V 5% DO-35 PD=4W TC=+.089% | 04713 | SZ30035-015 |
| A1CR22-CR23 | 1901-0179 | 7 | 2 | DIODE-SWITCHING 15V 50MA 750PS | 07263 | FD7018 |
| A1CR24 | 1901-0026 | 3 | 1 | DIODE-PWR RECT 200V 750MA DO-29 | 04713 | SR1358-6BRL |
| A1CR25 | 1901-0535 | 9 | 1 | DIODE-SCHOTTKY SM SIG | 28480 | 1901-0535 |
| A1E3 | 9170-0894 | 0 | 3 | CORE-SHIELDING BEAD | 02114 | 56-590-85/4A8 |
| A1H4 | 03577-04101 | 8 | 1 | SHTF CVR-RECEIVER BDS | 28480 | 03577-04101 |
| A1H5 | 03577-04102 | 9 | 1 | SHTF CVR-RECEIVER BD | 28480 | 03577-04102 |
| A1H6 | 03577-20601 | 7 | 1 | CSTG-CIRC SIDE | 28480 | |
| A1H7 | 03577-20802 | 8 | 1 | CSTG-COMP SIDE | 28480 | |
| A1H26 | 1910-0398 | 9 | 1 | NETWORK RES 10-SIP 22.0K OHM X 8 | 11236 | 750-101-R22K |
| A1H31-H39 | 4330-0496 | 3 | 9 | INSULATOR-BEAD GLASS | 53101 | KG12 |
| A1HDR17 | 1258-0141 | 8 | | CONN-JUMPER REM .025P | 00779 | 530153-2 |
| A1J1 | 1250-1512 | 3 | 1 | CONNECTOR-RF SMB M PC 50-OHM | 98291 | 51-353-0039-226 |
| A1J2 | 1250-1314 | 3 | 1 | CONNECTOR-RF SMD-SLD FEM PC 50-OHM | 98291 | 52-054-0000-226 |
| A1K1-K3 | 0490-1404 | 9 | 3 | REL AY 2C 12VDC-COIL .5A 28VDC | T01014 | 412Y-0191 |
| A1L1-L2 | 9140-0748 | 0 | 1 | INDUCTOR 250UH 25% .25DX 5LG Q=3 | 24226 | CA-253-3 |
| A1L3 | 03577-60329 | 0 | 2 | IND POT CORE VAR 181-108 UH | 28480 | 03577-60329 |
| A1L4 | 03577-60331 | 4 | 1 | IND POT CORE VAR 247-283 UH | 28480 | 03577-60331 |
| A1L5 | 03577-60329 | 0 | | IND POT CORE VAR 181-108 UH | 28480 | 03577-60329 |
| A1L6 | 9100-2275 | 8 | 1 | INDUCTOR RF-CH-MLD 82UH 10% .105DX.26LG | 24226 | 10M622K |
| A1L7-L8 | 9140-0144 | 0 | 2 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A1L9 | 9100-1611 | 4 | 2 | INDUCTOR RF-CH-MLD 220NH 20% | 99800 | 1537-02 |
| A1L10 | 9140-0129 | 1 | 1 | INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG | 99800 | 1537-92 |
| A1L11 | 03577-67901 | 8 | 1 | INDCTR-WIRE 22GA LOOP | A01130 | |
| A1L12 | 9100-2574 | 0 | 2 | INDUCTOR RF-CH-MLD 1.2MH 10% | 24226 | 17S124K |
| A1L13 | 9100-1611 | 4 | | INDUCTOR RF-CH-MLD 220NH 20% | 99800 | 1537-02 |
| A1L14 | 9100-2574 | 0 | | INDUCTOR RF-CH-MLD 1.2MH 10% | 24226 | 17S124K |
| A1P1 | 1251-8736 | 9 | 2 | CONN-POST TYPE .100-PIN-SPOG 6-CONT | 00779 | 103240-3 |
| A1P1A | 1251-5033 | 3 | | CONN-POST TYPE .100-PIN-SPOG 3-CONT | 00779 | 103239-3 |
| A1P2 | 1251-4822 | 6 | 9 | CONN-POST TYPE .100-PIN-SPOG 3-CONT | 27264 | 22-03-2031 |
| A1P3 | 1251-9735 | 8 | 1 | CONN-POST TYPE .100-PIN-SPOG 8-CONT | 28480 | 1251-8736 |
| A1P3A | 1251-7524 | 1 | 1 | CONN-POST TYPE .100-PIN-SPOG 4-CONT | 28480 | 1251-7524 |
| A1P4 | 1251-8736 | 9 | | CONN-POST TYPE .100-PIN-SPOG 6-CONT | 00779 | 103240-3 |
| A1P4A | 1251-5033 | 3 | | CONN-POST TYPE .100-PIN-SPOG 3-CONT | 00779 | 103239-3 |
| A1P5-P6 | 1251-4047 | 7 | 2 | CONN-POST TYPE .100-PIN-SPOG 3-CONT | 27264 | 22-05-2031 |
| A1P7-P15 | 1251-4822 | 6 | | CONN-POST TYPE .100-PIN-SPOG 3-CONT | 27264 | 22-03-2031 |
| A1Q1-Q2 | 1854-0686 | 0 | 1 | TRANSISTOR NPN SI TO-72 PD=200MW FT=4GHZ | 25403 | A400 |
| A1Q3 | 1853-0553 | 8 | 1 | TRANSISTOR PNP SI TO-72 PD=200MW FT=5GHZ | 25403 | A440 |
| A1Q4 | 1854-0686 | 0 | | TRANSISTOR NPN SI TO-72 PD=200MW FT=4GHZ | 25403 | A400 |
| A1Q5 | 1855-0081 | 1 | 1 | TRANSISTOR J-FET N-CHAN D-MODE SI | 04713 | 5PF819 |
| A1Q6 | 1854-0686 | 0 | | TRANSISTOR NPN SI TO-72 PD=200MW FT=4GHZ | 25403 | A400 |
| A1Q7-Q8 | 1853-0419 | 5 | 1 | TRANSISTOR PNP SI PD=310MW FT=200MHZ | 04713 | SPS7476 |
| A1Q11 | 1855-0232 | 4 | 1 | TRANSISTOR J-FET DUAL 2N5665 N-CHAN | 17866 | 2N5665 |
| A1Q12 | 1853-0036 | 2 | 1 | TRANSISTOR PNP SI PD=310MW FT=250MHZ | 04713 | SPS3612 |
| A1Q13-Q21 | 03577-60339 | 2 | 1 | PMISC SILICONE | 28480 | 03577-60339 |
| A1Q22-Q23 | 1855-0420 | 2 | 1 | TRANSISTOR J-FET 2N4391 N-CHAN D-MODE | 17866 | 2N4391 |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|---|---|------|--|-----------|------------------|
| A1Q24 | 1853-0083 | 9 | | 1 | TRANSISTOR-DUAL PNP PD=600MW | 07263 | SP 12102 |
| A1Q25 | 1854-0263 | 9 | | 1 | TRANSISTOR NPN 2N3019 SI TO-39 PD=600MW | 04713 | ST1481 |
| A1Q26 | 1854-0515 | 4 | | 1 | TRANSISTOR-DUAL NPN TO-77 PD=600MW | 32293 | ITS1015A |
| A1Q27 | 1853-0320 | 7 | | 1 | TRANSISTOR PNP 2N4032 SI TO-5 PD=600MW | 07263 | S44044 |
| A1Q28 | 1854-0477 | 7 | | 1 | TRANSISTOR NPN 2N2222A SI TO-18 PD=500MW | 04713 | ST1288 |
| A1Q29 | 1854-0688 | 0 | | | TRANSISTOR NPN SI TO-72 PD=200MW FT=4GHZ | 25403 | A400 |
| A1R1 | 0698-4446 | 4 | | 1 | RESISTOR 5.76K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A1R2 | 0683-2025 | 1 | | 4 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R3-R4 | 0683-3925 | 2 | | 2 | RESISTOR 3.9K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R5 | 0683-2025 | 1 | | 1 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R6 | 0698-6971 | 4 | | 1 | RESISTOR 10K .5% .125W F TC=0+-50 | 19701 | 5033R |
| A1R7 | 0698-3581 | 7 | | 1 | RESISTOR 13.7K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R8 | 0757-0278 | 9 | | 1 | RESISTOR 1.78K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R9 | 0698-3228 | 9 | | 1 | RESISTOR 49.9K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R10 | 0683-2025 | 1 | | 1 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R11 | 0683-6225 | 1 | | 1 | RESISTOR 6.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R12 | 0683-2025 | 1 | | 1 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R13 | 0698-6965 | 7 | | 1 | RESISTOR 505 .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R14 | 0757-0268 | 1 | | 1 | RESISTOR 9.08K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R15 | 0698-4489 | 6 | | 1 | RESISTOR 26K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A1R17 | 0698-6362 | 8 | | 2 | RESISTOR 1K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R18 | 0698-6630 | 3 | | 5 | RESISTOR 20K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R19 | 0698-7674 | 7 | | 1 | RESISTOR 13.19K .1% .125W F TC=0+-50 | 19701 | 5033R |
| A1R20 | 0698-6905 | 4 | | 1 | RESISTOR 1.078K .25% .125W F TC=0+-50 | 19701 | 5033R |
| A1R21 | 0698-6343 | 5 | | 1 | RESISTOR 9K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R22 | 0698-6320 | 8 | | 1 | RESISTOR 5K .1% .125W F TC=0+-25 | 91637 | CMF-55-1, T-9 |
| A1R23 | 0698-6830 | 3 | | 2 | RESISTOR 20K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R24-R25 | 0698-7980 | 4 | | 4 | RESISTOR 7.87K 1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R26 | 0698-5418 | 3 | | 2 | RESISTOR 50 .1% .125W F TC=0+-50 | 19701 | 5033R |
| A1R27 | 0698-0192 | 2 | | 2 | RESISTOR 3.894K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R28 | 0757-0448 | 5 | | 1 | RESISTOR 18.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R29 | 0698-6630 | 3 | | 3 | RESISTOR 20K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R30 | 0698-7394 | 8 | | 1 | RESISTOR 680 .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R31 | 0698-6362 | 8 | | 1 | RESISTOR 1K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R32 | 0698-6630 | 3 | | 3 | RESISTOR 20K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R33-R34 | 0698-7980 | 4 | | 3 | RESISTOR 7.87K 1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R35 | 0698-5418 | 3 | | 1 | RESISTOR 50 .1% .125W F TC=0+-50 | 19701 | 5033R |
| A1R36 | 0698-0192 | 2 | | 2 | RESISTOR 3.894K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R38-R39 | 0698-3558 | 8 | | 3 | RESISTOR 4.02K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R40 | 0698-3279 | 0 | | 1 | RESISTOR 4.99K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R41 | 0698-3558 | 8 | | 1 | RESISTOR 4.02K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R42 | 0757-0401 | 0 | | 2 | RESISTOR 100 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R43 | 0698-3582 | 8 | | 1 | RESISTOR 41.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R44 | 2100-3356 | 1 | | 1 | RESISTOR-TRMR 200K 10% C SIDE-ADJ 1-TRN | 32987 | 3386X-Y46-204 |
| A1R45 | 0757-0277 | 8 | | 3 | RESISTOR 49.9 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R46 | 0683-6815 | 5 | | 1 | RESISTOR 680 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R47 | 0683-5625 | 3 | | 1 | RESISTOR 5.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R48 | 0683-1035 | 1 | | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R51 | 0683-3045 | 7 | | 1 | RESISTOR 300K 5% .25W CF TC=0-800 | 77902 | R-25J |
| A1R63-R68 | 0683-4725 | 2 | | 8 | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R67-R68 | 0698-6619 | 8 | | 2 | RESISTOR 15K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R89 | 0698-4441 | 0 | | 1 | RESISTOR 3.74K 1% .125W F TC=0+-100 | 91837 | CMF-55-1, T-1 |
| A1R70 | 0757-0427 | 0 | | 1 | RESISTOR 1.5K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R71 | 2100-3273 | 1 | | 1 | RESISTOR-TRMR 2K 10% C SIDE-ADJ 1-TRN | 32987 | 3386X-Y46-202 |
| A1R72-R73 | 0683-1045 | 3 | | 2 | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R74 | 2100-3274 | 2 | | 1 | RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN | 32987 | 3386X-Y46-103 |
| A1R78 | 2100-3352 | 7 | | 1 | RESISTOR-TRMR 1K 10% C SIDE-ADJ 1-TRN | 32987 | 3386X-Y46-102 |
| A1R77 | 0757-0161 | 9 | | 1 | RESISTOR 604 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R78 | 0757-0442 | 9 | | 3 | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R79 | 0698-7934 | 2 | | 1 | RESISTOR 12.1K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R80 | 0698-6706 | 4 | | 1 | RESISTOR 1.24K .25% .125W F TC=0+-100 | 19701 | 5033R |
| A1R81 | 0698-8191 | 5 | | 1 | RESISTOR 12.5K .1% .125W F TC=0+-25 | 91637 | CMF-55-1, T-8 |
| A1R82 | 0698-6630 | 3 | | 1 | RESISTOR 20K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R83 | 0698-5323 | 9 | | 1 | RESISTOR 4K .5% .125W F TC=0+-50 | 19701 | 5033R |
| A1R87-R88 | 0683-1025 | 9 | | 2 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R91 | 0683-5125 | 8 | | 1 | RESISTOR 5.1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R92 | 0683-1015 | 7 | | 2 | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R93 | 0757-0444 | 1 | | 1 | RESISTOR 12.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R94 | 0757-0273 | 4 | | 1 | RESISTOR 3.01K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R96 | 0683-1035 | 1 | | 12 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |

See introduction to this section for ordering information.
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|---|-----------|------------------|
| A1R100 | 0675-4721 | 1 | 1 | RESISTOR 4.7K 10% .125W CC TC=-350/+857 | 01121 | BB4721 |
| A1R101 | 0683-1525 | 4 | 1 | RESISTOR 1.5K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R102 | 0699-2130 | 2 | 2 | R-F 81.1 OH .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R103 | 0699-2131 | 3 | 1 | R-F 247 OHM .1% 1/20W HF04 T0 | 91637 | CMF50-21 |
| A1R104 | 0699-2130 | 2 | 2 | R-F 81.1 OH .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R105 | 0699-2075 | 4 | 2 | R-F 50 OHM .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R106 | 0698-3378 | 0 | 1 | RESISTOR 51 5% .125W CC TC=-270/+540 | 01121 | BB5105 |
| A1R107 | 0683-2035 | 3 | 1 | RESISTOR 20K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R108 | 0699-2071 | 0 | 1 | R-F 33.2 OH .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R109 | 0699-2083 | 4 | 3 | R-F 100 OHM .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R110 | 0683-3325 | 8 | 2 | RESISTOR 3.3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R111 | 0757-0283 | 6 | 5 | RESISTOR 2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R112 | 0757-0419 | 0 | 1 | RESISTOR 881 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R113 | 0683-1515 | 2 | 3 | RESISTOR 150 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R114 | 0683-5105 | 4 | 1 | RESISTOR 51 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R115 | 0699-2083 | 4 | 1 | R-F 100 OHM .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R116 | 0698-5178 | 2 | 1 | RESISTOR 1.5K 5% .125W CC TC=-350/+857 | 01121 | BB1525 |
| A1R117 | 0699-2083 | 4 | 1 | R-F 100 OHM .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R118 | 0699-2075 | 4 | 1 | R-F 50 OHM .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R119 | 0683-3325 | 6 | 1 | RESISTOR 3.3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R121 | 0757-0280 | 3 | 2 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R122 | 0698-5131 | 7 | 1 | RESISTOR 900K .5% .25W F TC=0+-100 | 19701 | S043R |
| A1R123 | 0698-6978 | 3 | 1 | RESISTOR 111.1K .1% .125W F TC=0+-25 | 19701 | 5033R |
| A1R124 | 0698-1947 | 7 | 2 | R-F 38.3 OH 1% 1/20W MFHF T0 | 91637 | CMF-50-21 |
| A1R125 | 0698-3378 | 0 | 1 | RESISTOR 51 5% .125W CC TC=-270/+540 | 01121 | BB5105 |
| A1R128 | 0698-7332 | 4 | 1 | RESISTOR 1M 1% .125W F TC=0+-100 | 19701 | 5033R |
| A1R127 | 0683-1225 | 1 | 1 | RESISTOR 1.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R128 | 0698-3113 | 1 | 1 | RESISTOR 100 5% .125W CC TC=-270/+540 | 01121 | BB1015 |
| A1R129 | 0698-4585 | 3 | 1 | RESISTOR 348 1% .25W F TC=0+-100 | 91637 | CMF-60-1, T-1 |
| A1R130* | 0698-1969 | 3 | 1 | R-F 90.9 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R130* | 0699-2077 | 6 | 1 | R-F 75 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R130+ | 0698-3113 | 1 | 1 | RESISTOR 100 5% .125W CC TC=-270/+540 | 01121 | BB1015 |
| A1R131 | 0699-1947 | 7 | 1 | R-F 38.3 OH 1% 1/20W MFHF T0 | 91637 | CMF-50-21 |
| A1R132 | 0698-7236 | 7 | 1 | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | CT3 |
| A1R133 | 0686-4715 | 6 | 1 | RESISTOR 470 5% .5W CC TC=0-529 | 01121 | EB4715 |
| A1R134 | 0683-3955 | 8 | 1 | RESISTOR 3.9M 5% .25W CC TC=-900/+1100 | 01121 | CB3955 |
| A1R135 | 0698-8988 | 8 | 3 | RESISTOR 100K 1% .05W F TC=0+-100 | 24546 | CT3 |
| A1R137 | 0698-4534 | 2 | 1 | RESISTOR 399K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R138 | 0757-0401 | 0 | 1 | RESISTOR 100 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R139 | 0683-2045 | 5 | 1 | RESISTOR 200K 5% .25W CF TC=0-800 | 77902 | R-25J |
| A1R140 | 03577-87902 | 9 | 1 | WIRE ASM-MAGNETIC | A01130 | |
| A1R141 | 2100-3355 | 0 | 1 | RESISTOR-TRMR 100K 10% C SIDE-ADJ 1-TRN | 32997 | 3386X-Y46-104 |
| A1R142-R143 | 0698-8986 | 8 | 1 | RESISTOR 100K 1% .05W F TC=0+-100 | 24546 | CT3 |
| A1R145 | 0757-0459 | 8 | 2 | RESISTOR 56.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R146 | 0683-1055 | 5 | 2 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| A1R147 | 0757-0459 | 8 | 1 | RESISTOR 56.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R148 | 0683-1055 | 5 | 1 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| A1R149 | 0683-3025 | 3 | 2 | RESISTOR 3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R150 | 0699-2163 | 1 | 1 | R-F 31.8 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R151 | 0683-3025 | 3 | 1 | RESISTOR 3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R152-R155 | 0683-4725 | 2 | 1 | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R156 | 0698-4461 | 4 | 2 | RESISTOR 698 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A1R157-R159 | 0757-0283 | 6 | 1 | RESISTOR 2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R161-R162 | 0698-6943 | 1 | 2 | RESISTOR 20K .1% .125W F TC=0+-50 | 19701 | 5033R |
| A1R163 | 0757-0283 | 6 | 1 | RESISTOR 2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R164 | 0698-4461 | 4 | 1 | RESISTOR 698 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A1R165 | 0757-0283 | 6 | 1 | RESISTOR 2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R166 | 0683-1015 | 7 | 1 | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R167 | 0686-3305 | 8 | 1 | RESISTOR 33 5% .5W CC TC=0+412 | 01121 | EB3305 |
| A1R168 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R170-R171 | 0683-1515 | 2 | 1 | RESISTOR 150 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R172 | 2100-3207 | 1 | 1 | RESISTOR-TRMR 5K 10% C SIDE-ADJ 1-TRN | 32997 | 3386X-Y46-502 |
| A1R173 | 2100-3354 | 9 | 1 | RESISTOR-TRMR 50K 10% C SIDE-ADJ 1-TRN | 32997 | 3386X-Y46-503 |
| A1R175 | 0699-3378 | 0 | 1 | RESISTOR 51 5% .125W CC TC=-270/+540 | 01121 | BB5105 |
| A1R176 | 0757-0277 | 8 | 1 | RESISTOR 49.9 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R177-R178 | 0757-0442 | 9 | 1 | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R179 | 0757-0280 | 3 | 1 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R180 | 0699-2070 | 9 | 1 | R-F 21 .OHM .1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A1R181 | 0757-0277 | 8 | 1 | RESISTOR 49.9 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R182 | 0757-0412 | 3 | 1 | RESISTOR 365 1% .125W F TC=0+-100 | 19701 | SFR25H |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|-----------------------------|
| A1R183 | 0757-0407 | 6 | 2 | RESISTOR 200 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R184-R185 | 0757-0284 | 7 | 2 | RESISTOR 150 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R186 | 0757-0407 | 6 | 1 | RESISTOR 200 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R187 | 2100-1986 | 9 | 1 | RESISTOR-TRMR 1K 10% D TOP-ADJ 1-TRN | 73138 | B2PR1K |
| A1R188 | 0757-0199 | 3 | 1 | RESISTOR 21.5K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A1R189-R200 | 0693-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1R201-R202 | 0693-6815 | 5 | 2 | RESISTOR 680 5% .25W CF TC=0-400 | 77902 | R-25J |
| A1RP1 | 1810-0280 | 8 | 1 | NETWORK-RES 10-SIP 10.0K OHM X 9 | 91637 | CSC10A01-103G/MSP10A01-103G |
| A1RP2 | 1810-0279 | 5 | 1 | NETWORK-RES 10-SIP 4.7K OHM X 9 | 91637 | CSC10A01-472G/MSP10A01-472G |
| A1RP3 | 10G9-0076 | 2 | 1 | IC CUSTOM | 29480 | 10G9-0076 |
| A1RP4 | 1810-0675 | 5 | 1 | NETWORK-RES 10-SIP MULTI-VALUE | 13666 | 2160K261 |
| A1TP1-TP14 | 1251-0600 | 0 | 14 | CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SO | 27264 | 16-06-0034 |
| A1U1 | 1820-1244 | 7 | 1 | IC MUXR/DATA-SEL TTL LS 4-TO-1-LINE DUAL | 01295 | SN53619N |
| A1U3 | 03577-60307 | 4 | 1 | PRGMD PROM | 29480 | 03577-60307 |
| A1U3 | 1816-1142 | 5 | 1 | IC TTL S 4096 (4K) PROM 70-NS 3-S | 18324 | CK1753F |
| A1U5 | 1820-1997 | 7 | 3 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 27014 | GDEA105 |
| A1U6-U7 | 1589-0029 | 0 | 2 | IC CUSTOM | 28480 | 1589-0029 |
| A1U8 | 03577-60308 | 5 | 1 | PRGMD PROM | 28480 | 03577-60308 |
| A1U8 | 1816-1142 | 5 | 1 | IC TTL S 4096 (4K) PROM 70-NS 3-S | 18324 | CK1753F |
| A1U8 | 1820-1997 | 7 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 27014 | GDEA105 |
| A1U10-U11 | 1820-1216 | 3 | 2 | IC DDDR TTL LS 3-TO-8-LINE 3-INP | 01295 | SN53522N |
| A1U12 | 1820-1197 | 9 | 1 | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN53504N |
| A1U13 | 1820-3386 | 0 | 1 | IC 8-BIT BIDIRECTIONAL I/O PORT | 34336 | AM2960DC |
| A1U14 | 1813-0257 | 5 | 1 | A/D 12-BIT 28-CBRZ/SDR BPLR | 24355 | AD41152 |
| A1U15 | 1826-0716 | 7 | 2 | IC OP AMP LOW-NOISE 8-DIP-P PKG | 18324 | CC3802 |
| A1U16 | 1820-1997 | 7 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 27014 | GDEA105 |
| A1U17-U18 | 1826-0138 | 0 | 1 | IC COMPARATOR GP QUAD 14-DIP-P PKG | 27014 | SL2495B |
| A1U19 | 1820-2096 | 9 | 1 | IC CNTR TTL LS BIN DUAL 4-BIT | 01295 | SN59197N |
| A1U20 | 1826-0715 | 7 | 1 | IC OP AMP LOW-NOISE 8-DIP-P PKG | 18324 | CC3802 |
| A1U21 | 1826-0503 | 1 | 1 | SAMPLE AND HOLD 8 -METAL | 27014 | SL3519B |
| A1U22 | 1826-0522 | 4 | 1 | IC OP AMP LOW-BIAS-H-IMPQ QUAD 14-DIP-P | 01295 | SN98656N |
| A1U23 | 1826-0889 | 6 | 1 | IC OP AMP LOW-NOISE DUAL 14-DIP-C PKG | 52063 | XR5533AN |
| A1U24 | 1820-0427 | 6 | 1 | IC MODULATOR TO-100 PKG | 04713 | SCB232G1 |
| A1U25 | 03577-60309 | 6 | 1 | PRGMD PROM | 28480 | 03577-60309 |
| A1U25 | 1816-1571 | 4 | 1 | IC TTL S 256-BIT PROM 40-NS 3-S | 01295 | TBP16S030N |
| A1U26 | 1826-0412 | 1 | 2 | IC COMPARATOR PRGN DUAL 8-DIP-P PKG | 27014 | SL33675 |
| A1U27 | 1826-0319 | 7 | 1 | IC OP AMP LOW-BIAS-H-IMPQ TO-99 PKG | 27014 | SL31580 |
| A1U28 | 1820-1202 | 7 | 1 | IC GATE TTL LS NAND TPL 3-INP | 01295 | SN53509N |
| A1U29 | 1826-0302 | 8 | 1 | IC OP AMP GP TO-99 PKG | 04713 | SC61966G1 |
| A1U31-U32 | 1820-1430 | 3 | 2 | IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG | 01295 | SN57191N |
| A1U33 | 1826-0636 | 0 | 2 | IC OP AMP LOW-OFS 8-DIP-P PKG | 06665 | OP-07 138P |
| A1U34 | 1826-0412 | 1 | 1 | IC COMPARATOR PRGN DUAL 8-DIP-P PKG | 27014 | SL33675 |
| A1U35-U36 | 1820-1112 | 8 | 2 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A1U37 | 1820-1417 | 6 | 1 | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN57178 |
| A1U38 | 1826-1116 | 4 | 1 | IC OP AMP GP QUAD 14-DIP-P PKG | 07933 | RC4156DB |
| A1U42 | 1826-0635 | 0 | 1 | IC OP AMP LOW-OFS 8-DIP-P PKG | 06665 | OP-07 138P |
| A1U43 | 03577-87900 | 9 | 1 | MIX MWAV FC200-YHL 200MHZ 3 | L01065 | |
| A1U44 | 1820-1199 | 1 | 1 | IC INV TTL LS HEX 1-INP | 01295 | SN53508N |
| A1W1 | 1258-0223 | 7 | 2 | CON-JUMPER 3 AMPS | 28480 | 1258-0223 |
| A1W2 | 1258-0141 | 8 | 11 | CON-JUMPER REM .025P | 00779 | 530153-2 |
| A1W3 | 1258-0222 | 6 | 1 | CON-JUMPER 3 AMPS MULT REM 2x3 | 28480 | 1258-0222 |
| A1W4 | 1258-0223 | 7 | 1 | CON-JUMPER 3 AMPS | 28480 | 1258-0223 |
| A1W5-W13 | 1258-0141 | 8 | 1 | CON-JUMPER REM .025P | 00779 | 530153-2 |
| A1W16 | 7175-0057 | 5 | 1 | RESISTOR-ZERO OHMS SOLID TINNED COPPER | 62223 | |
| A4 | 03577-66504 | 5 | 1 | LO BOARD | 28480 | 03577-66504 |
| A4C1 | 0160-6508 | 5 | 8 | C-F 22PF 5% 200V CERMLR | 28480 | RPE121-978C0G220J200V |
| A4C2 | 0160-6521 | 2 | 5 | C-F 2.2PF --% 200V CERMLR | 28480 | RPE121-978C0G2R2C200V |
| A4C3 | 0160-6511 | 0 | 6 | C-F 15PF 5% 200V CERMLR | 28480 | RPE121-978C0G150J200V |
| A4C4 | 0160-6508 | 5 | 5 | C-F 22PF 5% 200V CERMLR | 28480 | RPE121-978C0G220J200V |
| A4C5 | 0160-8521 | 2 | 1 | C-F 2.2PF --% 200V CERMLR | 28480 | RPE121-978C0G2R2C200V |
| A4C6 | 0160-6511 | 0 | 1 | C-F 15PF 5% 200V CERMLR | 28480 | RPE121-978C0G150J200V |
| A4C7-C8 | 0160-6508 | 5 | 1 | C-F 22PF 5% 200V CERMLR | 28480 | RPE121-978C0G220J200V |
| A4C10 | 0160-6507 | 4 | 15 | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A4C11 | 0160-6506 | 3 | 46 | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978Z5U104M50V |
| A4C12-C13 | 0160-6507 | 4 | 1 | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|-----------------------|
| A4C14 | 0160-6508 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C15-C16 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C17 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C18-C20 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C21 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C22 | 0180-3788 | 5 | 22 | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C23 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C24 | 0180-0553 | 0 | 1 | CAPACITOR-FXD 22UF+-.20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A4C25 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C26 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C27 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C28 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C29 | 0160-6523 | 4 | 2 | C-F 1PF --% 200V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C30 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C31 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C32 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C33 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C34 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C35 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C36 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C37 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-.20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A4C38 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C39 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C40 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C41 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C48 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C49 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C50 | 0121-0512 | 7 | 3 | CAPACITOR-V TRMR-CER 2.5PF 100V PC-MTG | 59660 | 518-002 A 2-5 |
| A4C51 | 0160-6521 | 2 | | C-F 2.2PF --% 200V CERMLr | 28480 | RPE121-978C0G2R2C200V |
| A4C52 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C53 | 0180-3710 | 7 | 1 | C-F 15UF 20% 25V TADPDr | 28480 | T350G156M025AS C-8310 |
| A4C54 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C55 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C56 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C57 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-.20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A4C58 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C59 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C61 | 0160-6523 | 4 | | C-F 1PF --% 200V CERMLr | 28480 | RPE121-978C0G10C200V |
| A4C62 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C63 | 0180-3710 | 7 | | C-F 15UF 20% 25V TADPDr | 28480 | T350G156M025AS C-8310 |
| A4C64 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C65 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C66 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C67 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-.20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A4C68 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C69 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C70 | 0121-0512 | 7 | | CAPACITOR-V TRMR-CER 2.5PF 100V PC-MTG | 59660 | 518-002 A 2-5 |
| A4C71 | 0160-6521 | 2 | | C-F 2.2PF --% 200V CERMLr | 28480 | RPE121-978C0G2R2C200V |
| A4C72 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C73 | 0180-3710 | 7 | | C-F 15UF 20% 25V TADPDr | 28480 | T350G156M025AS C-8310 |
| A4C74 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C75 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C76 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C77 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-.20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A4C78 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C79 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C80 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C81 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C88 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C89 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C90 | 0121-0512 | 7 | | CAPACITOR-V TRMR-CER 2.5PF 100V PC-MTG | 59660 | 518-002 A 2-5 |
| A4C91 | 0160-6521 | 2 | | C-F 2.2PF --% 200V CERMLr | 28480 | RPE121-978C0G2R2C200V |
| A4C92 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C93 | 0180-3710 | 7 | | C-F 15UF 20% 25V TADPDr | 28480 | T350G156M025AS C-8310 |
| A4C94 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C95 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C96 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C97 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-.20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A4C98 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C99 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|-----------------------|
| A4C101 | 0180-8515 | 4 | 4 | C-F 10PF --% 200V CERMLr | 28480 | RPE121-978C0G100D200V |
| A4C102 | 0160-4381 | 8 | 1 | CAPACITOR-FXD 1.5PF +- .25PF 200VDC CER | 54583 | FD11C0G2D1R5C |
| A4C103 | 0160-8506 | 5 | | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978C0G220J200V |
| A4C104 | 0160-8524 | 5 | 2 | C-F 6.8PF --% 200V CERMLr | 28480 | RPE121-978C0G6R9D200V |
| A4C105 | 0160-8508 | 5 | | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978C0G220J200V |
| A4C107 | 0160-8515 | 4 | | C-F 10PF --% 200V CERMLr | 28480 | RPE121-978C0G100D200V |
| A4C109 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C111 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C112 | 0180-3768 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C113 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C114 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T382C226M025ASCB245 |
| A4C115-C116 | 0160-8508 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C117 | 0180-3768 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C120 | 0160-8515 | 4 | | C-F 10PF --% 200V CERMLr | 28480 | RPE121-978C0G100D200V |
| A4C121 | 0160-4381 | 8 | | CAPACITOR-FXD 1.5PF +- .25PF 200VDC CER | 54583 | FD11C0G2D1R5C |
| A4C122 | 0160-8506 | 5 | | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978C0G220J200V |
| A4C123 | 0160-8524 | 5 | | C-F 6.8PF --% 200V CERMLr | 28480 | RPE121-978C0G6R9D200V |
| A4C124 | 0160-8508 | 5 | | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978C0G220J200V |
| A4C125 | 0160-8515 | 4 | | C-F 10PF --% 200V CERMLr | 28480 | RPE121-978C0G100D200V |
| A4C130 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C149 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C150-C151 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C152 | 0180-1746 | 5 | 3 | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A4C153 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C154 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A4C155-C156 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C157 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A4C160 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C161 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C162 | 0180-3768 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C163 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C164 | 0180-3914 | 1 | 1 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 04222 | SR201C103KAA |
| A4C166 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C167 | 0160-0127 | 2 | 1 | CAPACITOR-FXD 1UF +-20% 25VDC CER | 13606 | 2C37Z5U105M050A |
| A4C188 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4C180 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C190 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A4C200-C201 | 0160-8511 | 0 | | C-F 15PF 5% 200V CERMLr | 28480 | RPE121-978C0G150J200V |
| A4C202 | 0180-4382 | 9 | 1 | CAPACITOR-FXD 3.3PF +- .25PF 200VDC CER | 54583 | FD12C0G2D3R3C |
| A4C203-C205 | 0160-8511 | 0 | | C-F 15PF 5% 200V CERMLr | 28480 | RPE121-978C0G150J200V |
| A4C207 | 0180-3768 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| A4C208 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A4CR1-CR4 | 1901-0518 | 8 | 1 | DIODE-SCHOTTKY SM SIG | 28480 | 1901-0518 |
| A4CR5 | 1902-1329 | 3 | 1 | IC V RGLTR-V-REF-FXD 6.6/7.2V TC-46 PKG | 27014 | LM329CH |
| A4H1-H4 | 03577-00902 | 9 | 4 | ETCH SPRNG-GROUNDING | N01063 | |
| A4H5 | 03577-04104 | 1 | 1 | SHTF COVER-L.O. BOARD | 28480 | 03577-04104 |
| A4H6 | 03577-04109 | 6 | 1 | SHTF COVER-SHIELD | 28480 | 03577-04109 |
| A4H7 | 03577-20801 | 7 | 1 | CSTG-CIRC SIDE | 28480 | |
| A4H8 | 03577-20605 | 1 | 1 | CSTG-SHIELD - SLOTTED | 28480 | |
| A4H70-H74 | 9170-0894 | 0 | 5 | CORE-SHIELDING BEAD | 02114 | 56-590-65/4A6 |
| A4J1-J5 | 1250-1512 | 3 | 5 | CONNECTOR-RF SMB M PC 50-OHM | 98291 | 51-353-0039-226 |
| A4J6-J12 | 1250-1339 | 2 | 6 | CONNECTOR-RF SM-SLD M PC 50-OHM | 98291 | 52-051-0000-226 |
| A4L2-L5 | 9140-0814 | 1 | 4 | COIL-VAR 20NH-25NH Q=50 PC-MTG | 28480 | 9140-0814 |
| A4L6 | 9140-0144 | 0 | 11 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 98800 | 1025-36 |
| A4L7 | 9140-0815 | 2 | 5 | COIL-VAR 50.6NH-41.4NH PC-MTG | 28480 | 9140-0815 |
| A4L8 | 9140-0813 | 0 | 2 | COIL-VAR 23NH-52NH Q=65 PC-MTG | 28480 | 9140-0813 |
| A4L9 | 9140-0815 | 2 | | COIL-VAR 50.6NH-41.4NH PC-MTG | 28480 | 9140-0815 |
| A4L10-L50 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 98800 | 1025-36 |
| A4L100 | 9140-0815 | 2 | | COIL-VAR 50.6NH-41.4NH PC-MTG | 28480 | 9140-0815 |
| A4L101 | 9140-0813 | 0 | | COIL-VAR 23NH-52NH Q=65 PC-MTG | 28480 | 9140-0813 |
| A4L102 | 9140-0815 | 2 | | COIL-VAR 50.6NH-41.4NH PC-MTG | 28480 | 9140-0815 |
| A4L150-L152 | 9140-0807 | 0 | 3 | INDUCTOR RF-CH-MLD 3.3UH 10% .2DX.45LG | 24226 | 18M331K |
| A4L153-L154 | 9100-1619 | 1 | 2 | INDUCTOR RF-CH-MLD 5.8UH 10% | 98800 | 1537-30 |
| A4L201 | 9140-0815 | 2 | | COIL-VAR 50.6NH-41.4NH PC-MTG | 28480 | 9140-0815 |
| A4Q30 | 1854-0591 | 6 | 1 | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| A4Q31 | 1854-0720 | 3 | 1 | TRANSISTOR NPN SI PD=500MW FT=4GHZ | 25403 | BFR96-S |
| A4Q50 | 1854-0591 | 6 | | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| A4Q51 | 1854-0720 | 3 | | TRANSISTOR NPN SI PD=500MW FT=4GHZ | 25403 | BFR96-S |
| A4Q60 | 1854-0591 | 6 | | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| A4Q61 | 1854-0720 | 3 | | TRANSISTOR NPN SI PD=500MW FT=4GHZ | 25403 | BFR96-S |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|---------------------------------------|-----------|------------------|
| A4Q70 | 1854-0591 | 6 | | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| A4Q71 | 1854-0720 | 3 | | TRANSISTOR NPN SI PD=500MW FT=4GHZ | 25403 | BFR96-S |
| A4Q90 | 1854-0591 | 6 | | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| A4Q91 | 1854-0720 | 3 | | TRANSISTOR NPN SI PD=500MW FT=4GHZ | 25403 | BFR96-S |
| A4R1 | 0699-2054 | 9 | 2 | R-F 100 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R2 | 0699-1969 | 2 | 1 | R-F 68.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R3 | 0699-2054 | 9 | 1 | R-F 100 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R4 | 0699-7214 | 1 | 4 | RESISTOR 121 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R5 | 0699-1903 | 5 | 15 | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R6-R7 | 0699-7214 | 1 | | RESISTOR 121 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R8 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R9 | 0699-7214 | 1 | | RESISTOR 121 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R10 | 0699-3445 | 2 | 2 | RESISTOR 348 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R11-R12 | 0699-3132 | 4 | 4 | RESISTOR 261 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R13 | 0699-7230 | 1 | 2 | RESISTOR 562 1% 1/20W MF04 | 02995 | 5032R |
| A4R14 | 0699-1902 | 4 | 1 | R-F 10 OHM 1% 1/20W MF04 | 91637 | CMF-50-21 |
| A4R15 | 0699-7230 | 1 | | RESISTOR 562 1% 1/20W MF04 | 02995 | 5032R |
| A4R16-R17 | 0699-3132 | 4 | | RESISTOR 261 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R18 | 0699-7223 | 2 | 17 | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R19 | 0699-2030 | 1 | 6 | R-F 17.8 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R20 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R21 | 0699-3443 | 0 | 2 | RESISTOR 287 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R22 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R23 | 0699-2030 | 1 | | R-F 17.8 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R24 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R25 | 0699-3443 | 0 | | RESISTOR 287 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R26 | 0699-3445 | 2 | | RESISTOR 348 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R27 | 0693-1025 | 9 | 6 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R30 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R31 | 0693-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R32 | 0693-4715 | 0 | 5 | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R33 | 0693-2415 | 3 | 5 | RESISTOR 240 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R34 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R35 | 0699-1964 | 8 | 8 | R-F 14.7 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R36 | 0693-1215 | 9 | 2 | RESISTOR 120 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R37-R39 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R40 | 0699-7216 | 3 | 4 | RESISTOR 147 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R41 | 0699-1947 | 7 | 2 | R-F 38.3 OH 1% 1/20W MFHF T0 | 91637 | CMF-50-21 |
| A4R42 | 0699-7216 | 3 | | RESISTOR 147 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R43 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R44 | 0699-3159 | 5 | 2 | RESISTOR 26.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R45-R46 | 0757-0449 | 6 | 2 | RESISTOR 20K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R47 | 0699-3159 | 5 | | RESISTOR 26.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R48 | 0757-0443 | 0 | 1 | RESISTOR 11K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R49 | 2100-0554 | 5 | 1 | RESISTOR-TRMR 500 10% C TOP.ADJ 1-TRN | 32997 | 3386P-Y46-501 |
| A4R50 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R51 | 0693-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R52 | 0693-4715 | 0 | | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R53 | 0693-2415 | 3 | | RESISTOR 240 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R54 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R55 | 0699-1964 | 8 | | R-F 14.7 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R56 | 0699-4417 | 0 | 6 | RESISTOR 174 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A4R57 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R58 | 0699-4417 | 0 | | RESISTOR 174 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A4R60 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R61 | 0693-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R62 | 0693-4715 | 0 | | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R63 | 0693-2415 | 3 | | RESISTOR 240 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R64 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R65 | 0699-1964 | 8 | | R-F 14.7 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R66 | 0693-1215 | 9 | | RESISTOR 120 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R67-R70 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R71 | 0693-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R72 | 0693-4715 | 0 | | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R73 | 0693-2415 | 3 | | RESISTOR 240 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R74 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R75 | 0699-1964 | 8 | | R-F 14.7 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R76 | 0699-4417 | 0 | | RESISTOR 174 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A4R77 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A4R78 | 0699-4417 | 0 | | RESISTOR 174 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|-----------------------|
| A4R90 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R91 | 0683-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R92 | 0683-4716 | 0 | | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R93 | 0683-2415 | 3 | | RESISTOR 240 5% .25W CF TC=0-400 | 77902 | R-25J |
| A4R94 | 0698-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R95 | 0699-1954 | 8 | | R-F 14.7 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R96 | 0698-4417 | 0 | | RESISTOR 174 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A4R97 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R98 | 0698-4417 | 0 | | RESISTOR 174 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A4R100 | 0698-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R101 | 0699-2030 | 1 | | R-F 17.8 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R102 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R105-R109 | 0699-1956 | 0 | 4 | R-F 26.1 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R109 | 0699-7218 | 5 | 6 | RESISTOR 178 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R110 | 0699-2163 | 1 | 3 | R-F 31.6 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R111-R112 | 0699-7218 | 5 | | RESISTOR 178 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R113 | 0699-2163 | 1 | | R-F 31.6 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R114-R115 | 0699-7218 | 5 | | RESISTOR 178 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R116 | 0699-2163 | 1 | | R-F 31.6 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R117 | 0699-7218 | 5 | | RESISTOR 178 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R120 | 0757-0290 | 3 | 1 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A4R150 | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R151 | 0699-2030 | 1 | | R-F 17.8 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R152-R170 | 0698-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R171 | 0699-2030 | 1 | | R-F 17.8 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R172-R190 | 0698-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R191 | 0699-2030 | 1 | | R-F 17.8 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4R192 | 0698-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R201 | 0698-7216 | 3 | | RESISTOR 147 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R202 | 0699-1947 | 7 | | R-F 39.3 OH 1% 1/20W MFHF TO | 91637 | CMF-50-21 |
| A4R203 | 0698-7216 | 3 | | RESISTOR 147 1% .05W F TC=0+-100 | 24546 | CT3 |
| A4R204 | 0699-1964 | 8 | | R-F 14.7 OH 1% 1/20W HF04 TO | 91637 | CMF-50-21 |
| A4TP1-TP4 | 1251-0690 | 0 | 4 | CONNECTOR-SGL CONT PIN 1,14-MM-BSC-SZ SQ | 27264 | 16-06-0034 |
| A4U1 | 1813-0216 | 6 | 1 | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA130 |
| A4U10 | 1813-0215 | 5 | 1 | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA133 |
| A4U11 | 1813-0216 | 6 | | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA130 |
| A4U20 | 0955-0193 | 7 | 1 | MIX MWAV FC217-ZTF 200MHZ 3 | L01085 | FC217-ZTF |
| A4U21-U22 | 1813-0212 | 2 | 1 | IC WIDEBAND AMP TO-39 PKG | 04713 | SWA128 |
| A4U23 | 0955-0194 | 8 | 1 | MIX MWAV SRA-1-I 500MHZ 8 | M01048 | SRA-1-1 |
| A4U24 | 1813-0215 | 5 | | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA133 |
| A4U25 | 1826-0043 | 4 | 1 | IC OP AMP GP TO-99 PKG | 27014 | SL180762 |
| A4U150 | 1926-0147 | 9 | 1 | IC V RGLTR-FXD-POS 11.5/12.5V TO-220 PKG | 04713 | SC25174P1 |
| A4W1-W7 | 1251-1636 | 4 | 6 | CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND | 71279 | 450-3388-01-03-00 |
| A4W1-W7 | 1258-0214 | 5 | 1 | CON-JUMPER WIRE PLUG-SHORTING | 71279 | 461-2872-01-03-16 |
| A5 | 03577-66505 | 6 | 1 | PC BOARD ASSY OFFSET | 28480 | 03577-66505 |
| A5C1 | 0160-8510 | 9 | 4 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A5C2-C3 | 0160-8511 | 0 | 2 | C-F 15PF 5% 200V CERMLr | 28480 | RPE121-978C0G150J200V |
| A5C4* | 0160-4774 | 3 | | CAPACITOR-FXD 18PF +-2% 200VDC CER 0+-30 | 54583 | FD12C0G2D180G |
| A5C4* | 0160-4897 | 9 | | CAPACITOR-FXD 25PF +-2% 200VDC CER 0+-30 | 54583 | FD12C0G2D250G |
| A5C4* | 0160-4493 | 3 | 1 | CAPACITOR-FXD 27PF +-5% 200VDC CER 0+-30 | 54583 | FD12C0G2D270J |
| A5C5 | 0160-8507 | 4 | 18 | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C6 | 0180-1746 | 5 | 1 | CAPACITOR-FXD 15UF +-10% 20VDC TA | 13605 | 150D156X9020B2-DYS |
| A5C7 | 0160-4571 | 8 | 1 | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A5C8 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C9 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13605 | 150D156X9020B2-DYS |
| A5C10 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C11 | 0180-8506 | 3 | 23 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C12-C13 | 0160-8510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A5C14-C17 | 0180-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C16 | 0160-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C19 | 0180-8523 | 4 | 1 | C-F 1PF +-% 200V CERMLr | 28480 | RPE121-978C0G010C200V |
| A5C21 | 0180-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C23-C24 | 0180-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C25 | 0180-8506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C26 | 0160-8507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|--------|------|--|-----------|-----------------------|
| A5C30-C31 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C32 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A5C33 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C34-C35 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A5C36-C39 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C40-C43 | 0160-3947 | 9 | 5 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A5C44 | 0160-6526 | 6 | 1 | C-F 47PF 5% 200V CERMLr | 28480 | RPE121-978C0G470J200V |
| A5C52-C53 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C54 | 0160-0162 | 5 | 1 | CAPACITOR-FXD .022UF +-10% 200VDC POLYE | 04411 | HEW-238M |
| A5C55 | 0160-3947 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A5C58-C62 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C63-C64 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A5C65 | 0180-0229 | 7 | 1 | CAPACITOR-FXD 33UF+-10% 10VDC TA | 13606 | 150D33X8010B2-DY3 |
| A5C66-C69 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A5C70-C71 | 0180-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C72 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C73 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C74-C75 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A5C76 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A5C77-C84 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C85 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C90 | 0160-6521 | 2 | 1 | C-F 2.2PF -.-% 200V CERMLr | 28480 | RPE121-978C0G2R2C200V |
| A5C91-C92 | 0160-6515 | 4 | 2 | C-F 10PF -.-% 200V CERMLr | 28480 | RPE121-978C0G100D200V |
| A5C93 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5C94-C95 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A5C100 | 0160-2940 | 1 | 1 | CAPACITOR-FXD 470PF +-5% 300VDC MICA | 00853 | |
| A5C101 | 0140-0197 | 4 | 1 | CAPACITOR-FXD 180PF +-5% 300VDC MICA | 05023 | |
| A5C102 | 0160-0154 | 5 | 1 | CAPACITOR-FXD 2200PF +-10% 200VDC POLYE | 84411 | HEW-238M |
| A5C103 | 0160-0362 | 7 | 1 | CAPACITOR-FXD 510PF +-5% 300VDC MICA | 00853 | |
| A5C104 | 0160-0156 | 7 | 2 | CAPACITOR-FXD 3900PF +-10% 200VDC POLYE | 84411 | HEW-238M |
| A5C105 | 0140-0189 | 6 | 1 | CAPACITOR-FXD 240PF +-5% 300VDC MICA | 09023 | |
| A5C106 | 0160-0156 | 7 | | CAPACITOR-FXD 3900PF +-10% 200VDC POLYE | 84411 | HEW-238M |
| A5C110-C111 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A5CR1 | 1901-0040 | 1 | 5 | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A5CR2 | 0122-0095 | 1 | 1 | DIODE-VVC 2.2PF 7% C3/C25-MIN=4.5 | S0545 | 1S2208(E) |
| A5CR3 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A5CR4 | 0122-0095 | 1 | | DIODE-VVC 2.2PF 7% C3/C25-MIN=4.5 | S0545 | 1S2208(E) |
| A5CR50 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A5CR51 | 1930-1125 | 2 | 1 | OPT LED LMP R XX LMP1002 TTIH | 28480 | 1930-1125 |
| A5CR52-CR53 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A5H1 | 03577-04103 | 0 | 1 | SHFT SHIELD COVER | 28480 | 03577-04103 |
| A5H2 | 03577-04105 | 2 | 1 | SHFT COVER-OFFSET BD | 28480 | 03577-04105 |
| A5H3 | 03577-20601 | 7 | 1 | CSTG-CIRC SIDE | 28480 | |
| A5H4 | 03577-20602 | 8 | 1 | CSTG-COMP SIDE | 28480 | |
| A5J1-J2 | 1250-1512 | 3 | 2 | CONNECTOR-RF SMB M PC 50-OHM | 88291 | 51-353-0039-226 |
| A5L1 | 9140-0748 | 0 | 1 | INDUCTOR 250UH 25% .25DX.5LG Q=3 | 24226 | CA-253-3 |
| A5L2 | 9140-0144 | 0 | 12 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A5L3 | 03577-20301 | 4 | 1 | INDCTR | A01130 | 1871 |
| A5L3 | 8120-1543 | 2 | 0 | CBL-RGD 50OHM .1430D | 28480 | 8120-1543 |
| A5L4 | 9100-2891 | 4 | 1 | INDUCTOR RF-CH-MLD 50NH 10% .105DX.26LG | 24226 | 10M050K-1 |
| A5L5 | 9140-0748 | 0 | | INDUCTOR 250UH 25% .25DX.5LG Q=3 | 24226 | CA-253-3 |
| A5L7-L31 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A5L32 | 9140-0210 | 1 | 1 | INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG | 99800 | 1537-76 |
| A5L40 | 9140-0144 | 0 | | INDUCTOR RF-CI-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A5L80-L82 | 9140-0748 | 0 | | INDUCTOR 250UH 25% .25DX.5LG Q=3 | 24226 | CA-253-3 |
| A5L83-L84 | 9100-1618 | 1 | 2 | INDUCTOR RF-CH-MLD 5.6UH 10% | 99800 | 1537-30 |
| A5L70-L77 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A5L79 | 9140-0158 | 6 | 1 | INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG | 32159 | 1A1002M +-10% |
| A5L81 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A5L90 | 9135-0074 | 4 | 1 | INDUCTOR RF-CH-MLD 47NH 4% .102DX.26LG | 24226 | |
| A5L91 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A5L100 | 9100-1648 | 7 | 1 | INDUCTOR RF-CH-MLD 560UH 5% .2DX.45LG | 99800 | 2500-15 |
| A5L101 | 9100-1650 | 1 | 1 | INDUCTOR RF-CH-MLD 680UH 5% .2DX.45LG | 99800 | 2500-20 |
| A5L102 | 9140-0118 | 8 | 1 | INDUCTOR RF-CH-MLD 500UH 5% .2DX.45LG | 99800 | 2500-14 |
| A5Q1 | 1854-0345 | 8 | 1 | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | SRF5064 |
| A5Q2 | 1853-0010 | 2 | 1 | TRANSISTOR PNP SI TO-18 PD=360MW | 04713 | SM4713 |
| A5Q10-Q11 | 1854-0591 | 6 | 1 | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| A5Q20 | 1854-0345 | 8 | | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | SRF5064 |
| A5Q80 | 1854-0345 | 8 | | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | SRF5064 |
| A5R1-R2 | 0583-1035 | 1 | 15 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|-----------------------|
| A5R3 | 0683-1015 | 7 | 2 | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R4 | 0683-1515 | 2 | | RESISTOR 150 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R5 | 0683-3325 | 6 | 1 | RESISTOR 3.3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R6 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R7 | 0683-1515 | 2 | 2 | RESISTOR 150 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R8 | 0683-4735 | 4 | 1 | RESISTOR 47K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R9 | 2100-3253 | 7 | 1 | RESISTOR-TRMR 50K 10% C TOP-ADJ 1-TRN | 32997 | 3386P-Y46-503 |
| A5R10 | 0689-2072 | 1 | 1 | R-F 34.8 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R11 | 0683-1025 | 8 | 3 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R12 | 0683-4715 | 0 | 1 | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R13 | 0699-7221 | 0 | 2 | RESISTOR 237 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R14 | 0699-2163 | 1 | 1 | R-F 31.6 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R15 | 0699-1903 | 5 | 7 | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R16 | 0699-7221 | 0 | | RESISTOR 237 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R17 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R21-R22 | 0699-7249 | 2 | 4 | RESISTOR 3.48K 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R23 | 0699-1965 | 9 | 2 | R-F 21.5 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R24 | 0683-5615 | 1 | 2 | RESISTOR 560 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R26-R30 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R31-R32 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R33 | 0699-7236 | 7 | 1 | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R34-R35 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R36 | 0683-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R40 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R41 | 0683-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R42 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R43-R53 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R54 | 0690-4467 | 0 | 1 | RESISTOR 1.05K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A5R55 | 0757-0465 | 6 | 1 | RESISTOR 100K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A5R56 | 0683-2025 | 1 | 1 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R57 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R58 | 0683-3345 | 0 | 1 | RESISTOR 330K 5% .25W CF TC=0-800 | 77902 | R-25J |
| A5R59 | 0699-3449 | 6 | 1 | RESISTOR 20.7K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A5R70 | 0699-7216 | 3 | 2 | RESISTOR 147 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R71 | 0699-1947 | 7 | 1 | R-F 38.3 OH 1% 1/20W MFHF T0 | 91637 | CMF-50-21 |
| A5R72 | 0699-7216 | 3 | | RESISTOR 147 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R76 | 0683-2715 | 6 | 2 | RESISTOR 270 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R78 | 0683-1015 | 7 | | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R80 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R81-R82 | 0699-7249 | 2 | | RESISTOR 3.48K 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R83 | 0699-1965 | 9 | | R-F 21.5 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R84 | 0683-5615 | 1 | | RESISTOR 560 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R86 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R91 | 0699-7214 | 1 | 2 | RESISTOR 121 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R92 | 0699-1903 | 5 | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A5R93 | 0699-7214 | 1 | | RESISTOR 121 1% .05W F TC=0+-100 | 24546 | CT3 |
| A5R94 | 0683-2715 | 6 | | RESISTOR 270 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R102 | 0683-5125 | 8 | 1 | RESISTOR 5.1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R103 | 0683-1535 | 6 | 1 | RESISTOR 15K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R104 | 0683-1525 | 4 | 1 | RESISTOR 1.5K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5R105 | 0683-2015 | 9 | 1 | RESISTOR 200 5% .25W CF TC=0-400 | 77902 | R-25J |
| A5T1 | 1251-0600 | 0 | 12 | CONNECTOR-SGL CONT PIN 1,14-MM-BSC-SZ SQ | 27264 | 16-06-0034 |
| A5U20 | 0955-0095 | 8 | 1 | MIX MWAV SRA-1-85 500MHZ B | M0104B | SRA-1-85 |
| A5U30-U31 | 1820-0270 | 7 | 1 | IC WIDEBAND AMPL VID TO-100 PKG | 07263 | SL21440 |
| A5U40 | 1820-1425 | 6 | 1 | IC SCHMITT-TRIG TTL LS NAND QUAD 2-INP | 01295 | SN57186N |
| A5U41 | 1820-1112 | 8 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A5U42 | 1820-1430 | 3 | 1 | IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG | 01295 | SN57191N |
| A5U43 | 1820-1292 | 3 | 1 | IC FF TTL LS J-K BAR POS-EDGE-TRIG | 01295 | SN53656N |
| A5U50 | 1826-0222 | 1 | 1 | IC OP AMP GP QUAD 14-DIP-P PKG | 07533 | RC4138DB |
| A5U51 | 1826-0412 | 1 | 1 | IC COMPARTOR PRON DUAL 8-DIP-P PKG | 27014 | SL33675 |
| A5U60 | 1826-0147 | 9 | 1 | IC V RGLTR-FXD-POS 11.5/12.5V TO-220 PKG | 04713 | SC25174P1 |
| A5U61 | 1826-0221 | 0 | 1 | IC V RGLTR-FXD-NEG 11.5/12.5V TO-220 PKG | 04713 | SC25266P1 |
| A5U70-U90 | 1813-0215 | 5 | 1 | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA133 |
| A5W1-W3 | 1251-4822 | 6 | 3 | CONN-POST TYPE .100-PIN-SFG3 3-COINT | 27264 | 22-03-2031 |
| A5W1-W3 | 1258-0141 | 8 | 3 | CONN-JUMPER REM. 025P | 00779 | 530153-2 |
| A6 | 03577-66506 | 7 | 1 | REFERENCE BOARD | 28480 | 03577-66506 |
| A6C2-C3 | 0180-0553 | 0 | 1 | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A6C5-C7 | 0180-4571 | 8 | 14 | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A6C8 | 0180-2208 | 4 | 2 | CAPACITOR-FXD 330PF +-5% 300VDC MICA | 00053 | |
| A6C9 | 0180-6505 | 2 | 18 | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-S78X7R103M100V |
| A6C10 | 0180-6510 | 8 | 19 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-S78X7R104M50V |

See introduction to this section for ordering information
* Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|-----------------------|
| A6C12 | 0160-8518 | 7 | 2 | C-F 220PF 20% 100V CERMLr | 28480 | RPE121-978X7R221M100V |
| A6C13 | 0160-6506 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C14 | 0190-3370 | 5 | 1 | CAPACITOR-FXD 22UF+20% 25VDC AL NPOL | 62643 | SMBP(D)25VB22(M) |
| A6C15-C19 | 0160-0127 | 2 | 1 | CAPACITOR-FXD 1UF +20% 25VDC CER | 13606 | 2C37Z5U105M050A |
| A6C20 | 0160-0553 | 0 | | CAPACITOR-FXD 22UF+20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A6C21 | 0160-8518 | 7 | | C-F 220PF 20% 100V CERMLr | 28480 | RPE121-978X7R221M100V |
| A6C22-C23 | 0160-4936 | 0 | 1 | CAPACITOR-FXD 510PF +-1% 100VDC CER | 04222 | SR201A511FAA |
| A6C24 | 0160-6517 | 6 | 1 | C-F 100PF 20% 200V CERMLr | 28480 | RPE121-978X7R101M200V |
| A6C25 | 0160-6508 | 5 | 1 | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978X7R101M200V |
| A6C27-C28 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A6C32-C34 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C35 | 0160-5306 | 0 | | CAPACITOR FXD .1UF +10% 100VDC | 19701 | 719A1CA104PK101SA |
| A6C36 | 0160-6510 | 9 | 2 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C37 | 0160-5306 | 9 | | CAPACITOR-FXD .1UF +10% 100VDC | 19701 | 719A1CA104PK101SA |
| A6C38 | 0160-6507 | 4 | 13 | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C39 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C40 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C41 | 0140-0191 | 8 | 1 | CAPACITOR-FXD 56PF +-5% 300VDC MICA | 09023 | CD15ED56J03C |
| A6C42 | 0160-3947 | 9 | 2 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A6C43-C44 | 0160 6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C45 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C46 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C47 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C48 | 0160-6515 | 4 | 3 | C-F 10PF -% 200V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C49 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C51 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C52 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C53 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C54 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C55 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C56 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C57 | 0160-0553 | 0 | | CAPACITOR-FXD 22UF+20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A6C58-C59 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C61-C62 | 0160-0653 | 0 | | CAPACITOR-FXD 22UF+20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A6C63 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C64 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A6C65-C66 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C68 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C69 | 0160-3768 | 9 | 1 | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS G-8310 |
| A6C70 | 0160-6510 | 5 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C71 | 0160-0127 | 2 | | CAPACITOR-FXD 1UF +-20% 25VDC CER | 13606 | 2C37Z5U105M050A |
| A6C72 | 0160-0553 | 0 | | CAPACITOR-FXD 22UF+20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A6C75-C77 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C78 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C79 | 0160-1746 | 5 | 1 | CAPACITOR-FXD 15UF+10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A6C80-C81 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C82-C83 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C90-C93 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C95-C96 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A6C99 | 0160-6506 | 3 | 4 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A6C100 | 0160-2208 | 4 | | CAPACITOR-FXD 330PF +-5% 300VDC MICA | 09853 | |
| A6C101 | 0160-2009 | 3 | 1 | CAPACITOR-FXD 820PF +-5% 300VDC MICA | 09023 | |
| A6C102-C104 | 0160 6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| A6C105 | 0160-4786 | 9 | 1 | CAPACITOR-FXD 18PF +-5% 100VDC CER 0+-30 | 04222 | SA101A180JAA |
| A6C106 | 0160-3914 | 1 | 1 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 04222 | SR201C103KAA |
| A6C107-C108 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C109-C110 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A6C111-C112 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A6C113-C114 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| A6C115 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C116 | 0160-0553 | 0 | | CAPACITOR-FXD 22UF+20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A6C117 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C120 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A6C121 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A6C122-C123 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| A6C125 | 0160-6515 | 4 | | C-F 10PF -% 200V CERMLr | 28480 | RPE121-978CCG100D200V |
| A6C126 | 0160-6521 | 2 | 1 | C-F 2.2PF -% 200V CERMLr | 28480 | RPE121-978CCG2R2C200V |
| A6C127 | 0160-6515 | 4 | | C-F 10PF -% 200V CERMLr | 28480 | RPE121-978CCG100D200V |
| A6C128 | 0160-3914 | 1 | 1 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 04222 | SR201C103KAA |
| A6CR2 | 0122-0162 | 5 | 1 | DIODE-VVC 28PF 10% BVR=30V | 25403 | BB809 |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|------------------|
| A6CR3-CR4 | 1901-0040 | 1 | 13 | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6CR5 | 1902-1329 | 3 | 1 | IC V RGLTR-V-REF-FXD 6.6/7.2V TO-46 PKG | 27014 | LM329CH |
| A6CR7 | 1902-3149 | 9 | 2 | DIODE-ZNR 9.09V 5% DO-35 PD=4W | 04713 | SZ30016-1170 |
| A6CR8-CR9 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6CR11 | 1902-0041 | 4 | 2 | DIODE-ZNR 5.11V 5% DO-35 PD=4W | 04713 | SZ30016-1098 |
| A6CR12 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6CR13-CR14 | 0122-0085 | 1 | 1 | DIODE-VVC 2.2PF 7% C3/C25-MIN=4.5 | S0545 | 1S2200(B) |
| A6CR15 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6CR16-CR17 | 1901-0376 | 6 | 2 | DIODE-GEN PRP 35V 50MA DO-35 | 9N171 | NDP202 |
| A6CR20 | 1990-1125 | 2 | 1 | OPT LED LMP R XX LMP1002 TT1H | 26480 | 1990-1125 |
| A6CR21 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6CR23 | 1990-1125 | 2 | | OPT LED LMP R XX LMP1002 TT1H | 26480 | 1990-1125 |
| A6CR24-CR25 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6CR26 | 1902-0041 | 4 | | DIODE-ZNR 5.11V 5% DO-35 PD=4W | 04713 | SZ30016-1098 |
| A6CR27 | 1990-1125 | 2 | | OPT LED LMP R XX LMP1002 TT1H | 26480 | 1990-1125 |
| A6CR28-CR29 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6CR31 | 1902-3149 | 9 | | DIODE-ZNR 9.09V 6% DO-35 PD=4W | 04713 | SZ30016-1170 |
| A6CR32 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6CR33 | 1902-0958 | 2 | 1 | DIODE-ZNR 10V 5% DO-35 PD=4W TC=+.075% | 04713 | SZ30035-16RL |
| A6CR34 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A6H4 | 03577-04106 | 3 | 1 | SHFT COVER-REF BOARD | 26480 | 03577-04106 |
| A6H6 | 03577-04119 | 9 | 1 | SHFT COVER-SHIELD REF | 26480 | 03577-04119 |
| A6H6 | 03577-20601 | 7 | 1 | CSTG.CIRC SIDE | 26480 | |
| A6H7 | 03577-20602 | 8 | 1 | CSTG-COMP SIDE | 26480 | |
| A6HR-H9 | 0360-0174 | 3 | 2 | CONNECTOR-SGL CONT PIN .04-IN-BSC-SZ RND | 97300 | |
| A6J1-J7 | 1250-1512 | 3 | 7 | CONNECTOR-RF SMB M PC 50-OHM | 96291 | 51-353-0039-226 |
| A6L1-L3 | 9140-0748 | 0 | 1 | INDUCTOR 250UH 25% .25DX.5LG Q=3 | 24226 | CA-253-3 |
| A6L4 | 9100-2279 | 2 | 2 | INDUCTOR RF-CH-MLD 180UH 10% .105DX.26LG | 24226 | 10M183K |
| A6L5-L6 | 9140-0144 | 0 | 10 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A6L7 | 03577-20301 | 4 | 1 | NDCTR | A01130 | 1871 |
| A6L7 | 8120-1543 | 2 | 0 | CBL-RGD 500HM .1430D | 26480 | 8120-1543 |
| A6L10-L12 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A6L14 | 9100-3551 | 5 | 2 | INDUCTOR RF-CH-MLD 1UH 5% .166DX.385LG | 24226 | 15M101J |
| A6L15-L17 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A6L18 | 9140-0748 | 0 | | INDUCTOR 250UH 25% .25DX.5LG Q=3 | 24226 | CA-253-3 |
| A6L19-L20 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A6L22-L23 | 9140-0748 | 0 | | INDUCTOR 250UH 25% .25DX.5LG Q=3 | 24226 | CA-253-3 |
| A6L24 | 9100-3551 | 5 | | INDUCTOR RF-CH-MLD 1UH 5% .166DX.385LG | 24226 | 15M101J |
| A6L25 | 9140-0748 | 0 | | INDUCTOR 250UH 25% .25DX.5LG Q=3 | 24226 | CA-253-3 |
| A6L28 | 9140-0210 | 1 | 1 | INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG | 99800 | 1537-76 |
| A6L28 | 9100-2279 | 2 | | INDUCTOR RF-CH-MLD 180UH 10% .105DX.26LG | 24226 | 10M183K |
| A6L29-L31 | 9100-3345 | 5 | 3 | INDUCTOR RF-CH-MLD 2UH 5% .166DX.385LG | 24226 | 15M201J |
| A6L32 | 9140-0398 | 6 | 1 | INDUCTOR RF-CH-MLD 12UH 5% .166DX.385LG | 24226 | 15M122J |
| A6L33 | 9140-0814 | 1 | 1 | COIL-VAR 20NH-25NH Q=50 PC-MTG | 26480 | 9140-0814 |
| A6Q1 | 1865-0420 | 2 | 1 | TRANSISTOR J-FET 2N4391 N-CHAN D-MODE | 17866 | 2N4391 |
| A6Q2 | 1854-0345 | 8 | 1 | TRANSISTOR NPN 2N5179 SI TC-.72 PD=200MW | 04713 | SFF5064 |
| A6Q4 | 1855-0410 | 0 | 1 | TRANSISTOR J-FET N-CHAN D-MODE TC-.18 SI | 27014 | SF51006 |
| A6Q5 | 1855-0091 | 1 | 1 | TRANSISTOR J-FET N-CHAN D-MODE SI | 04713 | SFF819 |
| A6Q6 | 1853-0448 | 0 | 1 | TRANSISTOR PNP SI TC-.82 PD=625MW | 04713 | SFS7848 |
| A6Q7 | 1854-0345 | 8 | | TRANSISTOR NPN 2N5179 SI TC-.72 PD=200MW | 04713 | SFF5064 |
| A6Q9 | 1853-0010 | 2 | 1 | TRANSISTOR PNP SI TC-.18 PD=360MW | 04713 | SM4713 |
| A6Q9-Q10 | 1854-0591 | 6 | 1 | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| A6Q11 | 1854-0345 | 8 | | TRANSISTOR NPN 2N5179 SI TC-.72 PD=200MW | 04713 | SFF5064 |
| A6Q12 | 1853-0448 | 0 | | TRANSISTOR PNP SI TC-.82 PD=625MW | 04713 | SPS7848 |
| A6Q13-Q14 | 1853-0036 | 2 | 1 | TRANSISTOR PNP SI PD=310MW FT=250MHZ | 04713 | SPS3612 |
| A6R1 | 0683-8805 | 3 | 2 | RESISTOR 68 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R2 | 0693-1015 | 7 | 3 | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R3 | 0693-1545 | 8 | 2 | RESISTOR 150K 5% .25W CF TC=0-100 | 77902 | R-25J |
| A6R4 | 0693-5105 | 4 | 1 | RESISTOR 51 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R5 | 0698-3558 | 6 | 1 | RESISTOR 4.02K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R6 | 0693-2025 | 1 | 3 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R7 | 0693-1025 | 5 | 7 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R8 | 0698-4502 | 4 | 1 | RESISTOR 64.9K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A6R9 | 0699-3182 | 0 | 1 | RESISTOR 48.4K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R10 | 0693-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R11 | 0693-3325 | 6 | 1 | RESISTOR 3.3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R12 | 2100-3274 | 2 | 1 | RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN | 32997 | 3386X-Y46-103 |
| A6R13 | 0757-0453 | 2 | 1 | RESISTOR 30.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R14 | 0757-0449 | 6 | 1 | RESISTOR 20K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R15 | 0757-0482 | 7 | 1 | RESISTOR 511K 1% .125W F TC=0+-100 | 19701 | 5033R |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|-------------------------------------|-----------|------------------|
| A6R16 | 0757-02R3 | 6 | 2 | RESISTOR 2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R17 | 0683-1045 | 3 | 3 | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R18 | 0683-1055 | 5 | 4 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| A6R19 | 0698-3492 | 9 | 1 | RESISTOR 2.67K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R20 | 0683-1045 | 3 | 3 | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R21 | 0683-2055 | 7 | 1 | RESISTOR 2M 5% .25W CF TC=0-900 | 77902 | R-25J |
| A6R22 | 0683-1055 | 5 | 3 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| A6R23 | 0683-4715 | 0 | 1 | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R24 | 0757-0415 | 6 | 1 | RESISTOR 475 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R25-R26 | 0683-1025 | 9 | 9 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R27 | 0598-0083 | 4 | 1 | RESISTOR 5.23K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R28 | 0898-4440 | 9 | 1 | RESISTOR 3.4K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A6R29 | 0757-0262 | 5 | 1 | RESISTOR 221 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R30 | 0683-2025 | 1 | 1 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R32 | 0698-3456 | 7 | 1 | RESISTOR 346K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R34 | 0683-4705 | 8 | 3 | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R35* | 0683-3035 | 5 | 5 | RESISTOR 30K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R35+ | 0757-0199 | 3 | 1 | RESISTOR 21.5K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R36 | 0698-3497 | 4 | 1 | RESISTOR 8.04K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R37 | 0683-1055 | 5 | 5 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| A6R39 | 0698-3279 | 0 | 4 | RESISTOR 4.99K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R40-R44 | 0683-1025 | 9 | 9 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R45-R47 | 0899-1803 | 5 | 3 | R.F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A6R46 | 0598-7231 | 2 | 1 | RESISTOR 619 1% .05W F TC=0+-100 | 24546 | CT3 |
| A6R49 | 0683-1025 | 9 | 9 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R50 | 0699-7221 | 0 | 2 | RESISTOR 237 1% .05W F TC=0+-100 | 24546 | CT3 |
| A6R51 | 0699-1965 | 9 | 4 | R.F 21.5 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A6R52 | 0757-0409 | 8 | 1 | RESISTOR 274 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R54-R56 | 0699-1965 | 9 | 9 | R.F 21.5 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A6R57 | 0683-1525 | 4 | 1 | RESISTOR 1.5K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R59 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R60 | 0698-4507 | 9 | 1 | RESISTOR 76.8K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A6R61 | 0683-3625 | 9 | 1 | RESISTOR 3.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R62 | 0683-1135 | 2 | 1 | RESISTOR 11K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R63 | 0683-1515 | 2 | 1 | RESISTOR 160 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R64 | 0683-1015 | 7 | 7 | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R65 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R67 | 0699-7224 | 3 | 1 | RESISTOR 315 1% .05W F TC=0+-100 | 24546 | CT3 |
| A6R68 | 0698-3700 | 2 | 1 | RESISTOR 715 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R89 | 0698-4498 | 7 | 1 | RESISTOR 53.6K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A6R70 | 0757-0272 | 3 | 1 | RESISTOR 52.3K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R71 | 0698-3439 | 4 | 1 | RESISTOR 178 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R72 | 0698-4014 | 3 | 1 | RESISTOR 787 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R73 | 0757-0442 | 9 | 4 | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R74 | 0698-3280 | 3 | 1 | RESISTOR 63.4K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R75 | 0698-7221 | 0 | 1 | RESISTOR 237 1% .05W F TC=0+-100 | 24546 | CT3 |
| A6R76 | 0757-0260 | 3 | 2 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R77 | 0698-7234 | 5 | 1 | RESISTOR 825 1% .05W F TC=0+-100 | 24546 | CT3 |
| A6R81 | 0698-3132 | 4 | 1 | RESISTOR 251 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R82 | 0683-7505 | 2 | 1 | RESISTOR 75 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R85 | 0683-1005 | 5 | 1 | RESISTOR 10 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R86 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R87 | 0683-2035 | 3 | 1 | RESISTOR 20K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R88 | 0757-0427 | 0 | 1 | RESISTOR 1.5K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R91 | 0683-1055 | 5 | 5 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| A6R92 | 0683-2025 | 1 | 1 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R93 | 0683-1025 | 9 | 9 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R94 | 0683-1045 | 3 | 3 | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R95 | 0698-3512 | 4 | 1 | RESISTOR 1.18K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R96 | 0757-0280 | 3 | 3 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R97-R99 | 0698-3279 | 0 | 0 | RESISTOR 4.99K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R100-R101 | 0683-4705 | 8 | 8 | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R102 | 0899-3444 | 1 | 1 | RESISTOR 316 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R103 | 0898-4399 | 7 | 1 | RESISTOR 88.7 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A6R104 | 0598-3447 | 4 | 1 | RESISTOR 422 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R110 | 0683-6805 | 3 | 3 | RESISTOR 68 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R111 | 0683-1015 | 7 | 7 | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A6R112 | 0683-1545 | 8 | 8 | RESISTOR 150K 5% .25W CF TC=0-800 | 77902 | R-25J |
| A6R115 | 0698-4429 | 4 | 1 | RESISTOR 1.87K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A6R116 | 0757-0283 | 6 | 6 | RESISTOR 2K 1% .125W F TC=0+-100 | 19701 | SFR25H |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|------------------------|
| A6R117-R118 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R120 | 0757-0394 | 0 | 1 | RESISTOR 51.1 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6H121 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R122 | 0757-0472 | 5 | 1 | RESISTOR 200K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6R123 | 0696-4473 | 8 | 1 | RESISTOR 8.06K 1% .125W F TC=0+-100 | 91637 | GMF-55-1, T-1 |
| A6R124 | 0757-0437 | 2 | 1 | RESISTOR 4.75K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A6S1 | 3101-2063 | 8 | 1 | SWITCH-RKR DIP-RKR-ASSY 4-1A .05A 30VDC | 61073 | 76Y2074S |
| A6TP1-TP14 | 1251-0900 | 0 | 14 | CONNECTOR-SGL CONT PIN 1,14-MM-BSC-SZ SQ | 27264 | 16-06-0034 |
| A6U1 | 1620-2634 | 1 | 1 | IC INV TTL ALS HEX | 01295 | SN71332N |
| A6U2 | 1626-0622 | 4 | 1 | IC OP AMP LOW-BIAS-H-IMPD QUAD 14-DIP-P | 01295 | SN93656N |
| A6U3 | 1820-0321 | 9 | 1 | IC COMPARATOR GP TO-99 PKG | 07263 | SL21436 |
| A6U4-U6 | 1820-1279 | 8 | 2 | IC CNTR TTL LS DECD UP/DOWN SYNCHRO | 01295 | SN53645 |
| A6U7 | 1820-2779 | 5 | 1 | IC CNTR TTL ALS BIN SYNCHRO | 01295 | SN71537N |
| A6U8 | 1820-1199 | 1 | 1 | IC INV TTL LS HEX 1-INP | 01295 | SN53506N |
| A6U9 | 1826-0081 | 0 | 1 | IC OP AMP WB TO-99 PKG | 27014 | SL16037E |
| A6U10 | 1826-0412 | 1 | 1 | IC COMPARATOR PRGN DUAL 8-DIP-P PKG | 27014 | SL33875 |
| A6U11 | 1820-0830 | 3 | 1 | IC MISC TTL | 04713 | SC13265PK |
| A6U13 | 1820-1453 | 0 | 1 | IC CNTR TTL S BIN SYNCHRO POS-EDGE-TRIG | 01295 | SN85498N |
| A6U14 | 1820-1889 | 5 | 1 | IC PRESCR EOL | 04713 | SC63470L013 |
| A6U15 | 1820-1202 | 7 | 1 | IC GATE TTL LS NAND TPL 3-INP | 01295 | SN53509N |
| A6U16 | 1820-1430 | 3 | 1 | IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG | 01295 | SN57191N |
| A6U17 | 1820-1991 | 1 | 1 | IC CNTR TTL LS DECD DUAL 4-BIT | 07263 | SL66263 |
| A6U18 | 1820-1292 | 3 | 1 | IC FF TTL LS J-K BAR POS-EDGE-TRIG | 01295 | SN53566N |
| A6U19 | 1826-0147 | 9 | 1 | IC V RGLTR-FXD-POS 11.5/12.5V TO-220 PKG | 04713 | SC25174P1 |
| A6U20 | 1826-0418 | 7 | 1 | IC V RGLTR-FXD-NEG 12.4/11.6V TO-220 PKG | 27014 | SL33741 |
| A6U21 | 1820-0321 | 9 | | IC COMPARATOR GP TO-99 PKG | 07263 | SL21436 |
| A6U22 | 1820-1144 | 6 | 1 | IC GATE TTL LS NOR QUAD 2-INP | 01295 | SN53243N |
| A6U23 | 1826-0122 | 0 | 1 | IC V RGLTR-FXD-POS 4.6/5 2V TO-220 PKG | 07263 | SL23241 |
| A6U24 | 1820-1894 | 4 | 1 | IC DRVR TTL LS LINE DRVR CGTL | 01295 | SN58659N |
| A6U25 | 1826-0762 | 4 | 1 | IC COMPARATOR HS TO-100 PKG | 27014 | SL16046B |
| A6W1 | 1251-4047 | 7 | 1 | CONN-POST TYPE -100-PIN-SPCG 3-CONT | 27264 | 22-06-2031 |
| A6W1A | 1258-0141 | 8 | 1 | CONN-JUMPER REM .025P | 00779 | 530153-2 |
| A6Y1 | 0410-0437 | 8 | 1 | CRYSTAL-QUARTZ 9.99830 MHZ | 33056 | |
| A7 | 03577-66507 | 8 | 1 | PC BOARD ASSY SYNTHESIZER | 26480 | 03577-66507 |
| A7C1 | 0140-0191 | 8 | 3 | CAPACITOR-FXD 56PF +-5% 300VDC MICA | 09023 | CD15ED560J03C |
| A7C2-C3 | 0160-3847 | 9 | 42 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C4 | 0180-1746 | 5 | 1 | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C6 | 0140-0191 | 8 | 8 | CAPACITOR-FXD 56PF +-5% 300VDC MICA | 09023 | CD15ED560J03C |
| A7C7 | 0160-4571 | 8 | 1 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A7C8 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C13 | 0160-5306 | 9 | 3 | CAPACITOR-FXD .1UF +-10% 100VDC | 18701 | 719A1CA104PK101SA |
| A7C15 | 0160-4461 | 5 | 1 | CAPACITOR-FXD 150PF +-2.5% 630VDC POLYP | 25088 | B33082/150PF/2.5%/630V |
| A7C16 | 0180-0553 | 0 | 16 | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C17 | 0160-4461 | 5 | | CAPACITOR-FXD 150PF +-2.5% 630VDC POLYP | 25088 | B33062/150PF/2.5%/630V |
| A7C18 | 0160-6510 | 9 | 25 | C-F .1UF 20% 50V CERMLR | 26480 | RPE121-978X7R104M50V |
| A7C19 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C22 | 0160-5306 | 9 | | CAPACITOR-FXD .1UF +-10% 100VDC | 18701 | 719A1CA104PK101SA |
| A7C23 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C24 | 0140-0149 | 6 | 1 | CAPACITOR-FXD 470PF +-5% 300VDC MICA | 00853 | |
| A7C26 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C27 | 0160-4798 | 1 | 1 | CAPACITOR-FXD 2.7PF +-25PF 100VDC CER | 54683 | MA12C0G2A2R7C |
| A7C28 | 0160-2206 | 4 | 1 | CAPACITOR-FXD 330PF +-5% 300VDC MICA | 00853 | |
| A7C30 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C31 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 26480 | RPE121-978X7R104M50V |
| A7C34 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C35-C36 | 0180-4787 | 8 | 4 | CAPACITOR-FXD 22PF +-5% 100VDC CER 0+-30 | 04222 | SA105A220JAA |
| A7C38 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C39 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C40-C41 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C42-C45 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C46-C50 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C51 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C52-C53 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C54 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C55-C57 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C58 | 0160-4787 | 8 | | CAPACITOR-FXD 22PF +-5% 100VDC CER 0+-30 | 04222 | SA105A220JAA |
| A7C59 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C60-C75 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C76 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |

See introduction to this section for ordering information
* Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|--------|------|--|-----------|-----------------------|
| A7C77 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C78 | 0180-0291 | 3 | 1 | CAPACITOR-FXD 1UF+-10% 35VDC TA | 13606 | 150D105X9035A2-DYS |
| A7C79-C80 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C81 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C82-C83 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C87 | 0140-0193 | 0 | 1 | CAPACITOR-FXD 82PF +-5% 300VDC MICA | 09023 | |
| A7C88 | 0180-0134 | 1 | 1 | CAPACITOR-FXD 220PF +-5% 300VDC MICA | 09023 | |
| A7C89 | 0180-0363 | 6 | 1 | CAPACITOR-FXD 680PF +-5% 300VDC MICA | 09053 | |
| A7C90 | 0140-0185 | 2 | 1 | CAPACITOR-FXD 130PF +-5% 300VDC MICA | 09023 | |
| A7C91 | 0140-0208 | 8 | 1 | CAPACITOR-FXD 680PF +-5% 300VDC MICA | 09023 | |
| A7C92-C93 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C94 | 0180-0553 | 0 | | CAPACITOR-FXD .01UF +20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C96 | 0180-0100 | 3 | 1 | CAPACITOR FXD 4.7UF+-10% 35VDC TA | 13606 | 150D475X9035B2-DYS |
| A7C98 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C99 | 0180-0229 | 7 | 1 | CAPACITOR-FXD 33UF+-10% 10VDC TA | 13606 | 150D336X9010B2-DYS |
| A7C100 | 0180-2207 | 5 | 1 | CAPACITOR-FXD 100UF+-10% 10VDC TA | 13606 | 150D107X9010R2-DYS |
| A7C101-C102 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C103 | 0160-4787 | 8 | | CAPACITOR-FXD 22PF +-5% 100VDC CER D+-30 | 04222 | SA106A220JAA |
| A7C104-C106 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C107-C108 | 0180-0100 | 3 | | CAPACITOR-FXD 4.7UF+-10% 35VDC TA | 13606 | 150D475X9035B2-DYS |
| A7C109 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C118 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C117 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C118 | 0180-0309 | 4 | 1 | CAPACITOR-FXD 4.7UF+-20% 10VDC TA | 13606 | 150D475X9010A2-DYS |
| A7C119-C124 | 0160-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C125 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C126-C130 | 0180-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C131 | 0140-0191 | 8 | | CAPACITOR-FXD 22UF +-5% 300VDC MICA | 09023 | CD15ED56J03C |
| A7C132 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C134-C137 | 0180-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C138 | 0140-0206 | 6 | 1 | CAPACITOR-FXD 270PF +-5% 500VDC MICA | 09023 | |
| A7C139-C140 | 0180-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C141 | 0180-0553 | 0 | | CAPACITOR-FXD 22UF+-20% 25VDC TA | 28480 | T362C226M025ASC8245 |
| A7C142 | 0180-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C144 | 0180-0229 | 7 | | CAPACITOR-FXD 33UF+-10% 10VDC TA | 13606 | 150D336X9010B2-DYS |
| A7C145 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C146-C149 | 0180-3847 | 9 | | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A7C150-C153 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C154 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C155 | 0160-6522 | 3 | 5 | C-F 1000PF 5% 100V CERMLR | 28480 | RPE121-978C0G102J100V |
| A7C156 | 0160-6507 | 4 | 12 | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A7C158 | 0160-6522 | 3 | | C-F 1000PF 5% 100V CERMLR | 28480 | RPE121-978C0G102J100V |
| A7C159-C160 | 0180-1746 | 5 | | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13606 | 150D156X9020B2-DYS |
| A7C161 | 0160-5306 | 9 | | CAPACITOR-FXD .1UF + 10% 100VDC | 18701 | 719A1CA104PK101SA |
| A7C162-C164 | 0160-6522 | 3 | | C-F 1000PF 5% 100V CERMLR | 28480 | RPE121-978C0G102J100V |
| A7C165 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C166 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A7C167-C169 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C170-C171 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A7C172-C173 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C176 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A7C177-C180 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C181-C182 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A7C183-C184 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C185 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A7C189-C190 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7C194-C197 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A7C204 | 0180-0229 | 7 | | CAPACITOR-FXD 33UF+-10% 10VDC TA | 13606 | 150D336X9010B2-DYS |
| A7C205 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A7CR1-CR2 | 1901-0040 | 1 | 13 | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A7CR3-CR4 | 1901-0518 | 8 | 4 | DIODE-SCHOTTKY SM SIG | 28480 | 1901-0518 |
| A7CR5 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A7CR6-CR7 | 1902-0777 | 3 | 3 | DIODE-ZNR 1N825 6.2V 5% DO-7 PD=4W | 04713 | SZ14376RL |
| A7CR8-CR9 | 1901-0518 | 8 | | DIODE-SCHOTTKY SM SIG | 28480 | 1901-0518 |
| A7CR10 | 1902-1337 | 3 | 1 | DIODE-ZNR 13V 2% DO-7 PD=4W | M01089 | DZ790614ADD07 |
| A7CR11-CR14 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A7CR17 | 1902-3054 | 5 | 1 | DIODE-ZNR 3.65V 5% DO-35 PD=4W | 04713 | SZ30016-05G |
| A7CR20 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A7CR21 | 1902-0945 | 7 | 1 | DIODE-ZNR 3V 5% DO-35 PD=4W TC=.043% | 04713 | SZ30035-003 |
| A7CR23 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|------------------|
| A7CR24 | 1990-1123 | 0 | 1 | OPT LED LMP R AP LMP1301 TT1H | 28480 | 1990-1123 |
| A7CR25 | 1902-0777 | 3 | | DIODE-ZNR 1N825 6.2V 5% DO-7 PD=4W | 04713 | SZ14378RL |
| A7CR26-CR28 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A7CR29 | 1990-1122 | 9 | 1 | OPT LED LMP G GP LMP1503 TT1H | 28480 | 1990-1122 |
| A7CR161-CR162 | 0122-0085 | 1 | 1 | DIODE-VVC 2.2PF 7% C3/C25-MIN=4.5 | 50845 | 1S2208(B) |
| A7CR163 | 1901-0040 | 1 | | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A7H1-H2 | 1251-4822 | 6 | 1 | CONN-POST TYPE .100-PIN-SPCG 3-CONT | 27264 | 22-03-2031 |
| A7H3 | 03577-04107 | 4 | 1 | SHTF COVER-SYNTH | 28480 | 03577-04107 |
| A7H3 | 1251-4822 | 6 | | CONN-POST TYPE .100-PIN-SPCG 3-CONT | 27264 | 22-03-2031 |
| A7H4 | 03577-04110 | 9 | 1 | SHTF COVER-SHIELD S | 28480 | 03577-04110 |
| A7H5 | 03577-04113 | 2 | 1 | SHTF SHIELD-TOP COVER | 20480 | 03577-04113 |
| A7H6 | 03577-20601 | 7 | 1 | CSTG-CIRC SIDE | 28480 | |
| A7H7 | 03577-20602 | 8 | 1 | CSTG-COMP SIDE | 28480 | |
| A7H8 | 03577-20603 | 9 | 1 | MCHD SHIELD-COVER | 76854 | |
| A7H9 | 03577-20604 | 0 | 1 | MCHD SHIELD-FRAME | 76854 | |
| A7J1-J3 | 1250-1512 | 3 | 3 | CONNECTOR-RF SMB M PC 50-OHM | 98291 | 51-353-0039-226 |
| A7L1-L2 | 9140-0748 | 0 | 1 | INDUCTOR 250UH 25% 25DX.5LG Q=3 | 24226 | CA-253-3 |
| A7L3 | 9100-1818 | 1 | 3 | INDUCTOR RF-CH-MLD 5.6UH 10% | 99800 | 1537-30 |
| A7L5 | 9140-0748 | 0 | | INDUCTOR 250UH 25% 25DX.5LG Q=3 | 24226 | CA-253-3 |
| A7L8-L10 | 9140-0210 | 1 | 11 | INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG | 99800 | 1537-76 |
| A7L11 | 9100-1645 | 4 | 1 | INDUCTOR RF-CH-MLD 390UH 5% .2DX.45LG | 99800 | 2500-08 |
| A7L12 | 9100-1652 | 3 | 1 | INDUCTOR RF-CH-MLD 820UH 5% .2DX.45LG | 99800 | 2500-24 |
| A7L13 | 9140-0748 | 0 | | INDUCTOR 250UH 25% 25DX.5LG Q=3 | 24226 | CA-253-3 |
| A7L14-L15 | 9100-1618 | 1 | | INDUCTOR RF-CH-MLD 5.6UH 10% | 99800 | 1537-30 |
| A7L16-L17 | 9140-0210 | 1 | | INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG | 99800 | 1537-76 |
| A7L57-L59 | 9140-0210 | 1 | | INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG | 99800 | 1537-76 |
| A7L131-L132 | 9140-0748 | 0 | | INDUCTOR 250UH 25% 25DX.5LG Q=3 | 24226 | CA-253-3 |
| A7L136-L138 | 9140-0210 | 1 | | INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG | 99800 | 1537-76 |
| A7L140-L148 | 9140-0144 | 0 | 17 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A7L149 | 9100-1791 | 1 | 1 | CORE-FERRITE CHOKE-WIDEBAND;IMP>350 | 02114 | VK200-19/4B |
| A7L151-L152 | 9140-0210 | 1 | | INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG | 99800 | 1537-76 |
| A7L155-L164 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A7L165 | 03577-20300 | 3 | 1 | INDCTR | A01130 | |
| A7L165 | 8120-1543 | 2 | 0 | CBL-RGD 50OHM .1430D | 28480 | 8120-1543 |
| A7L167-L168 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A7L189 | 9135-0078 | 8 | 1 | INDUCTOR RF-CH-MLD 39NH 6% .102DX.26LG | 24226 | 10N039X-1 |
| A7L170-L180 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| A7L181-L186 | 9140-0748 | 0 | | INDUCTOR 250UH 25% 25DX.5LG Q=3 | 24226 | CA-253-3 |
| A7Q1-Q2 | 1853-0448 | 0 | 1 | TRANSISTOR PNP SI TO-92 PD=625MW | 04713 | SPS7848 |
| A7Q3 | 1854-0345 | 8 | 1 | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | SFR5084 |
| A7Q4 | 1853-0448 | 0 | | TRANSISTOR PNP SI TO-92 PD=625MW | 04713 | SPS7848 |
| A7Q6-Q8 | 1853-0597 | 0 | 5 | XTR SML1PNP SI 2N4917 P92 | 07263 | |
| A7Q17 | 1855-0308 | 5 | 1 | TRANSISTOR-JFET DUAL N-CHAN D-MODE SI | 17856 | DN 324 |
| A7Q19-Q19 | 1855-0081 | 1 | 1 | TRANSISTOR J FET N CHAN D-MODE SI | 04713 | SPF819 |
| A7Q21 | 1855-0689 | 5 | 1 | XTR SML1 | 04713 | SS3723RLRA |
| A7Q22-Q24 | 1854-0215 | 1 | 1 | TRANSISTOR NPN SI PD=350MW FT=300MHZ | 04713 | SPS3811 |
| A7Q27 | 1855-0081 | 1 | | TRANSISTOR J-FET N-CHAN D-MODE SI | 04713 | SPF819 |
| A7Q28-Q30 | 1854-0215 | 1 | | TRANSISTOR NPN SI PD=350MW FT=300MHZ | 04713 | SPS3811 |
| A7Q33 | 1855-0689 | 5 | | XTR SML1 | 04713 | SS3723RLRA |
| A7Q34 | 1854-0215 | 1 | | TRANSISTOR NPN SI PD=350MW FT=300MHZ | 04713 | SPS3811 |
| A7Q38 | 1855-0081 | 1 | | TRANSISTOR J-FET N-CHAN D-MODE SI | 04713 | SPF819 |
| A7Q41-Q42 | 1854-0215 | 1 | | TRANSISTOR NPN SI PD=350MW FT=300MHZ | 04713 | SPS3811 |
| A7Q43-Q44 | 1853-0597 | 0 | | XTR SML1PNP SI 2N4917 P92 | 07263 | |
| A7Q50 | 1854-0215 | 1 | | TRANSISTOR NPN SI PD=350MW FT=300MHZ | 04713 | SPS3811 |
| A7Q51 | 1853-0320 | 7 | 1 | TRANSISTOR PNP 2N4032 SI TO-5 PD=800MW | 07263 | S44044 |
| A7Q131 | 1853-0448 | 0 | | TRANSISTOR PNP SI TO-92 PD=625MW | 04713 | SPS7848 |
| A7Q161 | 1854-1043 | 5 | 1 | XTR SML1PNP SI 2N5179 @B72 | 04713 | SFR3804 |
| A7Q162 | 1853-0010 | 2 | 1 | TRANSISTOR PNP SI TO-18 PD=380MW | 04713 | SM4713 |
| A7Q163 | 1854-0345 | 8 | | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | SFR5064 |
| A7R1 | 0698-4380 | 6 | 1 | RESISTOR 45.3 1% .125W F TC=0+100 | 91637 | CMF-56-1, T-1 |
| A7R2-R3 | 0757-0419 | 0 | 2 | RESISTOR 681 1% .125W F TC=0+100 | 19701 | SFR25H |
| A7R4 | 0683-4705 | 8 | 15 | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R5 | 0757-0401 | 0 | 2 | RESISTOR 100 1% .125W F TC=0+100 | 19701 | SFR25H |
| A7R6 | 0757-0417 | 8 | 1 | RESISTOR 562 1% .125W F TC=0+100 | 19701 | SFR25H |
| A7R7 | 0683-4715 | 0 | 4 | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R8 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R9 | 0698-3440 | 7 | 1 | RESISTOR 196 1% .125W F TC=0+100 | 19701 | SFR25H |
| A7R10 | 0683-4715 | 0 | | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R11 | 0683-2205 | 9 | 1 | RESISTOR 22 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R12-R13 | 0757-0429 | 2 | 2 | RESISTOR 1.82K 1% .125W F TC=0+100 | 19701 | SFR25H |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|---|-----------|------------------|
| A7R14 | 0757-0418 | 9 | 1 | RESISTOR 619 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R15 | 0698-3441 | 8 | 1 | RESISTOR 215 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R16 | 0698-3616 | 7 | 1 | RESISTOR 5.9K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R17 | 0757-0280 | 3 | 5 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R18 | 0698-0064 | 5 | 2 | RESISTOR 9.31K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R19 | 0698-3225 | 6 | 1 | RESISTOR 1.43K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R20-R21 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R22 | 0698-4464 | 7 | 1 | RESISTOR 987 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A7R23 | 0698-3178 | 8 | 1 | RESISTOR 487 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R24 | 0698-4469 | 2 | 1 | RESISTOR 1.15K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A7R25 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R26 | 0757-0395 | 1 | 1 | RESISTOR 56.2 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R27-R28 | 0757-0317 | 7 | 2 | RESISTOR 1.33K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R29 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R30 | 0698-3166 | 2 | 2 | RESISTOR 14.7K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R31 | 0683-3325 | 6 | 2 | RESISTOR 3.3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R32 | 0683-4715 | 0 | | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R33 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R34 | 0757-0438 | 3 | 1 | RESISTOR 5.11K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R36 | 0757-0260 | 3 | 3 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R37 | 0757-0281 | 4 | 3 | RESISTOR 2.74K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R38 | 0698-0083 | 8 | 5 | RESISTOR 1.96K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R39 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R40 | 0683-1015 | 7 | 4 | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R41 | 0698-4125 | 7 | 1 | RESISTOR 553 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R42-R43 | 0757-0281 | 4 | | RESISTOR 2.74K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R44 | 0698-0083 | 8 | | RESISTOR 1.96K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R45 | 0683-1005 | 5 | 1 | RESISTOR 10 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R46 | 0698-3495 | 2 | 1 | RESISTOR 806 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R53-R54 | 0757-0260 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R56 | 0698-0083 | 8 | | RESISTOR 1.96K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R58 | 0683-0275 | 9 | 1 | RESISTOR 2.7 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R59 | 0698-3166 | 2 | | RESISTOR 14.7K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R71 | 0757-0450 | 9 | 1 | RESISTOR 22.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R72 | 0683-1025 | 9 | 9 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R73 | 2100-3354 | 9 | 1 | RESISTOR TRMR 50K 10% C SIDE-ADJ 1-TRN | 32997 | 3386X-Y46-503 |
| A7R74 | 2100-3352 | 7 | 1 | RESISTOR-TRMR 1K 10% C SIDE-ADJ 1-TRN | 32997 | 3386X-Y46-102 |
| A7R75 | 0757-0442 | 9 | 1 | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R76 | 2100-3611 | 1 | 1 | RESISTOR-TRMR 50K 10% C SIDE-ADJ 17-TRN | 73138 | 67XR |
| A7R77 | 0683-1065 | 7 | 1 | RESISTOR 10M 5% .25W CF TC=0-400 | 01121 | CB1065 |
| A7R78 | 0757-0488 | 3 | 1 | RESISTOR 809K 1% .125W F TC=0+-100 | 19701 | 5033R |
| A7R79 | 0757-0421 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R80 | 0698-4394 | 2 | 1 | RESISTOR 76.8 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A7R81 | 0683-1035 | 1 | 15 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R82 | 0683-3625 | 9 | 1 | RESISTOR 3.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R83 | 0683-2025 | 1 | 3 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R84 | 0698-3464 | 9 | 1 | RESISTOR 6.65K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R85 | 0757-0439 | 4 | 2 | RESISTOR 6.81K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R86 | 0757-0436 | 1 | 1 | RESISTOR 4.32K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R87 | 0683-4715 | 0 | | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R88 | 2100-0552 | 3 | 1 | RESISTOR-TRMR 50 10% C SIDE-ADJ 1-TRN | 32997 | 3386X-Y46-500 |
| A7R89 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R90 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R91 | 0698-0083 | 8 | | RESISTOR 1.96K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R92 | 0683-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R93-R94 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R96 | 0757-0421 | 4 | 2 | RESISTOR 825 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R97 | 0698-4424 | 9 | 1 | RESISTOR 1.4K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A7R98 | 0757-0451 | 0 | 1 | RESISTOR 24.3K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R99 | 0757-0465 | 6 | 3 | RESISTOR 100K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R100 | 0757-0454 | 3 | 1 | RESISTOR 33.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R101 | 0698-4514 | 8 | 1 | RESISTOR 105K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A7R102-R103 | 0757-0465 | 6 | | RESISTOR 100K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R105 | 0683-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R108 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R107 | 2100-3759 | 8 | 1 | RESISTOR-TRMR 2K 10% C SIDE-ADJ 17-TRN | 73138 | 67XR |
| A7R108 | 0698-0083 | 8 | | RESISTOR 1.96K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R109 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R110 | 0683-6915 | 5 | 1 | RESISTOR 880 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R111 | 0683-4705 | 8 | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|---|---|------|--|-----------|------------------|
| A7R112 | 0757-0421 | 4 | | | RESISTOR 825 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R113-R114 | 0757-0416 | 7 | | 2 | RESISTOR 511 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R115 | 0757-0420 | 3 | | 1 | RESISTOR 750 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R116 | 0693-4705 | 8 | | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R117 | 0757-0439 | 4 | | | RESISTOR 6.81K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R118 | 0683-1025 | 9 | | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R119 | 0683-1835 | 9 | | 1 | RESISTOR 18K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R120-R121 | 0683-1025 | 9 | | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R122-R123 | 0683-1035 | 1 | | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R124 | 0683-1315 | 0 | | 1 | RESISTOR 130 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R125 | 0683-1525 | 4 | | 2 | RESISTOR 1.5K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R126 | 0683-5625 | 3 | | 1 | RESISTOR 5.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R128 | 0698-4307 | 7 | | 1 | RESISTOR 14.3K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R129 | 0683-2035 | 3 | | 1 | RESISTOR 20K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R130 | 0683-1045 | 3 | | 1 | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R131 | 0683-1025 | 9 | | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R132 | 0757-0398 | 4 | | 1 | RESISTOR 75 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R133 | 0699-3132 | 4 | | 1 | RESISTOR 261 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R134-R137 | 0683-1035 | 1 | | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R139 | 0698-0064 | 5 | | | RESISTOR 9.31K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R141 | 0698-4440 | 9 | | 1 | RESISTOR 3.4K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A7R142 | 0683-1035 | 1 | | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R143 | 0683-1015 | 7 | | | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R144 | 0683-3325 | 6 | | | RESISTOR 3.3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R146-R147 | 0683-1035 | 1 | | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R148 | 0683-2025 | 1 | | | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R149-R153 | 0683-1035 | 1 | | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R159 | 0683-3015 | 1 | | 1 | RESISTOR 300 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R160 | 0683-2025 | 1 | | | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R161 | 2100-3252 | 6 | | 1 | RESISTOR-TRMR 5K 10% C TOP-ADJ 1-TRN | 32997 | 33686P-Y48-502 |
| A7R162 | 0683-1015 | 7 | | | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R163 | 0683-5125 | 8 | | 1 | RESISTOR 5.1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R164 | 0698-4207 | 6 | | 1 | RESISTOR 44.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R165 | 0698-4429 | 4 | | 1 | RESISTOR 1.87K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A7R166 | 0683-1035 | 1 | | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R167 | 0683-1015 | 7 | | | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R168 | 0683-1515 | 2 | | 1 | RESISTOR 150 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R169 | 0698-3558 | 8 | | 1 | RESISTOR 4.02K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R170 | 0698-3581 | 7 | | 1 | RESISTOR 13.7K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A7R172 | 0699-1903 | 5 | | 2 | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R173 | 0699-2077 | 6 | | 1 | R-F 75 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R174 | 0683-4705 | 8 | | | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R175 | 0683-1525 | 4 | | | RESISTOR 1.5K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R177 | 0698-7224 | 3 | | 1 | RESISTOR 316 1% .05W F TC=0+-100 | 24546 | CT3 |
| A7R180 | 0699-1969 | 3 | | 7 | R-F 90.9 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R183 | 0683-1025 | 9 | | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R185 | 0683-2715 | 6 | | 4 | RESISTOR 270 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R186 | 0698-1969 | 3 | | | R-F 90.9 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R187 | 0698-2079 | 8 | | 1 | R-F 82.5 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R188 | 0698-1969 | 3 | | | R-F 90.9 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R189-R190 | 0698-7229 | 8 | | 2 | RESISTOR 511 1% .05W F TC=0+-100 | 24546 | CT3 |
| A7R191 | 0699-1903 | 5 | | | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R192 | 0683-1025 | 9 | | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R195 | 0683-2715 | 6 | | | RESISTOR 270 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R196-R198 | 0699-2029 | 8 | | 3 | R-F 16.2 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R210-R210 | 0683-2715 | 6 | | | RESISTOR 270 5% .25W CF TC=0-400 | 77902 | R-25J |
| A7R212-R215 | 0699-1969 | 3 | | 2 | R-F 90.9 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7R216-R217 | 0698-1968 | 2 | | | R-F 68.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| A7TP1-TP34 | 1251-0600 | 0 | | 29 | CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ | 27264 | 16-06-0034 |
| A7U1 | 1820-0817 | 8 | | 1 | IC FF ECL D-M/S DUAL | 04713 | SC22631P |
| A7U2 | 1821-0001 | 4 | | 1 | TRANSISTOR ARRAY 14-PIN PLSTC DIP | 3L565 | 90862 |
| A7U3 | 1810-0294 | 4 | | 1 | NETWORK-RESISTOR 16 PIN DIP, RES | 28480 | 1810-0294 |
| A7U4 | 1820-1196 | 8 | | 3 | IC FF TTL LS D-TYPE POS-EDGE-TRIG COM | 01295 | SN53525N |
| A7U5 | 1820-1112 | 8 | | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A7U6 | 1826-0021 | 8 | | 1 | IC OP AMP GP TO-99 PKG | 27014 | SL11611 |
| A7U7 | 1820-0629 | 0 | | 1 | IC FF TTL S J-K NEG. EDGE TRIG | 01295 | SN23357N |
| A7U8 | 1826-0715 | 7 | | | IC OP AMP LOW-NOISE 8-DIP-P PKG | 16324 | CC3802 |
| A7U9 | 1820-1279 | 8 | | 2 | IC CNTR TTL LS DECD UP/DOWN SYNCHRO | 01295 | SN53645 |
| A7U10 | 1826-0715 | 7 | | 3 | IC OP AMP LOW-NOISE 8-DIP-P PKG | 16324 | CC3802 |
| A7U11 | 1820-1279 | 8 | | | IC CNTR TTL LS DECD UP/DOWN SYNCHRO | 01295 | SN53645 |

See Introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|-----------------------|
| A7U12 | 1820-0681 | 4 | 3 | IC GATE TTL S NAND QUAD 2-INP | 01295 | SN24649N |
| A7U13 | 1820-0629 | 0 | 7 | IC FF TTL S J-K NEG-EDGE-TRIG | 01295 | SN23357N |
| A7U14-U15 | 1820-1196 | 8 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG COM | 01295 | SN53525N |
| A7U17 | 1820-1322 | 2 | 1 | IC GATE TTL S NOR QUAD 2-INP | 01295 | SN84050N |
| A7U18 | 1820-0629 | 0 | | IC FF TTL S J-K NEG-EDGE-TRIG | 01295 | SN23357N |
| A7U19 | 1820-2004 | 9 | 1 | IC MISC NMOS | 28480 | 1820-2004 |
| A7U21 | 1820-0683 | 6 | 1 | IC INV TTL S HEX 1-INP | 01295 | SN24651N |
| A7U22-U23 | 1820-0681 | 4 | | IC GATE TTL S NAND QUAD 2-INP | 01295 | SN24649N |
| A7U24 | 1820-0629 | 0 | | IC FF TTL S J-K NEG-EDGE-TRIG | 01295 | SN23357N |
| A7U25 | 1820-1112 | 8 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A7U26 | 1820-0693 | 8 | 1 | IC FF TTL S D-TYPE POS-EDGE-TRIG | 01295 | SN24661N |
| A7U27 | 1820-0629 | 0 | | IC FF TTL S J-K NEG-EDGE-TRIG | 01295 | SN23357N |
| A7U28 | 1820-2102 | 8 | 1 | IC LCH TTL LS D-TYPE OCTL | 01295 | SN69195N |
| A7U29-U30 | 1820-0629 | 0 | | IC FF TTL S J-K NEG-EDGE-TRIG | 01295 | SN23357N |
| A7U31 | 1820-1144 | 6 | 1 | IC GATE TTL LS NOR QUAD 2-INP | 01295 | SN53243N |
| A7U32 | 1820-0629 | 0 | | IC FF TTL S J-K NEG-EDGE-TRIG | 01295 | SN23357N |
| A7U33 | 1820-1780 | 6 | 1 | IC PRESOR ECL | 07263 | SL63346 |
| A7U34-U36 | 1813-0215 | 5 | 1 | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA133 |
| A7U37 | 1820-1208 | 3 | 1 | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN63515N |
| A7U38 | 1828-0715 | 7 | 1 | IC OP AMP LOW-NOISE 8-DIP-P PKG | 18324 | CC3802 |
| A7U39 | 1813-0215 | 5 | | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA133 |
| A7U40 | 1828-0147 | 9 | 1 | IC V RGLTR-FXD-POS 11.5/12.5V TO-220 PKG | 04713 | SC25174P1 |
| A7U41 | 1828-0221 | 0 | 1 | IC V RGLTR-FXD-NEG 11.5/12.5V TO-220 PKG | 04713 | SC25266P1 |
| A7U42 | 1828-0412 | 1 | 1 | IC COMPARTOR PRON DUAL 8-DIP-P PKG | 27014 | SL33675 |
| A7U43 | 1828-0147 | 9 | | IC V RGLTR-FXD-POS 11.5/12.5V TO-220 PKG | 04713 | SC25174P1 |
| A7U44 | 1828-0773 | 7 | 1 | IC OP AMP GP TO-99 PKG | 27014 | SL41902 |
| A7U45-U46 | 1828-0122 | 0 | 1 | IC V RGLTR-FXD-POS 4.8/5.2V TO-220 PKG | 07263 | SL23241 |
| A7U47 | 1828-0700 | 0 | 1 | IC OP AMP WB 14-DIP-C PKG | 34371 | HA1-5195 E3053-016 |
| A7U48 | 1828-0122 | 0 | | IC V RGLTR-FXD-POS 4.8/5.2V TO-220 PKG | 07263 | SL23241 |
| A7U49 | 1828-0147 | 9 | | IC V RGLTR-FXD-POS 11.5/12.5V TO-220 PKG | 04713 | SC25174P1 |
| A7U50 | 1828-0715 | 7 | | IC OP AMP LOW-NOISE 8-DIP-P PKG | 18324 | CC3802 |
| A7W1-W2 | 1258-0141 | 8 | 2 | CON-JUMPER REM .025P | 00779 | 530153-2 |
| AB | 03577-66508 | 9 | 1 | PC BOARD ASSY OUTPUT | 28480 | 03577-66508 |
| ABC1 | 0180-3788 | 5 | 3 | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| ABC2-C3 | 0180-6506 | 3 | 82 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC4-C5 | 0180-6508 | 5 | 12 | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978CG220J200V |
| ABC6-C7 | 0180-0374 | 3 | 1 | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| ABC8 | 0180-6506 | 3 | 3 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC11 | 0180-6515 | 4 | 3 | C-F 10PF +-% 200V CERMLr | 28480 | RPE121-978CG100D200V |
| ABC12 | 0180-4381 | 8 | 1 | CAPACITOR-FXD 1.5PF +-25PF 200VDC CER | 54583 | FD11C0G201R5C |
| ABC13 | 0180-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978CG220J200V |
| ABC14 | 0180-6524 | 5 | 3 | C-F 8.8PF +-% 200V CERMLr | 28480 | RPE121-978CG88D200V |
| ABC15 | 0180-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978CG220J200V |
| ABC16 | 0180-6515 | 4 | | C-F 10PF +-% 200V CERMLr | 28480 | RPE121-978CG100D200V |
| ABC21 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| ABC22-C23 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC24-C25 | 0180-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 28480 | RPE121-978CG220J200V |
| ABC26-C27 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| ABC28 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC40 | 0180-3788 | 5 | | C-F 3.3UF 20% 35V TADPDr | 28480 | T350D335M035AS C-8310 |
| ABC41-C42 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| ABC43-C44 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC45-C46 | 0180-6507 | 4 | 8 | C-F 1000PF 20% 100V CERMLr | 28480 | RPE121-978X7R102M100V |
| ABC47-C48 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC49-C50 | 0180-6505 | 2 | 6 | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |
| ABC51-C61 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC52 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| ABC54-C68 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC69 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| ABC71 | 0121-0512 | 7 | 2 | CAPACITOR-V TRMR-CER 2-5PF 100V PC-MTG | 59680 | 518-002 A 2-5 |
| ABC72 | 0180-6523 | 4 | 3 | C-F 1PF +-% 200V CERMLr | 28480 | RPE121-978CG010C200V |
| ABC83 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| ABC84-C85 | 0180-1974 | 1 | 1 | CAPACITOR-FXD 10UF+-10% 35VDC TA | 13606 | 150D106X9035R2-DYS |
| ABC90-C108 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC110 | 0180-0228 | 6 | 1 | CAPACITOR-FXD 22UF+-10% 15VDC TA | 13606 | 150D226X9015B2-DYS |
| ABC111-C113 | 0180-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978Z5U104M50V |
| ABC114 | 0180-0228 | 6 | | CAPACITOR-FXD 22UF+-10% 15VDC TA | 13606 | 150D226X9015B2-DYS |
| ABC115 | 0180-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 28480 | RPE121-978X7R103M100V |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|---|-----------|-----------------------|
| ABC117-C11B | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC120 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 26480 | RPE121-978X7R102M100V |
| ABC121 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC122 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 26480 | RPE121-978X7R102M100V |
| ABC123 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC124 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 26480 | RPE121-978X7R102M100V |
| ABC125-C126 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC127 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 26480 | RPE121-978X7R102M100V |
| ABC128 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC129 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 26480 | RPE121-978X7R102M100V |
| ABC130 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC131 | 0160-6507 | 4 | | C-F 1000PF 20% 100V CERMLr | 26480 | RPE121-978X7R102M100V |
| ABC132 | 0160-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 26480 | RPE121-978C0G220J200V |
| ABC133 | 0160-6521 | 2 | | C-F 2.2PF -.5% 200V CERMLr | 26480 | RPE121-978C0G2R2C200V |
| ABC134 | 0160-6511 | 0 | 5 | C-F 15PF 5% 200V CERMLr | 26480 | RPE121-978C0G150J200V |
| ABC135 | 0160-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 26480 | RPE121-978C0G220J200V |
| ABC136 | 0160-6511 | 0 | | C-F 15PF 5% 200V CERMLr | 26480 | RPE121-978C0G150J200V |
| ABC140-C145 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC146 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 26480 | RPE121-978X7R103M100V |
| ABC147-C154 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC155 | 0121-0512 | 7 | | CAPACITOR-V TRMR-CER 2-5PF 100V PC-MTG | 59680 | 518-002 A 2-5 |
| ABC156 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC157 | 0160-6517 | 6 | 4 | C-F 100PF 20% 200V CERMLr | 26480 | RPE121-978X7R101M200V |
| ABC158-C170 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC179-C180 | 0160-6505 | 2 | | C-F .01UF 20% 100V CERMLr | 26480 | RPE121-978X7R103M100V |
| ABC181-C182 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC183 | 0180-0228 | 6 | | CAPACITOR-FXD 22UF+-10% 15VDC TA | 13606 | 150D226X9015B2-DYS |
| ABC184 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC185 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| ABC180-C191 | 0160-6517 | 6 | | C-F 100PF 20% 200V CERMLr | 26480 | RPE121-978X7R101M200V |
| ABC192-C193 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC184 | 0180-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 26480 | RPE121-978C0G220J200V |
| ABC200 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC201 | 0180-1974 | 1 | 1 | CAPACITOR-FXD 10UF+-10% 35VDC TA | 13606 | 150D106X9035R2-DYS |
| ABC210-C223 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC232 | 0160-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 26480 | RPE121-978C0G220J200V |
| ABC233 | 0160-6521 | 2 | | C-F 2.2PF -.5% 200V CERMLr | 26480 | RPE121-978C0G2R2C200V |
| ABC234 | 0160-6511 | 0 | | C-F 15PF 5% 200V CERMLr | 26480 | RPE121-978C0G150J200V |
| ABC235 | 0160-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 26480 | RPE121-978C0G220J200V |
| ABC236 | 0160-6511 | 0 | | C-F 15PF 5% 200V CERMLr | 26480 | RPE121-978C0G150J200V |
| ABC250 | 0160-6515 | 4 | | C-F 10PF -.5% 200V CERMLr | 26480 | RPE121-978C0G100D200V |
| ABC251 | 0180-4381 | 8 | | CAPACITOR-FXD 1.5PF +-25PF 200VDC CER | 54583 | FD11C0G2D1R5C |
| ABC252 | 0160-6524 | 5 | | C-F 6.8PF -.5% 200V CERMLr | 26480 | RPE121-978C0G6R8D200V |
| ABC253 | 0160-6508 | 5 | | C-F 22PF 5% 200V CERMLr | 26480 | RPE121-978C0G220J200V |
| ABC254 | 0160-6521 | 2 | | C-F 2.2PF -.5% 200V CERMLr | 26480 | RPE121-978C0G2R2C200V |
| ABC255 | 0160-6511 | 0 | | C-F 15PF 5% 200V CERMLr | 26480 | RPE121-978C0G150J200V |
| ABC260 | 0160-6521 | 2 | | C-F 2.2PF -.5% 200V CERMLr | 26480 | RPE121-978C0G2R2C200V |
| ABC261-C282 | 0160-6523 | 4 | | C-F 1PF -.5% 200V CERMLr | 26480 | RPE121-978C0G010C200V |
| ABC280 | 0160-6517 | 6 | | C-F 100PF 20% 200V CERMLr | 26480 | RPE121-978X7R101M200V |
| ABC300-C301 | 0160-6506 | 3 | | C-F .1UF 20% 50V CERMLr | 26480 | RPE121-978Z5U104M50V |
| ABC350 | 0160-4382 | 9 | 1 | CAPACITOR-FXD 3.3PF +-25PF 200VDC CER | 54583 | FD12C0G2D3R3C |
| ABC351-C352 | 0160-4381 | 8 | | CAPACITOR-FXD 1.5PF +-25PF 200VDC CER | 54583 | FD11C0G2D1R5C |
| ABC353 | 0160-6524 | 5 | | C-F 6.8PF -.5% 200V CERMLr | 26480 | RPE121-978C0G6R8D200V |
| ABC354-C355 | 0160-6521 | 2 | | C-F 2.2PF -.5% 200V CERMLr | 26480 | RPE121-978C0G2R2C200V |
| ABC41-CR42 | 1902-0920 | 8 | 1 | DIODE-ZNR 1N5345B 8.7V 5% PD=5W | 04713 | SZP40119 |
| ABC43-CR46 | 1901-0025 | 2 | | DIODE-GEN PRP 100V 200MA DO-7 | 07263 | FDH535 |
| ABC480 | 1902-0041 | 4 | 1 | DIODE-ZNR 5.11V 5% DO-35 PD=4W | 04713 | SZ30016-109B |
| ABC62-CR63 | 1902-0920 | 8 | | DIODE-ZNR 1N5345B 8.7V 5% PD=5W | 04713 | SZP40119 |
| ABC71-CR72 | 1901-0047 | 8 | 2 | DIODE-SWITCHING 20V 75MA 10NS | 07263 | FDH0835 |
| ABC73-CR74 | 1902-0025 | 4 | 2 | DIODE-ZNR 10V 5% DO-35 PD=4W TC=-.06% | 04713 | SZ30016-1182 |
| ABC111-CR112 | 1901-0510 | 8 | 6 | DIODE-SCHOTTKY SM SIG | 26480 | 1901-0518 |
| ABC113-CR114 | 1901-0040 | 1 | 2 | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| ABC140 | 1902-1329 | 3 | 1 | IC V RGLTR-V-REF-FXD 6.6/7.2V TO-46 PKG | 27014 | LM329CH |
| ABC160-CR163 | 1901-0518 | 8 | | DIODE-SCHOTTKY SM SIG | 26480 | 1901-0519 |
| ABC164 | 1901-0025 | 2 | 6 | DIODE-GEN PRP 100V 200MA DO-7 | 07263 | FDH536 |
| ABC170 | 1902-1329 | 3 | | IC V RGLTR-V-REF-FXD 6.6/7.2V TO-46 PKG | 27014 | LM329CH |
| ABC171 | 1901-0025 | 2 | | DIODE-GEN PRP 100V 200MA DO-7 | 07263 | FDH536 |
| ABE1-E5 | 03577-00601 | 8 | 5 | ETCH SPRNG-GROUNDING | N01063 | |
| ABE6-E9 | 03577-00902 | 9 | 4 | ETCH SPRNG-GROUNDING | N01063 | |
| ABH16 | 03577-00903 | 0 | 1 | ETCH BAR-GROUNDING | N01063 | |

See introduction to this section for ordering information
* Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|---|---|------|--|-----------|------------------|
| ABH17 | 03577-0410B | 5 | | 1 | SHTF COVER-OUTPUT BD. | 28480 | 03577-0410B |
| ABH18 | 03577-04109 | 6 | | 1 | SHTF COVER-SHIELD | 28480 | 03577-04109 |
| ABH19 | 03577-20801 | 7 | | 1 | CSTG-CIRC SIDE | 28480 | |
| ABH20 | 03577-20805 | 1 | | 1 | CSTG-SHIELD - SLOTTED | 28480 | |
| ABH21 | 03577-20806 | 2 | | 1 | MCHD COVER-SHIELD CAN | H01050 | |
| ABH22 | 03577-20807 | 3 | | 1 | MCHD COVER-SHIELD CAN | H01050 | |
| ABH54-H55 | 1258-0141 | 8 | | 2 | CONL JUMPER REM .025P | 00779 | 530153-2 |
| ABH88 | 4330-0496 | 3 | | 12 | INSULATOR-BEAD GLASS | 53101 | KG12 |
| ABJ1-J2 | 1250-1612 | 3 | | 2 | CONNECTOR-RF SMB M PC 50-OHM | 98291 | 51-353-0039-226 |
| ABJ3 | 1250-1314 | 3 | | 1 | CONNECTOR-RF SM-SLD FEM PC 50-OHM | 98291 | 52-054-0000-226 |
| ABJ4-J8 | 1250-1339 | 2 | | 5 | CONNECTOR-RF SM-SLD M PC 50-OHM | 98291 | 52-051-0000-226 |
| ARK1-K6 | 0490-1404 | 9 | | 6 | RELAY 2C 12VDC-COIL .5A 2BVDC | T01014 | 412Y-0191 |
| ABL1-L2 | 9140-0144 | 0 | | 13 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| ABL11 | 9140-0815 | 2 | | 3 | COIL-VAR 50.8NH-41.4NH PC-MTG | 28480 | 9140-0815 |
| ABL12 | 9140-0813 | 0 | | 2 | COIL-VAR 23NH-52NH Q=65 PC-MTG | 28480 | 9140-0813 |
| ABL13 | 9140-0815 | 2 | | 0 | COIL-VAR 50.8NH-41.4NH PC-MTG | 28480 | 9140-0815 |
| ABL14 | 9140-0813 | 0 | | 2 | COIL-VAR 23NH-52NH Q=65 PC-MTG | 28480 | 9140-0813 |
| ABL15 | 9140-0815 | 2 | | 0 | COIL-VAR 50.8NH-41.4NH PC-MTG | 28480 | 9140-0815 |
| ABL31-L42 | 9140-0144 | 0 | | 0 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| ABL80 | 9100-1618 | 1 | | 3 | INDUCTOR RF-CH-MLD 5.6UH 10% | 99800 | 1637-30 |
| ABL81 | 9140-0807 | 0 | | 1 | INDUCTOR RF-CH-MLD 3.3UH 10% .2DX.45LG | 24226 | 18M331K |
| ABL82 | 9100-1618 | 1 | | 0 | INDUCTOR RF-CH-MLD 5.6UH 10% | 99800 | 1637-30 |
| ABL90-L122 | 9140-0144 | 0 | | 0 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| ABL123-L124 | 9140-0814 | 1 | | 4 | COIL-VAR 20NH-25NH Q=50 PC-MTG | 28480 | 9140-0814 |
| ABL125-L180 | 9140-0144 | 0 | | 0 | INDUCTOR RF-CH-MLD 4.7UH 10% .105DX.26LG | 99800 | 1025-36 |
| ABL200 | 9100-1618 | 1 | | 1 | INDUCTOR RF-CH-MLD 5.6UH 10% | 99800 | 1637-30 |
| ABL223-L224 | 9140-0814 | 1 | | 1 | COIL-VAR 20NH-25NH Q=50 PC-MTG | 28480 | 9140-0814 |
| ABL250-L261 | 9140-1070 | 3 | | 2 | IND RF CHOKE VAR 78.4NH | 28480 | 9140-1070 |
| ABQ1 | 1853-0544 | 7 | | 1 | TRANSISTOR PNP SI PD=180MW | 25403 | BFO51 |
| ABQ2 | 1854-0591 | 6 | | 1 | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| ABQ3 | 1853-0544 | 7 | | 0 | TRANSISTOR PNP SI PD=180MW | 25403 | BFO51 |
| ABQ4-Q5 | 1854-0591 | 6 | | 0 | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| ABQ6 | 1853-0544 | 7 | | 0 | TRANSISTOR PNP SI PD=180MW | 25403 | BFO51 |
| ABQ7 | 1855-0410 | 0 | | 1 | TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI | 27014 | SF51006 |
| ABQ21 | 1853-0544 | 7 | | 0 | TRANSISTOR PNP SI PD=180MW | 25403 | BFO51 |
| ABQ22 | 1854-0591 | 6 | | 0 | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| ABQ23 | 1853-0544 | 7 | | 0 | TRANSISTOR PNP SI PD=180MW | 25403 | BFO51 |
| ABQ24 | 1854-0591 | 6 | | 1 | TRANSISTOR NPN SI PD=180MW FT=4GHZ | 25403 | BFR90 |
| ABQ25 | 1854-0720 | 3 | | 1 | TRANSISTOR NPN SI PD=500MW FT=4GHZ | 25403 | BFR95-S |
| ABQ26 | 1853-0527 | 6 | | 1 | TRANSISTOR PNP SI PD=500MW FT=4GHZ | 25403 | BFO 32 |
| ABQ27 | 1855-0410 | 0 | | 0 | TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI | 27014 | SF51006 |
| ABQ41 | 1855-0410 | 0 | | 0 | TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI | 27014 | SF51006 |
| ABQ43 | 1853-0527 | 6 | | 0 | TRANSISTOR PNP SI PD=500MW FT=4GHZ | 25403 | BFO 32 |
| ABQ44 | 1854-0720 | 3 | | 0 | TRANSISTOR NPN SI PD=500MW FT=4GHZ | 25403 | BFR95-S |
| ABQ45 | 1854-0878 | 0 | | 1 | TRANSISTOR NPN PD=1W FT=1GHZ | 04713 | SFR2855 |
| ABQ46 | 1853-0496 | 7 | | 1 | TRANSISTOR PNP PD=1W FT=1GHZ | 04713 | SFR2854 |
| ABQ61 | 1853-0037 | 3 | | 1 | TRANSISTOR PNP SI TO-39 PD=1W FT=100MHZ | 04713 | SS2109 |
| ABQ62 | 1854-0039 | 7 | | 1 | TRANSISTOR NPN 2N3053S SI TO-39 PD=1W | 3L585 | 72007 |
| ABQ82 | 1205-0033 | 6 | | 1 | HEAT SINK TU-5/TO-39-CS | 09820 | 207-CB |
| ABQ160 | 1855-0410 | 0 | | 0 | TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI | 27014 | SF51006 |
| ABR1 | 0699-2069 | 6 | | 2 | R-F 13.3 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR2-R3 | 0698-7222 | 1 | | 4 | RESISTOR 261 1% .05W F TC=0+-100 | 24546 | CT3 |
| ABR4-R5 | 0699-1964 | 8 | | 8 | R-F 14.7 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR6 | 0698-7216 | 3 | | 2 | RESISTOR 147 1% .05W F TC=0+-100 | 24546 | CT3 |
| ABR7 | 0683-1055 | 5 | | 4 | RESISTOR 1M 5% .25W CF TC=0-600 | 77902 | R-25J |
| ABR8-R9 | 0699-1964 | 8 | | 0 | R-F 14.7 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR10-R11 | 0757-0408 | 7 | | 4 | RESISTOR 243 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR12-R13 | 0698-4496 | 5 | | 2 | RESISTOR 45.3K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| ABR14-R15 | 0699-1948 | 8 | | 7 | R-F 48.4 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR16-R17 | 0698-3228 | 9 | | 5 | RESISTOR 49.9K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR18 | 0698-7223 | 2 | | 4 | RESISTOR 267 1% .05W F TC=0+-100 | 24546 | CT3 |
| ABR19 | 0699-2030 | 1 | | 2 | R-F 17.6 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR20 | 0698-7223 | 2 | | 0 | RESISTOR 297 1% .05W F TC=0+-100 | 24546 | CT3 |
| ABR21 | 0683-1555 | 0 | | 2 | RESISTOR 1.5M 5% .25W CF TC=0-900 | 77902 | R-25J |
| ABR22-R23 | 0698-7222 | 1 | | 0 | RESISTOR 261 1% .05W F TC=0+-100 | 24546 | CT3 |
| ABR24-R25 | 0699-1964 | 8 | | 0 | R-F 14.7 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR28 | 0699-7216 | 3 | | 0 | RESISTOR 147 1% .05W F TC=0+-100 | 24546 | CT3 |
| ABR27 | 0683-1055 | 5 | | 0 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| ABR28-R29 | 0699-1964 | 8 | | 0 | R-F 14.7 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR30-R31 | 0757-0408 | 7 | | 0 | RESISTOR 243 1% .125W F TC=0+-100 | 19701 | SFR25H |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|------------------|
| ABR32-R33 | 0757-0456 | 5 | 2 | RESISTOR 43.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0699-1948 | 8 | | R-F 45.4 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0699-3228 | 9 | | RESISTOR 49.9K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0683-1555 | 0 | | RESISTOR 1.5M 5% .25W CF TC=0-900 | 77902 | R-25J |
| | 0699-1948 | 8 | | R-F 46.4 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR44-R45 | 0757-0427 | 0 | 2 | RESISTOR 1.5K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0699-1965 | 9 | | R-F 21.5 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0698-7221 | 0 | | RESISTOR 237 1% .05W F TC=0+-100 | 24546 | CT3 |
| | 0698-4517 | 1 | | RESISTOR 127K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| | 0698-3446 | 3 | | RESISTOR 383 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR54-R55 | 0699-1902 | 4 | 2 | R-F 10 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0698-4123 | 5 | | RESISTOR 499 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0693-1055 | 5 | | RESISTOR 1M 5% .25W CF TC=0-900 | 77902 | R-25J |
| | 0757-0447 | 4 | | RESISTOR 15.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0693-1025 | 8 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR64-R65 | 0757-0442 | 9 | 10 | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0683-2215 | 1 | | RESISTOR 220 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0683-4725 | 2 | | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0699-1480 | 3 | | RESISTOR 100 .5% .125W F TC=0+-50 | P01078 | PR8494-100 |
| | 0699-1483 | 6 | | RESISTOR 221 .5% .125W F TC=0+-50 | P01078 | PR8494-221 |
| ABR74 | 0699-1477 | 8 | 1 | RESISTOR 23.85 .5% .125W F TC=0+-50 | P01078 | PR8494-23.85 |
| | 0699-1483 | 0 | | RESISTOR 221 .5% .125W F TC=0+-50 | P01078 | PR8494-221 |
| | 0699-1481 | 4 | | RESISTOR 116.1 .5% .125W F TC=0+-50 | P01078 | PR8494-116.1 |
| | 0699-1478 | 9 | | RESISTOR 52.84 .5% .125W F TC=0+-50 | P01078 | PR8494-52.84 |
| | 0699-1481 | 4 | | RESISTOR 110.1 .5% .125W F TC=0+-50 | P01078 | PR8494-110.1 |
| ABR79 | 0699-1479 | 0 | 1 | RESISTOR 68.83 .5% .125W F TC=0+-50 | P01078 | PR8494-68.83 |
| | 0699-1482 | 5 | | RESISTOR 153.8 .5% .125W F TC=0+-50 | P01078 | PR8494-153.8 |
| | 0699-1479 | 0 | | RESISTOR 68.83 .5% .125W F TC=0+-50 | P01078 | PR8494-68.83 |
| | 0699-1482 | 5 | | RESISTOR 153.8 .5% .125W F TC=0+-50 | P01078 | PR8494-153.8 |
| | 0699-1479 | 0 | | RESISTOR 68.83 .5% .125W F TC=0+-50 | P01078 | PR8494-68.83 |
| ABR86 | 0699-1482 | 5 | 5 | RESISTOR 153.8 .5% .125W F TC=0+-50 | P01078 | PR8494-153.8 |
| | 0699-1479 | 0 | | RESISTOR 68.83 .5% .125W F TC=0+-50 | P01078 | PR8494-68.83 |
| | 0699-1480 | 3 | | RESISTOR 100 .5% .125W F TC=0+-50 | P01078 | PR8494-100 |
| | 0683-3905 | 8 | | RESISTOR 39 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0683-1025 | 9 | | RESISTOR 1K 6% .25W CF TC=0-400 | 77902 | R-25J |
| ABR110 | 0683-1035 | 1 | 5 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0683-1045 | 3 | | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0698-3497 | 4 | | RESISTOR 6.04K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR115 | 0683-1025 | 9 | 1 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0683-2725 | 0 | | RESISTOR 2.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0683-1045 | 3 | | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0683-3615 | 7 | | RESISTOR 360 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0683-2715 | 6 | | RESISTOR 270 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR123 | 0699-1903 | 5 | 1 | R-F 51.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0683-3615 | 7 | | RESISTOR 360 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0699-2054 | 9 | | R-F 100 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0699-1588 | 2 | | R-F 68.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0699-2054 | 9 | | R-F 100 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR128 | 0699-7223 | 2 | 2 | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| | 0699-2030 | 1 | | R-F 17.8 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0699-7223 | 2 | | RESISTOR 287 1% .05W F TC=0+-100 | 24546 | CT3 |
| | 0699-2054 | 9 | | R-F 100 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0699-1968 | 2 | | R-F 68.1 OH 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| ABR133 | 0699-2054 | 9 | 3 | R-F 100 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0757-0449 | 6 | | RESISTOR 20K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 2100-3056 | 8 | | RESISTOR-TRMR 5K 10% C SIDE-ADJ 17-TRN | 73136 | 89PR5K |
| | 0757-0449 | 6 | | RESISTOR 20K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 2100-3056 | 8 | | RESISTOR-TRMR 5K 10% C SIDE-ADJ 17-TRN | 73136 | 89PR5K |
| ABR145 | 0683-4725 | 2 | 2 | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| | 0757-0465 | 6 | | RESISTOR 100K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0757-0449 | 6 | | RESISTOR 20K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0757-0465 | 6 | | RESISTOR 100K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR151 | 0699-2054 | 9 | 1 | R-F 100 OHM 1% 1/20W HF04 T0 | 91637 | CMF-50-21 |
| | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| | 2100-3109 | 2 | | RESISTOR-TRMR 2K 10% C SIDE-ADJ 17-TRN | 73136 | 89PR2K |
| | 2100-3056 | 8 | | RESISTOR-TRMR 5K 10% C SIDE-ADJ 17-TRN | 73136 | 89PR5K |
| | 0699-0083 | 8 | | RESISTOR 1.96K 1% .125W F TC=0+-100 | 19701 | SFR25H |

See Introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|-----------------------|
| ABR159-R160 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR161 | 0757-0280 | 3 | 1 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR182-R163 | 0698-4123 | 5 | | RESISTOR 499 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR164 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR185 | 0693-4745 | 6 | 3 | RESISTOR 470K 5% .25W CF TC=0-800 | 77902 | R-25J |
| ABR186 | 0693-1045 | 3 | | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR167 | 0693-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR170 | 0693-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR171 | 0693-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR172 | 0698-4442 | 1 | 1 | RESISTOR 4.42K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| ABR180 | 0693-1055 | 5 | | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| ABR181-R182 | 0693-4745 | 6 | | RESISTOR 470K 5% .25W CF TC=0-800 | 77902 | R-25J |
| ABR190 | 0693-1015 | 7 | 1 | RESISTOR 100 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR191 | 0698-4381 | 7 | 1 | RESISTOR 48.7 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| ABR192 | 0757-0415 | 6 | 1 | RESISTOR 475 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR193 | 0698-3228 | 9 | | RESISTOR 49.9K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR194 | 0757-0401 | 0 | 1 | RESISTOR 100 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR200 | 0699-2069 | 6 | | R-F 13.3 OH 1% 1/20W HF04 TD | 91637 | CMF-50-21 |
| ABR210-R211 | 0698-3446 | 3 | | RESISTOR 383 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR300-R307 | 0693-2015 | 9 | 8 | RESISTOR 200 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR310-R311 | 0693-2215 | 1 | | RESISTOR 220 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR320 | 0698-3264 | 3 | 1 | RESISTOR 11.8K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR321 | 0698-4492 | 1 | 1 | RESISTOR 32.4K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| ABR322 | 0757-0453 | 2 | 1 | RESISTOR 30.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR323 | 0757-0440 | 7 | 1 | RESISTOR 7.5K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR324 | 0698-4307 | 7 | 1 | RESISTOR 14.3K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| ABR325 | 8159-0005 | 0 | 1 | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 20940 | 106 |
| ABR330-R331 | 0693-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABR332 | 0693-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| ABTP1-TP14 | 1251-0600 | 0 | 14 | CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ | 27264 | 16-06-0034 |
| ABU1-U3 | 1828-0043 | 4 | 1 | IC OP AMP GP TO-98 PKG | 27014 | SL160762 |
| ABU4-U5 | 1828-0139 | 8 | 2 | IC OP AMP GP DUAL 8-DIP-P PKG | 04713 | SC25137P1 |
| ABU6 | 1858-0047 | 5 | 1 | TRANSISTOR ARRAY 16-PIN PLSTC DIP | 13606 | ULN-2003A |
| ABU7 | 1828-0412 | 1 | 1 | IC COMPARTOR PRON DUAL 8-DIP-P PKG | 27014 | SL33675 |
| ABU8 | 1820-1144 | 6 | 1 | IC GATE TTL LS NOR QUAD 2-INP | 01295 | SN53243N |
| ABU9 | 1813-0215 | 5 | 1 | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA133 |
| ABU10 | 1813-0216 | 6 | 1 | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA130 |
| ABU11 | 0955-0193 | 7 | 1 | MIX MWAV FC217-ZTF 200MHZ 3 | L01065 | FC217-ZTF |
| ABU13 | 0955-0095 | 8 | 1 | MIX MWAV SRA-1.85 500MHZ 8 | M01048 | SRA-1.85 |
| ABU14 | 1813-0215 | 5 | | IC WIDEBAND AMPL TO-39 PKG | 04713 | SWA133 |
| ABU15 | 1820-1934 | 2 | 1 | D/A 8-BIT 16-CERDIP BPLR | 08685 | DAC-08 096Q |
| ABU16 | 1820-1730 | 6 | 2 | IC FF TTL LS D-TYPE POS-EDGE-TRIG COM | 01295 | SN59039N |
| ABU17 | 1820-1730 | 6 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG COM | 01295 | SN59039N |
| ABU18 | 1820-1211 | 6 | 1 | IC GATE TTL LS EXCL-OR QUAD 2-INP | 01295 | SN53518N |
| ABU19 | 1820-1197 | 9 | 1 | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN53604N |
| ABU20-U21 | 1826-0222 | 1 | 2 | IC OP AMP GP QUAD 14-DIP-P PKG | 07933 | RC4138DB |
| ABU190 | 1826-0109 | 3 | 1 | IC OP AMP WB TO-99 PKG | 34371 | HA2-2625 B3053 032 |
| ABU200 | 1826-0147 | 9 | 1 | IC V RGLTR-FXD-POS 11.5/12.5V TC=220 PKG | 04713 | SC25174P1 |
| ABW1-W6 | 1251-1636 | 4 | 5 | CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND | 71279 | 450-3368-01-03-00 |
| ABW1-W6 | 1258-0214 | 6 | 1 | CON-JUMPER WIRE PLUG-SHORTING | 71279 | 461-2872-01-03-16 |
| ABW7 | 1251-4047 | 7 | 1 | CONN-POST TYPE .100-PIN-SPCG 3-CONT | 27264 | 22-05-2031 |
| ABW8 | 1251-4822 | 6 | 1 | CONN-POST TYPE .100-PIN-SPCG 3-CONT | 27264 | 22-03-2031 |
| A11 | 03577-66511 | 4 | 1 | PRINTED CIRCUIT BOARD-ASSEMBLY | 28480 | 03577-66511 |
| A11C1-C4 | 0160-4571 | 8 | 40 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A11C5 | 0160-6511 | 0 | 1 | C-F 15PF 5% 200V CERMLT | 28480 | RPE121-97BC0G150J200V |
| A11C5-C29 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A11C30 | 0180-0229 | 7 | 1 | CAPACITOR-FXD 33UF+-10% 10VDC TA | 13606 | 150D336X9010B2-DYS |
| A11C31-C32 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A11C33 | 0160-6507 | 4 | 1 | C-F 1000PF 20% 100V CERMLT | 28480 | RPE121-978X7R102M100V |
| A11C34-C44 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A11H1-H3 | 1258-0141 | 8 | 3 | CON-JUMPER REM. 025P | 00778 | 530163-2 |
| A11J2 | 1250-0543 | 8 | 1 | CONNECTOR-RF SM-SNP M PG 50-OHM | 98291 | 51-053-0000-226 |
| A11J3 | 1251-5202 | 8 | 1 | CONN-POST TYPE .125-PIN-SPCG 6-CONT | 28480 | 1251-5202 |
| A11L1 | 9100-1791 | 1 | 1 | CORE-FERRITE CHOKE-WIDEBAND;IMP>360 | 02114 | VK200-19/4B |
| A11L2 | 9100-3345 | 5 | 1 | INDUCTOR RF-CH-MLD 2UH 5% .168DX.385LG | 24226 | 15M201J |
| A11R1-R4 | 0693-1025 | 9 | 1 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A11R5-R6 | 0693-2025 | 1 | 3 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A11R9-R10 | 0693-4725 | 2 | 9 | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |

See introduction to this section for ordering information
* Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|-----------------------------|
| A11R11 | 0683-2025 | 1 | | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A11R12 | 0683-4725 | 2 | | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A11R13 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A11R14 | 0683-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A11R17-R22 | 0683-4725 | 2 | | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A11RP1-RP2 | 1810-0280 | 8 | 2 | NETWORK-RES 10-SIP 10.0K OHM X 9 | 91637 | CSC10A01-103G/MSP10A01-103G |
| A11RP3-RP4 | 1810-0338 | 7 | 2 | NETWORK-RES 16-DIP 100.0 OHM X 8 | 11236 | 761-3-R10D |
| A11TP1-TP9 | 1251-0600 | 0 | 9 | CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ | 27264 | 16-00-0034 |
| A11U1 | 03577-60301 | 8 | 1 | PRGMD PROM | 26490 | 03577-60301 |
| A11U1 | 1816-1572 | 5 | 1 | IC TTL S 16384 (16K) PROM 35-NS 3-S | 34335 | AM27S191ADC |
| A11U2 | 03577-60302 | 9 | 1 | PRGMD PROM | 26490 | 03577-60302 |
| A11U2 | 1816-1572 | 5 | 1 | IC TTL S 16384 (16K) PROM 35-NS 3-S | 34335 | AM27S191ADC |
| A11U3 | 03577-60303 | 0 | 1 | PRGMD PROM | 26490 | 03577-60303 |
| A11U3 | 1816-1572 | 5 | 1 | IC TTL S 16384 (16K) PROM 35-NS 3-S | 34335 | AM27S191ADC |
| A11U4 | 03577-60304 | 1 | 1 | PRGMD PROM | 26490 | 03577-60304 |
| A11U4 | 1816-1572 | 5 | 1 | IC TTL S 16384 (16K) PROM 35-NS 3-S | 34335 | AM27S191ADC |
| A11U5 | 03577-60305 | 2 | 1 | PRGMD PROM | 26490 | 03577-60305 |
| A11U5 | 1816-1572 | 5 | 1 | IC TTL S 16384 (16K) PROM 35-NS 3-S | 34335 | AM27S191ADC |
| A11U6 | 03577-60306 | 3 | 1 | PRGMD PROM | 26490 | 03577-60306 |
| A11U6 | 1816-1572 | 5 | 1 | IC TTL S 16384 (16K) PROM 35-NS 3-S | 34335 | AM27S191ADC |
| A11U7-U12 | 1820-1677 | 0 | 9 | IC FF TTL S D-TYPE OCTL | 01295 | SN88182N |
| A11U13-U14 | 1820-0999 | 6 | 2 | IC MUXR/DATA-SEL TTL S 4-TO-1-LINE DUAL | 01295 | SN37508N |
| A11U15 | 1820-2379 | 0 | 1 | IC-MICROPROGRAM CONTROLLER, 4K RANGE | 34335 | AM2910ADC |
| A11U18 | 1820-0894 | 9 | 1 | IC GATE TTL S EXCL-OR QUAD 2-INP | 01295 | SN41018N |
| A11U17-U18 | 1820-1302 | 8 | 2 | IC MUXR/DATA-SEL TTL S 8-TO-1-LINE 8-INP | 01295 | SN49018N |
| A11U19-U20 | 1820-2565 | 7 | 2 | IC BFR TTL S LINE DRVR OCTL | 34335 | AM74S244N |
| A11U21 | 1820-1306 | 1 | 1 | IC GEN TTL S LOOK-AHD-CRY | 01295 | SN49032 |
| A11U22 | 1820-2287 | 0 | 2 | IC MUXR/DATA-SEL TTL S 4-TO-1-LINE DUAL | 27014 | SD41869 |
| A11U23 | 1820-1677 | 0 | 1 | IC FF TTL S D-TYPE OCTL | 01295 | SN88182N |
| A11U24-U27 | 1820-2422 | 5 | 4 | IC-BIT SLICE; 8 FUNCT ALU; 2 PORT | 27014 | SD42151 |
| A11U28 | 1820-1319 | 7 | 2 | IC MUXR/DATA-SEL TTL S 8-TO-1-LINE 8-INP | 01295 | SN84048N |
| A11U29 | 1820-0881 | 4 | 2 | IC GATE TTL S NAND QUAD 2-INP | 01295 | SN24648N |
| A11U30 | 1820-1072 | 9 | 1 | IC DDDR TTL S 2-TO-4-LINE DUAL 2-INP | 01295 | SN43265N |
| A11U31 | 1820-1112 | 8 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A11U32 | 1820-1491 | 6 | 1 | IC BFR TTL LS NON-INV HEX 1-INP | 01295 | SN57383N |
| A11U33-U34 | 1820-1278 | 7 | 4 | IC CNTR TTL LS BIN UP/DOWN SYNCHRO | 01295 | SN53646N |
| A11U35 | 1820-1430 | 3 | 1 | IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG | 01295 | SN57191N |
| A11U36 | 1820-0693 | 8 | 2 | IC FF TTL S D-TYPE POS-EDGE-TRIG | 01295 | SN24661N |
| A11U37-U39 | 1820-1216 | 3 | 3 | IC DDDR TTL LS 3-TO-8-LINE 3-INP | 01295 | SN53522N |
| A11U40 | 1820-1322 | 2 | 1 | IC GATE TTL S NOR QUAD 2-INP | 01295 | SN64050N |
| A11U41-U42 | 1820-1278 | 7 | 1 | IC CNTR TTL LS BIN UP/DOWN SYNCHRO | 01295 | SN53646N |
| A11U43 | 1820-1641 | 6 | 1 | IC DRVR TTL LS BUS HEX 1-INP | 01295 | SN57689N |
| A11U44 | 1820-0683 | 6 | 2 | IC INV TTL S HEX 1-INP | 01295 | SN24651N |
| A11U45 | 1820-1319 | 7 | 1 | IC MUXR/DATA-SEL TTL S 8-TO-1-LINE 8-INP | 01295 | SN84048N |
| A11U46-U47 | 1820-1794 | 2 | 2 | IC BFR TTL LS NON-INV OCTL | 27014 | SD32700 |
| A11U48 | 1820-0683 | 6 | | IC INV TTL S HEX 1-INP | 01295 | SN24651N |
| A11U49 | 1820-1158 | 2 | 1 | IC GATE TTL S AND-OR-INV DUAL 2-INP | 01295 | SN47460N |
| A11U50 | 1820-0681 | 4 | | IC GATE TTL S NAND QUAD 2-INP | 01295 | SN24648N |
| A11U51-U52 | 1820-1987 | 7 | 2 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 27014 | GDEA105 |
| A11U53 | 1820-2287 | 0 | | IC MUXR/DATA-SEL TTL S 4-TO-1-LINE DUAL | 27014 | SD41889 |
| A11U54-U55 | 1820-1677 | 0 | | IC FF TTL S D-TYPE OCTL | 01295 | SN88182N |
| A11U56 | 1820-2697 | 6 | 1 | IC SHF-RGTR TTL F MULTI-MODE | 07263 | SL82891 |
| A11U57 | 1820-0688 | 1 | 1 | IC GATE TTL S NAND DUAL 4-INP | 01295 | SN24656N |
| A11U58 | 1820-1275 | 4 | 1 | IC GATE TTL S NOR DUAL 5-INP | 01295 | SN48015N |
| A11U59 | 1820-1470 | 1 | 1 | IC MUXR/DATA-SEL TTL LS 2-TO-1-LINE QUAD | 01295 | SN53624N |
| A11U60 | 1820-0693 | 8 | | IC FF TTL S D-TYPE POS-EDGE-TRIG | 01295 | SN24661N |
| A11U61 | 1820-2834 | 1 | 1 | IC INV TTL ALS HEX | 01295 | SN71332N |
| A11W1-W3 | 1251-6515 | 8 | 3 | CONN-POST TYPE .100-PIN SPOG 6-CONT | 29480 | 1251-6515 |
| A12 | 03577-66512 | 5 | 1 | PC BOARD ASSY TRACE MEMORY | 28490 | 03577-66512 |
| A12BT1 | 1420-0278 | 7 | 1 | BATTERY 2.9V .72A-HR LI/S-DIOX W-FLEX | P01121 | B9511 |
| A12C1 | 0160-4571 | 8 | 1 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A12C2 | 0180-2207 | 5 | 1 | CAPACITOR-FXD 100UF +/-10% 10VDC TA | 13606 | 150D107X9010R2-DYS |
| A12C3-C8 | 0160-4571 | 8 | 16 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A12C9 | 0180-2207 | 5 | 1 | CAPACITOR-FXD 100UF +/-10% 10VDC TA | 13606 | 150D107X9010R2-DYS |
| A12C10-C19 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A12CR1-CR2 | 1901-0535 | 9 | 1 | DIODE-SCHOTTKY SM SIG | 26480 | 1501-0535 |
| A12CR3 | 1902-0946 | 6 | 1 | DIODE-ZNR 3.3V 5% DO-35 PD=.4W TC=-.035% | 04713 | SZ30035-004 |
| A12H1 | 03577-04112 | 1 | 1 | SHFT COVER TRACY MEMO | 26480 | 03577-04112 |
| A12L1 | 9100-1791 | 1 | 1 | CORE-FERRITE CHOKE-WIDEBAND;IMP;>380 | 02114 | VK200-19/4B |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|-----------------------------|
| A12Q1 | 1853-0398 | 9 | 1 | TRANSISTOR PNP SI PD=15W FT=65MHZ | 04713 | SJE1654 |
| A12Q2 | 1854-0215 | 1 | 1 | TRANSISTOR NPN SI PD=350MW FT=300MHZ | 04713 | SPS3611 |
| A12R2 | 0683-8205 | 1 | 1 | RESISTOR 82 5% .25W CF TC=0.400 | 77902 | R-25J |
| A12R3 | 0683-2015 | 9 | 1 | RESISTOR 200 5% .25W CF TC=0.400 | 77902 | R-25J |
| A12R4 | 0683-4725 | 2 | 1 | RESISTOR 4.7K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A12R5 | 0757-0450 | 9 | 1 | RESISTOR 22.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A12R9-R10 | 0683-1025 | 9 | 2 | RESISTOR 1K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A12R11 | 0683-1045 | 3 | 1 | RESISTOR 100K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A12RP1 | 1810-0279 | 5 | 1 | NETWORK-RES 10-SIP 4.7K OHM X 9 | 91637 | CSC10A01-472G/MSP10A01-472G |
| A12TP1-TP3 | 1251-0600 | 0 | 3 | CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ | 27264 | 16-06-0034 |
| A12U1 | 1820-0681 | 4 | 1 | IC GATE TTL S NAND QUAD 2-INP | 01295 | SN24649N |
| A12U3-U4 | 1820-1216 | 3 | 2 | IC DCDR TTL LS 3-TO-8-LINE 3-INP | 01295 | SN53522N |
| A12U5-U10 | 1818-3286 | 6 | 12 | IC CMOS 16384 (16K) STAT RAM 200-NS 3-S | T01118 | TC5516APL-2 |
| A12U11 | 03577-60311 | 0 | 1 | PROGRAMMED PROM | 28480 | 03577-60311 |
| A12U11 | 1818-1142 | 5 | 1 | IC TTL S 4096 (4K) PROM 70-NS 3-S | 18324 | CK1753F |
| A12U12-U17 | 1818-3286 | 6 | 1 | IC CMOS 16384 (16K) STAT RAM 200-NS 3-S | T01118 | TC5516APL-2 |
| A12U18 | 03577-60318 | 7 | 1 | PRGMD PROM | 28480 | 03577-60318 |
| A12U18 | 1818-1142 | 5 | 1 | IC TTL S 4096 (4K) PROM 70-NS 3-S | 18324 | CK1753F |
| A12U19 | 1820-2018 | 6 | 1 | IC SCHMITT-TRIG CMOS HEX | 04713 | SC45114PK |
| A13 | 03577-66513 | 6 | 1 | PC BOARD ASSY MAIN PROCESSOR | 28480 | 03577-66513 |
| A13C1 | 0160-4786 | 7 | 1 | CAPACITOR-FXD 27PF +-5% 100VDC CER 8+-30 | 04222 | SA101A270JAA |
| A13C2-C3 | 0160-3947 | 9 | 5 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A13C4-C5 | 0160-4571 | 8 | 66 | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A13C7 | 0180-0309 | 4 | 1 | CAPACITOR-FXD 4.7UF+-20% 10VDC TA | 13606 | 150D475X0010A2-DYS |
| A13C8-C9 | 0160-3947 | 9 | 1 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A13C10 | 0160-0161 | 4 | 1 | CAPACITOR-FXD .01UF +-10% 200VDC POLYE | 84411 | HEW-238M |
| A13C11 | 0180-3947 | 7 | 1 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A13C12 | 0180-0229 | 3 | 2 | CAPACITOR-FXD 33UF+-10% 10VDC TA | 13606 | 150D336X9010B2-DYS |
| A13C13-C73 | 0160-4571 | 8 | 1 | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A13C74 | 0180-0229 | 7 | 1 | CAPACITOR-FXD 33UF+-10% 10VDC TA | 13606 | 150D336X9010B2-DYS |
| A13C75-C78 | 0160-4571 | 8 | 1 | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A13CR1 | 1901-0050 | 3 | 1 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 8308 |
| A13CR2 | 1902-0041 | 4 | 1 | DIODE-ZNR 5.11V 5% DO-35 PD=.4W | 04713 | SZ30016-1098 |
| A13CR3 | 1902-0126 | 6 | 1 | DIODE-ZNR 2.61V 5% DO-7 PD=.4W TC=-.072% | 04713 | SZ30016-014 |
| A13CR4 | 1990-1123 | 0 | 1 | OPT LED LMP R AP LMP1301 TT1H | 28480 | 1990-1123 |
| A13CR5-CR6 | 1990-1124 | 1 | 1 | OPT LED LMP Y AP LMP1401 TT1H | 28480 | 1990-1124 |
| A13CR7 | 1902-0945 | 8 | 1 | DIODE-ZNR 3.3V 5% DO-35 PD=.4W TC=-.039% | 04713 | SZ30035-004 |
| A13H1-H2 | 1259-0141 | 8 | 2 | CON-JUMPER REM .025P | 00779 | 530153-2 |
| A13J1 | 1251-7229 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 26-CONT | 56501 | 609-2807 |
| A13J2 | 1251-5202 | 8 | 1 | CONN-POST TYPE .125-PIN-SPCG 5-CONT | 28480 | 1251-5202 |
| A13L1 | 9100-1791 | 1 | 1 | CORE-FERRITE CHOKE-WIDEBAND;IMP;>360 | 02114 | VK200-19/4B |
| A13Q1 | 1854-0215 | 1 | 1 | TRANSISTOR NPN SI PD=350MW FT=300MHZ | 04713 | SPS3611 |
| A13Q2 | 1853-0398 | 9 | 1 | TRANSISTOR PNP SI PD=15W FT=65MHZ | 04713 | SJE1654 |
| A13Q3 | 1854-0215 | 1 | 1 | TRANSISTOR NPN SI PD=350MW FT=300MHZ | 04713 | SPS3611 |
| A13R1 | 0683-1025 | 9 | 3 | RESISTOR 1K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R2 | 0683-1035 | 1 | 2 | RESISTOR 10K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R3-R4 | 0683-1025 | 9 | 1 | RESISTOR 1K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R5 | 0683-4705 | 8 | 1 | RESISTOR 47 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R6 | 0683-4725 | 2 | 12 | RESISTOR 4.7K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R7 | 0683-4489 | 6 | 1 | RESISTOR 28K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A13R8 | 0683-4472 | 7 | 1 | RESISTOR 7.68K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A13R9 | 0683-4489 | 3 | 1 | RESISTOR 24.9K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A13R10-R12 | 0683-1045 | 3 | 4 | RESISTOR 100K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R13 | 0683-2735 | 0 | 1 | RESISTOR 27K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R14 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R15 | 0683-1045 | 3 | 1 | RESISTOR 100K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R16-R20 | 0683-4725 | 2 | 1 | RESISTOR 4.7K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R21 | 0683-3315 | 4 | 3 | RESISTOR 330 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R22-R23 | 0683-4725 | 2 | 1 | RESISTOR 4.7K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R24-R25 | 0683-3315 | 4 | 1 | RESISTOR 330 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R26-R29 | 0683-4725 | 2 | 1 | RESISTOR 4.7K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R31 | 0683-8205 | 1 | 1 | RESISTOR 82 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R32 | 0683-7525 | 6 | 1 | RESISTOR 7.5K 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R33 | 0683-2015 | 9 | 1 | RESISTOR 200 5% .25W CF TC=0.400 | 77902 | R-25J |
| A13R34 | 0757-0450 | 9 | 1 | RESISTOR 22.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|-----------------------------|
| A13R35-R40 | 8159-0005 | 0 | 8 | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 20940 | 106 |
| A13RP1-RP11 | 1810-0260 | 8 | 10 | NETWORK-RES 10-SIP 10.0K OHM X 9 | 91637 | GSC10A01-103G/MSP10A01-103G |
| A13S1 | 3101-2170 | 8 | 1 | SWITCH-PB SPDT MOM | 09353 | 8125-D8AE |
| A13SP1 | 0980-0483 | 9 | 1 | ALRM-AUDIBLE | P01152 | |
| A13TP1-TPB | 1251-0800 | 0 | R | CONNECTOR-SGL CONT PIN 1,14-MM-BSC-SZ SO | 27264 | 16-06-0034 |
| A13U1 | 1820-3532 | 0 | | IC-16 BIT MICROPROCESSOR /8 MHZ | 04713 | MC68000PB |
| A13U2 | 1820-2024 | 2 | 13 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A13U3-U4 | 1820-2075 | 4 | 8 | IC TRANSCIVER TTL LS BUS OCTL | 01295 | SN59111N |
| A13U5-U7 | 1820-2024 | 3 | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A13U9-U12 | 1820-1216 | 3 | 3 | IC DDDR TTL LS 3-TO-8-LINE 3-INP | 01295 | SN53522N |
| A13U13-U14 | 1820-2053 | 8 | 2 | IC DDDR TTL LS BCD 4-TO-16-LINE | 27014 | SD34031 |
| A13U15-U18 | 1818-3286 | 6 | 8 | IC CMOS 16384 (16K) STAT RAM 200-NS 3-S | T01118 | TC5516APL-2 |
| A13U19 | 1818-3569 | 8 | 1 | ICM MROM 23256 32Kx8 300NS P28 | 18324 | 23256A-30 CN84782N |
| A13U20 | 1818-3570 | 1 | 1 | ICM MROM 23256 32Kx8 300NS P28 | 18324 | 23256A-30 CN84783N |
| A13U21 | 1818-3571 | 2 | 1 | ICM MROM 23256 32Kx8 300NS P28 | 18324 | 23256A-30 CN84784N |
| A13U22 | 1818-3572 | 3 | 1 | ICM MROM 23256 32Kx8 300NS P28 | 18324 | 23256A-30 CN84785N |
| A13U23 | 1818-3573 | 4 | 1 | ICM MROM 23256 32Kx8 300NS P28 | 18324 | 23256A-30 CN84786N |
| A13U24 | 1818-3574 | 5 | 1 | ICM MROM 23256 32Kx8 300NS P28 | 18324 | 23256A-30 CN84787N |
| A13U25 | 1818-3575 | 6 | 1 | ICM MROM 23256 32Kx8 300NS P28 | 18324 | 23256A-30 CN84788N |
| A13U26 | 1818-3576 | 7 | 1 | ICM MROM 23256 32Kx8 300NS P28 | 18324 | 23256A-30 CN84789 |
| A13U31-U32 | 1820-3368 | 0 | 2 | IC-8-BIT BIDIRECTIONAL I/O PORT | 34335 | AM2950DC |
| A13U33-U34 | 1820-2075 | 4 | | IC TRANSCIVER TTL LS BUS OCTL | 01295 | SN59111N |
| A13U35-U36 | 1820-2024 | 3 | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A13U37-U38 | 1820-1112 | 8 | 6 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A13U39-U40 | 1820-2075 | 4 | | IC TRANSCIVER TTL LS BUS OCTL | 01295 | SN59111N |
| A13U41 | 1820-2024 | 3 | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A13U42-U43 | 1820-2075 | 4 | | IC TRANSCIVER TTL LS BUS OCTL | 01295 | SN59111N |
| A13U44-U45 | 1820-2024 | 3 | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A13U46 | 1820-1851 | 2 | 1 | IC ENCDR TTL LS | 01295 | SN70488N |
| A13U47 | 1820-2024 | 3 | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A13U48 | 1826-1054 | 9 | 1 | IC PL LOOP 16-DIP-P PKG | 18324 | CC3928 |
| A13U49 | 1820-1194 | 6 | 1 | IC CNTR TTL LS BIN UP/DOWN SYNCHRO | 01295 | SN53527N |
| A13U50 | 1820-1112 | 8 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A13U51 | 1820-1433 | 6 | 1 | IC SHF-RGTR TTL LS R-S SERIAL-IN PRL-OUT | 01295 | SN57194N |
| A13U52 | 1820-1217 | 4 | 1 | IC MUXR/DATA-SEL TTL LS 8-TO-1-LINE | 01295 | SN53523N |
| A13U53 | 1820-1112 | 8 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A13U54 | 1826-0412 | 1 | 1 | IC COMPARATOR PRGN DUAL 8-DIP-P PKG | 27014 | SL33875 |
| A13U55 | 1820-1144 | 6 | 1 | IC GATE TTL LS NOR QUAD 2-INP | 01295 | SN53243N |
| A13U56-U57 | 1820-1201 | 6 | 2 | IC GATE TTL LS AND QUAD 2-INP | 01295 | SN53508N |
| A13U58 | 1820-1208 | 3 | 5 | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN53515N |
| A13U59 | 1820-1202 | 7 | 1 | IC GATE TTL LS NAND TPL 3-INP | 01295 | SN53509N |
| A13U60 | 1820-2096 | 9 | 3 | IC CNTR TTL LS BIN DUAL 4-BIT | 01295 | SN59197N |
| A13U61 | 1820-1208 | 3 | | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN53515N |
| A13U62 | 1820-2024 | 3 | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A13U63 | 1826-0205 | 0 | 1 | IC TIMER TTL | 18324 | NE556N |
| A13U64 | 1820-1199 | 1 | 1 | IC INV TTL LS HEX 1-INP | 01295 | SN53506N |
| A13U65 | 1820-1200 | 5 | 1 | IC INV TTL LS HEX | 01295 | SN53507N |
| A13U66 | 1820-1197 | 9 | 2 | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN53504N |
| A13U67 | 1820-2019 | 6 | 1 | IC SCHMITT-TRIG CMOS HEX | 04713 | SC45114PK |
| A13U68 | 1820-1208 | 3 | | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN53515N |
| A13U69 | 1820-1197 | 9 | | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN53504N |
| A13U70 | 1820-1112 | 8 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A13U71-U72 | 1818-3296 | 6 | | IC CMOS 16384 (16K) STAT RAM 200-NS 3-S | T01118 | TC5516APL-2 |
| A13U77-U78 | 1820-2096 | 9 | | IC CNTR TTL LS BIN DUAL 4-BIT | 01295 | SN59197N |
| A13U79 | 1820-1112 | 8 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A13U80 | 1820-1208 | 3 | | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN53515N |
| A13U81-U82 | 1818-3286 | 6 | | IC CMOS 16384 (16K) STAT RAM 200-NS 3-S | T01118 | TC5516APL-2 |
| A13U83-U84 | 1820-2024 | 3 | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A13U85 | 1820 1568 | 8 | 1 | IC BFR TTL LS BUS QUAD | 01295 | SN57451N |
| A13U86 | 1820-1208 | 3 | | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN53515N |
| A13W1-W2 | 1251-4822 | 6 | 2 | CONN-POST TYPE .100-PIN-SPCG 3-CONT | 27264 | 22-03-2031 |
| A15 | 03577-66515 | 8 | 1 | PC BOARD ASSY KEYBOARD | 28480 | 03577-66515 |
| A15C1-C10 | 0160-4571 | 8 | 10 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A15CR1-CR4 | 1990-0485 | 5 | 1 | LED-LAMP LUM-INT-2MCD IF=30MA-MAX BVR=5V | 29460 | 1990-0485 |
| A15CR5-CR16 | 1990-0487 | 7 | 12 | LED-LAMP LUM-INT-2MCD BVR=5V | 29460 | 1990-0487 |
| A15J1 | 1251-4429 | 9 | 1 | CONN-POST TYPE .100-PIN-SPCG 20-CONT | 76381 | 3492-1002 |
| A15J2 | 1251-5041 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 5-CONT | 28480 | 1251-5041 |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|-----------------------------|
| A15R1 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A15R2 | 0683-1315 | 0 | 1 | RESISTOR 130 5% .25W CF TC=0-400 | 77902 | R-25J |
| A15R3-R6 | 0683-3915 | 0 | 4 | RESISTOR 390 5% .25W CF TC=0-400 | 77902 | R-25J |
| A15RP1-RP2 | 1810-0279 | 5 | 2 | NETWORK-RES 10-SIP 4.7K OHM X 9 | 91637 | CSC10A01-472G/MSP10A01-472G |
| A15RP3-RP4 | 1810-0271 | 7 | 2 | NETWORK-RES 10-SIP 200.0 OHM X 9 | 91637 | CSC10A01-201G/MSP10A01-201G |
| A15RPG | 5061-8008 | 9 | 1 | RPG CABLE ASSEMBLY | 28480 | 5061-8008 |
| A15SW1-SW52 | 5060-9436 | 7 | 52 | SW.-PB BILL. WEST | 28480 | 5060-9436 |
| A15TP1-TP2 | 1251-0600 | 0 | 2 | CONNECTOR-SGL CONT PIN 1,14-MM-BSC-SZ SQ | 27264 | 18-06-0034 |
| A15U1-U2 | 1820-2024 | 3 | 2 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A15U3 | 1820-1208 | 3 | 1 | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN53515N |
| A15U4 | 1820-1997 | 7 | 3 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 27014 | GDEA105 |
| A15U5 | 1820-1194 | 6 | 1 | IC CNTR TTL LS BIN UP/DOWN SYNCHRO | 01295 | SN53527N |
| A15U8 | 1820-1112 | 8 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A15U9 | 1820-1197 | 9 | 1 | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN53504N |
| A15U9-U10 | 1820-1997 | 7 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 27014 | GDEA105 |
| A16 | 03577-66516 | 9 | 1 | PC BOARD ASSY HPIB | 28480 | 03577-66516 |
| A16C1 | 0160-4571 | 8 | 9 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A16C2 | 0180-1746 | 5 | 2 | CAPACITOR-FXD .15UF+-10% 20VDC TA | 13806 | 150D156X9020B2-DYS |
| A16C3 | 0160-3947 | 9 | 5 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A16C4-C6 | 0160-6516 | 6 | 22 | C.F. .022UF 20% 100V CERMLR | 28480 | RPE121-978X7R223M100V |
| A16C8 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A16C9 | 0160-6519 | 8 | 1 | C-F 470PF 20% 100V CERMLR | 28480 | RPE121-978X7R471M100V |
| A16C10-C12 | 0160-6516 | 5 | 5 | C-F .022UF 20% 100V CERMLR | 28480 | RPE121-978X7R223M100V |
| A16C13 | 0180-1746 | 5 | 5 | CAPACITOR-FXD .15UF+-10% 20VDC TA | 13806 | 150D156X9020B2-DYS |
| A16C14 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A16C15 | 0160-3947 | 9 | 9 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A16C16-C23 | 0160-6516 | 5 | 8 | C-F .022UF 20% 100V CERMLR | 28480 | RPE121-978X7R223M100V |
| A16C24-C25 | 0160-4571 | 8 | 5 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A16C26-C29 | 0160-6516 | 5 | 8 | C-F .022UF 20% 100V CERMLR | 28480 | RPE121-978X7R223M100V |
| A16C30 | 0160-4571 | 8 | 5 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A16C31 | 0160-3947 | 9 | 9 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A16C32 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A16C33-C36 | 0160-6516 | 5 | 5 | C-F .022UF 20% 100V CERMLR | 28480 | RPE121-978X7R223M100V |
| A16C37-C38 | 0160-4571 | 8 | 8 | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A16C39-C40 | 0160-3947 | 9 | 9 | CAPACITOR-FXD .01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A16C41 | 0160-6507 | 4 | 1 | C-F 1000PF 20% 100V CERMLR | 28480 | RPE121-978X7R102M100V |
| A16CR1-CR2 | 1990-1122 | 9 | 1 | OPT LED LMP G GP LMP1503 TT1H | 28480 | 1990-1122 |
| A16E1 | 03577-04114 | 3 | 1 | SHTF COVER PLATE-HPIB | 28480 | 03577-04114 |
| A16EP1-EP2 | 1480-0116 | 8 | 2 | PIN-GRV .062-IN-DIA .25-IN-LG STL | 73957 | GP24-063 X 250-17 |
| A16J1 | 1251-8517 | 4 | 1 | CONN-RECT MICORBN 24-CKT 24-CONT | 00779 | 554194-2 |
| A16J3 | 1251-5202 | 8 | 1 | CONN-POST TYPE .125-PIN-SPOG 5-CONT | 28480 | 1251-5202 |
| A16L1-L2 | 9100-1791 | 1 | 1 | CORE-FERRITE CHOKE-WIDEBAND;IMP>360 | 02114 | VK200-18/4B |
| A16R1 | 0699-0083 | 8 | 3 | RESISTOR 1.96K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A16R2 | 0699-0094 | 9 | 3 | RESISTOR 2.15K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A16R3-R4 | 0683-4715 | 0 | 3 | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A16R5 | 0699-0094 | 9 | 9 | RESISTOR 2.15K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A16R6-R7 | 0699-0083 | 8 | 8 | RESISTOR 1.96K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A16R8 | 0699-0084 | 9 | 9 | RESISTOR 2.15K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A16R9 | 0683-4725 | 2 | 2 | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A16R10 | 0683-1025 | 9 | 1 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A16R11-R12 | 0683-2215 | 1 | 2 | RESISTOR 220 5% .25W CF TC=0-400 | 77902 | R-25J |
| A16R20 | 0683-4715 | 0 | 0 | RESISTOR 470 5% .25W CF TC=0-400 | 77902 | R-25J |
| A16R21 | 0683-4725 | 2 | 2 | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A16RP1-RP6 | 1810-0722 | 3 | 5 | R-N 120 OHMx4 2% SFP | 91637 | CSC08A03-121G/MSP08A03-121G |
| A16TP1-TP5 | 1251-0600 | 0 | 5 | CONNECTOR-SGL CONT PIN 1,14-MM-BSC-SZ SQ | 27264 | 18-06-0034 |
| A16U1 | 1820-2024 | 3 | 4 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A16U2-U3 | 1820-1112 | 8 | 3 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A16U4 | 9100-4394 | 6 | 6 | XFM WIREWIND PLS DIP PKG | 97722 | EP8847 |
| A16U5-U6 | 1820-1440 | 5 | 7 | IC LCH TTL LS QUAD | 01295 | SN57201N |
| A16U7 | 9100-4394 | 6 | 6 | XFM WIREWIND PLS DIP PKG | 97722 | EP8847 |
| A16U8 | 1820-2024 | 3 | 3 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A16U9 | 1820-1112 | 8 | 8 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN53030N |
| A16U10 | 1820-1196 | 8 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG COM | 01295 | SN53529N |
| A16U11 | 1820-1794 | 2 | 2 | IC BFR TTL LS NON-INV OCTL | 27014 | SD32700 |
| A16U12 | 1820-1997 | 7 | 2 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 27014 | GDEA105 |
| A16U13 | 1820-2024 | 3 | 3 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|--------------------|----------|----------|--|--------------|----------------------|
| A16U14 | 9100-4394 | 6 | | XFM WIREWIND PLS DIP PKG | 97722 | EP8847 |
| A16U15-U16 | 1820-1440 | 5 | | IC LCH TTL LS QUAD | 01295 | SN57201N |
| A16U17 | 9100-4394 | 6 | | XFM WIREWIND PLS DIP PKG | 97722 | EP8847 |
| A16U18 | 1820-2024 | 3 | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN58948N |
| A16U19 | 1820-1432 | 5 | 1 | IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG | 01295 | SN57193N |
| A16U20 | 1820-1440 | 5 | | IC LCH TTL LS QUAD | 01295 | SN57201N |
| A16U21 | 1820-2546 | 6 | 1 | IC-GENERAL PURPOSE INTERFACE BUS ADAPTER | 01295 | MP9203NL |
| A16U22 | 1820-2463 | 8 | 1 | IC RCVR TTL LS BUS OCTL | 01295 | SN100105N |
| A16U23 | 1820-2465 | 0 | 1 | IC TRANSCEIVER TTL LS INSTR-BUS IEEE-488 | 01295 | SN100104N |
| A16U24 | 9100-4394 | 6 | | XFM WIREWIND PLS DIP PKG | 97722 | EP8847 |
| A16U25-U26 | 1820-1440 | 5 | | IC LCH TTL LS QUAD | 01295 | SN57201N |
| A16U27 | 9100-4394 | 6 | | XFM WIREWIND PLS DIP PKG | 97722 | EP8847 |
| A16U28 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 27014 | GDEA105 |
| A16U29 | 1820-1794 | 2 | | IC BFR TTL LS NON-INV OCTL | 27014 | SD32700 |
| A16U30 | 1990-0545 | 8 | 1 | OPTO-ISOLATOR LED-PDIO/XSTR IF=40MA-MAX | 26480 | 1990-0545 |
| A20 | 03577-66520 | 5 | 1 | PC BOARD ASSY MOTHER BD | 28480 | 03577-66520 |
| A20C1-C2 | 0160-6506 | 3 | 2 | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978Z5U104M50V |
| A20J1-J8 | 1251-1365 | 6 | 10 | CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS | 71785 | 252-22-30-301 |
| A20J11 | 1251-5160 | 7 | 2 | CONNECTOR-PC EDGE 36-CONT/ROW 2-ROWS | S01071 | ESM36DRXN |
| A20J12 | 1251-1365 | 6 | | CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS | 71785 | 252-22-30-301 |
| A20J13 | 1251-2915 | 4 | 1 | CONNECTOR-PC EDGE 25-CONT/ROW 2-ROWS | 71785 | 252-25-30-301 |
| A20J14 | 1251-5160 | 7 | | CONNECTOR-PC EDGE 36-CONT/ROW 2-ROWS | S01071 | ESM36DRXN |
| A20J15 | 1251-4834 | 8 | 1 | CONN-POST TYPE .100-PIN-SPCG 20-CONT | 76381 | 3492-2002 |
| A20J16 | 1251-1365 | 6 | | CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS | 71785 | 252-22-30-301 |
| A20J22 | 1251-4836 | 2 | 1 | CONN-POST TYPE 2.5-PIN-SPCG 2-CONT | 27264 | 22-12-1022 |
| A20J26 | 1251-4837 | 3 | 1 | CONN-POST TYPE 2.5-PIN-SPCG 4-CONT | 27264 | 22-12-1042 |
| A21 | 03577-66521 | 6 | 1 | PC BOARD ASSY PWR SUPPLY | 28480 | 03577-66521 |
| A21C1 | 0150-0012 | 3 | 1 | CAPACITOR-FXD .01UF +-20% 1KVDC CER | 59660 | 818-584 Z5U 103M |
| A21C2-C3 | 0180-3389 | 6 | 2 | CAPACITOR-FXD 1200UF+50-10% 250VDC AL | 13608 | 36DX122F250AE2A |
| A21C4-C5 | 0180-4835 | 7 | 4 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 04222 | SA305C104KAA |
| A21C6-C7 | 0180-4914 | 3 | 1 | CAPACITOR-FXD 470PF +-10% 600VDC POLYE | 84411 | 636.2 471 10% 600V |
| A21C8-C9 | 0180-0314 | 9 | 1 | CAPACITOR-FXD .01UF +-5% 400VDC POLYE | 84411 | 863UW |
| A21C11-C12 | 0180-4913 | 2 | 1 | CAPACITOR-FXD 1800PF +-10% 600VDC POLYE | 84411 | HEW-761 |
| A21C13 | 0180-2944 | 7 | 1 | CAPACITOR-FXD 15UF+-10% 20VDC TA | 13808 | |
| A21C14 | 0180-3560 | 3 | 1 | CAPACITOR-FXD 1UF +-2% 100VDC MET-POLYC | 84411 | HEW-249 |
| A21C16-C20 | 0180-4571 | 8 | 23 | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C21 | 0180-2414 | 4 | 1 | CAPACITOR-FXD .022UF +-5% 200VDC POLYE | 84411 | HEW-238M |
| A21C22 | 0180-0300 | 3 | 1 | CAPACITOR-FXD 2700PF +-10% 200VDC POLYE | 84411 | HEW-238M |
| A21C23 | 0180-0170 | 5 | 1 | CAPACITOR-FXD .22UF +-80-20% 50VDC CER | 13608 | 2C3725U224J050A |
| A21C24 | 0180-0180 | 7 | 1 | CAPACITOR-FXD .033UF +-5% 200VDC POLYE | 84411 | HEW-238M |
| A21C25 | 0180-3335 | 0 | 1 | CAPACITOR-FXD 470PF +-10% 100VDC CER | 13608 | 292CX7R471K100B |
| A21C26-C53 | 0180-4571 | 8 | | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C54 | 0180-0116 | 1 | 1 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 13606 | 150D695X9035B2-DYS |
| A21C55 | 0180-4801 | 1 | 1 | CAPACITOR-FXD 100PF +-5% 100VDC CER | 04222 | SA101A101JAA |
| A21C56 | 0180-4992 | 2 | 1 | CAPACITOR-FXD 1000PF +-2.5% 160VDC POLYP | 25068 | B33082-A1102-H |
| A21C57 | 0180-4571 | 8 | 1 | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C58 | 0180-0309 | 4 | 1 | CAPACITOR-FXD 4.7UF+-20% 10VDC TA | 13606 | 150D475X0010A2-DYS |
| A21C59 | 0180-0374 | 3 | 7 | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| A21C60 | 0180-0118 | 1 | 1 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 13808 | 150D695X9035B2-DYS |
| A21C61-C63 | 0180-4571 | 8 | 1 | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C70 | 0170-0040 | 9 | 1 | CAPACITOR-FXD .047UF +-10% 200VDC POLYE | 84411 | HEW-238M |
| A21C71 | 0180-3389 | 1 | 1 | CAPACITOR-FXD 3300UF+100-10% 20VDC AL | 13606 | 674D338H020HLSA |
| A21C72 | 0160-6510 | 9 | 1 | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A21C80 | 0160-4915 | 4 | 1 | CAPACITOR-FXD 3000PF +-5% 600VDC POLYE | 84411 | HEW-761 |
| A21C81-C86 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A21C87 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +-80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C88-C89 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A21C90-C91 | 0180-3386 | 9 | 4 | CAPACITOR-FXD 180UF+100-10% 60VDC AL | 13808 | 674D187H060HE5A |
| A21C92-C93 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| A21C94-C95 | 0180-3388 | 9 | | CAPACITOR-FXD 180UF+100-10% 60VDC AL | 13808 | 674D187H060HE5A |
| A21C96 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| A21C97 | 0180-2076 | 5 | 1 | CAPACITOR-FXD 68UF+50-10% 100VDC AL | 13606 | 674D688F100HE5A |
| A21C98 | 0180-2771 | 8 | 1 | CAPACITOR-FXD 110UF+100-20% 30VDC AL | 13606 | 672D153 |
| A21C99 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106X9020B2-DYS |
| A21C100 | 0180-3367 | 0 | 1 | CAPACITOR-FXD 470UF+100-10% 40VDC AL | 13606 | 674D477H040HE5A |
| A21C101 | 0160-6510 | 9 | | C-F .1UF 20% 50V CERMLR | 28480 | RPE121-978X7R104M50V |
| A21C102-C104 | 0180-4914 | 3 | | CAPACITOR-FXD 470PF +-10% 600VDC POLYE | 84411 | 636.2 471 10% 600V |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|---|-----------|----------------------|
| A21C105-C108 | 0160-8510 | 9 | | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A21C109 | 0160-0127 | 2 | 1 | CAPACITOR-FXD .1UF +-20% 25VDC CER | 13606 | 2C37Z5U105M050A |
| A21C110-C111 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C112 | 0160-0127 | 2 | | CAPACITOR-FXD .1UF +-20% 25VDC CER | 13606 | 2C37Z5U105M050A |
| A21C114-C116 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C117 | 0160-0210 | 6 | 1 | CAPACITOR-FXD 3.3UF+-20% 15VDC TA | 13606 | 150D335X0015A2-DYS |
| A21C120 | 0160-3078 | 0 | 1 | CAPACITOR-FXD 1000UF +50-10% 50VDC AL | 62643 | SL50VB1000 |
| A21C121 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C122 | 0180-2986 | 7 | 1 | CAPACITOR-FXD 330UF+-20% 50VDC AL | 62643 | SMC50VB331M12X20 |
| A21C123 | 0160-4571 | 8 | | CAPACITOR-FXD .1UF +80-20% 50VDC CER | 04222 | SA105E104ZAA |
| A21C124-C125 | 0180-0374 | 3 | | CAPACITOR-FXD 10UF+-10% 20VDC TA | 13606 | 150D106YS020B2-DYS |
| A21CR2 | 1902-0945 | 7 | 2 | DIODE-ZNR 3V 5% DO-35 PD=4W TC=-.043% | 04713 | SZ30035-003 |
| A21CR3 | 1901-0050 | 3 | 22 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR5 | 1902-0945 | 7 | | DIODE-ZNR 3V 5% DO-35 PD=4W TC=-.043% | 04713 | SZ30035-003 |
| A21CR6 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR7 | 1906-0080 | 9 | 1 | DIODE-FW BRDG 600V 10A | 27777 | VJ647 |
| A21CR10 | 1902-0777 | 3 | 1 | DIODE-ZNR 1N625 6.2V 5% DO-7 PD=4W | 04713 | SZ14376RL |
| A21CR11 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR14 | 1990-1124 | 1 | 1 | OPT LED LMP Y AP LMP1401 TT1H | 28480 | 1990-1124 |
| A21CR17 | 1884-0317 | 7 | 1 | THY SCR | P01202 | C203YY |
| A21CR20 | 1902-0953 | 7 | 2 | DIODE-ZNR 6.2V 5% DO-35 PD=4W TC=-.053% | 04713 | SZ30035-11RL |
| A21CR21 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR22 | 1990-1124 | 1 | | OPT LED LMP Y AP LMP1401 TT1H | 28480 | 1990-1124 |
| A21CR23-CR26 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR30-CR31 | 1902-0950 | 4 | 2 | DIODE-ZNR 4.7V 5% DO-35 PD=4W TC=-.025% | 04713 | SZ30035-006 |
| A21CR33-CR36 | 1901-0026 | 3 | 4 | DIODE-PWR RECT 200V 750MA DO-29 | 04713 | SR1358-8BRL |
| A21CR40 | 1906-0276 | 7 | 1 | DIODE-CT-RECT 50V 80A | 27777 | VSK231 |
| A21CR41 | 1990-1122 | 9 | 1 | OPT LED LMP G GP LMP1503 TT1H | 28480 | 1990-1122 |
| A21CR42 | 1901-0673 | 6 | 1 | DIODE-PWR RECT 100V 5A 5US | T01118 | FDH 6308 |
| A21CR45-CR46 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR50 | 1906-0277 | 6 | 1 | DIODE-CT-RECT 300V 30A | 9N171 | UES2605 |
| A21CR52-CR53 | 1901-1108 | 4 | 1 | DIODE-SWITCHING 300V 3A 50NS | 9N171 | UES1305 |
| A21CR57-CR59 | 1901-0704 | 4 | 3 | DIODE-GEN PRP 1N4002 100V 1A UO-41 | P01202 | 1N4002 |
| A21CR60 | 1901-0049 | 0 | 1 | DIODE-PWR RECT 50V 750MA DO-29 | 04713 | SR1358-8B |
| A21CR61 | 1901-0673 | 6 | | DIODE-PWR RECT 100V 5A 5US | T01118 | |
| A21CR62 | 1990-1122 | 9 | | OPT LED LMP G GP LMP1503 TT1H | 28480 | 1990-1122 |
| A21CR63 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR64 | 1901-0673 | 6 | | DIODE-PWR RECT 100V 5A 5US | T01118 | |
| A21CR65 | 1990-1122 | 9 | | OPT LED LMP G GP LMP1503 TT1H | 28480 | 1990-1122 |
| A21CR70 | 1901-0669 | 0 | 1 | DIODE-PWR RECT 400V 1A 150NS | 14099 | SS2676 |
| A21CR71-CR72 | 1901-1112 | 0 | 1 | DIODE-SWITCHING 150V 2A 25NS | 25403 | BYV27-150 |
| A21CR73 | 1901-0669 | 0 | | DIODE-PWR RECT 400V 1A 150NS | 14099 | SS2676 |
| A21CR74-CR75 | 1901-1112 | 0 | | DIODE-SWITCHING 150V 2A 25NS | 25403 | BYV27-150 |
| A21CR76 | 1902-0522 | 6 | 1 | DIODE-ZNR 1N5340B 6V 5% PD=5W IR=1UA | 04713 | SZP40117 |
| A21CR81 | 1902-0958 | 2 | 1 | DIODE-ZNR 10V 5% DO-35 PD=4W TC=-.075% | 04713 | SZ30035-16RL |
| A21CR82 | 1902-0589 | 5 | 2 | DIODE-ZNR 10V 2% DO-35 PD=4W TC=-.066% | 04713 | SZ11651 |
| A21CR84 | 1990-1124 | 1 | | OPT LED LMP Y AP LMP1401 TT1H | 28480 | 1990-1124 |
| A21CR85 | 1884-0317 | 7 | | THY SCR | P01202 | C203YY |
| A21CR86-CR89 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR90 | 1902-0589 | 5 | | DIODE-ZNR 10V 2% DO-35 PD=4W TC=-.066% | 04713 | SZ11651 |
| A21CR91 | 1902-0953 | 7 | | DIODE-ZNR 6.2V 5% DO-35 PD=4W TC=-.053% | 04713 | SZ30035-11RL |
| A21CR92 | 1990-1124 | 1 | | OPT LED LMP Y AP LMP1401 TT1H | 28480 | 1990-1124 |
| A21CR93 | 1884-0317 | 7 | | THY SCR | P01202 | C203YY |
| A21CR94 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR95 | 1990-1123 | 0 | 1 | OPT LED LMP R AP LMP1301 TT1H | 28480 | 1990-1123 |
| A21CR96 | 1884-0317 | 7 | | THY SCR | P01202 | C203YY |
| A21CR97 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR98 | 1902-3160 | 4 | 1 | DIODE-ZNR 10V 2% DO-35 PD=4W TC=-.06% | 04713 | SZ30016-11B3 |
| A21CR100 | 1990-1123 | 0 | | OPT LED LMP R AP LMP1301 TT1H | 28480 | 1990-1123 |
| A21CR101 | 1884-0317 | 7 | | THY SCR | P01202 | C203YY |
| A21CR102 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR103 | 1990-1123 | 0 | | OPT LED LMP R AP LMP1301 TT1H | 28480 | 1990-1123 |
| A21CR104 | 1884-0317 | 7 | | THY SCR | P01202 | C203YY |
| A21CR105 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21CR106 | 1990-1123 | 0 | | OPT LED LMP R AP LMP1301 TT1H | 28480 | 1990-1123 |
| A21CR107 | 1884-0317 | 7 | | THY SCR | P01202 | C203YY |
| A21CR110-CR113 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 07263 | FDH 6308 |
| A21F3-F5 | 2110-0001 | 6 | 3 | FUSE 1A 250V NTD 1.25X.25 UL | 75915 | 312 001 |
| A21J1 | 1251-5862 | 7 | 1 | CONN-POST TYPE 2.5-PIN-SPOG 5-CONT | 27264 | 22-11-1051 |
| A21J2 | 1251-5862 | 6 | 1 | CONN-POST TYPE 2.5-PIN-SPOG 4-CONT | 27264 | 22-11-1041 |

See Introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|---|-----------|------------------|
| A21J3-J5 | 1251-6932 | 3 | 3 | CONN-POST TYPE 2.5-PIN-SPCG 3-CONT | 27264 | 22-11-1031 |
| A21J8 | 1251-6091 | 5 | 1 | CONN-POST TYPE 2.5-PIN-SPCG 2-CONT | 27264 | 22-11-1021 |
| A21J9 | 03577-61639 | 7 | 1 | CBL-ASM DSC MMSG/STP 085MM ML | 29480 | |
| A21J9 | 8150-2150 | 2 | 0 | WIRE 12AWG G 600V PVC 65X30 105C | J01037 | |
| A21J9 | 8150-2153 | 5 | 0 | WIRE 12AWG BK 800V PVC 65X30 105C | J01037 | |
| A21J10 | 1251-6310 | 1 | 1 | CONN-UTIL METMAT 6-CKT 6-CONT | 00779 | 207583-5 |
| A21L1 | 03577-60334 | 7 | 1 | IND TOROID SW 60UH 21A | 29480 | 03577-60334 |
| A21L2 | 03577-60338 | 1 | 1 | IND TOROID SW 200UH 5A | 29480 | 03577-60338 |
| A21L3 | 03577-60333 | 6 | 1 | IND TOROID SW 60UH 5A | 29480 | 03577-60333 |
| A21L4 | 03577-60337 | 0 | 1 | IND TOROID SW 200UH 2A | 29480 | 03577-60337 |
| A21L5 | 03577-60332 | 5 | 1 | IND POT CORE FIX 62UH 1.6A | 29480 | 03577-60332 |
| A21L6 | 03577-60336 | 9 | 1 | IND TOROID SW 2.5MH .6A | 29480 | 03577-60336 |
| A21L7-L8 | 03577-60335 | 8 | 2 | IND TOROID SW 500UH 1A | 29480 | 03577-60335 |
| A21MP21 | 2110-0643 | 4 | 3 | FUSEHOLDER-CLIP TYPE 15A 250 V | E01120 | FH-9000 |
| A21MP22 | 2110-0643 | 4 | 4 | FUSEHOLDER-CLIP TYPE 15A 250 V | E01120 | FH-9000 |
| A21MP23 | 2110-0643 | 4 | 1 | FUSEHOLDER-CLIP TYPE 15A 250 V | E01120 | FH-9000 |
| A21Q1-Q2 | 1855-0536 | 1 | 2 | TRANSISTOR MOSFET N-CHAN E-MODE TO-3 SI | 04713 | STM3007 |
| A21Q12 | 1853-0086 | 2 | 1 | TRANSISTOR PNP SI PD=310MW FT=40MHZ | 04713 | SPS3322 |
| A21Q13 | 1205-0250 | 9 | 1 | THERMAL LINK SGL TO-5/TO-38-CS | 05820 | 2604 TH SE |
| A21Q13 | 1854-0263 | 7 | 1 | TRANSISTOR NPN 2N3019 SI TO-39 PD=800MW | 04713 | ST1481 |
| A21Q14 | 1853-0320 | 9 | 1 | TRANSISTOR PNP 2N4032 SI TO-5 PD=800MW | 07263 | S4044 |
| A21Q15 | 1854-0210 | 6 | 1 | TRANSISTOR NPN 2N2222 SI TO-18 PD=500MW | 04713 | ST1289 |
| A21Q21 | 1853-0203 | 5 | 1 | TRANSISTOR PNP SI PD=360MW FT=700MHZ | 04713 | SS5651 |
| A21Q22 | 1854-0019 | 3 | 1 | TRANSISTOR NPN SI TO-18 PD=360MW | 07263 | S-6516 |
| A21Q35-Q38 | 1854-0019 | 3 | 3 | TRANSISTOR NPN SI TO-18 PD=360MW | 07263 | S-6516 |
| A21Q37 | 1853-0086 | 2 | 1 | TRANSISTOR PNP SI PD=310MW FT=40MHZ | 04713 | SPS3322 |
| A21Q38 | 1854-0087 | 5 | 1 | TRANSISTOR NPN SI PD=360MW FT=75MHZ | 13506 | T-1260 |
| A21R3 | 0699-1167 | 3 | 2 | RESISTOR-FUSE 18 OHM +/-1%; .5W AT 70 DEG | 91637 | CMF60-64 |
| A21R4 | 0683-2025 | 1 | 2 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R5 | 0699-1167 | 3 | 3 | RESISTOR-FUSE 18 OHM +/-1%; .5W AT 70 DEG | 91637 | CMF60-64 |
| A21R6 | 0683-2025 | 1 | 1 | RESISTOR 2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R7-R8 | 0699-3624 | 9 | 1 | RESISTOR 150 5% 2W MO TC=0+-200 | 102360 | GS-3 |
| A21R9-R10 | 0699-4725 | 8 | 1 | RESISTOR 4.7K 5% .5W CC TC=0+647 | 01121 | EB4725 |
| A21R12 | 0683-2725 | 6 | 5 | RESISTOR 2.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R13 | 0683-1025 | 9 | 3 | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R14 | 0757-0465 | 6 | 1 | RESISTOR 100K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R15 | 0757-0280 | 3 | 5 | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R16 | 0699-3558 | 8 | 1 | RESISTOR 4.02K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R17 | 0699-3382 | 6 | 1 | RESISTOR 5.49K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R18 | 0683-3035 | 5 | 10 | RESISTOR 30K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R19 | 0683-4725 | 2 | 4 | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R20 | 0683-1225 | 1 | 8 | RESISTOR 1.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R21 | 0683-7515 | 4 | 1 | RESISTOR 750 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R22 | 2100-3252 | 6 | 1 | RESISTOR-TRMR 5K 10% C TOP-ADJ 1-TRN | 32997 | 3386P-Y46-502 |
| A21R23 | 0683-1535 | 6 | 2 | RESISTOR 15K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R24 | 0683-4325 | 8 | 1 | RESISTOR 4.3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R25 | 0683-2035 | 3 | 2 | RESISTOR 20K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R26 | 0683-1235 | 3 | 1 | RESISTOR 12K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R27 | 0683-3025 | 3 | 2 | RESISTOR 3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R28 | 0683-1045 | 3 | 1 | RESISTOR 100K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R29-R30 | 0683-1335 | 4 | 3 | RESISTOR 13K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R31 | 0683-1035 | 1 | 8 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R32 | 0683-5635 | 5 | 1 | RESISTOR 56K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R33 | 0699-5439 | 8 | 2 | RESISTOR 1K .25% .125W F TC=0+-50 | 19701 | 5033R |
| A21R34 | 0699-0033 | 0 | 2 | RESISTOR 56.64K .25% .125W F TC=0+-50 | 19701 | 5033R |
| A21R35 | 0699-5439 | 8 | 1 | RESISTOR 1K .25% .125W F TC=0+-50 | 19701 | 5033R |
| A21R36 | 0699-0033 | 0 | 1 | RESISTOR 56.64K .25% .125W F TC=0+-50 | 19701 | 5033R |
| A21R37 | 0683-3625 | 9 | 8 | RESISTOR 3.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R38 | 0683-3035 | 5 | 1 | RESISTOR 30K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R39 | 0683-1225 | 1 | 1 | RESISTOR 1.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R40 | 0699-4499 | 8 | 2 | RESISTOR 54.9K 1% .125W F TC=0+-100 | 91637 | CMF-65-1, T-1 |
| A21R41 | 0699-3572 | 6 | 2 | RESISTOR 80.4K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R42 | 0683-1535 | 6 | 1 | RESISTOR 15K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R50 | 0757-0198 | 2 | 1 | RESISTOR 100 1% .5W F TC=0+-100 | 19701 | 5053R |
| A21R51 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R52 | 0683-3035 | 5 | 1 | RESISTOR 30K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R53 | 0757-0433 | 8 | 1 | RESISTOR 3.32K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R54 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R55 | 0683-4725 | 2 | 1 | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R56 | 0683-1325 | 2 | 1 | RESISTOR 1.3K 5% .25W CF TC=0-400 | 77902 | R-25J |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|---------------------------------------|-----------|------------------|
| A21R57 | 0698-3332 | 6 | 1 | RESISTOR 60.6 1% .5W F TC=0+-100 | 19701 | 5053R |
| A21R80-R81 | 0683-2725 | 8 | | RESISTOR 2.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R83 | 0683-6215 | 9 | 1 | RESISTOR 620 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R84 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R85 | 0683-2725 | 8 | | RESISTOR 2.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R86 | 0698-4482 | 9 | 1 | RESISTOR 17.4K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A21R87 | 0683-2725 | 8 | | RESISTOR 2.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R88 | 0683-5115 | 6 | 1 | RESISTOR 510 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R89 | 0683-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R90 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R91 | 0683-3025 | 3 | | RESISTOR 3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R92 | 0757-0403 | 2 | 1 | RESISTOR 121 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R93 | 0757-0317 | 7 | 1 | RESISTOR 1.33K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R94 | 0757-0282 | 5 | 2 | RESISTOR 221 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R95 | 0757-0431 | 6 | 1 | RESISTOR 2.43K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R96-R97 | 8159-0005 | 0 | 2 | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 20940 | 106 |
| A21R98-R101 | 0698-3615 | 8 | | RESISTOR 47 5% 2W MO TC=0+-200 | 102360 | GS-3 |
| A21R102 | 63312-80001 | 4 | 1 | R.F SENSING .005 | 20460 | 63312-80001 |
| A21R103 | 0766-0029 | 7 | 1 | RESISTOR 10 2% 3W MO TC=0+-250 | 24548 | FP-3 |
| A21R104 | 0683-2215 | 1 | 1 | RESISTOR 220 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R105 | 0698-3618 | 1 | 1 | RESISTOR 82 5% 2W MO TC=0+-200 | 102360 | GS-3 |
| A21R106-R107 | 0698-3618 | 1 | 1 | RESISTOR 82 5% 2W MO TC=0+-200 | 102360 | GS-3 |
| A21R108 | 0757-0444 | 1 | 2 | RESISTOR 12.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R109 | 0757-0429 | 2 | 1 | RESISTOR 1.62K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R110-R111 | 0698-3633 | 0 | 1 | RESISTOR 390 5% 2W MO TC=0+-200 | 102360 | GS-3 |
| A21R112 | 0812-0049 | 0 | 1 | RESISTOR 500 5% 2W PW TC=0+-20 | 91637 | RS-2B-136 |
| A21R114 | 0698-3633 | 0 | | RESISTOR 390 5% 2W MO TC=0+-200 | 102360 | GS-3 |
| A21R115 | 0698-1060 | 5 | 1 | RESISTOR .05 1% 3W MFS TC=0+-337 | 01686 | LO-3-0.05-1 |
| A21R116 | 0698-1185 | 1 | 1 | R.F .1 OHM 1% | 01686 | |
| A21R117 | 0698-3633 | 0 | | RESISTOR 390 5% 2W MO TC=0+-200 | 102360 | GS-3 |
| A21R118 | 0757-0440 | 7 | 1 | RESISTOR 7.5K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R119 | 0757-0427 | 0 | 1 | RESISTOR 1.5K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R120 | 0757-0282 | 5 | 1 | RESISTOR 221 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R121 | 0698-4432 | 9 | 1 | RESISTOR 2.1K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A21R122 | 2100-3211 | 7 | 1 | RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN | 32997 | 3386P-Y46-102 |
| A21R123 | 0757-0283 | 6 | 1 | RESISTOR 2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R124 | 2100-0568 | 1 | 1 | RESISTOR-TRMR 100 10% C TOP-ADJ 1-TRN | 32997 | 3386P-Y46-101 |
| A21R125 | 0757-0418 | 1 | 1 | RESISTOR 301 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R126 | 0764-0020 | 4 | 1 | RESISTOR 5.6K 5% 2W MO TC=0+-200 | 102360 | GS-3 |
| A21R128-R129 | 0686-7515 | 0 | 2 | RESISTOR 750 5% .5W CC TC=0+529 | 01121 | EB7515 |
| A21R130 | 0757-0424 | 7 | 4 | RESISTOR 1.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R131 | 0698-3162 | 0 | 1 | RESISTOR 46.4K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R132 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R133 | 0683-2035 | 3 | | RESISTOR 20K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R134 | 0683-1025 | 9 | | RESISTOR 1K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R135 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R136 | 0698-3450 | 9 | 1 | RESISTOR 42.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R137 | 0698-3228 | 9 | 1 | RESISTOR 49.9K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R138 | 0683-1335 | 4 | | RESISTOR 1.3K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R139 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R140 | 0683-3035 | 5 | | RESISTOR 30K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R141 | 0683-3625 | 9 | | RESISTOR 3.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R142 | 0683-1225 | 1 | | RESISTOR 1.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R143 | 0683-1035 | 1 | | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R144 | 0757-0424 | 7 | | RESISTOR 1.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R145 | 0757-0442 | 9 | 3 | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R146 | 0698-3279 | 0 | 3 | RESISTOR 4.99K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R147 | 0698-3480 | 3 | 2 | RESISTOR 442 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R150 | 0698-3572 | 6 | | RESISTOR 60.4K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R151 | 0757-0424 | 7 | | RESISTOR 1.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R152 | 0683-3625 | 9 | | RESISTOR 3.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R153-R154 | 0683-3035 | 5 | | RESISTOR 30K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R155 | 0683-3625 | 9 | | RESISTOR 3.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R156 | 0683-1225 | 1 | | RESISTOR 1.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R158 | 0698-4499 | 8 | | RESISTOR 54.9K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A21R159 | 0698-4503 | 5 | 1 | RESISTOR 68.5K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A21R160 | 0757-0424 | 7 | | RESISTOR 1.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R162 | 0698-3279 | 0 | | RESISTOR 4.99K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R163 | 0698-3480 | 3 | | RESISTOR 442 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R164 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|----------------------|
| A21R169 | 0698-3447 | 4 | 1 | RESISTOR 422 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R170 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R171 | 0698-4425 | 0 | 1 | RESISTOR 1.54K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A21R174 | 0698-3279 | 0 | | RESISTOR 4.99K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R175 | 0757-0451 | 0 | 1 | RESISTOR 24.3K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R176 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R177 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R179-R182 | 0693-3036 | 5 | | RESISTOR 30K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R183 | 0693-3625 | 9 | | RESISTOR 3.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R184 | 0693-1225 | 1 | | RESISTOR 1.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R193-R195 | 0693-3625 | 9 | | RESISTOR 3.6K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R196-R198 | 0693-1225 | 1 | | RESISTOR 1.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R202 | 0757-0456 | 5 | 1 | RESISTOR 43.2K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R203 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R204 | 0698-3152 | 8 | 1 | RESISTOR 3.48K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R205-R206 | 0693-4725 | 2 | | RESISTOR 4.7K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A21R207 | 0698-4472 | 7 | 1 | RESISTOR 7.68K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A21R208 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R209 | 0757-04 35 | 0 | 1 | RESISTOR 3.92K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21R210 | 0698-3518 | 0 | 1 | RESISTOR 7.32K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A21RT1 | 0837-0144 | 8 | 1 | THERMISTOR DISC 5-OHM TC=-3.3%/C-DEG | 15454 | 5DA5R0 |
| A21RT2-RT3 | 0837-0215 | 4 | 1 | THERMISTOR-SURGE PTCR USED AS SURGE | 15454 | SG-220S |
| A21S1 | 3103-0118 | 4 | 1 | SWITCH-THRM FXD +221F 15A OPN-CN-RISE | 14604 | 3450-83-130 |
| A21SG1 | 1970-0094 | 0 | 1 | TUBE-ELECTRON SURGE V PTCR | G01114 | CG2-250AL+-10% |
| A21T1 | 9100-4361 | 7 | 1 | TRANSFORMER-POWER PRI V:110/215 V;FOPR | 29460 | 9100-4361 |
| A21T2 | 9100-4348 | 0 | 1 | INDUCTOR-FIXED CURRENT SENSE INDUCTOR:L | 09161 | 51719 |
| A21T3 | 9100-4364 | 0 | 1 | TRANSFORMER-SWITCHING GATE DRIVE XFMR | 28480 | 9100-4364 |
| A21T4 | 9100-4350 | 6 | 1 | TRANSFORMER-POWER 115/230V 47.440HZ | 28480 | 9100-4350 |
| A21T5 | 9100-4370 | 8 | 1 | XFEM LAMINATE PWR | C01081 | CSI 6733 |
| A21TP1-TP33 | 1251-0800 | 0 | 33 | CONNECTOR-SGL CONT PIN 1.14-MM-BSC-SZ SQ | 27264 | 16-06-0034 |
| A21U1 | 1826-1116 | 4 | 1 | IC OP AMP GP QUAD 14-DIP-P PKG | 07933 | RC4156DB |
| A21U2 | 1826-0138 | 8 | 4 | IC COMPARATOR GP QUAD 14-DIP-P PKG | 27014 | SL24958 |
| A21U3 | 1820-1288 | 9 | 1 | IC DRVR TTL CLK TTL-TO-MOS 1-INP | 27014 | SD31013 |
| A21U4 | 1826-0138 | 8 | 1 | IC COMPARATOR GP QUAD 14-DIP-P PKG | 27014 | SL24958 |
| A21U5 | 1826-1040 | 3 | 1 | IC V RGLTR-SWG 4.8/5.15V 18-DIP-C PKG | 34333 | SG3526J |
| A21U6 | 1826-0412 | 1 | 2 | IC COMPARATOR PRON DUAL 8-DIP-P PKG | 27014 | SL33675 |
| A21U7 | 1826-0059 | 2 | 1 | IC OP AMP GP TO-98 PKG | 27014 | SL180702 |
| A21U8 | 1826-0138 | 8 | 1 | IC COMPARATOR GP QUAD 14-DIP-P PKG | 27014 | SL24958 |
| A21U10 | 1826-0677 | 0 | 1 | IC V RGLTR-ADJ-POS 1.2/32V TO-3 PKG | 27014 | SL39385 |
| A21U11 | 1813-0127 | 8 | 1 | IC V RGLTR-ADJ-NEG 2.23/24V TO-3 PKG | 07263 | SH1269/UA79HGKC |
| A21U12 | 1826-0144 | 6 | 1 | IC V RGLTR-FXD-POS 4.8/5.2V TO-220 PKG | 04713 | SC25171P1 |
| A21U13 | 1826-0393 | 7 | 1 | IC V RGLTR-ADJ-POS 1.2/37V TO-220 PKG | 27014 | SL33076 |
| A21U14 | 1826-0527 | 9 | 1 | IC V RGLTR-ADJ-NEG 1.2/37V TO-220 PKG | 27014 | SL35761 |
| A21U15 | 1826-0412 | 1 | 1 | IC COMPARATOR PRON DUAL 8-DIP-P PKG | 27014 | SL33675 |
| A21U17 | 1826-0138 | 8 | 1 | IC COMPARATOR GP QUAD 14-DIP-P PKG | 27014 | SL24958 |
| A21W1 | 1251-1836 | 4 | 6 | CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND | 71279 | 450-3398-01-03-00 |
| A21W1 | 1256-0224 | 8 | 2 | CON-JUMPER PROGRAMMING | 71279 | 461-2872-02-03-10 |
| A21W2 | 1251-1836 | 4 | 1 | CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND | 71279 | 450-3398-01-03-00 |
| A21W2 | 1256-0224 | 8 | 1 | CON-JUMPER PROGRAMMING | 71279 | 461-2872-02-03-10 |
| A25 | 03577-66525 | 0 | 1 | PC BOARD R.F. FILTER | 28480 | 03577-66525 |
| A31 | 03577-66531 | 8 | 1 | PC BOARD ASSY OSC | 28480 | 03577-66531 |
| A31C1 | 0180-1794 | 3 | 1 | CAPACITOR-FXD 22UF+-10% 35VDC TA | 13606 | 150D226X9035R2-DYS |
| A31C2 | 0180-3847 | 9 | 2 | CAPACITOR-FXD 01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A31C3-C4 | 0180-2222 | 2 | 2 | CAPACITOR-FXD 1500PF +-5% 300VDC MICA | 08553 | |
| A31C5 | 0180-3847 | 9 | 1 | CAPACITOR-FXD 01UF +100-0% 50VDC CER | 04222 | SA105C103KAA |
| A31C6 | 0180-6510 | 9 | 1 | C-F .1UF 20% 50V CERMLr | 28480 | RPE121-978X7R104M50V |
| A31CR1-CR2 | 1901-0040 | 1 | 2 | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 07263 | FDH1088 |
| A31J1 | 1250-1511 | 3 | 1 | CONNECTOR-RF SMB M PC 50-OHM | 98291 | 51-051-0289 |
| A31J2 | 1251-5971 | 8 | 1 | CONN-POST TYPE 2.5-PIN-SPCG 3-CONT | 27284 | 22-12-1032- |
| A31L1 | 9100-1818 | 1 | 1 | INDUCTOR RF-CH-MLD 5.6UH 10% | 99800 | 1537-30 |
| A31L2 | 9100-2486 | 3 | 1 | INDUCTOR RF-CH-MLD 330NH 5% .166DX.385LG | 24226 | 15M330J |
| A31L3 | 9140-0238 | 3 | 1 | INDUCTOR RF-CH-MLD 82UH 5% .166DX.385LG | 99800 | 1537-72 |
| A31Q1-Q2 | 1853-0020 | 4 | 1 | TRANSISTOR PNP SI PD=300MW FT=150MHZ | 04713 | SPS3609 |
| A31Q3-Q4 | 1855-0396 | 9 | 1 | TRANSISTOR J-FET 2N4392 N-CHAN D-MODE | 04713 | SFE1552 |
| A31R1 | 0757-0442 | 9 | 1 | RESISTOR 10K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A31R2 | 2100-3207 | 1 | 1 | RESISTOR-TRMR 5K 10% C SIDE-ADJ 1-TRN | 32997 | 3396X-Y46-502 |

See introduction to this section for ordering information
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|-----|------|--|-----------|------------------|
| A31R3 | 0683-2225 | 3 | 1 | RESISTOR 2.2K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A31R4-R6 | 0683-4705 | 8 | 3 | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A31R7 | 0690-3279 | 0 | 1 | RESISTOR 4.99K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A31R8 | 0757-0449 | 8 | 1 | RESISTOR 20K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A31R9 | 2100-3351 | 6 | 1 | RESISTOR-TRMR 500 10% C SIDE-ADJ 1-TRN | 32997 | 3386X-Y46-501 |
| A31R10 | 0698-4442 | 1 | 1 | RESISTOR 4.42K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A31R11 | 0698-4309 | 8 | 1 | RESISTOR 18.9K 1% .125W F TC=0+-100 | 19701 | SFR25H |
| A31R12 | 0683-1055 | 5 | 2 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| A31R13 | 0698-4438 | 5 | 1 | RESISTOR 3.09K 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A31R14 | 0683-4705 | 8 | 1 | RESISTOR 47 5% .25W CF TC=0-400 | 77902 | R-25J |
| A31R15-R18 | 0698-4453 | 4 | 2 | RESISTOR 402 1% .125W F TC=0+-100 | 91637 | CMF-55-1, T-1 |
| A31R17 | 0683-1055 | 5 | 1 | RESISTOR 1M 5% .25W CF TC=0-800 | 77902 | R-25J |
| A31R18 | 0683-1035 | 1 | 1 | RESISTOR 10K 5% .25W CF TC=0-400 | 77902 | R-25J |
| A31U1 | 0980-0465 | 7 | 1 | OSC 10.00 MHZ | 12020 | OSC 73-52 |
| A31U2 | 1826-0026 | 3 | 1 | IC COMPARATOR PRCN TO-99 PKG | 27014 | SL11782 |
| | 5040-7278 | 9 | 8 | MOLD KCAP EXT | 28480 | 5040-7278 |
| | 5041-0376 | 6 | 8 | MOLD KCAP-BLANK | 28480 | 5041-0376 |
| | 5041-0093 | 4 | 1 | MOLD KCAP-PLOT | 28480 | 5041-0093 |
| | 5041-0095 | 6 | 1 | MOLD KCAP-SAVE | 28480 | 5041-0095 |
| | 5041-0202 | 7 | 1 | MOLD KCAP ON/OFF | 28480 | 5041-0202 |
| | 5041-0309 | 5 | 1 | MOLD KCAP CAP PTY GRAY | 28480 | 5041-0309 |
| | 5041-0720 | 4 | 1 | MOLD KCAP INSTR PRESET | 28480 | 5041-0720 |
| | 5041-0726 | 0 | 1 | MOLD KCAP Q-LCL | 28480 | 5041-0726 |
| | 5041-0775 | 8 | 1 | MOLD KCAP RECALL | 28480 | 5041-0775 |
| | 5041-2894 | 7 | 1 | MOLD KCAP DISPLY FCTN | 28480 | 5041-2894 |
| | 5041-2895 | 8 | 1 | MOLD KCAP MEASR CAL | 28480 | 5041-2895 |
| | 5041-2896 | 9 | 1 | MOLD KCAP DEFINE MATH | 28480 | 5041-2896 |
| | 5041-2897 | 0 | 1 | MOLD KCAP MKR ARROW | 28480 | 5041-2897 |
| | 5041-2898 | 1 | 1 | MOLD KCAP SWEEP MODE | 28480 | 5041-2898 |
| | 5041-2899 | 2 | 1 | MOLD KCAP TRIG MODE | 28480 | 5041-2899 |
| | 5041-2900 | 6 | 1 | MOLD KCAP AVG | 28480 | 5041-2900 |
| | 5041-2901 | 7 | 1 | MOLD KCAP LENGTH | 28480 | 5041-2901 |
| | 5041-2902 | 8 | 1 | MOLD KCAP TRIG/RESET | 28480 | 5041-2902 |
| | 5041-2903 | 0 | 1 | MOLD KCAP STORE DATA | 28480 | 5041-2903 |
| | 5041-2904 | 0 | 1 | MOLD KCAP SPCL FCTN | 28480 | 5041-2904 |
| | 5041-2905 | 1 | 1 | MOLD KCAP TRACE I | 28480 | 5041-2905 |
| | 5041-2906 | 2 | 1 | MOLD KCAP TRACE II | 28480 | 5041-2906 |
| | 5041-2907 | 3 | 1 | MOLD KCAP SWEEP TYPE | 28480 | 5041-2907 |
| | 5041-2908 | 4 | 1 | MOLD KCAP ENTRY OFF | 28480 | 5041-2908 |
| | 5041-2909 | 5 | 1 | MOLD KCAP BACK SPACE | 28480 | 5041-2909 |
| | 5041-2910 | 8 | 1 | MOLD KCAP - | 28480 | 5041-2910 |
| | 5041-2911 | 9 | 1 | MOLD KCAP | 28480 | 5041-2911 |
| | 5041-2912 | 0 | 2 | MOLD KCAP ARROW UP/DN | 28480 | 5041-2912 |
| | 5041-2913 | 1 | 1 | MOLD KCAP 1 | 28480 | 5041-2913 |
| | 5041-2914 | 2 | 1 | MOLD KCAP 2 | 28480 | 5041-2914 |
| | 5041-2915 | 3 | 1 | MOLD KCAP 3 | 28480 | 5041-2915 |
| | 5041-2916 | 4 | 1 | MOLD KCAP 4 | 28480 | 5041-2916 |
| | 5041-2917 | 5 | 1 | MOLD KCAP 5 | 28480 | 5041-2917 |
| | 5041-2918 | 6 | 2 | MOLD KCAP 6 | 28480 | 5041-2918 |
| | 5041-2919 | 7 | 1 | MOLD KCAP 7 | 28480 | 5041-2919 |
| | 5041-2920 | 0 | 1 | MOLD KCAP 8 | 28480 | 5041-2920 |
| | 5041-2922 | 2 | 1 | MOLD KCAP 0 | 28480 | 5041-2922 |
| | 5041-2923 | 3 | 1 | MOLD KCAP INPUT | 28480 | 5041-2923 |
| | 5041-2924 | 4 | 1 | MOLD KCAP SCALE | 28480 | 5041-2924 |
| | 5041-2925 | 5 | 1 | MOLD KCAP MKR | 28480 | 5041-2925 |
| | 5041-2926 | 6 | 1 | MOLD KCAP SWEEP TIME | 28480 | 5041-2926 |
| | 5041-2927 | 7 | 1 | MOLD KCAP FREQ | 28480 | 5041-2927 |
| | 5041-2928 | 8 | 1 | MOLD KCAP AMPTD | 28480 | 5041-2928 |
| | 5041-2929 | 9 | 1 | MOLD KCAP RES BW | 28480 | 5041-2929 |
| | 5041-2930 | 2 | 1 | MOLD KCAP ATTEN | 28480 | 5041-2930 |
| | 0370-3033 | 0 | 1 | KNOB-BASE 1-1/2 JGK .25-IN-ID | 28480 | 0370-3033 |
| | 2110-0056 | 3 | 1 | FUSE 6A 250V NTD 1.25X.25 UL | 75915 | 312 006 |
| | 2110-0003 | 0 | 1 | FUSE 3A 250V NTD 1.25X.25 UL5 | 75915 | 312 003 |
| | 2110-0564 | 8 | 1 | FUSEHOLDER BODY 12A MAX FOR UL | H9027 | 031.1657 |
| | 2110-0565 | 9 | 1 | FUSEHOLDER CAP 12A MAX FOR UL | H9027 | 031.1666 |
| | 2110-0569 | 3 | 1 | FUSEHOLDER COMPONENT NUT; THREAD M12.7 | H8027 | 583.0016 |
| | 03577-04116 | 5 | 1 | SHTF GRD-FUSE HLDR PLCR | 26480 | 03577-04116 |
| | 3150-0218 | 4 | 1 | FILTER-AIR 32 STD MESH MET SCREEN | 28480 | LZ60 |
| | 3160-0408 | 5 | 1 | FAN-TBAX 90-CFM 19-28VDC | C02294 | 032274 |
| | 03582-04104 | 8 | 1 | SHTF GUARD-FAN SW SCREEN | 28480 | 03582-04104 |

See Introduction to this section for ordering information.
 * Indicates factory selected values

Table 5-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty. | Description | Mfr. Code | Mfr. Part Number |
|-----------------------|----------------|--------|------|--------------------------------------|-----------|------------------|
| | 03577-61608 | 0 | 1 | KEYBOARD CABLE 330MM GY | 28480 | |
| | 03577-61609 | 1 | 1 | OVEN CABLE 570MM ML | 28480 | |
| | 03577-61610 | 4 | 1 | FAN CABLE 475MM ML | 28480 | |
| | 03577-61611 | 5 | 1 | POP/TRIG CABLE 460MM ML | 28480 | |
| | 03577-61601 | 3 | 4 | CABLE ASSEMBLY FRONT PANEL 69MM | 98291 | |
| | 03577-61639 | 6 | 1 | CABLE ASSY 180MM ML | 28480 | |
| | 03577-61612 | 6 | 1 | 15V SUPPLY CABLE 400MM ML | 28480 | |
| | 03577-61615 | 9 | 1 | EXTERNAL TRIG CABLE 270MM WH | 28480 | |
| | 03577-61616 | 0 | 1 | PROBE POWER CABLE - SHORT 270MM ML | 28480 | |
| | 03577-61617 | 1 | 1 | PROBE POWER CABLE - MEDIUM 285MM ML | 28480 | |
| | 03577-61618 | 2 | 1 | PROBE POWER CABLE - LONG 315MM ML | 28480 | |
| | 5060-0487 | 6 | 3 | PLST CONNECTOR PROBE | 28480 | 5060-0467 |
| | 03577-61619 | 3 | 1 | TEST ST CONN CBL 48MM ML | 28460 | |
| | 1251-8628 | 8 | 1 | REAR PANEL CONNECTOR 4-PIN | 82389 | T84M |
| | 1345A # C16 | 6 | 1 | CRT MONITOR | 28480 | 1345A # C16 |
| | 03577-29301 | 2 | 1 | LENSE-CRT FILTER,SMOKED:3577A | 22670 | |
| | 03577-61603 | 6 | 1 | DISPLAY POWER CABLE 730MM ML | 28480 | |
| | 03577-61201 | 9 | 1 | SHTF BRKT-UPR DSPLY | 28480 | 03577-61201 |
| | 9135-0225 | 7 | 1 | LINE FILTER | 05245 | F3071E |
| | 03577-61614 | 8 | 1 | POWER SWITCH CABLE ASSEMBLY 750MM ML | 28480 | |
| | 3101-2749 | 7 | 1 | POWER SWITCH | 101021 | N30 |
| | 5061-8008 | 9 | 1 | RPG CABLE ASSEMBLY | 28480 | 5061-8008 |

See introduction to this section for ordering information
 * Indicates factory selected values

| Parts Common to All Cabinet Depths | | | Qty. | Part No. | Parts Common to All Cabinet Depths | | | Qty. | Part No. |
|------------------------------------|-----------------------------------|----|-------------|----------|------------------------------------|---|-----------|------|----------|
| 1. | Front Frame | 1 | 5021-5807 | 7. | Tilt Stand | 2 | 1460-1345 | | |
| | Screw, Front Frame | 13 | 0515-0657 | 8. | Front Cap, Strap Handle | 2 | 5041-6819 | | |
| | Screw, Attaches to CRT Bezel | 4 | 0515-0889 | 9. | Rear Cap, Strap Handle | 2 | 5041-6820 | | |
| 2. | Rear Frame | 1 | 5021-5808 | | Screw, Strap Handle | 4 | 0515-1132 | | |
| | Screw, Corner Struts/Front and | | | 11. | Rack Mt Flange with | | | | |
| | Rear Frames | 16 | 0515-1331 | | Front Handle | 2 | 5020-8876 | | |
| | Caution Label | 1 | 7121-2527 | 12. | Side Gusset† | 2 | 5001-0434 | | |
| 3. | Front Handle Assy | 2 | 5060-9901 | 13. | Side Trim, Front Frame w/o | | | | |
| 4. | Trim, Front Handle | 1 | 5020-8898 | | Front Handle | 2 | 5001-0441 | | |
| 5. | Top Trim, Front Frame | 1 | 5040-7202 | 14. | Rack Mt Flange w/o Front Handle | 2 | 5020-8864 | | |
| 6. | Foot | 4 | 5040-7201 | | | | | | |
| Parts Unique to Each Cabinet Depth | | | | Qty. | 23" | | | | |
| 15. | Corner Strut, w/Tapped Holes | 4 | 5020-8823 | | | | | | |
| 15a. | Corner Strut, w/o Tapped Holes | 4 | 5021-5838 | | | | | | |
| 16. | Top Cover | 1 | 5061-9436 | | | | | | |
| 17. | Bottom Cover | 1 | 5061-9448 | | | | | | |
| 17a. | Bottom Cover, Perf | 1 | 5060-9994 | | | | | | |
| 18. | Side Cover, w/Handle Recess | 2 | 5060-9889 | | | | | | |
| 18a. | Side Cover, Perf. w/Handle Recess | 2 | 5060-9948 | | | | | | |
| 19. | Strap Handle | 2 | 5060-9805 | | | | | | |
| Parts Unique to Each Instrument | | | | Qty. | | | | | |
| 20. | Front Dress Panel | 1 | 03577-04301 | | | | | | |
| 21. | Front Sub Panel | 1 | 03577-00202 | | | | | | |
| 22. | Rear Panel | 1 | 03577-00203 | | | | | | |

† Optional

Figure 5-1. Cabinet Parts, Exploded View

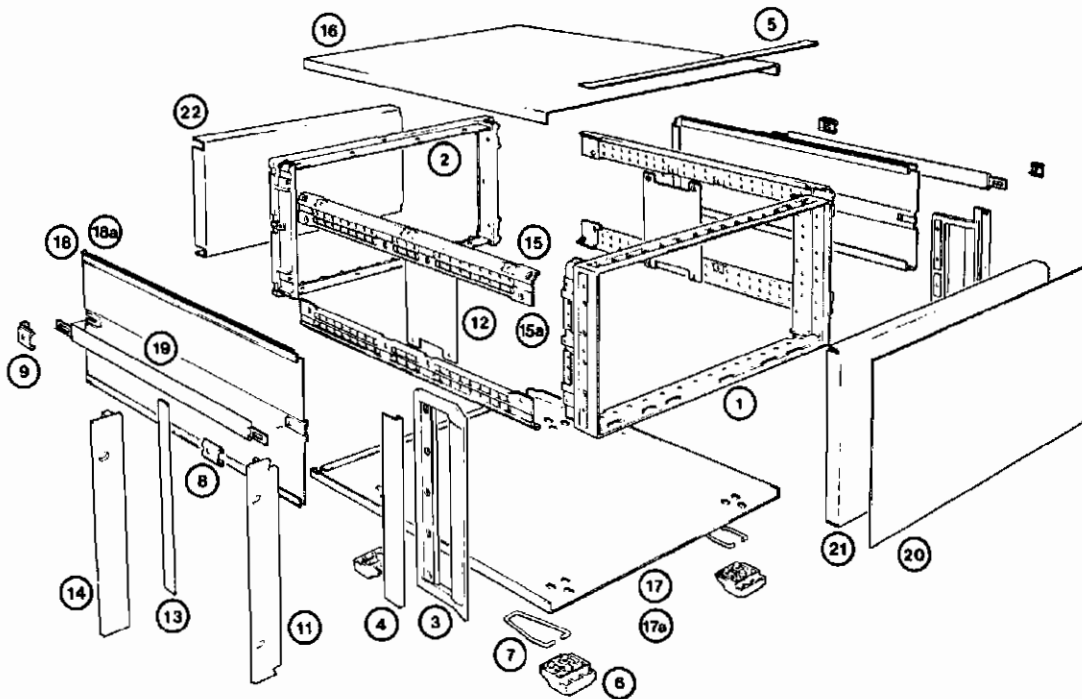


Figure 5-2. Cabinet Parts, Exploded View

SECTION VI MANUAL BACKDATING

Table of Contents

| | | |
|-----|----------------------------------|-----|
| 6-1 | Introduction | 6-1 |
| 6-2 | Manual Change Sheets | 6-2 |
| 6-3 | Manual Change Instructions | 6-2 |

SECTION VI MANUAL BACKDATING

6-1 INTRODUCTION

The revision of this manual applies directly to instruments in the serial number range indicated on the title page. Earlier versions of this instrument (serial numbers lower than shown on the title page) differ slightly in design and in some cases appearance. To adapt this manual to your instrument, refer to Table 6-1 and make all of the changes listed opposite your instrument serial number.

Table 6-1 Manual Changes.

| Instrument Serial Number | Make Manual Changes |
|-----------------------------|---------------------|
| 2333A10101 to 2333A10150 | A through W |
| 2333A10151 to 2333A10185 | B through W |
| 2333A10186 to 2333A10210 | C through W |
| 2333A10211 to 2333A10222 | D through W |
| 2333A10223 to 2333A10239 | E through W |
| 2333A10240 to 2333A10284 | F through W |
| 2333A10285 to 2333A10315 | G through W |
| 2333A10316 to 2333A10389 | H through W |
| 2333A10390 to 2333A10459 | I through W |
| 2333A10460 to 2333A11054 | J through W |
| 2333A11055 to 2333A11071 | K through W |
| 2333A11072 to 2333A11392 | L through W |

Table 6-1 Manual Changes.

| Instrument Serial Number | Make Manual Changes |
|---------------------------------|----------------------------|
| 2333A11393 to 2333A11420 | M through W |
| 2333A11421 to 2333A11490 | N through W |
| 2333A11491 to 2333A11701 | O through W |
| 2503A11702 to 2503A11931 | P through W |
| 2503A11932 to 2503A11970 | Q through W |
| 2503A11971 to 2503A12050 | R through W |
| 2503A12051 to 2503A12239 | S through W |
| 2503A12240 to 2503A12271 | T through W |
| 2503A12272 to 2503A12446 | U through W |
| 2503A12247 to 2702A12798 | V and W |
| 2702A12799 to 2702A12977 | W |

6-2 MANUAL CHANGE SHEETS

As Hewlett-Packard continues to improve the performance of the HP3577A, corrections and modifications to the manual may be required. Required changes are documented by a yellow "MANUAL CHANGES" supplement and/or revised pages. In order to keep the manual up to date, one should periodically request the most recent supplement which is available from the nearest Hewlett-Packard sales and service office. Any changes shown on the supplement sheet which apply to your instrument (identified by serial number), should be implemented into the manual.

6-3 MANUAL CHANGE INSTRUCTIONS

CHANGE A

Replaceable Parts List, Table 5-3:

Delete A5C77 and A5L77.

Delete A6CR34, A6R31, and A6R124.

Change the part numbers and values of A6R27 to 0698-4480, 15.8K; A6R32 to 0698-3558, 4.02K; A6R35 to 0683-3035, 30K; and A6R36 to 0757-0439, 6.81K.

Delete A11C44, A11R17-R22, and A11U61.

Add A11C35 and A11C36, 0160-3847, .01 μ F; A11L3, 9100-3560, 5.6 μ H; A11R16, 0683-1025, 1K; and A11R17, 0683-3025, 3K.

Delete A16U10 and A16U19.

Change the part number and value of A16U20 to 1820-1144, IC GATE TTL LS NOR QUAD 2-INP.

Page 8-47/48, Figure 8-8.

Below the 300.25 MHz VCO block delete the +12V3 supply (C77 and L77). Change the supplies in the 300.25 MHz buffer, mixer divider, and mixer buffer blocks from +12V3 to +12V2.

Page 8-55/56, Figure 8-9.


In the 10MHz Reference VCXO block, change the value of R27 to 7.8K and C8 to 320 pF.

Page 8-103/104, Figure 8-15.

Delete the following 4.7K pull-up resistors: R21 in the Read/Write Control block; R22 in the Timing block; and R17-R19 at the inputs to U23 in the Micro Program Sequencer block.

Page 8-105/106, Figure 8-16.

In the Dynamic Clock block, change the circuit feeding TP1 as shown in the following figure. Delete U61 information from the table on the apron page.

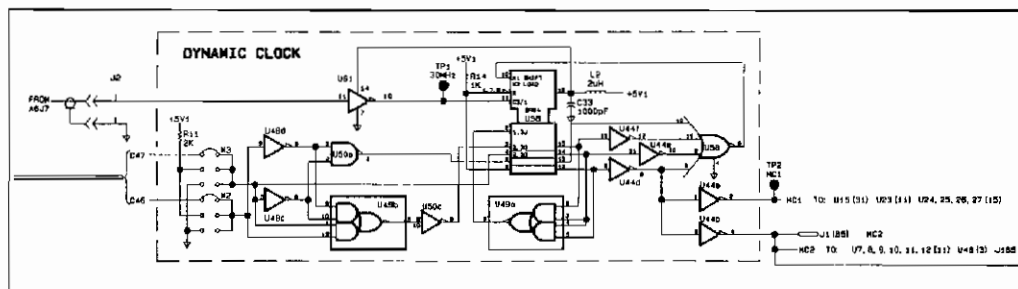

Page 8-147/148, Figure 8-22.

Replace the A16 schematic in the Service section with the A16 backdating schematic.

CHANGE B

Replaceable Parts List, Table 5-3:

Change the part number and value of A7C108 to 0180-2817, 47 μ F.

Page 8-69/8-70, A7 Component Locator.

Delete R46 from the component locator.

Page 8-71/8-72, Figure 8-11.

In the 5V regulator section, change the value of C108 to 47 μ F.

Page 8-73/8-74, Figure 8-12.

In the Fraction N Control block, add an inverter (U21c) in the FDAT(not) line to U19 pin 26 (EXT CLK).

CHANGE C

Replaceable Parts List, Table 5-3:

Change the part number of A1R44 to 2100-3356. The value does not change.

CHANGE D

Replaceable Parts List, Table 5-3:

Add A82C63 and A8C264, 0160-4380, 1 pF.

Delete A8R88.

Change the part numbers and values of A8C260 to 0160-3872, 2.2 pF and A8R72 to 0699-1188, 100 Ω .

Change the part numbers of the following resistors on the A8 board: R73 and R75 to 0699-1189; R74 to 0699-1190; R76 and R78 to 0699-1191; R77 to 0699-1192; R79, R81, R82, R84, R85, and R87 to 0699-1193; and R80, R83, and R86 to 0699-1194. The values for R73 through R87 remain the same, but the newer parts are less inductive than the old parts, which have TRW markings. If any of the old parts are changed, all 15 resistors must be replaced with the new parts and the capacitors C260-C264 changed to the new layout. The parts for R73-R78 must be installed with glass beads (4330-0496) on the leads.

Page 8-83/8-84, Figure 8-13.

In the output of the 15dB amplifier block, delete R88 and change the value of R72 to 50 Ω .

Page 8-85/8-86, Figure 8-14.

In the 60dB Attenuator block move the positive end of C260 to the connection between R74 and R74. Move the positive end of C261 to the connection between R77 and R78. Move the positive end of C262 to the connection between R80 and R81. Add C263 from the connection of R83 and R84 to ground. Add C264 from the connection of R86 and R87 to ground. The value of all five capacitors (C260-264) should be 1 pF.

CHANGE E

Replaceable Parts List, Figure 5-3:

Change the part number and description of A13U86 to 1820-1208, IC GATE TTL LS AND QUAD 2-INP.

Page 8-131/8-132, Figure 8-18.

At the right edge of the Fast Bus Interface block, change U86 to an AND gate and connect pin 1 to +5V1 instead of ground.

Page 8-133/8-134, Figure 8-19.

Delete the OR gate between U59 and the VPA input to U1. Pin 6 of U59 should connect directly to pin 21 of U1. In the Trigger block, change the output gate U86 to an AND gate and connect pin 4 to +5V1 instead of ground.

Page 8-135/8-136, Figure 8-20.

Below the Display Interface block, delete the connection from U59 pin 1 to INTO(not) U59(6). Connect U59 pin 1 to U2 pin 6. U52 pin 13 should connect to U51 pin 13 rather than pin 12.

CHANGE F

Replaceable Parts List, Table 5-3:

Change the parts numbers and values of A16C4-C7, C10-C12, C16-C23, C26-C29, and C33-36 to 0160-3879, .01 μ F.

Change the part numbers and values of A16R1, R6, and R7 to 0683-2225, 2.2K; and A16RP1-RP6 to 1810-0219, 220 ohm.

Delete A16C41 and A16U3.

CHANGE G

Page 8-151/8-152.

In the upper left corner of the circuit-side component locator change the color label of the WHT/BLU under "TO OVEN" to read WHT/BLK.

CHANGE H

Replaceable Parts List, Table 5-3:

Change the part number and value of A5C66 and A5C67 to 0180-0553, 0.1 μ F.

Delete A5C110 and A5C111.

Page 8-47/8-48, Figure 8-8

In the ± 12 V supplies, change the value of C66 and C67 to 0.1 μ F and delete C110 and C111.

CHANGE I

Replaceable Parts List, Table 5-3:

Change the part number and value of A6C69 to 0160-0576, 0.1 μ F.

Page 8-55/8-56, Figure 8-9

In the 300 MHz VCO, change C69 to 0.1 μ F, non-polarized.

CHANGE J

Replaceable Parts List, Table 5-3:

Cable W7 must be replaced with part number 03577-61607 to be compatible with the display used in these serial numbers. Rev D of the A13 board was also effected at this time.

A21CR17, CR85, CR93, CR96, CR101, CR104, and CR107 may be loaded with part number 1884-0052 (GE,C103YY,TO-18 package). This part is no longer available and has been replaced with 1884-0317 (GE,C203YY,TO-92 package). The parts are interchangeable but 1884-0317 must be turned 180° from the orientation of 1884-0052.

A5U42 may be loaded with part number 1820-1432. If this part is replaced with 1820-1420, C4 may need to be padded to meet the 300.25 MHz VCO specification. Padding parts are 0160-4887 (25 pF) or 0160-4774 (24 pF).

CHANGE K

Replaceable Parts List, Table 5-3, and page 8-141/8-142, Figure 8-21.

If A15 is Rev A, delete R3-R6

CHANGE L

Replaceable Parts List, Table 5-3:

The 5V supply cable (01377-61613) used in these instruments has been replaced by cables 03577-61638 and 03577-61639. The parts are not interchangeable. To repair Rev A or Rev B boards, refer to the Service Note for instructions and parts to be ordered.

CHANGE M

Replaceable Parts List, Table 5-3:

Delete A8C350, A8C351, A8C352, A8C353, A8C354, A8C355, A8L250 and A8L251

Page 8-83/8-84, Figure 8-13.

In the Mixer Buffer block, delete C350, C351, C352, C353, C354, C355, L250, and L251 .

CHANGE N

Replaceable Parts List, Table 5-3:

Delete A4J12, A4W7, A4L201, A4C203, A4C205, A4C202, A4R201, A4R202, A4R203, and A4R204. Change the part number and value of A4C167 to 0160-3558, 0.1 μF ; A4C53, A4C63, A4C73, and A4C93 to 0180-2794, 3.3 μF . Add A4R28, 0698-7205, 51.1 Ω .

Page 8-39/8-40, Figure 8-6.

In the 10 dB Buffer, delete R201, R202, and R203.

Page 8-41/8-42, Figure 8-7.

In the first 20 dB Amplifier, delete L201, C202, C203, C205 and R204. Between the 20 dB Amplifier and the Leveling Loop, delete J12 and W7. In the 20 dB Amplifiers at the output, change the value of C53, C73, and C93 to 3.3 μF . In the leveling loop, change the value of C167 to 0.1 μF and add resistor R28, 51.1 Ω from C167 to ground. In the second 20 dB Amplifier, change the value of C63 to 3.3 μF .

CHANGE O

Page 1-4, Paragraph 1-5, OPTIONS

Change the part numbers of the Front Handle Kit (Option 907) to 5061-0091, Rack Mounting Kit (Option 908) to 5061-0079, and Front Handle and Rack Mount Kit (Option 909) to 5061-0085.

Page 5-49/5-50, Figure 5-1.

Change the part numbers of the Front Frame to 5020-8807; Rear Frame to 5020-8808; Front Cap, Strap Handle to 5040-7219; Rear Cap, Strap Handle to 5040-7220; Corner Strut, w/o Tapped Holes to 5020-8838; Top Cover to 5060-9836; Bottom Cover to 5060-9848; Screw, Attaches to CRT Bezel to 0515-0218; Screw, Front Frame to 0515-0657; Screw, Corner Struts/Front and Rear Frames to 2510-0192; and Screw, Strap Handle to 2680-0172.

CHANGE P

Replaceable Parts List, Table 5-3:

Change the part number of A15RPG (also listed at the end of the table as RPG) to 03585-61630.

CHANGE Q

Replaceable Parts List, Table 5-3:

Delete A20C1 and A20C2.

CHANGE R

Replaceable Parts List, Table 5-3:

Change the part numbers and values of A1RP2 to 1810-0398, 22 k; A1R46 to 0683-4725, 4.7 k; A1R47 to 0683-3935, 39 k; A1R49 to 0683-4735, 47 k.
Delete A1R201 and A1R202.

Page 8-29/8-30, Figure 8-5.

Delete R201 and R202 from the Sample and Hold/Variable Gain Amplifier. Also change the value of RP2 to 22 k, R46 to 4.7 k, R47 to 39 k, and R49 to 47 k.

CHANGE S

Replaceable Parts List, Table 5-3:

Delete A4C207 and A4C208.

Page 8-41/8-42, Figure 8-7.

In the first 14 dB Amplifier, delete C207 and C208.

CHANGE T

Replaceable Parts List, Table 5-3:

Delete A6C128.

Page 8-55/8-56, Figure 8-9.

In the 10 MHz Reference VCXO, delete C128

CHANGE U

Replaceable Parts List, Table 5-3:

Change the part numbers and values of A6C24 to 0160-6525, 47 pF; A6R8 to 0698-3226, 6.49 k; A6R9 to 0698-3155, 4.6 k.

Page 8-55/8-56, Figure 8-9.

In the 10 MHz Reference VCXO, change the value of C24 to 47 pF, R8 to 6.49 k, and R9 to 4.6 k.

CHANGE V

Replaceable Parts List, Table 5-3:

Delete A25.

Page 5-51/5-52, Figure 5-3.

Delete Filter board and Filter to LO Cable. Change Ref to Filter Cable to Ref to LO Cable. Alter Figure 4-5 to reflect these changes.

Page 2-27/2-28, Figure 2-4.

At the A6J3 connector, change the TO location from A25J1 to A4J1.

Page 2-29/2-30, Figure 2-5.

Delete the A25 board and label the input of the A4J1 connector FROM A6J3.

CHANGE W

Replaceable Parts List, Table 5-3:

Change the part numbers and values of A4R13 and A4R15 to 0689-7223, 287 Ω ; A4R14 to 0699-2030, 17.8 Ω .

Page 8-39/8-40, Figure 8-6.

In the 1.7 dB pad, change the value of R13 and R15 to 287 Ω and R14 to 17.8 Ω .

SECTION VII CIRCUIT DESCRIPTIONS

Table of Contents

| | | |
|------|-------------------------------------|------|
| 7-1 | Introduction | 7-1 |
| 7-2 | A1 Input Board | 7-1 |
| 7-3 | A4 Local Oscillator Board | 7-3 |
| 7-4 | A5 250 kHz Offset Board | 7-4 |
| 7-5 | A6 Frequency Reference Board | 7-6 |
| 7-6 | A7 Synthesizer Board | 7-8 |
| 7-7 | A8 Output Board | 7-10 |
| 7-8 | A11 Fast Processor Board | 7-12 |
| 7-9 | A12 Trace Memory Board | 7-13 |
| 7-10 | A13 Main Processor-Controller Board | 7-14 |
| 7-11 | A15 Keyboard | 7-15 |
| 7-12 | A16 HP-IB Board | 7-16 |
| 7-13 | A20 Motherboard | 7-17 |
| 7-14 | A21 Power Supply Board | 7-17 |
| 7-15 | A31 Oven Board | 7-19 |
| 7-16 | 1345A Digital Display | 7-20 |

SECTION VII

CIRCUIT DESCRIPTIONS

7-1 INTRODUCTION

This section provides circuit descriptions to be used along with the schematics of Section VIII (Service). This information should be used after isolating faults to the functional block level. The descriptions here and the schematics in Section VIII provide information for fault isolation inside each functional block. The technician's expertise is then relied upon to isolate the faulty component(s) within the functional block.

If more general information is desired, the overall instrument operation description in Section II (Fault Isolation) gives a broader explanation of the instrument's operation.

7-2 A1 INPUT BOARD

Circuit Board Description

The input board (A1) is a tuned, low noise receiver. The input board is tuned to the source output (A8) frequency and tracks it as the source is swept. The receiver can be tuned from 5 Hz to 200 MHz with tuning bandwidth of 1 Hz to 1 kHz in decade values. This board processes the input signal using both analog and digital signal processing. The analog processing includes input impedance, input attenuation, and frequency conversion from the source frequency to a 10 kHz intermediate frequency (IF) with amplitude and phase information preserved. The digital signal processing includes sampling the 10 kHz IF at an 8 kHz rate, creating a 2 kHz digital IF. The real and imaginary phasor components are extracted using quadrature mixing via the digital filters. These filters also set the receiver tuning bandwidth.

50/1M Ohm Input Attenuator

Relay K1 selects the receiver input impedance. The relaxed state for the relay is the 1M ohm position. Relays K2 and K3 select the input attenuation, 0 or 20 dB. Each impedance path has its own 20 dB attenuator. The relaxed state for relays K2 and K3 are in the 0 dB attenuation position. Relays K2 and K3 are always switched together. The 1M ohm path also has a buffer amplifier which is used as an impedance converter. It converts from a 1M ohm to a 50 ohm environment where the rest of the instrument operates.

Buffer Amplifier

The unity gain buffer amplifier consists of a 12 dB amplifier and a 12 dB attenuator. Both the amplifier and the attenuator are used to increase isolation between the first mixer and the "outside world." The buffer amplifier consists of Q1, Q2, Q3, and Q29. U42 is used in a dc servo loop to compensate for mixer feedthrough.

First Mixer

The first mixer down converts the 5 Hz to 200 MHz source frequency to a 250 kHz IF using the 0.25 MHz to 200.25 MHz local oscillator signal from the local oscillator board (A4).

Overload Detection

Diodes CR11 and CR12 detect the positive and negative peaks of the input signal. If the input signal is greater than ± 1.1 V peak, the comparators will signal an overload. This sets the input impedance relay to the 1M ohm position and signals the main processor-controller board (A13) that an overload has occurred.

250 kHz Bandpass Filter

The 250 kHz bandpass filter rejects all higher frequency mixer products from the first mixer. This filter also provides a zero at 230 kHz. The zero is to cancel any signals at 230 kHz, which is the image frequency for the next IF (10 kHz). At the beginning of this section there is an IF buffer used (A1Q4). This buffer presents a good 50 ohm load to the mixer. A good load is required in order to obtain a flat frequency response at the output of the mixer.

Second Mixer

The second mixer down converts the 250 kHz first IF frequency to the 10 kHz second IF. The local oscillator signal (240 kHz) is obtained from the frequency reference board (A6). L14, L12, and C106 are used to drop the gain of the mixer at input frequencies other than 250 kHz (Note: the two inductors provide magnetic field cancellation to reduce receiver-to-receiver cross talk).

IF Amplifier

The second IF amplifier provides isolation between the second mixer and the 10 kHz bandpass filter. It also sets the overall receiver gain to unity for both the 50 ohm and 1M ohm impedance positions.

10 kHz Active Bandpass Filter

The 10 kHz active bandpass filter cancels all upper frequency second mixer products. It also provides a zero at 14 kHz to cancel the 254 kHz first mixer feedthrough when the source is programmed for 4 kHz.

Sample and Hold

The sample and hold circuit samples the 10 kHz IF at an 8 kHz rate. This sampling action effectively down converts the 10 kHz IF to a 2 kHz digital IF. The 2 kHz signal is a staircase output.

Variable Gain Amplifier

This section is a programmable 8-bit binary amplifier. The gain of the amplifier is variable between 1 and 128 in octave steps. The gain of the amplifier is set by the Analog to Digital converter. The A to D makes an 8-bit conversion with the amplifier set to a gain of 1.1. The conversion value is then used to program the amplifier for an A to D input voltage as close as possible to the A to D full scale input. This amplifier gives the A to D seven more bits of dynamic range.

Analog to Digital (A - D) Converter

The Analog to Digital converts the analog 2 kHz staircase signal to a 2 kHz digital IF. The A to D first sets the gain of the variable gain amplifier with an 8-bit conversion, and then makes a 12-bit conversion on the amplified signal. This 8-bit/12-bit cycle is repeated for every staircase on the digital 2 kHz IF signal.

Look Up Table Variable Gain Amplifier

This section provides optimum gain settings stored for a given 8-bit conversion in one-half of the ROM (A1U8). The other half of this section provides the number of zeros the digital filters should append to the 12-bit conversion result.

Digital Filters

The quadrature digital filters process the A to D output values by digitally mixing the values with the 2 kHz signal from the fast processor board (A11). The output is simultaneously mixed with two filters. One of the mixers is fed with the equivalent of a 2 kHz sine wave, the other with a cosine wave. The output of the filters is a digital representation of the "real" and "imaginary" components of the input. These values are then fed to the fast processor (A11) for storage and processing.

32 μ S Timer

The timer is used for timeouts in the operation of the algorithmic state machine.

Algorithmic State Machine

This is a ROM based state machine. U31 & U32 latch present state and qualifier information, which is used by the ROM (U3) to determine the next state. The multiplexer (U1) determines which qualifiers will be used in making a decision.

Look Up Table For Control

The ROM (U25) is used to decode state information into various control signals.

I/O Port

The bidirectional latch handshakes data to the fast processor board (A11) via the Fast Data Bus.

NOTE

There are three (3) identical input boards (A1). Receivers: R, A, B

7-3 A4 LOCAL OSCILLATOR BOARD**Circuit Board Description**

The local oscillator board (A4) is used to provide a signal (0.25 to 200.25 MHz) for mixing into the first IF conversion section of the input board (A1). This section has two input signals: a 300 MHz signal from the frequency reference board (A6) and a VCO signal (300.25 to 500.25 MHz) from the synthesizer board (A7).

10dB/20dB Buffer

These sections are used to provide amplification and isolation between the frequency reference (A6) and synthesizer board (A7) respectively.

300 MHz LPF

The 300 MHz low pass filters are used to reduce high frequency harmonic distortion.

Mixer

The mixer multiplies the signals from the frequency reference board (A6) and the synthesizer board (A7) to produce a signal ranging from 0.25 to 200.25 MHz.

200 MHz LPF

The 200 MHz low pass filters are used to remove all but the difference frequency produced by the mixer.

20dB/14dB Amplifiers

These sections are used to amplify the signal (0.25 to 200.25 MHz) by 48dB.

Leveling Loop

The leveling loop is used to maintain a constant amplitude level regardless of the incoming frequency. The signal (0.25 to 200.25 MHz) is first sent to a 10dB buffer amplifier via a power splitter. This signal is then peak detected. This sensed signal is then compared with a reference voltage by the servo amplifier. When an error signal has been sensed, the servo amplifier increases or decreases the current drive to the limiting mixer to maintain a constant output level.

20dB Amplifier/Power Splitter

These sections take the signal from the leveling loop and amplify it by 20dB. This signal is then distributed into three-ways by the power splitter.

20dB Amplifiers

The 20dB amplifiers provide amplification and isolation from the input boards (A1).

NOTE

There are three (3) identical input boards (A1). Receivers: R, A, B

7-4 A5 250 KHZ OFFSET BOARD**Circuit Board Description**

The 250 kHz offset board (A5) offsets the 300 MHz signal from the frequency reference board (A6) to 300.25 MHz. The 300.25 MHz signal converts the 300.25 to 500.25 MHz synthesizer board (A7) signal to the 5 Hz to 200 MHz output board (A8) frequency.

6 MHz Divider

The 6 MHz from the frequency reference board (A6) is divided-by 24 to yield the 250 kHz offset frequency. This 250 kHz is the reference frequency for this board. The INIT line is from the main processor-controller board (A13) to insure that the divide by 24 signal is properly synchronized.

Phase Detector/Loop Filter/Oscillator Unlock Detector

The phase detector compares the 250 kHz reference signal from the 6 MHz divider and the 250 kHz difference frequency from the mixer. The loop filter integrates the phase detector output to create a dc tuned signal. The output of the loop filter is monitored by the oscillator unlock detector. When the loop filter output is a negative voltage or is greater than +9 volts, the unlock detector trips and sets the oscillator unlock to an active low line signal. The main processor-controller board (A13) then displays an error message ("OSCILLATOR UNLOCKED, Assembly A5, A6 or A7").

250 kHz Filter

This low pass filter removes any 250 kHz harmonics feedthrough from the phase detector and loop filter. Any feedthrough shows up as residual FM on the 300.25 MHz output.

300.25 MHz VCO

The 300.25 MHz VCO produces a 300.25 MHz signal phase locked to the 250 kHz reference signal. Phase locking is accomplished with the phase detector and varactor diode tune voltage.

300.25 MHz Buffer

The 300.25 MHz buffer drives the output board (A8) with the 300.25 MHz phase locked signal. The 6 dB pad and 10 dB amplifier isolate the offset board (A5) from the output board (A8).

Mixer Driver

The mixer driver amplifies the 300.25 MHz signal to drive the LO port of the mixer. A strong LO signal is required for good mixer translation.

Mixer Buffer

The buffer filter and pad provide additional isolation between the 300.25 MHz VCO and mixer.

300 MHz Buffer

The 300 MHz buffer amplifies the 300 MHz frequency reference board (A6) signal and provides isolation between the frequency reference board and the 250 kHz offset board (A5).

Mixer

The mixer multiplies the 300.25 MHz VCO signal (LO port) and the frequency reference board (A6) 300 MHz signal (RF port). The 250 kHz difference signal (IF port) is used to phase lock the 300.25 MHz VCO to the 250 kHz reference signal described earlier.

250 kHz Amplifier

This section amplifies the 250 kHz difference signal from the mixer. The signal is then used by the phase detector to lock the 300.25 MHz VCO to the 250 kHz reference.

7-5 A6 FREQUENCY REFERENCE BOARD**Circuit Board Description**

The frequency reference board (A6) generates all of the reference frequencies used in the HP 3577A. It will lock to an external frequency reference of 10 MHz/N, where $N = 1, 2, 3, \dots$ and the external frequency reference is ≥ 100 kHz. This board is always connected to the oven board (A31). However, when an external frequency reference is connected, the oven board will then be turned off automatically so that the frequency reference board may lock to the external frequency reference. When the instrument is first turned on, the oven assembly is cold. During this time, the frequency reference board will free run on its own 10 MHz VCXO.

External Reference Path, Oven Path, and Differentiator

This section squares the signal from the external reference input or the oven (A31) input. This square wave is then fed to a differentiator which generates narrow pulses. This process is necessary in order for a 10 MHz harmonic to be generated when a sub-harmonic of 10 MHz is used as the external reference.

External Reference Detector

The square wave generated in the previous section is sensed by the external reference detector. The detector drives an LED on the frequency reference board (A6) to indicate that an external reference is present. The external reference detector also passes this information to the main processor-controller board (A13) via the EXT REF line which also drives an LED on the front panel. This same line is used to shut down the oven board (A31) output when an external reference signal is detected.

Phase Detector and Switchable Loop Filter/Reference Lock Detector

The phase detector is used to compare the external reference input signal or the oven (A31) input signal with the 10 MHz reference VCXO signal. The phase error signal generated by the phase detector is monitored by the reference lock detector. Whenever an ac signal is present at the phase detector output, this will indicate that the phase-locked loop is unlocked. During this time, the reference lock detector senses this condition and switches the switchable loop filter into a wide band configuration. The phase-locked loop captures the frequency reference by switching the loop filter to the wide band configuration. Once the loop is locked, the reference lock detector allows the switchable loop filter to switch back to a narrow band

configuration. Whenever the loop is unlocked (and consequently, whenever the loop is in the wideband configuration), the detector lights up the unlock LED on the frequency reference board (A6). The reference lock detector pass this information to the main processor-controller (A13) via the REF LOCK line and displays on the front panel "OSCILLATOR UNLOCKED, Assembly A5, A6 or A7."

10 MHz Reference VCXO

The output of the switchable loop filter is fed into the 10 MHz reference VCXO and then the output is buffered and fed back to the phase detector, thus closing the loop.

10 MHz Buffers

This section buffers the 10 MHz output from the phase-locked loop. This signal is then fed to the HP 3577A rear panel, "10 MHz OUT, 0 dBm" connector. This section also provides an additional separate 10 MHz signal for the HP-IB board (A16).

100 kHz Dividers

This section takes the output of the 10 MHz phase-locked loop and divides the frequency by 100 to generate the 100 kHz signal used in the synthesizer board (A7).

Phase Detector and Loop Filter/300 MHz Lock Detector

This section is very similar to the phase and lock detectors shown in the 10 MHz phase-locked loop section. The only difference is that the 300 MHz lock detector indicates whether or not the loop is locked (i.e., it does not switch any bandwidths in the loop filter).

300 MHz VCO

This section takes the output of the phase detector and uses it to control the frequency of the 300 MHz VCO. This frequency is then fed to the 250 kHz offset (A5) and output (A8) board.

Prescaler

The output of the 300 MHz VCO is divided down in two stages. The first stage divides the 300 MHz VCO signal down to 30 MHz. This signal is then sent to the fast processor board (A11). The second stage takes the 30 MHz signal output and divides it down to 10 MHz. This signal is then fed back to the phase detector to close the loop.

÷ 2.5, ÷ 5, ÷ 3, ÷ 2 Dividers

The output of the first stage of the prescaler (30 MHz) is divided down appropriately to generate the necessary reference frequencies used in the HP 3577A.

÷ 50 & ÷ 30 Dividers and Phase Initialization

The phase initialization circuitry operates in conjunction with the divide by 15 counter to produce an 8 kHz signal. This is done by loading a start count once when the HP 3577A is initialized and thereafter allowing the counter to operate normally. Phase may be offset in 30° increments by configuring a switch in the phase initialization circuitry to change the count that is loaded initially.

7-6 A7 SYNTHESIZER BOARD

Circuit Board Description

The synthesizer board (A7) generates a signal in the frequency range of 300.25 to 500.25 MHz with 0.001 Hz resolution. This board uses the Fractional-N synthesis technique which will not be discussed in this manual. For a full explanation of Fractional-N, refer to the following Hewlett-Packard Service Manuals: 3325A Synthesizer/Function Generator, 3336A/B/C Synthesizer/Level Generator, and 3586A/B/C Selective Level Meter. The only input to this board is the 100 kHz signal from the frequency reference board (A6). This signal is used as a frequency reference by the synthesizer for phase-locked loop capabilities. The output signal of this board is sent to the source output board (A8) and the local oscillator board (A4).

Fractional N Control

The data and control latches of this section provide the Fractional-N chip (U19) with the appropriate data bus commands from the main processor-controller (A13). The following signal names are used:

1. $\overline{\text{FDAT}}$ loads the data for the Fractional-N.
2. $\overline{\text{FINST}}$ is used as an instruction load for the Fractional-N.
3. $\overline{\text{FHOLD}}$ tells the Fractional-N to hold until trigger. This signal is used for synchronizing the start of a sweep.
4. $\overline{\text{STATWR}}$ is a main processor-controller status interrupt. This signal is used to synchronize the start of a sweep. This signal comes from the fast processor board (A11).
5. The 8 kHz signal is used for final start-of-sweep. This insures that the Fractional-N, input board (A1), and the fast processor board (A11) are synchronized properly so that the appropriate data is taken.

Fractional N

The Fractional-N chip (U19) is the "heart" of the frequency synthesis technique. This chip controls the divide by N counter and the API & Bias Current Sources. The $\overline{\text{FRACLMT}}$ signal is the sweep limit control which comes from the main processor controller board (A13). This signal is used to interface with a sweep input on the Fractional-N chip. The $\overline{\text{FRACFLG}}$ signal is a sweep limit flag which goes to the output (A8) and main processor-controller board (A13). This signal indicates that the sweep frequency has exceeded the value in the limit register in the Fractional-N chip.

\div N Counter

The \div N counter consists of the following sections:

- MSD \div 10 (Max)
- 2nd MSD \div 10 (Max)
- Least Significant Digit \div 5 (Max)
- 9's Complement of N Storage
- Preload One Shot
- PreLoad
- Pulse Remove Logic

- Pulse Remove Sync
- Dual Modulus Divider
- Chip Clock and Cycle Start
- VCO/N.F. Reclock

The purpose of the $\div N$ counter (where N is an integer from 300 to 500) is dividing the prescaled VCO (VCO/10) by some number (N) and producing the 100 kHz signal required by the phase detector.

API (Analog Phase Interpolation) & Bias Current Sources

The API & Bias Current Sources consist of the following sections:

- API & Bias Current Control
- Bias Current Source
- Current Sinks

These current sources discharge the integrator after it has been charged by the phase detector. By discharging (subtracting) current from the integrator, this insures that the dc control voltage from the sample and hold maintains a steady dc state.

Phase Detector

The phase detector compares the 100 kHz from the frequency reference (A6) with the $\div N$ counter output (VCO/N.F.). The output of the phase detector is a series of pulses of equal width. The width of the pulses depends on the phase difference detected between the 100 kHz reference and the VCO/N.F.

Integrator/Sample and Hold

The integrator and sample and hold convert the phase detector output pulses, with the help of the API correction currents, to the dc control voltage required to drive the 300.25 to 500.25 MHz VCO.

PLL Unlock Detector

This section determines if the phase-locked loop (PLL) is unlocked. When the detector senses an out-of-range dc control voltage, it turns on an internal LED and interrupts the main processor-controller board (A13). A message will then appear on the display. Refer to the Section II (Fault Isolation) for further details.

500 kHz Filter

This section reduces sidebands of 100 kHz and its harmonics induced by the sample and hold.

300.25 - 500.25 MHz VCO

The dc control voltage produced by the sample and hold controls the output frequency (300.25 to 500.25 MHz) of the VCO. The output frequency signal of this section is inversely proportional to the dc control voltage from the sample and hold. The output frequency of the VCO is distributed to the output board (A8), the local oscillator board (A4), and the prescaler section.

Prescaler

Before the output frequency of the VCO is sent to the $\div N$ counter, the VCO is first divided by 10 (prescaled).

+ 5 API Supply

This section provides the APIs with an isolated +5 voltage supply.

7-7 A8 OUTPUT BOARD**Circuit Board Description**

The output board provides a sinusoidal signal with a frequency range of 5 Hz to 200 MHz and a amplitude level range of +15 dBm to -49 dBm. This output signal is generated by mixing the 300.25 to 500.25 MHz signal of the synthesizer board (A7) with the 300.25 signal from the 250 kHz offset board (A5).

Mixer Buffer

The 10 dB amplifiers and 3 dB pad provide isolation between the synthesizer board (A7) and the mixer (A8U11).

Variable Limiter

This section varies the amplitude of the 300.25 MHz signal coming from the 250 kHz offset board (A5) depending on the level signal generated by the Amplitude Leveling section.

300 MHz Low Pass Filter

This section reduces high frequency harmonic distortion.

Mixer

The mixer multiplies the frequency signals from the 250 kHz offset board (A5) and the synthesizer board (A7) to produce a signal with a frequency range of 0 to 200 MHz.

200 MHz Low Pass Filters/20dB Amplifiers

The output signal from the mixer (U11) is first filtered to reduce harmonic distortion, amplified by 40dB, and then it is filtered again to reduce any harmonic distortion induced by the 20dB amplifiers.

15dB Amplifier

The output signal level of this section is maintained between 11.0 to 15.0 dBm, with 0.1 dB of resolution. At low frequencies (approximately 5 Hz and below), the DC Servo senses the dc component of that waveform. This dc signal is then sent to the Low Frequency Gain Error Correction section. Note that for frequencies above 5 Hz the DC Servo is no longer in the feedback loop.

Low Frequency Gain Error Correction

For frequencies below 100 kHz, negative feedback is used to stabilize the gain of the amplifiers. The feedback path comes from the output of the 15 dB Amplifier and through a 60 dB voltage divider formed by R191 and R193. U190 compares the feedback signal to the output signal from the 200 MHz Low Pass Filter. The difference from these two signals drives the 20 dB Amplifier. In addition, the signal from the DC Servo is added to the input of the 20 dB Amplifier via R192 and U190.

Amplitude Leveling

For frequencies below 100 kHz the main processor-controller board (A13) signals the Amplitude Leveling, via the Control Bus, to turn off. This is done by setting the voltage at U20(8) to zero, thereby forcing U20 to act like an voltage-follower. During this frequency range, the output of this section has a referenced dc voltage which is independent of the output frequency from the 15 dB Amplifier. This section obtains its dc reference from the Amplitude Reference.

For frequencies equal to and above 100 kHz, the dc reference from the Amplitude Reference is compared with the amplitude output level from the 15 dB Amplifier. This is done by peak detecting the amplitude output level from the 15 dB Amplifier and opening the switch Q180.

Amplitude Reference

The Amplitude Reference is controlled by the main processor-controller board (A13) via the Control Bus. This section provides the Amplitude Leveling with a dc referenced signal. This dc referenced signal, compared with the amplitude output level from the 15 dB Amplifier, provides the necessary information to maintain an amplitude output level between 11.0 to 15.0 dBm with 0.1 dB of resolution.

60 dB Step Attenuator

This section attenuates the amplitude output level from the 15 dB Amplifier (11.0 to 15.0 dBm with 0.1 dB of resolution) by 60 dB. The attenuator works in the following binary sequence:

| | |
|---------|------------------------|
| K1 : | 4 dB |
| K2 : | 8 dB |
| K3 : | 16 dB |
| K4&K5 : | 32 dB |
| K6 : | OVERVOLTAGE PROTECTION |

For example, if an output level between 11.0 and 15.0 (inclusive) is desired, the signal would go straight through without any attenuation. A chart is shown in Section VIII (Service) under the output board schematic demonstrating the operation of the relays pertaining to a given programmed output level. This section also provides overvoltage protection. When a voltage of 4 Vdc or greater is sensed at A8J3, the relay K6 will trip to disconnect the instrument from the "outside world." The 60 dB Step Attenuator receives its control data from the main processor-controller board (A13) via the Control Bus.

Private 5 Volt Supplies

This section provides the output board (A8) with ± 5 volts. Voltage regulators are used to monitor the ± 5 supplies, U5a & Q82 and U5b & Q81, respectively.

7-8 A11 FAST PROCESSOR BOARD**Circuit Board Description**

The fast processor board (A11) is a floating point processor. The main purpose of this board is to perform floating point and fast numerical calculations (number crunching). This is done by taking data from the input boards (A1; Receivers R, A, B) and controlling the sweep timing of the HP 3577A. This board contains its own firmware (Micro Program ROMs), Micro Program Sequencer, and a Bit/Slice ALU (Arithmetic Logic Unit). The ROMs provide microcodes which define the instruction steps for the fast processor board. The Micro Program Sequencer contains a microprogram controller which handles program flow. The Bit/Slice ALU provides 16-bits of data. This is where floating point and fast numerical calculations are performed.

Input Data Buffer

The buffer provides isolation which has data from the input (A1), trace memory (A12), and main processor-controller board to the Bit/Slice ALU.

Data Immediate

This section provides data to the Bit/Slice ALU when performing arithmetic constant calculations.

Dynamic Clock

This dynamic clock is used as the system clock for the fast processor. It is controlled by the microprogram controller. The frequency of the dynamic clock is a function of the instructions executed by the fast processor.

Bit/Slice ALU (Arithmetic Logic Unit)

This section is the "heart" of the floating point processor. The ALU provides a 16-bit word length. The functions that are performed in the ALU are:

- 16-Bit Adder/Subtractor
- 16-Bit x 16 Word RAM
- 16-Bit (Q) Register
- Shift Registers
- Multiplexers

Output Data Registers

These tri-state registers provide isolation between the Bit/Slice ALU and the Fast Data Bus.

Read/Write Control

This section is used to read and write data to the input (A1), trace memory (A12), and the main processor-controller board (A13). For example, the signal name BUSGNT (Bus Grant) is used to notify the main processor-controller (A13) that the Fast Data Bus is now available.

Micro Program ROM

This section provides the fast processor with a 2k x 48-bit program storage capabilities.

Micro Program Sequencer

The sequencer controls the program flow for the fast processor.

Timing

This section provides the sweep control counter and the digital filters on the input board (A1) with a 4 kHz and 2 kHz reference signal, respectively.

Sweep Control Counter

This section is used as a loadable counter. This counter controls the input board's (A1) sweep time and settling time.

7-9 A12 TRACE MEMORY BOARD**Circuit Board Description**

The trace memory board (A12) is used to provide non-volatile storage capabilities. At turn-on a ROM checksum and a marching ones for the RAM test is performed. A more exhaustive test can be summoned using the SPCL FCTN (SPECIAL FUNCTION) hardkey as shown in Section II (Fault Isolation), under Service Diagnostics.

Read/Write Memory (RAM)

Blocks 1 through 4 (U5, U12, U6, U13, respectively) are used to store data from the input receivers (A1; R, A, B) and as a scratch pad memory for the fast processor board (A11). The remaining blocks are used to store data in registers D1 through D4. For this reason, only the first four blocks are tested at turn-on.

Read Only Memory (ROM)

This section contains the coefficients corresponding to trigonometric and logarithmic functions for the fast processor board (A11).

Battery Backup

This section provides power backup for the RAMs. If the voltage at test point 1 (+VDD) drops below 3 volts, the battery (BT1) supplies power.

Chip Select and Read/Write Control (DECODING)

This section insures that the data is received and sent by the appropriate RAM/ROM chips.

7-10 A13 MAIN PROCESSOR-CONTROLLER BOARD**Circuit Board Description**

The central or main intelligence of the HP 3577A Network Analyzer is the main processor-controller board (A13). The "heart" of the main processor is a 16-bit microprocessor which runs at 8 MHz. This board contains its own firmware (ROM) and RAM. The main processor bus on this board provides all interfacing between the microprocessor and other portions of the instrument. This interfacing includes the I/O (Input/Output), Display Interface, and Fast Bus Interface. The I/O section includes the Keyboard Bus, HP-IB Bus, Control Bus, and Status Bus. The Display Interface section provides all display functions. The Fast Bus Interface ties the main processor-controller's communication port with that of the Fast Data Bus. The following boards communicate via the Fast Data Bus: input (A1), fast processor (A11), and trace memory (A12).

Interrupt Encoding

This section is used to interrupt the microprocessor when the HP-IB (A16) is requesting service or when the front panel INSTRUMENT PRESET key is pressed. This section is also used as a timer and fast processor (A11) interrupt.

Reset

This section ensures that the microprocessor (A13U1) begins its program at a initial (known) state.

Data/Address Bus Buffer

These 16-bit buffers provide the microprocessor (A13U1) isolation from the rest of the board.

Trigger

This section is used to trigger the sweep on the fast processor board (A11) whenever an external trigger signal is connected on the rear panel or whenever the user wants to trigger off the ac line. If neither of these two conditions are used, the fast processor board will then free run.

Address Decoding

The address decoding is used to read/write and send control data to various boards throughout the instrument.

Beeper

The beeper is used to inform the user that attention is required. For example, when an error message is displayed the beeper will alert the user that the main processor-controller (A13) has detected an unsatisfactory operating condition.

8 MHz Clock Phase-Locked Loop (PLL)

This section provides an 8 MHz clock signal necessary to run the microprocessor (A13U1). This is done by multiplying the 1 MHz signal, which comes from the frequency reference board (A6), by sixteen (16), and then dividing it by two to

produce 8 MHz. If the 1 MHz is not present, the 16 MHz PLL will free run in order to turn-on the microprocessor. An error message will then appear on the display.

Display Interface

This section is a 16-bit bidirectional data buffer. The signal name "DISCONNECT SENSE" is used to show the display's test pattern.

I/O

The I/O port contains the Control Bus, Keyboard Bus, HP-IB Bus, and Status Bus.

ROM/RAM

The ROM/RAM provide the main processor-controller (A13) with 16-bits of data.

Fast Bus Interface

This section provides the main processor-controller a means of communicating with the fast processor (A11), trace memory (A12), and input (A1; Receivers R,A,B) boards. In order for the main processor-controller to communicate with the trace memory and input boards, the fast processor must grant the bus. The latches and buffers used in this section are bidirectional.

Battery Back-up

This section provides power backup for the RAMs. If the voltage at test point 8 (+VDD) drops below 3 volts, the battery (BT1) located on the trace memory board (A12) supplies power.

7-11 A15 KEYBOARD

Circuit Board Description

The keyboard is responsible for two prime functions:

- To recognize the closure of switches.
- Light up the appropriate LEDs.

The keyboard is constantly being monitored by the main processor-controller (A13) via the keyboard data bus lines (KBO - KB7). If a key is stuck for a period longer than 10 seconds, an error message will then be displayed on the CRT.

Key Matrix

A 7 × 8 keyboard matrix is used to recognize the closure of switches. This information is then buffered and sent to the main processor-controller board (A13).

Read/Write Control

This section reads the data entered in the key matrix via the main processor-controller board (A13) and sends a command signal to LED annunciators.

LED Annunciators

This section drives the LEDs on the front panel.

RPG Control

The rotary pulse generator (RPG) control is used to enter data or use the marker function capabilities. This section is also buffered from the main processor-controller board (A13).

Instrument Preset

This section is used to set the instrument to its turn-on preset conditions.

7-12 A16 HP-IB BOARD**Circuit Board Description**

This board provides an isolated link between the instrument's main processor-controller (A13) and the "outside world." An HP-IB connector is provided at the rear panel of the instrument. This connector is used to connect the instrument to other instruments and controllers which have HP-IB (IEEE 488) capability.

This board also provides electrical isolation between the interface bus and analog sections of the instrument. Isolated power for the interface section of this board is supplied from a separate transformer winding (A21 Main Power Supply Board). All digital signals between the isolated and non-isolated sections of this board are coupled through pulse transformers. The buffer amplifiers drive the pulse transformers and latches which convert pulses to constant signal levels.

HP-IB Interface

The HP-IB interface section implements the IEEE 488 protocol.

Interrupt

This section couples the HP-IB interface circuit signal $\overline{\text{INT}}$ from the main processor bus. The interrupt circuit is activated by the HP-IB interface section whenever it requests main processor-controlled (A13) service.

Reset

This section uses the instrument reset line ($\overline{\text{INIT}}$) to initialize interaction of hardware.

Register Select

This section couples the register select signals from the HP-IB interface circuitry. This section provides the register select signals necessary to perform sequential data processing.

Read/Write

This section is used to instruct the HP-IB interface to accept incoming or outgoing data.

5 MHz Clock

This section provides a 5 MHz clock signal necessary to run the HP-IB interface circuitry.

Data Input/Output

Each of these sections handles the sequential data being sent from and to the main processor-controller board (A13).

7-13 A20 MOTHERBOARD**Circuit Board Description**

The motherboard does not have any active or passive electrical components. The only purpose of this board is to be a common focal point where signals are distributed throughout the instrument. The signal names that are distributed via the motherboard are listed in Section VIII (Service) under the mother assembly number.

7-14 A21 MAIN POWER SUPPLY BOARD**Circuit Board Description**

This board is an off line half-bridge switching power supply. The main power supply board provides regulated (+5 Vdc, ± 15 Vdc) and unregulated (+8 Vdc) voltages. It also has isolated supplies (HP-IB and Fan Output). MOS FET transistors provide the switching power supply capabilities. The "heart" of this switching power supply is the Pulsewidth Modulator (PWM). In addition, the power supply has the capabilities of sensing output current and overvoltage, monitoring the ac line voltage, and turning off due to excess temperature. For further details on switching power supplies, refer to the HP "Power Supplies, An Introduction" Manual (-hp- part number 5952-0158).

Line Filter

The line filter provides RFI isolation between the ac line voltage and the main power supply.

Turn On

This section is used to signal the Pulsewidth Modulator (PWM) when to turn on. For example, when the instrument has been turned off due to over or under ac line voltage. This section is also used to insure that the power supply turns on in an orderly manner.

Power On Preset ($\overline{\text{POP}}$)

After the output voltages are up and running, this section presents the micro-processor (A13U1). This section is also used to turn-on the battery back-up circuit on the trace memory (A12) and main processor-controller board (A13).

Bias Supply

The bias supply provides power for the control and protection circuitry. The signal name LINE SYNC synchronizes the fast processor's (A11) sweep triggering with the ac line.

FET Power

In this section the ac line is rectified and filtered to provide a high dc power supply. This high voltage supply is then switched across the primary of the transformer (T1) by Q1 and Q2.

FET Drive

The FET drive takes the signal from the Pulsewidth Modulator (PWM) and develops two anti-phase signals to drive the FETs (Q1 & Q2). These transistors are used to switch the dc high voltage created in the FET power section. This section also provides isolation between the PWM, which is connected to circuit ground, and FET power, which is connected to the ac line.

Pulsewidth Modulator (PWM)

The PWM is the "heart" of the switching power supply (A21). The outputs of the power supply are controlled by the PWM. The PWM takes the error signal from the Loop Shaping section and uses it to control the pulsewidth to the FET drive. The PWM contains its own internal oscillator, which has a frequency of 40 kHz and a +5 voltage reference. The PWM also contains a soft-start circuit to prevent large current surges at turn-on. In addition, the PWM can be turned off by any of the protection circuitry, including the Turn On section, when a fault is detected.

Primary Current Limit (PCL)

The PCL circuit senses the primary current via the transformer (T2) and latches off the Pulsewidth Modulator (PWM) when excess current is detected.

+5V Output

The signal from the FET Drive via the transformer (T1) is first rectified and then filtered to produce a +5 dc voltage. This section also contains a current sensing resistor for the +5V Current Limit (+5CL) section.

+5V Current Limit (+5CL)

This section senses the +5V current and latches off the Pulsewidth Modulator (PWM) when excess current is detected.

Loop Shaping (Loop S.)

The error signal from this section adjusts the pulsewidth of the Pulsewidth Modulator (PWM). This section has two inputs. One of the inputs is the dc loop, from the +5V Output, which provides good steady state voltage accuracy. The second input is the ac loop, also from the +5V Output, which helps improve transient responses.

+15V

The signal from the FET Drive via the transformer (T1) is first rectified and then filtered to produce a +15 dc voltage. The regulator (U10) used in this section provides an accurate, low output impedance, +15 voltage. This section also contains a current sensing resistor for the $\pm 15V$ Current Limit (LMT) section.

- 15V

The signal from the FET Drive via the transformer (T1) is first rectified and then filtered to produce a -15 dc voltage. The regulator (U11) used in this section provides an accurate, low output impedance, -15 voltage. This section also contains a current sensing resistor for the ± 15 V Current Limit (LMT) section.

Isolated Supply

This section provides a regulated dc supply for the HP-IB and an unregulated dc supply for the fan output. Note that these supplies are fused and are floating from chassis ground.

+8V

This section provides a fused, unregulated $+8$ dc supply for the synthesizer (A7) and frequency reference board (A6).

 ± 15 V Current Limit (LMT)

The ± 15 V Current LMT senses the current from the $+15$ V and -15 V supplies and latches off the Pulsewidth Modulator (PWM) when excess current is detected.

Overvoltage

This section senses the voltage from the ± 15 V and $+5$ V supplies and latches off the Pulsewidth Modulator (PWM) when overvoltage is detected.

Hi Temp

This section senses the temperature of CR40 located in the $+5$ V Output section and latches off the Pulsewidth Modulator (PWM) when excess temperature is detected.

Connector (Conn.)

This section distributes the power supplies throughout the entire instrument via the motherboard (A20). This section also provides probe power.

7-15 A31 OVEN BOARD**Circuit Board Description**

The oven board generates a stable 10 MHz frequency reference signal, that is controlled by the frequency reference board (A6). When an external reference signal is used on the HP 3577A, the frequency reference board forces the control line "SHUT-DOWN" to go low which turns off the 10 MHz oven output signal.

Threshold Detector

At turn-on before the oven assembly warms up, large heater currents are drawn through L1 by the oven assembly. Regardless of the signal on the control line "SHUTDOWN", U2 senses this current and shuts down the oven output signal at J1 by turning off the switchable filter. During this time, the HP 3577A uses its own VCXO as a frequency reference. After the oven assembly has warmed up (i.e., frequency output is stable), the heater current through L1 is reduced which allows U2

to turn-on the switchable filter and have a 10 MHz signal present at J1. This signal is dependent upon the control input at J2(1) (SHUTDOWN: TTL HIGH = ON, TTL LOW = OFF).

Oven Assembly

When the oven assembly has warmed up, it provides a stable 10 MHz frequency reference signal. The oven assembly takes approximately 10 minutes to warm up from room temperature.

Buffer

The buffer provides isolation between the oven assembly and the switchable filter. In the on state (U2 is high), CR2 acts as a open and allows Q3 and Q4 to be biased separately from Q1. In the off state (U2 is low), U2 effectively grounds the emitter of Q1 and the gates of Q3 & Q4.

Switchable Filter

In the on state, this section provides a 10 MHz low pass filter to reduce harmonic distortion. In the off state, this section provides additional isolation between the buffer and the oven output.

7-16 1345A DIGITAL DISPLAY

The HP 1345A is a 16-bit TTL data bus (positive logic) display. Its input power requirements are +15 Vdc, -15Vdc, and +5 Vdc. The Display Interface section, located on the main processor-controller board (A13), is used as a bidirectional data bus buffer. The signal name "DISCONNECT SENSE" is used to show the display's test pattern. When disconnected, via the SPCL FCTN (SPECIAL FUNCTION) hardkey, the display module turns on its own resident test pattern which test most of its display functions. This test pattern can also be shown by disconnecting the ribbon cable from the main processor-controller board to the display.

NOTE

In order to show the display's test pattern, the display needs to be biased by its proper input power requirements (± 15 Vdc and +5 Vdc). Refer to the 1345A Operating and Service Manual for further details.

SECTION VIII

SERVICE

Table of Contents

| | | |
|------|---|-------------|
| 8-1 | Introduction | 8-1 |
| 8-2 | Recommended Test Equipment | 8-1 |
| 8-3 | Logic Conventions | 8-1 |
| 8-4 | Logic Symbology | 8-1 |
| 8-5 | Safety Considerations | 8-7 |
| 8-6 | Schematic List | 8-8 |
| 8-7 | Service Group A1, Input Assembly | 8-9 |
| 8-8 | Service Group A4, Local Oscillator Assembly | 8-31 |
| 8-9 | Service Group A5, 250 kHz Offset Assembly | 8-43 |
| 8-10 | Service Group A6, Frequency Reference Assembly | 8-49 |
| 8-11 | Service Group A7, Synthesizer Assembly | 8-57 |
| 8-12 | Service Group A8, Output Assembly | 8-75 |
| 8-13 | Service Group A11, Fast Processor Assembly | 8-87 |
| 8-14 | Service Group A12, Trace Memory Assembly | 8-107/8-108 |
| 8-15 | Service Group A13, Main Processor-Controller Assembly | 8-111 |
| 8-16 | Service Group A15, Keyboard Assembly | 8-137/8-138 |
| 8-17 | Service Group A16, HP-IB Assembly | 8-143 |
| 8-18 | Service Group A20, Motherboard Assembly | 8-149/8-150 |
| 8-19 | Service Group A21, Main Power Supply Assembly | 8-155 |
| 8-20 | Service Group A31, Oven Assembly | 8-175 |
| 8-21 | HP 1345A Display Removal | 8-179 |

List of Tables

| | | |
|------|--|-------------|
| 8-1 | General Schematics Notes | 8-2 |
| 8-2 | Function Labels | 8-4 |
| 8-3 | Schematic List | 8-8 |
| 8-4 | Digital Filter Test Waveform Table | 8-12 |
| 8-5 | A1 Circuit Board, Troubleshooting Data | 8-17 |
| 8-6 | A1 Circuit Board, Signature Analysis Data | 8-23/8-24 |
| 8-7 | A4 Circuit Board, Troubleshooting Data | 8-33 |
| 8-8 | A5 Circuit Board, Troubleshooting Data | 8-44 |
| 8-9 | A6 Circuit Board, Troubleshooting Data | 8-50 |
| 8-10 | A7 Circuit Board, Troubleshooting Data | 8-62 |
| 8-11 | A8 Circuit Board, Troubleshooting Data | 8-76 |
| 8-12 | A11 Circuit Board, Troubleshooting Data | 8-89 |
| 8-13 | A11 Circuit Board, Signature Analysis Data (SA1) | 8-91 |
| 8-14 | A11 Circuit Board, Signature Analysis Data (SA2) | 8-99/8-100 |
| 8-15 | A13 Circuit Board, Troubleshooting Data | 8-116 |
| 8-16 | A13 Circuit Board, Signature Analysis Data (SA1) | 8-117 |
| 8-17 | A13 Circuit Board, Signature Analysis Data (SA2) | 8-123 |
| 8-18 | A16 Circuit Board, Troubleshooting Data | 8-145/8-146 |
| 8-19 | A20 Motherboard Signal Table | 8-153/8-154 |
| 8-20 | A21 Circuit Board, Troubleshooting Data | 8-168 |
| 8-21 | A31 Circuit Board, Troubleshooting Data | 8-176 |

List of Figures

| | | |
|------|---|-------------|
| 8-1 | Reference Designations | 8-2 |
| 8-2 | Logic Symbology | 8-5/8-6 |
| 8-3 | Dynamic Accuracy Troubleshooting Test Set Up | 8-14 |
| 8-4 | A1a Input Board, Analog Schematic | 8-27/8-28 |
| 8-5 | A1b Input Board, Digital Schematic | 8-29/8-30 |
| 8-6 | A4a Local Oscillator Board, Schematic | 8-39/8-40 |
| 8-7 | A4a Local Oscillator Board, Schematic | 8-41/8-42 |
| 8-8 | A5 250 kHz Offset Board, Schematic | 8-47/8-48 |
| 8-9 | A6 frequency Reference Board, Schematic | 8-55/8-56 |
| 8-10 | Synthesizer Timing Diagram | 8-67/8-68 |
| 8-11 | A7 Synthesizer Board, Analog Schematic | 8-71/8-72 |
| 8-12 | A7 Synthesizer Board, Digital Schematic | 8-73/8-74 |
| 8-13 | A8a Output Board, Schematic | 8-83/8-84 |
| 8-14 | A8b Output Board, Schematic | 8-85/8-86 |
| 8-15 | A11a Fast Processor Board, Schematic | 8-103/8-104 |
| 8-16 | A11b Fast Processor Board, Schematic | 8-105/8-106 |
| 8-17 | A12 Trace Memory Board, Schematic | 8-109/8-110 |
| 8-18 | A13a Main Processor-Controller Board, Schematic | 8-131/8-132 |
| 8-19 | A13b Main Processor-Controller Board, Schematic | 8-133/8-134 |
| 8-20 | A13c Main Processor-Controller Board, Schematic | 8-135/8-136 |
| 8-21 | A15 Keyboard, Schematic | 8-141/8-142 |
| 8-22 | A16 HP-IB Board, Schematic | 8-147/8-148 |
| 8-23 | A21 Main Power Supply Board, Schematic | 8-173/8-174 |
| 8-24 | A31 Oven Board, Schematic | 8-177/8-178 |
| 8-25 | HP 1345A Removal | 8-177/8-180 |

SECTION VIII SERVICE

8-1 INTRODUCTION

This section provides information for troubleshooting and repairing the HP 3577A Network Analyzer. Circuit descriptions are provided in Section VII to explain circuit function to the service technician, so troubleshooting time can be spent troubleshooting and not learning instrument operation.

Troubleshooting voltages and waveforms are provided on or next to the schematic diagram foldout. Parts locators are provided opposite the foldout service sheets.

This section is to be used after isolating the faulty functional block using the Fault Isolation Procedures in Section II. The functional blocks are described in Section VII (Circuit Descriptions). Fault isolation to the sub-block level is accomplished here. Each functional sub-block consists of a small number of components, and the technician's expertise is relied upon for isolating the faulty component.

8-2 RECOMMENDED TEST EQUIPMENT

The recommended test equipment for troubleshooting is listed in Table 1-2. Any item which meets or exceeds the critical requirements can be substituted for the model listed.

8-3 LOGIC CONVENTIONS

Positive logic convention is used in this manual unless otherwise noted. Positive logic conventions define a logic "1" or "High" as the more positive voltage and a logic "0" or "Low" as the more negative voltage.

8-4 LOGIC SYMBOLOGY

The logic symbology used in this manual is based on ANSI Y32.14-1973. The reference designations and general schematic notes are shown in Figure 8-1 and Table 8-1, respectively. Basic logic symbols and examples of symbols are shown in Figure 8-2. Table 8-2 provides an explanation of function labels used in the schematics. Refer to the Logic Symbology Training Manual (-hp- part number 5951-6116) for a full explanation of the logic symbology used in the schematics.

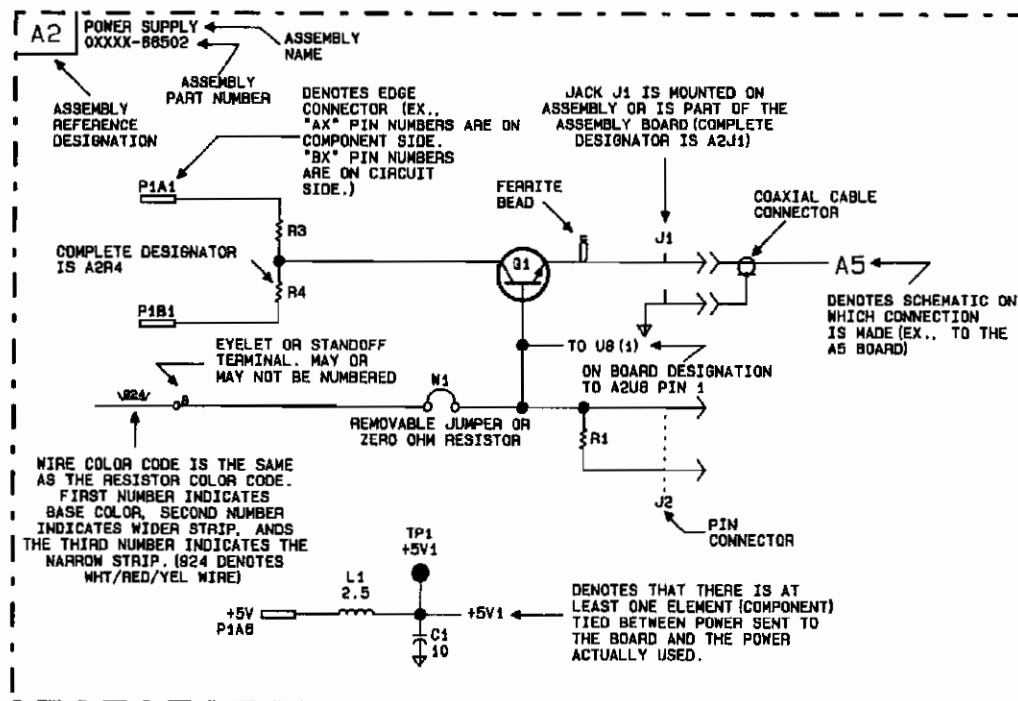


Figure 8-1. Reference Designations

Table 8-1. General Schematic Notes

| | |
|--|--|
| 1. PARTIAL REFERENCE DESIGNATIONS ARE SHOWN. PREFIX WITH ASSEMBLY DESIGNATION FOR COMPLETE DESIGNATION. | 7. SCREWDRIVER GROUND |
| 2. COMPONENT VALUES ARE SHOWN AS FOLLOWS UNLESS OTHERWISE NOTED. RESISTANCE IN OHMS CAPACITANCE IN MICROFARADS INDUCTANCE IN MILLIHENRYS | 8. DENOTES ASSEMBLY |
| 3. DENOTES EARTH GROUND USED FOR TERMINALS WITH NO LESS THAN A NO. 18 GAUGE WIRE CONNECTED BETWEEN TERMINAL AND EARTH GROUND TERMINAL OF AC POWER RECEPTACLE | 9. DENOTES MAIN SIGNAL PATH |
| 4. DENOTES FRAME GROUND. USED FOR TERMINALS WHICH ARE PERMANENTLY CONNECTED WITHIN APPROXIMATELY 0.1 OHM OF EARTH GROUND. | 10. DENOTES FEEDBACK PATH |
| 5. DENOTES GROUND ON PRINTED CIRCUIT ASSEMBLY (ELECTRICALLY CONNECTED TO FRAME GROUND). | 11. DENOTES FRONT PANEL MARKING. |
| 6. DENOTES ISOLATED (I) OR SIGNAL(S) CIRCUIT GROUND. | 12. DENOTES REAR PANEL MARKING. |
| | 13. DENOTES SCREWDRIVER ADJUST |
| | 14. * AVERAGE VALUE SHOWN. OPTIMUM VALUE SELECTED AT FACTORY. THE VALUE OF THESE COMPONENTS MAY VARY FROM ONE INSTRUMENT TO ANOTHER. |
| | 15. DENOTES RF SHIELD. |




Table 8-1. General Schematic Notes (Cont.)

16. 924 DENOTES WIRE COLOR. COLOR CODE SAME AS RESISTOR COLOR CODE. FIRST NUMBER IDENTIFIES BASE COLOR. SECOND NUMBER IDENTIFIES WIDER STRIP. THIRD NUMBER IDENTIFIES NARROWER STRIP (e.g. 924 = WHITE, RED, YELLOW).

17 ALL RELAYS ARE SHOWN DEENERGIZED. ALL ANALOG SWITCH IC'S ARE SHOWN NOT ACTIVE.

18. WAVEFORMS AND AC VOLTAGE MEASUREMENTS WERE MADE WITH RESPECT TO CHASSIS GROUND USING AN OSCILLOSCOPE WITH A 10:1 PROBE. THE VOLTAGE LEVELS SHOWN FOR THE WAVEFORMS ARE ACTUAL VOLTAGE LEVELS AND ARE NOT TO BE CONFUSED WITH OSCILLOSCOPE SETTING. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER. A VARIATION OF $\pm 10\%$ IN MEASUREMENTS SHOULD BE ALLOWED. ALL WAVEFORMS SHOWN WERE AC-COUPLED UNLESS OTHERWISE NOTED. DC VOLTAGE LEVELS OF WAVEFORM TEST POINTS ARE INDICATED SEPARATELY.

  19. DC VOLTAGE LEVELS WERE MEASURED WITH RESPECT TO CIRCUIT GROUND USING A DVM. THE VOLTAGE LEVELS SHOWN ARE NOMINAL AND MAY VARY FROM ONE INSTRUMENT TO ANOTHER DUE TO CHANGE IN TRANSISTOR CHARACTERISTICS. A VARIATION OF $\pm 10\%$ SHOULD BE ALLOWED.

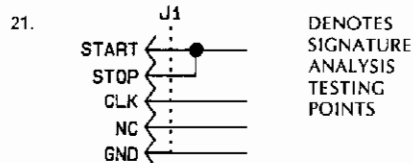

| A | B | C | Q |
|---|---|---|---|
| 0 | 0 | 0 | 0 |
| 0 | 0 | 1 | 0 |
| 0 | 1 | 0 | 0 |
| 0 | 1 | 1 | 0 |
| 1 | 0 | 0 | 0 |
| 1 | 0 | 1 | 0 |
| 1 | 1 | 0 | 0 |
| 1 | 1 | 1 | 1 |



| A | B | C | Q |
|---|---|---|---|
| 0 | 0 | 0 | 1 |
| 0 | 0 | 1 | 1 |
| 0 | 1 | 0 | 1 |
| 0 | 1 | 1 | 1 |
| 1 | 0 | 0 | 1 |
| 1 | 0 | 1 | 1 |
| 1 | 1 | 0 | 1 |
| 1 | 1 | 1 | 0 |




| A | B | C | Q |
|---|---|---|---|
| 0 | 0 | 0 | 1 |
| 0 | 0 | 1 | 0 |
| 0 | 1 | 0 | 0 |
| 0 | 1 | 1 | 0 |
| 1 | 0 | 0 | 0 |
| 1 | 0 | 1 | 0 |
| 1 | 1 | 0 | 0 |
| 1 | 1 | 1 | 0 |





| A | B | Q |
|---|---|---|
| 0 | 0 | 0 |
| 0 | 1 | 1 |
| 1 | 0 | 1 |
| 1 | 1 | 0 |

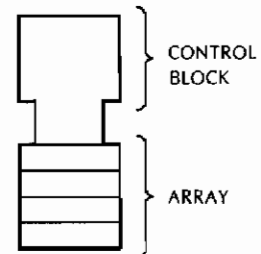CONTROL BLOCK IS USED WHEN AN ARRAY OF RELATED LOGIC ELEMENTS SHARE COMMON CONTROL LINES



LOGIC ELEMENTS WITH COMMON CONTROL BLOCK

Table 8-2. Function Labels

| | |
|---|-------------------------------------|
|  | AMPLIFIER/BUFFER |
| 1  | MONOSTABLE MULTIVIBRATOR (ONE-SHOT) |
| & | AND GATE |
| ≥ 1 | OR GATE |
| = 1 | EXCLUSIVE OR GATE |
| X \rightarrow Y | ENCODER, DECODER |
| XMAX \rightarrow Y | PRIORITY ENCODER |
| CNTR | COUNTER |
| DEMUX | DEMULTIPLEXER |
| FF | FLIP FLOP |
| RAM | RANDOM-ACCESS MEMORY |
| REG | REGISTER |
| ROM | READ-ONLY MEMORY |
| SAR | SUCCESSIVE APPROXIMATION REGISTER |
| SEL | SELECTOR |
| SREG | SHIFT REGISTER |
| TX/RX | TRANSMITTER/RECEIVER |

8-5 SAFETY CONSIDERATIONS

The HP 3577A is a Safety Class 1 instrument (provided with a protective earth terminal). The instrument and manuals should be reviewed for safety markings and instructions before operation. Refer to the Safety Symbol Table in the preface of this manual.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

WARNING

230 Vdc is present in the main power supply board (A21) even with the line switch in the off position and the power cord removed. Be extremely careful when working in the proximity of this area. This high voltage could cause serious personal injury if contacted. To remove this voltage, remove the mains power cord from the rear panel, remove the bottom cover and set the main power supply board (A21) jumpers W1 & W2 to the test position, using insulated pliers, to discharge the capacitors (A21C2 & A21C3) holding this voltage.

8-6 SCHEMATIC LIST

Table 8-3 shows the service groups by assembly numbers. Note that the service group number is the same as the assembly number for each of the circuit boards.

Table 8-3. Schematic List

| Assembly Number | Description | Page |
|-----------------|---------------------------|-------|
| A1a | Input, Analog | 8-27 |
| A1b | Input, Digital | 8-29 |
| A4a | Local Oscillator | 8-39 |
| A4b | Local Oscillator | 8-41 |
| A5 | 250 kHz Offset | 8-47 |
| A6 | Frequency Reference | 8-55 |
| A7a | Synthesizer, Analog | 8-71 |
| A7b | Synthesizer, Digital | 8-73 |
| A8a | Output | 8-83 |
| A8b | Output | 8-85 |
| A11a | Fast Processor | 8-103 |
| A11b | Fast Processor | 8-105 |
| A12 | Trace Memory | 8-109 |
| A13a | Main Processor-Controller | 8-131 |
| A13b | Main Processor-Controller | 8-133 |
| A13c | Main Processor-Controller | 8-135 |
| A15 | Keyboard | 8-141 |
| A16 | HP-IB | 8-147 |
| A20 | Motherboard | 8-153 |
| A21 | Main Power Supply | 8-173 |
| A31 | Oven | 8-177 |

8-7 SERVICE GROUP A1, INPUT ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the circuit descriptions of Section VII are understood.



Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.



Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on.

| | |
|------------------|---------|
| Sweep Type | CW |
| AMPTD | -10 dBm |
| FREQuency | 200 MHz |

All Oscilloscope waveforms are taken using 10:1 probe and a HP 1980B Oscilloscope. All Spectrum Analyzer waveforms derived from SMB connectors are taken through the 03577-84401 Service Kit BNC to SMB cable. All Spectrum Analyzer waveforms taken off component leads are taken through a 10041A 10:1 probe. This probe has 215 Ω of series resistance.

All waveforms in this section were taken with the Receiver under test connected to the 3577A source using a cable from the HP 11851A Cable Kit.

Troubleshooting Hints

1. Before troubleshooting this circuit board, be sure that the fault is occurring on this circuit board by checking the following inputs using the settings in Table 2-7 and Table 8-5.
 - a. A4J3,A4J4,A4J5 (depending on R,A, or B) L.O. Input
 - b. A1R10 240 kHz Second L.O. input.
 - c. A1TP10 8 kHz Third L.O. input.
 - d. A1U28 pin 12 2 MHz Reference input.
 - e. A1W4 2 kHz input.

2. Isolate the problem to either the digital or the analog circuitry by testing the signal at A1TP6 as described in step 6 of Table 8-5. If this test passes, then the analog circuitry is good, and the digital circuitry is bad. If the analog circuitry is bad, then half split the analog circuitry by testing the signal at A1TP4 as described in step 5 of Table 8-5. Then continue troubleshooting toward the bad signal. If the digital circuitry is indicated, follow the digital troubleshooting procedure following the troubleshooting hints.
3. SYMPTOM: Dynamic Linearity Performance Test fails.
 - a. Use the other channels of the 3577A by setting the 3577A to continuous wave (CW) mode and setting the output frequency to the IF frequency where testing is taking place. Follow the Dynamic Accuracy test procedure in this section.
4. SYMPTOM: Crosstalk Performance Test fails.
 - a. Board must be in cardnest and all receiver board screws in place.
 - b. The A1L12 and A1L14 inductors could be coupling from receiver board to receiver board. These components should suspect.
5. SYMPTOM: Receiver Noise Performance Test fails.
 - a. Check L.O. signals (all) for proper noise levels. DUT board must be in cardnest and all screws in place.
 - b. Check the + or - 13 V power supplies for correct voltage and ripple.
6. SYMPTOM: Receiver Level Flatness cannot be adjusted into specification.
 - a. Problem is in first mixer, L.O., input buffer, or impedance switching sub-blocks.
7. SYMPTOM: Receiver Phase Zero and Response out of specification.
 - a. Check Frequency Reference board counter preset switch for proper position if 100 kHz phase zero bad. The proper position will put the phase zero between ± 15 degrees.
 - b. Make sure L.O. output phase is good by observing a phase display when swapping the L.O. inputs to the A1 boards. If the display is constant then the L.O. is good. If the display changes, then L.O. is bad.
8. SYMPTOM: Receiver Sensitivity Performance Test fails.
 - a. Jumper A1TP6 to ground. This is the Analog/Digital halfsplit. If the receiver passes, then the Analog section is bad. If the receiver fails, then the digital section is bad.
 - b. If the analog circuit is suspect, jumper A1TP4 to ground. This should be used as an Input/10 kHz halfsplit.

Digital Filter Test

- a. Disconnect the main power cord from the rear panel and remove the top cover. Place the suspect A1 receiver board on the 03577-66542 extender board.
- b. Move the Digital Filter Test jumper W4 to the TEST position. Move the TEST jumper W2 to the TEST position.

- c. Press the hardkeys listed below on the left and select the softkey, or enter the data listed on the right.

```

TRACE 1
INPUT .....Suspect Channel
DISP FCTN .....Real
SCALE
  / Div .....100 mV
  Ref Pos .....60 %
  Ref Level .....0 V
TRACE 2
INPUT .....Suspect Channel
DISP FCTN .....Imag
SCALE
  / Div .....100 mV
  Ref Pos .....15 %
  Ref Level .....0 V
SPCL FCTN
Service Diag .....Settling Off
AMPTD .....-40 dBm

```

- d. Press the RES BW and SWP TIME hardkeys and select the values listed for each display shown in Table 8-4. The display is the digital filter step response. If any of these displays do not pass, then the digital filters or the algorithmic state machine are faulty. If both digital filters pass, then the Algorithmic State machine, I/O, and Look Up Tables are all good. If only one digital filter fails, then the failure is probably a bad filter. If both digital filters fail, then the problem is probably a state machine problem and the Signature Analysis tests should be run before replacing the digital filters.

Table 8-4. Digital Filter Test Waveform Table

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|--|--|---|----------|
| 1 | As in step c. Sweep Time 5 sec RES BW 1 Hz | A1 board, W4 Digital Filter Test jumper in TEST position. A1W2 also in TEST position. | Step Response and final settled output value | |
| 2 | As in step c. Sweep Time 5 sec RES BW 10 Hz | A1 board, W4 Digital Filter Test jumper in TEST position. A1W2 also in TEST position. | Step Response and final settled output value. | |
| 3 | As in step c. Sweep Time 2 sec RES BW 100 Hz | A1 board, W4 Digital Filter Test jumper in TEST position. A1W2 also in TEST position. | Step Response and final settled output value | |
| 4 | As in step c. Sweep Time 2 sec RES BW 1 kHz | A1 board, W4 Digital Filter Test jumper in TEST position. A1W2 also in TEST position. | Step Response and final settled output value | |

A/D Test

- a. Disconnect the main power cord from the rear panel and remove the top cover. Place the suspect receiver board on the 03577-66542 extender board.
- b. Set the Test jumper W2 to the TEST position. Set the A/D Test jumper W3 to the TEST position. Set the 10 kHz in jumper W8 to the TEST position. All other jumpers should be in their NORMAL position.
- c. Connect the External Power Supply to TP6.
- d. Press the hardkeys listed on the left, and select the softkeys or enter the data listed on the right.

```

INSTR PRESET
DISP FCTN .....Real
SWEEP TYPE .....CW
INPUT
  User Defined Input .....K3*(K1*X-K2) X= Suspect
DEF MATH .....Channel
  K1 real .....15.425 Units
  K1 imag .....0.0 Units
  K2 real .....7.5 Units
  K2 imag .....0.0 Units
  K3 real .....-1 Units
  K3 imag .....0.0 Units
SCALE
  / Div .....2 Units
    
```

- e. This set up will measure positive input voltages at TP6. Monitor the External Power Supply with the Digital Voltmeter and compare the readings. All readings should agree to within 100 mV. At near 0 V, the reading may jump suddenly to ± 15V. This is normal and is due to the sign bit being toggled. The A/D does this because the trace math is different for the different polarities.
- f. Test the negative half of the A/D by switching the polarity of the external power supply, and setting K2 real in step d to -7.5 Units.
- g. If these tests fail, isolate the fault to the analog or digital sections of the receiver. Run the Digital Filter test in this section. If the digital filter test passes, then the fault is most likely in the A/D converter, sample and hold, or variable gain amplifier. If the digital filter test fails, then a algorithmic state machine, look up table or digital filter is faulty and must be repaired. Repair the components as indicated in the test.

Signature Analysis Tests

- a. This Signature Analysis mode actually uses an Oscilloscope rather than a Signature Analyzer to check the digital sections of the A1 board.
- b. Remove power from the 3577A and place the suspect receiver board on the 03577-66542 Extender board.
- c. Set the following jumpers to their TEST position. All other jumpers must be the NORMAL position.

```

DIGITAL FILTER TEST .....W4
A/D TEST .....W3
BOARD TRI-STATE .....W5 and W6
SIGNATURE ANALYSIS .....W1
    
```

- d. Externally trigger the Oscilloscope on the 4 kHz signal on A1TP8.
- e. Check each of the signals as listed in Table 8-6. Expand the Time/Div control and adjust the delaying timebase to view each of the signals listed in the table. If a signal is bad, it will probably show up in the burst of pulses in the first 20 us. Check this time frame first, then expand out to view the second burst at approximately 120 us.
- f. Replace each faulty component as shown from the signature data.

Dynamic Accuracy Troubleshooting

- a. The Dynamic Accuracy Troubleshooting Procedure requires that two of the receivers in the 3577A are operating correctly. By programming the 3577A output frequency for the IF frequency under test, the good receiver is tuned to the IF, and linearity tests can be made. It is assumed the Input Variable Gain Amplifier dc Offset Adjustment was performed and the unit still failed the dynamic accuracy specifications. Also, perform the A/D converter and digital filter tests in this section to isolate the fault to the analog portion of the instrument.
- b. Remove power from the 3577A and place the suspect receiver board on the 03577-66542 extender board. Connect the equipment as shown in Figure 8-3. Use the SMB to BNC cable to connect the suspect receiver board to the Power Splitter. The set up shown is for a faulty R channel board. Adapt the set up as necessary for an A or B circuit board fault.

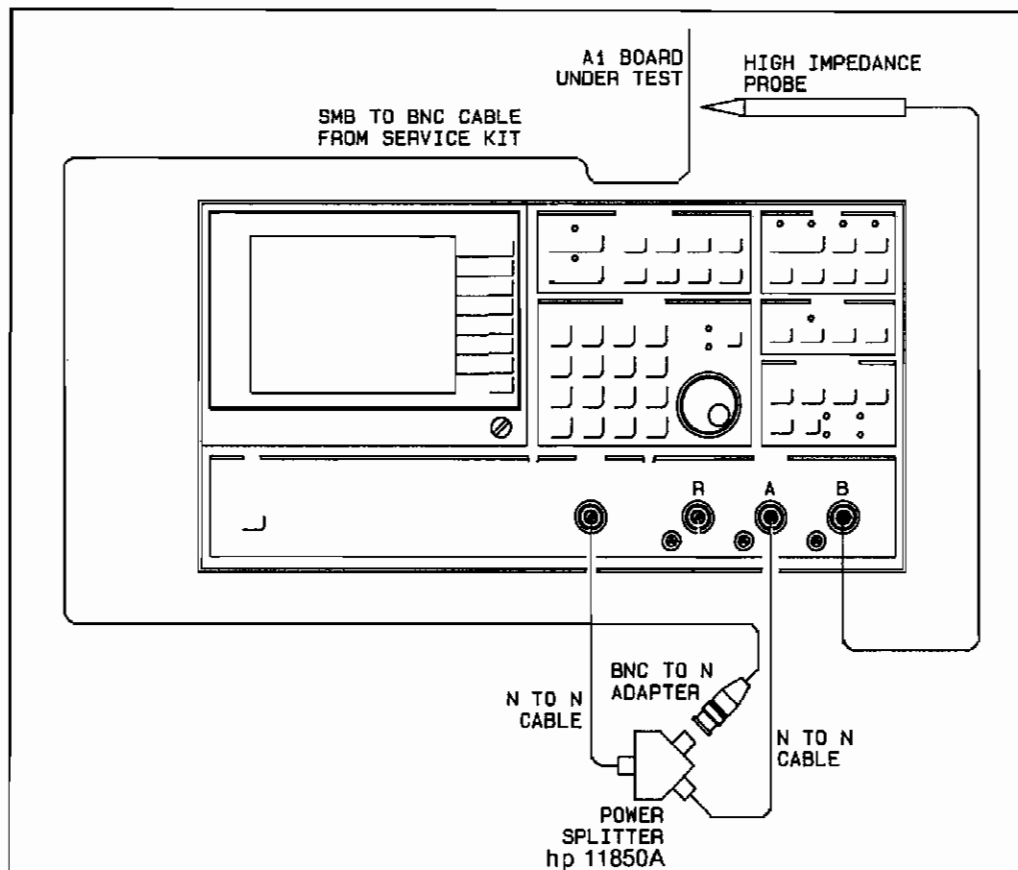


Figure 8-3. Dynamic Accuracy Troubleshooting Set Up

- c. Set the 3577A controls by pressing the hardkey on the left and selecting the softkey, or entering the data listed on the right. The input settings below are for an R channel fault with the test set up seen in Figure 8-3. Adapt the control settings for your test set up as required by noting which channel is faulty, which is fed by the bridge and which has the 1:1 probe.

```

INPUT ..... A/B
DISP FCTN ..... Log Mag
SWEEP TYPE ..... CW
RES BW ..... 10 Hz
ATTEN
Receiver R ..... 50 Ω, 20 dB
Receiver A ..... 50 Ω, 20 dB
Receiver B ..... 1 MΩ, 20 dB

```

- d. If the failure occurs at only one frequency, then the fault is isolated to the first mixer and Local Oscillator buffer amplifier. Check this conversion section by pressing the **FREQ** hardkey and entering a **FREQUENCY** of 250 kHz. Connect the 1:1 10007B Probe to A1R118.
- e. Press the **AMPTD** hardkey and enter an amplitude of -10 dBm.
- f. Press the **MEASR CAL** hardkey and select the **NORMALIZE** softkey.
- g. Press the **AMPTD** hardkey and enter the amplitude where the suspect receiver fails the dynamic accuracy specifications. Vary the amplitude over the range of the input board. The marker readout should read 0 dB within the dynamic accuracy specifications. These specifications are listed in Table 1-1.
- h. Dynamic accuracy failures will generally be limited to the A/D converter, non-linear amplifiers, and mixers. Test each of the mixers (U24 and U34) and the intermediate amplifiers at their outputs. Test these components from the first mixer back to the A/D. Replace all components that prove to be defective. After each mixer, the 3577A programmed frequency will change. Each of the IF frequencies are listed below.

```

First IF (mixer is U34) = 250 kHz
Second IF (mixer is U24) = 10 kHz

```

Variable Gain Amplifier Troubleshooting

- a. These tests assume that the digital self tests have been run on the suspect receiver board. If these tests have not been run, then do the A/D test and the signature analysis test described in this section.
- b. With the suspect receiver on the extender board, place jumpers A1W2, A1W13, and A1W3 into the test position. With the jumpers in this position, A1Q13 should be turned off, and the overall gain of the variable gain amplifier set to negative one. Note that the sample and hold has been disconnected by A1W13.
1. Connect the External Power Supply positive terminal to A1TP14 and the negative terminal to chassis. Monitor the Power Supply voltage with the DC Voltmeter and set it to $5V \pm 5\text{ mV}$.
 2. Connect the DC Voltmeter to A1TP7 at the variable gain amplifier output. The voltage at A1TP7 should be $-5.0 \pm 0.1\text{ V}$.
 3. If this test fails, then the variable gain amplifier or gain determining circuitry is faulty. Among the things to check for are shorted switch FETs, out of tolerance resistor ladder, faulty digital latches or buffer amplifiers. Replace all faulty components. Be sure the Variable Gain Amplifier

Offset adjustment has been properly performed before replacing components.

4. If this test passes, then the gain ladder can probably be assumed to be good. Continue with this procedure.
- c. Test each of the Variable Gain Amplifier gain settings by following this procedure. A dc voltage is fed to the A/D converter which then determines the optimum gain value and turns on the appropriate gain selection FET.
 1. Place jumper A1W13 into the test position and jumpers A1W2 and A1W3 into the normal position.
 2. Set the External Power Supply to -6.8 V. Connect the positive terminal to A1TP14 and the negative terminal to chassis.
 3. Connect the DC Voltmeter positive terminal to A1TP14 and the negative terminal to chassis.
 4. Connect the Oscilloscope probe to A1TP7. The amplitude of the square wave at A1TP7 is the voltage at A1TP14 multiplied alternately by -1.1 and by the optimum gain value. If possible, the optimum gain value amplifies the voltage at A1TP7 to the range of +3.75 to +7.5 V or -3.75 to -7.5 V.
 5. While monitoring the Oscilloscope, slowly increase the dc voltage at A1TP14. At approximately -3.4 V, a rapid change in the square wave occurs as Q20 turns on. Check all of the ranges in the following chart for a rapid change in the square wave each time the voltage at A1TP14 approaches the next range.

| Approximate A1TP14 DC Voltage Range | | Gain Selection FET |
|-------------------------------------|-------|--------------------|
| Lower | Upper | ON |
| -6.8 | -3.4 | Q21 |
| -3.4 | -1.7 | Q20 |
| -1.7 | -0.85 | Q19 |
| -0.85 | -0.43 | Q18 |
| -0.43 | -0.21 | Q17 |
| -0.21 | -0.11 | Q16 |
| -0.11 | -0.05 | Q15 |
| -0.05 | +0.05 | Q14 |
| +0.05 | +0.11 | Q15 |
| +0.11 | +0.21 | Q16 |
| +0.21 | +0.43 | Q17 |
| +0.43 | +0.85 | Q18 |
| +0.85 | +1.7 | Q19 |
| +1.7 | +3.4 | Q20 |
| +3.4 | +6.8 | Q21 |

6. If this test fails, check that the gain selection signals are getting through to the FETs and that the FETs are switching. If the signals are not getting through to the FETs, check for pulses to the driver chips (U18 and U17) and the buffer chip (U16). Note that pulses will be present rather than a steady state since the gain of the variable gain amplifier is first set to -1.1 and then to the optimum gain value.
7. If this test passes, run the signature analysis test to verify that the digital circuitry is operational. Also verify all clock signals entering the board.

Table 8-5. A1 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|-----------|---|--|--------------------------------|----------|
| 1 | Test at A1R106 Press INSTR PRESET AMPTD -20 dBm Sweep Type CW Freq 100 Hz Atten 1 MΩ 0 dB Connect source to receiver under test | Spectrum Analyzer Start 50 Hz Stop 1 kHz Res BW 10 Hz VBW 10 Hz Ref Level 0 dBm dB/Div 10 dB | 100 Hz Carrier, noise. | |
| 1 Cont | Test at A1R106 Press INSTR PRESET AMPTD -20 dBm Sweep Type CW Freq 10 MHz Atten 1 MΩ 0 dB Connect source to receiver under test | Spectrum Analyzer Start 5 MHz Stop 50 MHz Res BW 100 kHz VBW 3 kHz Ref Level 0 dBm dB/Div 10 dB | 10 MHz Carrier, noise. | |
| 1 Cont | Test at A1R106 Press INSTR PRESET AMPTD -20 dBm Sweep Type CW Freq 200 MHz Atten 1 MΩ 0 dB Connect source to receiver under test | Spectrum Analyzer Start 100 MHz Stop 700 MHz Res BW 300 kHz VBW 3 kHz Ref Level 0 dBm dB/Div 10 dB | 200 MHz Carrier, noise. | |
| 2 | Test at A1R10 Press INSTR PRESET Freq start 5 Hz | Oscilloscope CH1 Coupling AC CH1 V/Div 10 mV Time/Div 1 us Trigger CH1 | Waveshape period, noise. | |

Table 8-5. A1 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|--------|---|--|---|---|
| 3 | Test at A1R117 Press INSTR PRESET AMPTD -20 dBm Sweep Type CW Freq 100 Hz Atten 1 MΩ 0 dB Connect source to receiver under test | Spectrum Analyzer Start 50 Hz Stop 1 kHz Res BW 10 Hz VBW 10 Hz Ref Level 0 dBm dB/Div 10 dB | 100 Hz Carrier, noise. | <p>REF .0 dBm ATTN 10 dB 10 dB/div START 50 Hz STOP 1.000 kHz RES BW 10 Hz VBW 10 Hz SWP 30 sec</p> |
| 3 Cont | Test at A1R117 Press INSTR PRESET AMPTD -20 dBm Sweep Type CW Freq 10 MHz Atten 1 MΩ 0 dB Connect source to receiver under test | Spectrum Analyzer Start 5 MHz Stop 50 MHz Res BW 100 kHz VBW 3 kHz Ref Level 0 dBm dB/Div 10 dB | 10 MHz Carrier, noise. | <p>REF .0 dBm ATTN 10 dB 10 dB/div START 5.0 MHz STOP 50.0 MHz RES BW 100 kHz VBW 3 kHz SWP 500 msec</p> |
| 3 Cont | Test at A1R117 Press INSTR PRESET AMPTD -20 dBm Sweep Type CW Freq 200 MHz Atten 1 MΩ 0 dB Connect source to receiver under test | Spectrum Analyzer Start 100 MHz Stop 700 MHz Res BW 300 kHz VBW 3 kHz Ref Level 0 dBm dB/Div 10 dB | 200 MHz Carrier, noise. | <p>REF .0 dBm ATTN 10 dB 10 dB/div START 100 MHz STOP 700 MHz RES BW 300 kHz VBW 3 kHz SWP 2.0 sec</p> |
| 4 | Test at A1R118 Press INSTR PRESET AMPTD -4 dBm Sweep Type CW Freq 20 Hz Atten 50 Ω 20 dB Connect source to receiver under test | Spectrum Analyzer Start 100 kHz Stop 3.85 MHz Res BW 3 kHz VBW 3 kHz Ref Level 0 dBm dB/Div 10 dB | 250 kHz first IF amplitude, distortion and noise. | <p>REF .0 dBm ATTN 10 dB 10 dB/div START 100 kHz STOP 3.85 MHz RES BW 3 kHz VBW 3 kHz SWP 1.5 sec</p> |

Table 8-5. A1 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|-----------|--|--|---|----------|
| 4 Cont | Test at A1R118 Press INSTR PRESET AMPTD -4 dBm Sweep Type CW Freq 50 kHz Connect source to receiver under test | Spectrum Analyzer Start 100 kHz Stop 3.85 MHz Res BW 3 kHz VBW 3 kHz Ref Level 0 dBm dB/Div 10 dB | 250 kHz Carrier, amplitude, intermodulation, noise | |
| 4 Cont | Test at A1R118 Press INSTR PRESET AMPTD -4 dBm Sweep Type CW Freq 250 kHz Connect source to receiver under test | Spectrum Analyzer Start 100 kHz Stop 3.85 MHz Res BW 3 kHz VBW 3 kHz Ref Level 0 dBm dB/Div 10 dB | 250 kHz Carrier, amplitude, intermodulation, noise | |
| 5 | Test at A1TP4 Press INSTR PRESET AMPTD -4 dBm Sweep Type CW Freq 50 kHz Connect source to receiver under test | Spectrum Analyzer Start 100 kHz Stop 3.85 MHz Res BW 3 kHz VBW 3 kHz Ref Level 0 dBm dB/Div 10 dB | 250 kHz Carrier, amplitude, intermodulation, noise | |
| 5 Cont | Test at A1TP4 Press INSTR PRESET AMPTD -4 dBm Connect source to receiver under test | Spectrum Analyzer Start 100 kHz Stop 3.85 MHz Res BW 30 kHz VBW 1 kHz Ref Level 0 dBm dB/Div 10 dB | 250 kHz Carrier, noise. | |



Table 8-5. A1 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|--------|---|---|---------------------------------------|----------|
| 6 | Test at A1TP6 Press INSTR PRESET Sweep Type CW Freq 50 Hz Amptd -10 dBm Connect source to receiver under test | Spectrum Analyzer Center 10 kHz Span 968 Hz Res BW 10 Hz VBW 10 Hz Ref Level 5 dBm dB/Div 10 dB | 10 kHz IF, intermodulation, and noise | |
| 6 Cont | Test at A1TP6 Press INSTR PRESET Sweep Type CW Freq 20 kHz Amptd -10 dBm Connect source to receiver under test | Spectrum Analyzer Start 5 kHz Stop 100 kHz Res BW 1 kHz VBW 100 Hz Ref Level 5 dBm dB/Div 10 dB | 10 kHz IF, intermodulation, and noise | |
| 6 Cont | Test at A1TP6 Press INSTR PRESET Sweep Type CW Freq 20 kHz AMPTD -10 dBm Connect source to receiver under test | Oscilloscope CH1 Coupling DC CH1 V/Div 100 mV Time/Div 20 us Trigger CH1 | Period, noise | |
| 7 | Test at A1TP5 Press INSTR PRESET Sweep Type CW Freq 100 MHz Amptd -4 dBm Connect source to receiver under test | Oscilloscope CH1 Coupling DC CH1 V/Div 20 mV Time/Div 20 us Trigger CH1 | Period, noise | |

Table 8-5. A1 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|---|---|--|----------|
| 8 | Test at A1R13 Press INSTR PRESET Sweep Type CW Freq 20 kHz AMPTD -4 dBm Connect source to receiver under test | Spectrum Analyzer Start 0 Hz Stop 100 kHz Res BW 300 Hz VBW 100 Hz Ref Level 0 dBm dB/Div 10 dB | 10 kHz IF, intermodulation, and noise. | |
| 9 | Test at A1TP10 Press INSTR PRESET Connect source to receiver under test | Oscilloscope CH1 Coupling AC CH1 V/Div 100 mV Time/Div 50 μs Trigger CH1 | Pulse Shape and noise | |
| 10 | Test at A1TP14 Press INSTR PRESET Sweep Type CW Freq 200 MHz Amptd -10 dBm Connect source to receiver under test | Oscilloscope CH1 Coupling DC CH1 V/Div 100 mV Time/Div 50 μs Trigger CH1 | Waveshape noise | |
| 11 | Test at TP7 Press INSTR PRESET Sweep Type CW Freq 200 MHz Amptd -10 dBm Connect source to receiver under test | Oscilloscope CH1 Coupling DC CH1 V/Div 200 mV Time/Div 50 μs Trigger CH1 | Waveshape, noise NOTE This will shift in time due to trigger level | |

Table 8-5. A1 Circuit Board, Troubleshooting Data
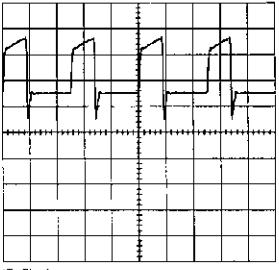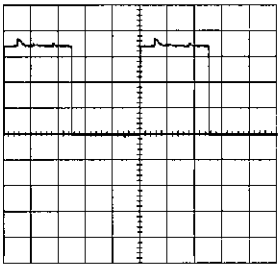
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|---|---|----------------------|---|
| 12 | Test at A1U28 Pin 12 Press INSTR PRESET Connect source to receiver under test | Oscilloscope CH1 Coupling DC CH1 V/Div 100 mV Time/Div 200 nS Trigger CH1 | Waveshape, noise | CH1: CPLG=DC CH1: 100 mV/Div  MT=Ch 1 Main= 200 ns/Div |
| 13 | Test at TP11 Press INSTR PRESET Connect source to receiver under test | Oscilloscope CH1 Coupling DC CH1 V/Div 100 mV Time/Div 50 uS Trigger CH1 | Waveshape, noise | CH1: CPLG=DC CH1: 100 mV/Div  MT=Ch 1 Main= 50 us/Div |
| | | | | |
| | | | | |

8-8 SERVICE GROUP A4, LOCAL OSCILLATOR ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.



Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.



Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on.

| | |
|------------------|---------|
| Sweep Type | CW |
| AMPTD | -49 dBm |
| FREQuency | 200 MHz |

All Oscilloscope waveforms are taken using 1:1 probe and a HP 1980B Oscilloscope. All Spectrum Analyzer waveforms connected to an SMB connector are taken through the 03577-84401 Service Kit BNC to SMB cable. All Spectrum Analyzer waveforms taken off component leads are taken through a 10007B 1:1 probe. This probe has 215 Ω of series resistance.

Troubleshooting Hints

1. Before troubleshooting this circuit board, be sure that the fault is occurring on this board by checking the following inputs using the settings in Table 2-7 in the Fault Isolation Section.
 - a. A6J7 300 MHz reference output.
 - b. A7J1 300.25 to 500.25 MHz output.

If these signals check out as being good, then the problem is on the A4 Local Oscillator board.

2. SYMPTOM: Output Frequency is not correct.
 - a. The problem is due to improper conversion in the first mixer, or improper frequency input signals.

3. SYMPTOM: Output Level or harmonic/spurious distortion.
 - a. These problems could be anywhere on the circuit board. Begin troubleshooting at A4J11. Compare the Spectrum Analyzer reading with the information in Table 8-7 following this description. If the signal is good, then the fault is after J11, if it is bad, then the fault is before J11. Continue with this "half splitting" procedure until the faulty functional block is found. Compare all measured signals with the information given in Table 8-7.

Table 8-7. A4 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|--|--|--|----------|
| 1 | Test at A4J6 Press INSTR PRESET | Spectrum Analyzer Start 150 MHz Stop 1000 MHz Res BW 300 kHz VBW 10 kHz Ref Level 0 dBm dB/Div 10 dB | 300 MHz amplitude harmonics. | |
| 2 | Test at A4J7 Press INSTR PRESET | Spectrum Analyzer Start 150 MHz Stop 1500 MHz Res BW 300 kHz VBW 10 kHz Ref Level 0 dBm dB/Div 10 dB | 300 MHz amplitude harmonics. | |
| 3 | Test at A4J9 Press INSTR PRESET Sweep Type CW Freq 100 MHz | Spectrum Analyzer Start 100 kHz Stop 550 MHz Res BW 1 MHz VBW 30 kHz Ref Level -10 dBm dB/Div 10 dB | 100.25 MHz mixed, RF feedthrough, intermodulation. | |
| 4 | Test at A4C13 Press INSTR PRESET Sweep Type CW Freq 5 Hz | Spectrum Analyzer Start 290 MHz Stop 1500 MHz Res BW 1 MHz VBW 30 kHz Ref Level 0 dBm dB/Div 10 dB | 300.25 MHz synthesizer output amplitude harmonics. | |

Table 8-7. A4 Circuit Board, Troubleshooting Data

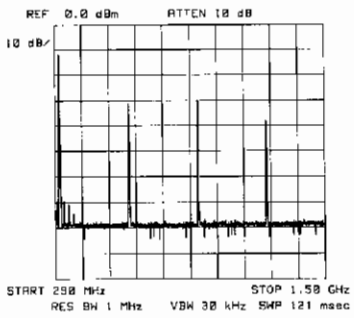
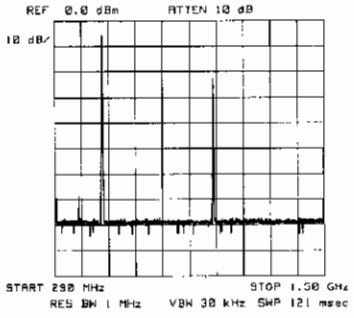
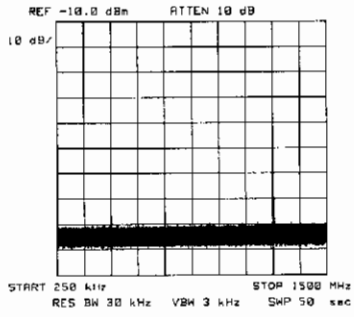
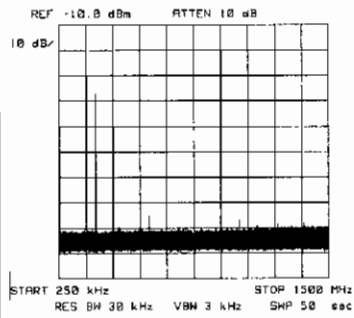
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|-----------|---|--|---|--|
| 4 Cont | Test at A4C13 Press INSTR PRESET Sweep Type CW Freq 10 MHz | Spectrum Analyzer Start 290 MHz Stop 1500 MHz Res BW 1 MHz VBW 30 kHz Ref Level 0 dBm dB/Div 10 dB | 310.25 MHz synthesizer output amplitude, harmonics. |  |
| 4 Cont | Test at A4C13 Press INSTR PRESET Sweep Type CW Freq 200 MHz | Spectrum Analyzer Start 290 MHz Stop 1500 MHz Res BW 1 MHz VBW 30 kHz Ref Level 0 dBm dB/Div 10 dB | 500.25 MHz synthesizer output amplitude, harmonics. |  |
| 5 | Test at A4J10 Press INSTR PRESET Sweep Type CW Freq 5 Hz | Spectrum Analyzer Start 250 kHz Stop 1500 MHz Res BW 30 kHz VBW 3 kHz Ref Level -10 dBm dB/Div 10 dB | 250 kHz amplitude, harmonics, noise |  |
| 5 Cont | Test at A4J10 Press INSTR PRESET Sweep Type CW Freq 200 MHz | Spectrum Analyzer Start 250 kHz Stop 1500 MHz Res BW 30 kHz VBW 3 kHz Ref Level -10 dBm dB/Div 10 dB | 200.25 MHz amplitude, harmonics, noise |  |

Table 8-7. A4 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|-----------|---|--|---|----------|
| 6 | Test at A4J11 Press INSTR PRESET Sweep Type CW Freq 5 Hz | Spectrum Analyzer Start 250 kHz Stop 1500 MHz Res BW 30 kHz VBW 3 kHz Ref Level -10 dBm dB/Div 10 dB | 250 kHz amplitude, harmonics, noise | |
| 6 Cont | Test at A4J11 Press INSTR PRESET Sweep Type CW Freq 200 MHz | Spectrum Analyzer Start 250 kHz Stop 1500 MHz Res BW 30 kHz VBW 3 kHz Ref Level -10 dBm dB/Div 10 dB | 200.25 MHz amplitude, harmonics, noise | |
| 7 | Test at A4U23 Pin 8 Press INSTR PRESET Sweep Type CW Freq 5 Hz | Spectrum Analyzer Start 250 kHz Stop 500 MHz Res BW 30 kHz VBW 3 kHz Ref Level -10 dBm dB/Div 10 dB | 250 kHz amplitude, harmonics, noise | |
| 7 Cont | Test at A4J11 Pin 8 Press INSTR PRESET Sweep Type CW Freq 5 Hz | Spectrum Analyzer Start 250 kHz Stop 500 MHz Res BW 30 kHz VBW 3 kHz Ref Level -10 dBm dB/Div 10 dB | 200.25 MHz amplitude, harmonics, noise | |

Table 8-7. A4 Circuit Board, Troubleshooting Data

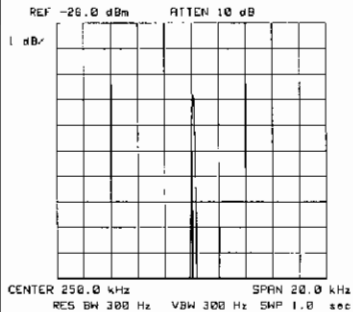
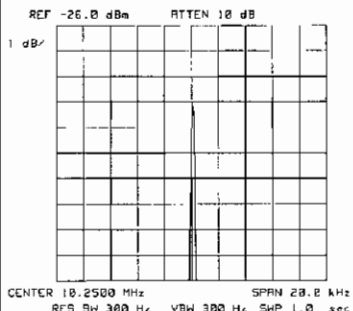
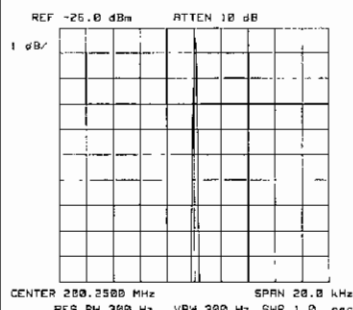
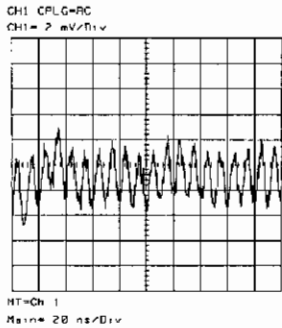
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|--------|---|--|---|--|
| 8 | Test at A4R41 and R42 Junction Press INSTR PRESET Sweep Type CW Freq 5 Hz | Spectrum Analyzer Center 250 kHz Stop 20 kHz Res BW 300 Hz VBW 300 Hz Ref Level -26 dBm dB/Div 1 dB | Absolute Level |  |
| 8 Cont | Test at A4R41 and R42 Junction Press INSTR PRESET Sweep Type CW Freq 10 MHz | Spectrum Analyzer Center 10.25 MHz Stop 20 kHz Res BW 300 Hz VBW 300 Hz Ref Level -26 dBm dB/Div 1 dB | Absolute Level |  |
| 8 Cont | Test at A4R41 and R42 Junction Press INSTR PRESET Sweep Type CW Freq 200 MHz | Spectrum Analyzer Center 200.25 MHz Stop 20 kHz Res BW 300 Hz VBW 300 Hz Ref Level -26 dBm dB/Div 1 dB | Absolute Level |  |
| 9 | Test at A4U25 Pin 2 Press INSTR PRESET Sweep Type CW Freq 100 MHz | Oscilloscope CH1 Coupling AC CH1 V/Div 2 mV Time/Div 20 ns Trigger CH1 | 100 MHz Feedthrough on leveling signal. |  |

Table 8-7. A4 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------------|--|---|--|----------|
| 10 | Test at A4U25 Pin 6 Press INSTR PRESET Sweep Type CW Freq 100 MHz | Oscilloscope CH1 Coupling AC CH1 V/Div 2 mV Time/Div 30 ns Trigger CH1 | 100 MHz Feedthrough on leveling signal. | |
| 11 | Test at A4R109 Press INSTR PRESET Sweep Type CW Freq 5 Hz | Spectrum Analyzer Center 250 kHz Span 20 kHz Res BW 300 Hz VBW 300 Hz Ref Level -21.5 dBm dB/Div 1 dB | Amplitude | |
| 11 Cont | Test at A4R109 Press INSTR PRESET Sweep Type CW Freq 10 Hz | Spectrum Analyzer Center 10.25 MHz Span 20 kHz Res BW 300 Hz VBW 300 Hz Ref Level -21.5 dBm dB/Div 1 dB | Amplitude | |
| 12 | Test at A4J3 Press INSTR PRESET Sweep Type CW Freq 5 Hz | Spectrum Analyzer Start 220 kHz Stop 10 MHz Res BW 30 kHz VBW 300 Hz Ref Level 10 dBm dB/Div 10 dB | 250 kHz amplitude, harmonics, noise | |

Table 8-7. A4 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------------|---|---|--|----------|
| 12 Cont | Test at A4J3 Press INSTR PRESET Sweep Type CW Freq 1 MHz | Spectrum Analyzer Start 1 MHz Stop 50.5 MHz Res BW 100 kHz VBW 1 kHz Ref Level 10 dBm dB/Div 10 dB | 1 MHz amplitude, harmonics noise | |
| 12 Cont | Test at A4J3 Press INSTR PRESET Sweep Type CW Freq 200 MHz | Spectrum Analyzer Start 200 MHz Stop 1500 MHz Res BW 1 MHz VBW 10 kHz Ref Level 20 dBm dB/Div 10 dB | 200 MHz amplitude, harmonics, noise | |
| | | | | |
| | | | | |

8-9 SERVICE GROUP A5, 250 kHz ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the circuit descriptions of Section VII are understood.



Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.



Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on.




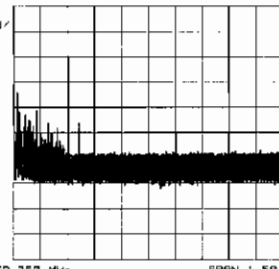
Sweep Type CW
 AMPTD - 49 dBm
 FREQUENCY 200 MHz



All Oscilloscope waveforms are taken using 1:1 probe and a HP 1980B Oscilloscope. All Spectrum Analyzer waveforms connected to an SMB connector are taken through the 03577-84401 Service Kit BNC to SMB cable. All Spectrum Analyzer waveforms taken off component leads are taken through a 10007B 1:1 probe. This probe has 215 Ω of series resistance.

Troubleshooting Hints

1. Before troubleshooting this circuit board, be sure that the fault is occurring on this board by checking the following inputs using the settings in Table 2-7 in the Fault Isolation Section.
 - a. A6J4 300 MHz reference output
2. Test the signals listed in Table 8-7 to troubleshoot the circuit to the faulty functional sub-block. The phase locked loop can be can be opened by removing jumper W2. This allows troubleshooting of the phase detector and VCO.

Table 8-8. A5 Circuit Board, Troubleshooting Data
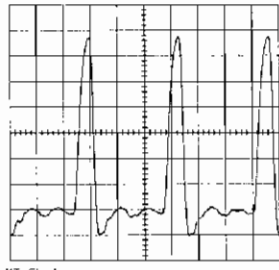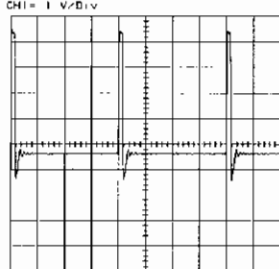
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|---|---|--|--|
| 1 | Test at A5W3 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 500 mV Time/Div 50 ns Trigger CH1 | Pulse shape and distortion |  <p>CH1 CPLG=AC CH1= 500 mV/Div Main= 50 ns/Div MT=Ch 1</p> |
| 2 | Test at A5TP42 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 1 V Time/Div 1 us Trigger CH1 | Pulse shape and distortion |  <p>CH1 CPLG=AC CH1= 1 V/Div Main= 1 us/Div MT=Ch 1</p> |
| 3 | Test at A5TP31 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 500 mV Time/Div 1 us Trigger CH1 | Pulse shape and distortion |  <p>CH1 CPLG=AC CH1= 500 mV/Div Main= 1 us/Div MT=Ch 1</p> |
| 4 | Test at A5U20 Pin 1 Press INSTR PRESET | Spectrum Analyzer Start 0 Hz Stop 1500 MHz Res BW 100 kHz VBW 10 kHz Ref Level -26 dBm dB/Div 10 dB | 300 MHz amplitude, and harmonics. |  <p>REF -26.0 dBm ATTEN 10 dB 10 dB CENTER 750 MHz SPAN 1.50 GHz RES BW 100 kHz VBW 10 kHz SWP 4.50 sec</p> |
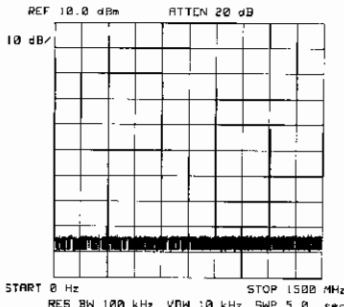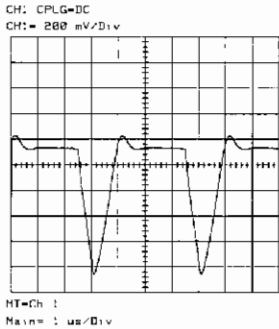
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|--|--|---|---|
| 5 | Test at A5J1 Press INSTR PRESET | Spectrum Analyzer Start 0 Hz Stop 1500 MHz Res BW 100 kHz VBW 10 kHz Ref Level 10 dBm dB/Div 10 dB | 300.25 MHz amplitude and harmonics |  |
| 6 | Test at A5U50 Pin 12 Press INSTR PRESET | Oscilloscope CH1 Coupling DC CH1 V/Div 200 MV Time/Div 1 us Trigger CH1 | Pulse shape and distortion |  |
| 7 | Test at A5Q1 collector Press INSTR PRESET Connect external power supply to W1 and GND | Counter | Correct Frequency | Frequency should be <300.25 MHz with 0 V input should be >300.25 MHz with 12 V in. |
| | | | | |

8-10 SERVICE GROUP A6, FREQUENCY REFERENCE ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on.

Sweep Type CW
 AMPTD -49 dBm
 FREQUENCY 200 MHz

All Oscilloscope waveforms are taken using 1:1 probe and a HP 1980B Oscilloscope. All Spectrum Analyzer waveforms connected to an SMB connector are taken through the 03577-84401 Service Kit BNC to SMB cable. All Spectrum Analyzer waveforms taken off component leads are taken through a 10007B 1:1 probe. This probe has 215 Ω of series resistance.

Troubleshooting Hints

1. Before starting to troubleshoot this circuit board, be sure the fault is on this board by checking the following input signals. The signal information is listed in Table 2-7 in the Fault Isolation Section.
 - a. A31J1 Oven Reference Output

NOTE

The 3577A A6 Frequency Reference board will free run on its own 10 MHz VCXO if the A31 Oven signal is not present. The oven signal will not be present if the oven is not adequately warmed up.

2. Check the signal at A6J2 and A6J7 to determine in which third of the circuit the fault has occurred. Refer to Table 8-9 for the proper signal levels at the various test points listed.

Table 8-9. A6 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|---|---|---------------------------------------|---|
| 1 | Test at A6U22 Pin 1 Press INSTR PRESET | Oscilloscope CH1 Coupling DC CH1 V/Div 900 mV Time/Div 50 ns Trigger CH1 | Pulse Shape, p-p amplitude. | <p>CH1 CPLG=DC CH1= 900 mV/Div</p> <p>MT=CH 1 Main= 50 ns/Div</p> |
| 2 | Test at A6TP1 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 100 mV Time/Div 50 ns Trigger CH1 | Pulse Shape, p-p amplitude. | <p>CH1 CPLG=AC CH1= 100 mV/Div</p> <p>MT=CH 1 Main= 50 ns/Div</p> |
| 3 | Test at A6TP2 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 10 mV Time/Div 90 ns Trigger LF REJ, CH1 | Noise on VCO control voltage | <p>CH1 CPLG=AC CH1= 10 mV/Div</p> <p>MT=CH 1 LF REJ Main= 90 ns/Div</p> |
| 4 | Test at A6U2 Pin 14 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 10 mV Time/Div 90 ns Trigger LF REJ,CH1 | Noise on VCO control voltage | <p>CH1 CPLG=AC CH1= 10 mV/Div</p> <p>MT=CH 1 LF REJ Main= 90 ns/Div</p> |

Table 8-9. A6 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|---|---|-----------------------------------|---|
| 5 | Test at A6TP3 Press INSTR PRESET | Oscilloscope CH1 Coupling DC CH1 V/Div 900 mV Time/Div 50 ns Trigger CH1 | Pulse Shape, p-p amplitude. | <p>CH1 CPLG=DC CH1= 900 mV/Div Main= 50 ns/Div</p> |
| 6 | Test at A6J5 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 20 mV Time/Div 3 μ s Trigger CH1 | Pulse Shape, p-p amplitude. | <p>CH1 CPLG=AC CH1= 20 mV/Div Main= 3 μs/Div</p> |
| 7 | Test at A6TP2 Press INSTR PRESET Trigger, \times 1 on A6TP1 | Oscilloscope CH1 Coupling DC CH1 V/Div 150 mV Time/Div 50 ns Trigger EXT \times 1 | Clean Sinewave | <p>CH1 CPLG=RL CH1= 150 mV/Div Main= 50 ns/Div</p> |
| 8 | Test at A6TP4 Press INSTR PRESET | Oscilloscope CH1 Coupling DC CH1 V/Div 900 mV Time/Div 50 ns Trigger CH1 | Pulse p-p amplitude, period | <p>CH1 CPLG=DC CH1= 900 mV/Div Main= 50 ns/Div</p> |

Table 8-9. A6 Circuit Board, Troubleshooting Data






| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|--|--|--|---|
| 9 | Test at A6R70 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 8 mV Time/Div 1.5 us Trigger HF REJ,CH1 | Noise on VCO control voltage. | <p>CH1 CPLG=AC CH1= 8 mV/Div</p>  <p>MT-Ch 1 HF REJ Main: 1.5 us/Div</p> |
| 10 | Test at A6J2 Press INSTR PRESET | Spectrum Analyzer Start 0 Hz Stop 100 MHz Res BW 300 kHz VBW 1 kHz Ref Level 0 dBm dB/Div 10 dB | Harmonics and noise on 10 MHz output. | <p>REF .0 dBm ATTN 10 dB</p>  <p>START 0 Hz STOP 100 MHz RES BW 300 kHz VBW 1 kHz SWP 1.0 sec</p> |
| 11 | Test at A6J7 Press INSTR PRESET | Spectrum Analyzer Start 0 Hz Stop 500 MHz Res BW 300 kHz VBW 300 Hz Ref Level +10 dBm dB/Div 10 dB | Harmonics and noise on 30 MHz output. | <p>REF 10.0 dBm ATTN 20 dB</p>  <p>START 0 Hz STOP 500 MHz RES BW 300 kHz VBW 300 Hz SWP 15 sec</p> |
| 12 | Test at A6J3 Press INSTR PRESET | Spectrum Analyzer Start 75 MHz Stop 1500 MHz Res BW 1 MHz VBW 30 kHz Ref Level 0 dBm dB/Div 10 dB | Harmonics and noise on 300 MHz output | <p>REF .0 dBm ATTN 10 dB</p>  <p>START 75 MHz STOP 1500 MHz RES BW 1 MHz VBW 30 kHz SWP 150 msec</p> |

Table 8-9. A6 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|---------------------------------------|---|---|---|
| 13 | Test at A6J4 Press INSTR PRESET | Spectrum Analyzer Start 75 MHz Stop 1500 MHz Res BW 1 MHz VBW 30 kHz Ref Level 0 dBm dB/Div 10 dB | Harmonics and noise on 300 MHz output. |  <p> REF 0 dBm ATTEN 10 dB 10 dB/Div START 75 MHz STOP 1500 MHz RES BW 1 MHz VBW 30 kHz SWP 150 mhz </p> |
| 14 | Test at A6R22 | Oscilloscope CH1 Coupling DC CH1 V/Div 1 V Time/Div any Trigger AUTO | See TTL Toggle | Oscilloscope should show U2b toggle when an External Reference is connected and disconnected. |
| | | | | |
| | | | | |

8-11 SERVICE GROUP A7, SYNTHESIZER ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

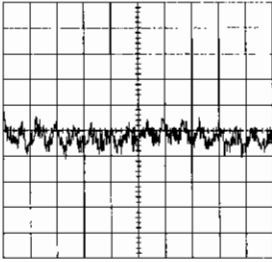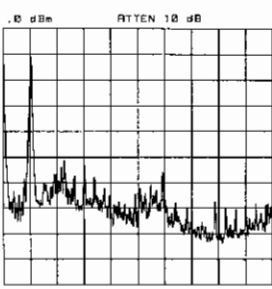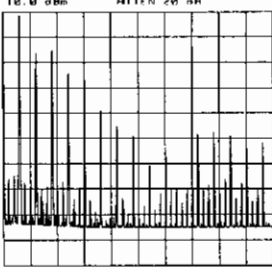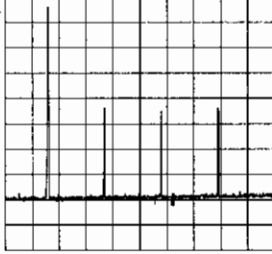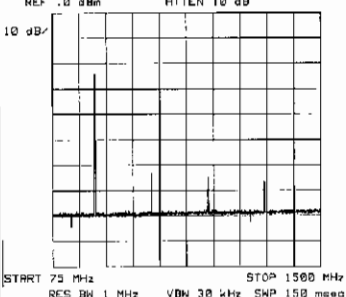

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.



Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on:

| | |
|------------------|---------|
| Sweep Type | CW |
| AMPTD | -49 dBm |
| FREQuency | 200 MHz |

All Oscilloscope waveforms are taken using 1:1 probe and an HP 1980B Oscilloscope. All Spectrum Analyzer waveforms connected to an SMB connector are taken through the 03577-84401 Service Kit BNC to SMB cable. All Spectrum Analyzer waveforms taken off component leads are taken through a 10007B 1:1 probe. This probe has 215 Ω of series resistance.

All troubleshooting in this section takes place with the synthesizer diagnostics turned on. To turn on this diagnostic, press the SPCL FCTN hardkey and toggle the SYN DIAG to the ON mode. This causes the 3577A to display directly in synthesizer frequency rather than output frequency.

Troubleshooting Hints

1. Before starting to troubleshoot this circuit board, be sure the fault is on this board by checking the following input signals. The signal information is listed in Table 2-7 in the Fault Isolation Section.
 - a. A6J5 100 kHz reference signal.
 - b. Run Service Diagnostics section in the Fault Isolation Section to verify that the digital circuits are operational.
 - c. This circuit board regulates the main power supplies input to it. When the fault has been isolated to a functional sub-block, first check the supplies associated with that circuit.

2. SYMPTOM: Synthesizer output frequency is bad or noisy.
 - a. Isolate whether the analog or digital circuitry is faulty by checking the signal at A7J1 with the Spectrum Analyzer. Power the instrument up with the Reset button pushed on the A13 Main Processor-Controller board. This keeps the main processor from programming the synthesizer, and makes the output VCO free run at the top of its frequency range. By releasing the main processor reset switch and disconnecting the 100 kHz reference signal at A7J3, the VCO will free run at the bottom of its frequency range.
 - b. If the VCO oscillates at both the top and bottom of its range, the VCO is probably operating correctly. The important aspects of these signals are the frequency range and amplitude at both frequency extremes. There must be adequate signal level for the VCO to drive the associated circuitry. If the signals are good, begin troubleshooting the digital section of this board.
 - c. If the VCO does not oscillate at all, repair the VCO circuit before continuing.
 - d. If the VCO frequency range is not wide enough, then troubleshoot the oscillator transistor and the associated bias circuits.

Analog Troubleshooting

1. Connect the Spectrum Analyzer to A7J1 and then A7J2. Set A7W1 to the right and left positions. The output signals for both connectors should be $-1 \text{ dBm} \pm 1.5 \text{ dB}$ for both frequency extremes.
 - a. If the signal is at A7J1 only, then the buffer circuits in the 300.25 MHz to 500.25 MHz VCO are faulty.
 - b. If 200 MHz of tuning range is available, but not centered correctly, then the adjustment of this tuning range is required. See the appropriate adjustment in Section IV.
 - c. If 200 MHz of tuning range is not available, then check all components in the schematic and physical vicinity of the oscillator transistor, A7Q161. Placement and mounting of these components is critical.
2. If the counter circuit is operational as described in the digital troubleshooting section, and the VCO is still not tuning correctly, then test for the correct signal at A7TP10. Sample waveforms for this test point are shown in step 3 of Table 8-10.
 - a. If the waveform is slightly distorted or rounded, then check for proper operation of the sample and hold. Be sure the sampling FETS are not leaky. Start troubleshooting at the sample pulse input at A7TP20.

- b. If the waveform is good, then check the following circuits in the order given to isolate the faulty functional sub-block.
 1. The phase detector output at A7TP9 should look like the waveforms in step 2 of Table 8-10.
 2. The voltage at A7R45 should be approximately -13.5 V.
 3. The voltage at the junction of A7R40 and A7R46 should be between -7 and -8 V.
 4. The outputs generating the Bias and API signals should be toggling for a swept synthesizer output. If they are not present, make sure the Fractional-N IC is generating them and that the latch clock is present. There should be 14 latch clock cycles for each reference cycle.
3. If the above circuitry checks as good, then the fault lies in the API and Bias sub-blocks. Care should be taken when troubleshooting this circuitry as all the signals are small currents which are difficult to detect. Note that if the VCO locks correctly, but there are large spurious signals present on the output, then check the diodes A7CR3,4,8,9 for opens, shorts, or excessive leakage.

Digital Troubleshooting

1. Always check to be sure the main processor is talking to the synthesizer properly. Connect the Oscilloscope to A7TP12. Press the SWEEP TYPE hardkey and select the CW softkey. Press the FREQ hardkey and enter a FREQUENCY of 1 MHz. Note on the Oscilloscope display that three pulses are sent to the Fractional-N IC after the MHz softkey is pressed. Repeat sending new frequencies to the A7 board until you are sure the data is present or not.
 - a. If the data is latching through from the main processor-controller and motherboard to the A7 board, then the fault is on the A7 board. Continue the digital troubleshooting.
 - b. If the data is not latching through, the input instruction decoding latches are faulty, or the main processor-controller signals are bad or missing.
2. Disconnect the jumper A7W1 and connect the External Power Supply to the A7W1 pins. Set the power supply for approximately 2 V. Monitor the VCO output frequency with the spectrum analyzer and adjust the power supply for a 400 MHz output signal. Press the SWEEP TYPE hardkey and select the CW softkey. With the Synthesizer Diagnostics on, press the FREQ hardkey and enter a FREQUENCY of 400 MHz. Monitor A7TP13 with the Oscilloscope while the VCO is manually tuned. If the frequency at TP13 approaches 100 kHz (10 μ S) as the output frequency approaches 400 MHz, then the entire counter digital section is working correctly. Note that this frequency will approach 100 kHz for every N number programmed into the 3577A and tuned for at the VCO output.

- a. If this test passes, and the faults appear to be digitally related, check to make sure the API current sources are getting the correct signals and are not leaky.
- b. If this test fails, troubleshoot the counter subblocks and repair as necessary. Refer to the counter troubleshooting procedure.

API Troubleshooting

Overall API Troubleshooting

This procedure checks the entire API current source programming section. This can be used when the API circuit in general is suspect and will determine if the digital programming or the analog current sources are faulty.

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Place the A7 board on an extender board and connect A7J3 to A6J5. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Set the HP 3577A as follows:
 Sweep Type CW
 SPCL FCTN
 SERVICE DIAG toggle SYN DIAG to ON
 FREQ 450.000001 MHz

NOTE

SYN DIAG mode ON cannot be saved in the instrument state register.

- c. In this mode, the Fractional-N counter is running to correct the phase detector error for the 1 Hz offset. In this mode, the programming pattern for the API's repeats at the following rate.

| API NUMBER | LOCATION | RATE |
|------------|-----------|--------|
| 1 | U5 PIN 9 | 10 s |
| 2 | U4 PIN 15 | 1 s |
| 3 | U4 PIN 12 | 100 ms |
| 4 | U4 PIN 10 | 10 ms |
| 5 | U4 PIN 7 | 1 ms |

- d. Using an oscilloscope, check for the programming pattern at the outputs of A7U4 and A7U5. If these pulses are present, then the digital section is probably operational.

Individual API Troubleshooting

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Place the A7 board on an extender board and connect A7J3 to A6J5. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the HP 8568B Spectrum Analyzer 10 MHz REF OUT to the HP 3577A EXT REF IN using a BNC cable. The EXT REF LED on the HP 3577A front panel should be lit.
- c. Connect the spectrum analyzer to A7I1.
- d. Set the HP 3577A as follows:
 Sweep Type CW
 SPCL FCTN
 SERV DIAG toggle SYN DIAG to ON
 FREQ 400.1 MHz

NOTE

SYN DIAG mode ON cannot be saved in the instrument state register.

- e. Set the spectrum analyzer as follows:

| | |
|----------------------------|-----------|
| INSTR PRESET | |
| Center Frequency | 400.1 MHz |
| Frequency Span | 1 kHz |
| Ref Level | +5 dBm |
| Resolution Bandwidth | 10 Hz |
| Sweep Time | 20 sec |
| dB/Div | 10 dB |
| CF Step Size | 10 kHz |

- f. Wait one complete sweep, then press PEAK SEARCH on the spectrum analyzer. Turn the Δ function ON and step the center frequency up to 400.11 MHz using the \uparrow key. Wait one complete sweep, then press PEAK SEARCH.
- g. The Δ amplitude reading on the spectrum analyzer should be < -50 dB. If it is not, then troubleshoot API 1.
- h. Set the frequency on the HP 3577A to 400.01 MHz.
- i. Set the center frequency on the spectrum analyzer to 400.01 MHz. Wait one complete sweep, then press PEAK SEARCH on the spectrum analyzer. Toggle the Δ function until the marker Δ reading is 0 Hz, 0 dB. Step the center frequency up to 400.02 MHz using the \uparrow key. Wait one complete sweep, then press PEAK SEARCH.
- j. The Δ amplitude reading on the spectrum analyzer should be < -50 dB. If it is not, then troubleshoot API 2.
- k. Set the frequency on the HP 3577A to 400.001 MHz.
- l. Set the center frequency on the spectrum analyzer to 400.001 MHz. Wait one complete sweep, then press PEAK SEARCH. Toggle the Δ function until the marker Δ reading is 0 Hz, 0 dB. Step the center frequency up to 400.011 MHz using the \uparrow key. Wait one complete sweep, then press PEAK SEARCH.
- m. The Δ amplitude reading on the spectrum analyzer should be < -50 dB. If it is not, then troubleshoot API 3.
- n. Set the frequency on the HP 3577A to 400.0001 MHz.
- o. Set the center frequency on the spectrum analyzer to 400.0001 MHz. Wait one complete sweep, then press PEAK SEARCH. Toggle the Δ function until the marker Δ reading is 0 Hz, 0 dB. Step the center frequency to 400.0101 MHz using the \uparrow key. Wait one complete sweep, then press PEAK SEARCH.
- p. The Δ amplitude reading on the spectrum analyzer should be < -50 dB. If it is not, then troubleshoot API 4.

Counter Troubleshooting

- a. Set the 3577A for a CW frequency at 300 MHz (the synthesizer diagnostics must be turned on). This sets the synthesizer for an integer counter divide value. Test for the proper frequencies on the nodes labeled both on the schematic and in step 9 of Table 8-10. Replace all faulty components as indicated.

Table 8-10. A7 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|--------|--|---|---------------------------------|----------|
| 1 | Test at A7J1 Press INSTR PRESET Set A7W1 to +5V | Spectrum Analyzer Start 0 Hz Stop 1500 MHz Res BW 3 MHz VBW 10 kHz Ref Level 0 dBm dB/Div 10 dB | Frequency, Amplitude, Harmonics | |
| 1 Cont | Test at A7J1 Press INSTR PRESET Set A7W1 to GND | Spectrum Analyzer Start 0 Hz Stop 1500 MHz Res BW 3 MHz VBW 10 kHz Ref Level 0 dBm dB/Div 10 dB | Frequency, Amplitude, Harmonics | |
| 1 Cont | Test at A7J1 Press INSTR PRESET Set A7W1 open | Spectrum Analyzer Start 0 Hz Stop 1500 MHz Res BW 3 MHz VBW 10 kHz Ref Level 0 dBm dB/Div 10 dB | Frequency, Amplitude, Harmonics | |
| 2 | Test at A7TP9 Press INSTR PRESET Sweep Type CW Freq 5 Hz Press SPCL FCTN toggle STN DIAC to OFF mode | Oscilloscope CH1 Coupling AC CH1Volts/Div 300mV Time/Div 2 us Trigger CH1 | Top pulse width and reset. | |

Table 8-10. A7 Circuit Board, Troubleshooting Data

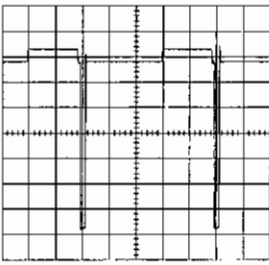
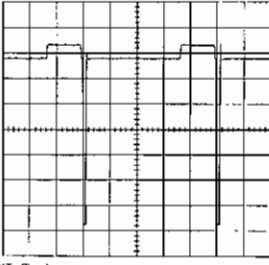
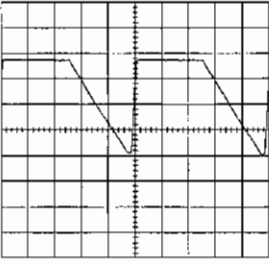
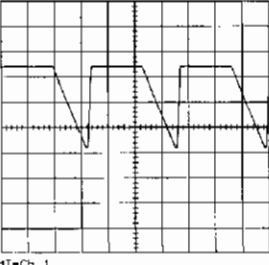
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|-----------|--|--|----------------------------|---|
| 2 Cont | Test at A7TP9 Press INSTR PRESET Sweep Type CW Freq 50 MHz Press SPCL FCTN Toggle SYN DIAG to OFF mode | Oscilloscope CH1 Coupling AC CH1 Volts/Div 300mV Time/Div 2 us Trigger CH1 | Top pulse width and reset. | CH1 CPLG=AC CH1= 300 mV/Div  MT=Ch 1 Main= 2 us/Div |
| 2 Cont | Test at A7TP9 Press INSTR PRESET Sweep Type CW Freq 200 MHz Press SPCL FCTN Toggle SYN DIAG TO OFF mode | Oscilloscope CH1 Coupling AC CH1 Volts/Div 300mV Time/Div 2 us Trigger CH1 | Top pulse width and reset. | CH1 CPLG=AC CH1= 300 mV/Div  MT=Ch 1 Main= 2 us/Div |
| 3 | Test at A7TP10 Press INSTR PRESET Sweep Type CW Freq 0 Hz Press SPCL FCTN Toggle SYN DIAG to OFF mode | Oscilloscope CH1 Coupling DC CH1 Volts/Div 2 V Time/Div 2 us Trigger CH1 | Pulse height and reset. | CH1 CPLG=DC CH1= 2 V/Div  MT=Ch 1 Main= 2 us/Div |
| 3 Cont | Test at A7TP10 Press INSTR PRESET Sweep Type CW Freq 50 MHz Press SPCL FCTN Toggle SYN DIAG to OFF mode. | Oscilloscope CH1 Coupling DC CH1 Volts/Div 2 V Time/Div 3 us Trigger CH1 | Pulse height and reset. | CH1 CPLG=DC CH1= 2 V/Div  MT=Ch 1 Main= 3 us/Div |

Table 8-10. A7 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|-----------|---|---|------------------------------------|--|
| 3 Cont | Test at A7TP10 Press INSTR PRESET Sweep Type CW Freq 200 MHz Press SPCL FCTN Toggle SYN DIAG to OFF mode | Oscilloscope CH1 Coupling DC CH1 Volts/Div 2 V Time/Div 3 us Trigger CH1 | Pulse height and reset. | <p>CH1 CPLG=DC CH1= 2 V/Div HT=Ch 1 Main= 3 us/Div</p> |
| 4 | Test at A7W11 Press INSTR PRESET Press SPCL FCTN Toggle SYN DIAG TO OFF mode | Oscilloscope CH1 Coupling DC CH1 Volts/Div 2 V Time/Div 100 ms Trigger CH1 | Pulse height and linear ramp | <p>CH1 CPLG=DC CH1= 2 V/Div Start Sweep Retrace 0 Hz Start Frequency 200 MHz Stop Frequency HT=Ch 1 Main= 100 ms/Div</p> |
| 4 Cont | Test at A7W11 Press INSTR PRESET Sweep Type Log Press SPCL FCTN Toggle SYN DIAG to OFF mode | Oscilloscope CH1 Coupling DC CH1 Volts/Div 2 V Time/Div 200 ms Trigger CH1 | Pulse height and logarithmic ramp | <p>CH1 CPLG=DC CH1= 2 V/Div HT=Ch 1 Main= 200 ms/Div</p> |
| 5 | Test at A7TP13 Press INSTR PRESET Sweep Type DC Freq 300 MHz Press SPCL FCTN Toggle SYN DIAG to ON mode. | Oscilloscope CH1 Coupling DC CH1 Volts/Div 400mV Trigger CH1 Top 2 us Bottom 20 ns | Frequency, Pulse height and width. | <p>CH1 CPLG=DC CH1= 400 mV/Div Main= 2 us/Div 100 kHz Main= 20 ns/Div HT=Ch 1 Main= 2 us/Div</p> |

Table 8-10. A7 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|--|--|------------------------------------|---|
| 6 | Test at A7TP4 Press INSTR PRESET Sweep Type CW Freq 300 MHz Press SPCL FCTN Toggle SYN DIAG to ON mode | Oscilloscope CH1 Coupling DC CH1 Volts/Div 1 V Trigger CH1 Time/Div Top 2 us Bottom 20 ns | Frequency, pulse height and width. | |
| 7 | Test at A7TP16 Press INSTR PRESET Press SPCL FCTN Toggle SYN DIAG TO ON mode | Oscilloscope CH1 Coupling DC CH1 Volts/Div 500mV Trigger CH 1 Time/Div Top 2 us Bottom 20 ns | Frequency, Pulse height and width. | |
| 8 | Test at A7TP20 Press INSTR PRESET Sweep Type CW Freq 300 MHz Press SPCL FCTN Toggle SYN DIAG to ON mode | Oscilloscope CH1 Coupling DC CH1 Volts/Div 800mV Time/Div 2 us Trigger CH1 | Frequency, pulse height and width. | |
| 9 | Digital Section Tests Press INSTR PRESET Sweep Type CW Freq 300 MHz Press SPCL FCTN Toggle SYN DIAG to ON mode. | Counter | Frequency at each test location | U11 (1,9,10,15)= 100 kHz U14 (3,4,6)= 100 kHz U14 (1,9)= 200 kHz U15 (3)= 100 kHz U15 (5,7,10,15)= 100 kHz U18(5)= 6 MHz |

8-12 SERVICE GROUP A8, OUTPUT ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.



Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.



Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

All measurements are ± 10 percent unless otherwise specified.

Troubleshooting Hints

1. Before troubleshooting this circuit board, be sure that the fault is occurring on this board by checking the following signals using the parameters in Table 2-7.

| | |
|------|------------------------------------|
| A7J2 | Swept Synthesizer Output |
| A5J1 | 300.25 MHz Offset Signal Amplifier |

Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Place the A8 Source board on an extender board. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Set the HP 3325A Synthesizer to a frequency of 100 kHz and an amplitude of -40 dBm.
- c. Move A8W5 to the top right position and connect the synthesizer to A8J8.
- d. Set the HP 3577A as follows:

| | | |
|------------|-------|---------|
| Sweep Type | | CW |
| AMPTD | | +15 dBm |

- e. Measure the level at A8J3 with an HP 8568B Spectrum Analyzer. The level should be approximately +14.3 dBm. If it is not, use Table 8-11 to determine the faulty amplifier. These levels may be measured with an HP 8568B Spectrum Analyzer and an HP 10020A 20:1 resistive divider probe, or an oscilloscope and a 1:1 probe.

Table 8-11 A8 Circuit Board, Troubleshooting Data

| | | |
|-------------------------|---------------------|---------|
| Junction of Q5 and Q6 | 0.07 V peak-to-peak | -45 dBm |
| Junction of Q25 and Q26 | 0.64 V peak-to-peak | -27 dBm |
| Junction of Q45 and Q46 | 6.6 V peak-to-peak | -6 dBm |
| Output side of R72* | 3.4 V peak-to-peak | -12 dBm |

* Connect a 50 Ω load from J3 to ground.

- f. The drop across R72 should be exactly 6 dB. If it is not, then troubleshoot the relays in the 60 dB Step Attenuator.
- g. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

Low Frequency Gain Error Correction Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Lift one side of R194. Place the A8 Source board on an extender board. Connect the instrument to the power line, and turn the POWER switch ON.
- c. Set the HP 3325A Synthesizer to a frequency of 100 kHz and an amplitude of -40 dBm.
- d. Move A8W5 to the top right position and connect the synthesizer to A8J8.
- e. Set the HP 3577A as follows:

| | |
|------------------|---------|
| SWEEP TYPE | CW |
| AMPTD | +15 dBm |
- f. Connect an oscilloscope to A8J3 and set its input impedance to 50 ohms.
- g. Adjust the DC offset on the synthesizer until the sine wave viewed on the oscilloscope is centered around 0 volts.
- h. If the source trips before the synthesizer can be adjusted, lift one side of R115 to disable the overload sense circuit.
- i. The synthesizer DC offset should not be greater than ± 25 mV and the output at J3 should be a 3 V peak-to-peak sine wave (non-clipped). If it is not, then the problem is in one of the amplifier stages and the bias levels at each stage should be checked.
- j. Re-install R194 and R115.
- k. Return the synthesizer DC offset to zero.
- l. Lift one side of R193 and the side of R331 connected to U4 pin 6.
- m. Set an external DC power supply to zero volts. Using the hole left by R331, connect the power supply through a 10 k Ω resistor to U4 pin 6.
- n. Monitor the junction of R181 and R182 with a DC voltmeter.
- o. Adjust the power supply output until the DC voltmeter reads 0 ± 0.1 V. If unable to obtain the correct voltmeter reading, check the outputs of U4 and U190 for voltages that vary with the power supply.
- p. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

Peak Detetector (CR161 and CR160) Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Place the A8 Source board on an extender board. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Set the HP 3325A Synthesizer to a frequency of 100 kHz and an amplitude of -40 dBm.
- c. Move A8W5 to the top right position and connect the synthesizer to A8J8.
- d. Set the HP 3577A as follows:

| | |
|------------------|---------|
| Sweep Type | CW |
| AMPTD | +15 dBm |
- e. Measure the output at A8J3 with an HP 8568B Spectrum Analyzer. Adjust the synthesizer for an output reading of +15 dBm \pm 0.1 dB.
- f. With an oscilloscope and a 10:1 probe, check the DC level at the junction of R149 and R150. It should be +3.5 V.
- g. Decrease the amplitude of the synthesizer by 4 dB.
- h. The DC level on the oscilloscope should be +2.5 V.
- i. If this test failed, suspect CR160 or CR161.
- j. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

Amplitude Leveling Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover. Place the A8 Source board on an extender board. Connect A7J2 to A8J1 and A5J1 to A8J2 using extender cables. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Set the HP 3577A as follows:

| | |
|------------------|-------------|
| SWEEP TYPE | CW |
| FREQ | 100.001 kHz |
| STEP SIZE | 2 Hz |
| AMPTD | +11 dBm |
| STEP SIZE | 4 dB |
- c. Adjust Level Cal 1 (R144) for approximately 1.93 V at U20 pin 2.
- d. Increase the HP 3577A amplitude to +15 dBm by pressing AMPTD \uparrow .
- e. Adjust Step Cal 1 (R142) for approximately 3.12 V at U20 pin 2.
- f. Ground one side of L125 and turn R156 and R157 fully clockwise.
- g. Decrease the HP 3577A frequency to 99.999 kHz by pressing FREQ \downarrow and decrease the amplitude to +11 dBm by pressing AMPTD \downarrow .
- h. The DC voltage at U21 pin 3 should be approximately -0.275 V.
- i. Increase the HP 3577A amplitude to +15 dBm by pressing AMPTD \uparrow .
- j. The DC voltage at U21 pin 3 should be approximately -0.437 V.
- k. Remove the ground from L125.
- l. If this test passed, then the amplitude leveling loop works. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state. Perform adjustment 4-19, Source Amplitude and Step Adjustments.
- m. Decrease the HP 3577A amplitude to +11 dBm by pressing AMPTD \downarrow (the frequency should be 99.999 kHz).

- n. Check each of the following op amp stages:
 - The voltage at U20 pin 3 should be the same as the reference voltage on U21 pin 12.
 - The output of U20 pin 3 should be constant.
 - The output of U20 pin 4 should be approximately -2 V.
 - The output of U21 pin 10 should be 0 V.
 - The Anode of CR171 should be 0.5 V.
 - The output of U21 pin 4 should be +0.24 V.
- o. Ground one side of L125. The output of U21 pin 3 should now be -0.24 V providing the output of U21 pin 4 was +0.24 V.
- p. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state. Perform adjustment 4-19 Source Amplitude and Step Adjustments.

Limiting Mixer (U13) Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, remove the power cord, and remove the top cover.
- b. Lift the side of L125 connected to CR164. Using the hole left by L125, connect the DC supply through a 10 k Ω resistor to CR164.
- c. Place the A8 Source board on an extender board. Connect A5J1 to A8J2 using extender cables. Connect the instrument to the power line, and turn the POWER switch ON.
- d. Move A8W1 to the top left position and connect the HP 8568B Spectrum Analyzer to A8J4.
- e. Adjust the DC supply to -4 V.
- f. The 300.25 MHz signal on the spectrum analyzer should be approximately -33.7 dBm.
- g. Change the DC supply voltage to -7 V.
- h. The 300.25 MHz signal on the spectrum analyzer should be approximately -29 dBm.
- i. If this test failed, replace the U13 mixer.
- j. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

8-13 SERVICE GROUP A11, FAST PROCESSOR ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on:

INSTR PRESET

All Oscilloscope waveforms are taken using a 1:1 probe and a HP 1980B Oscilloscope. All signatures are taken using a HP 5006A Signature Analyzer.

NOTE

When running all signature analysis routines, keep the signature analyzer and the HP 3577A physically far from each other to prevent digital signal coupling.

Troubleshooting Hints

- a. Self Tests and Diagnostics
Use the power on self tests and the service diagnostics described in Section II to isolate all problems. First verify that the problem encountered is on the A11 Fast Processor circuit board and not the A13 Main Processor-Controller board by running the power on self tests. Note which tests fail and troubleshoot the indicated circuit using the SA1 routine described below. The service diagnostics will test the Fast Processor and Main Processor-Controller communication, and will make the Fast Processor run a self test. Again, note the indicated circuit and test it using the SA1 routine.

All signatures for the A11 Fast Processor assembly are taken with the Main Processor-Controller (A13) and Trace Memory (A12) boards removed and all three Receiver (A1) boards disconnected from the fast bus by placing A1W5 and A1W6 into the Tri-State position. These jumpers are available from the top of the instrument without removing the Receiver boards.

b. SA1 Signature Analysis Routine

The SA1 signature Analysis routine is the general purpose signature analysis routine. Use SA1 to isolate the fault as narrowly as possible. After the 3577A is placed into SA1 mode (set W1 to the SA1 position) and power is applied, the fast processor must be reset by momentarily shorting INIT (A11TP6) to ground.

SA1 consists of ten different subtests. Due to the Fast Processor clock frequencies involved, different test configurations are required for stable, repeatable signatures. The test configuration for the first subtest is described below. At the beginning of each test, first set the signature analyzer as described below, then make any changes indicated by the subtest.

Signature Analysis SA1 Routine Test Set Up

Clock A11J3 pin3
 Qualify No Connection
 Start A11J3 pin5
 Stop A11J3 pin4

Signature Analyzer Set Up

Clock 
 Qualify N/A
 Start 
 Stop 

+5 V signature = 7A70

GND signature = 0000

c. SA2 Signature Analysis Routine

The SA2 Signature Analysis routine is to be used only after SA1 has been used to narrow down faults to the components covered in SA2. Move W1 to the SA2 position and set the Signature Analyzer as described below.

Signature Analysis SA2 Routine Test Set Up

Clock A11J3 pin3
 Qualify No Connection
 Start A11J3 pin5
 Stop A11J3 pin4

Signature Analyzer Set Up

Clock 
 Qualify N/A
 Start 
 Stop 

+5 V signature = 9515

GND signature = 0000

The SA2 mode is software driven, so the fast processor must be reset after moving the jumper to SA2 mode. To reset the fast processor, momentarily short INIT (A11TP6) to ground. Verify a good reset by watching for a toggle on the Signature Analyzer gate LED.

Table 8-12. A11 Circuit Board, Troubleshooting Data




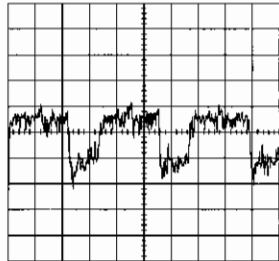
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|---|---|--------------------------------|---|
| 1 | Test at A11P1B30 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 100 mV Time/Div 150 ns Trigger CH1 | Risetime, Period, noise. | <p>CH1: CPLG=AC CH1: 100 mV/Div</p>  <p>MT=Ch 1 Main=150 ns/Div</p> |
| 2 | Test at A11P1B3 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 2 V Time/Div 150 us Trigger CH1 | Risetime, Period, noise. | <p>CH1: CPLG=AC CH1: 2 V/Div</p>  <p>MT=Ch 1 Main=150000 ns/Div</p> |
| 3 | Test at A11P1A7 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 2 V Time/Div 150 us Trigger CH1 | Risetime, Period, noise. | <p>CH1: CPLG=AC CH1: 2 V/Div</p>  <p>MT=Ch 1 Main=150000 ns/Div</p> |
| 4 | Test at A11TP4 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 2 V Time/Div 30 us Trigger CH1 | Risetime, Period, noise. | <p>CH1: CPLG=AC CH1: 2 V/Div</p>  <p>MT=Ch 1 Main=30000 ns/Div</p> |

Table 8-12. A11 Circuit Board, Troubleshooting Data

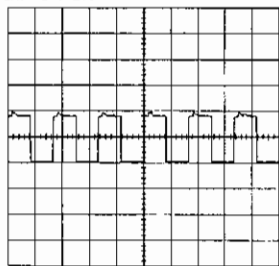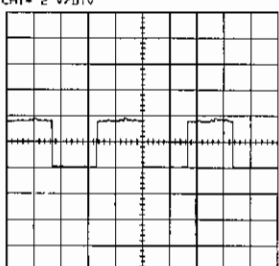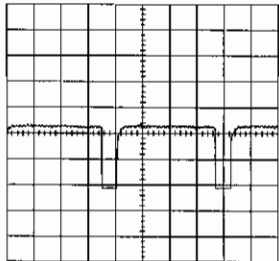

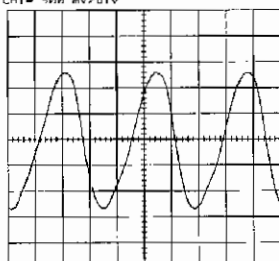
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|--|--|--|--|
| 5 | Test at A11P1B5 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 700 mV Time/Div 80 ns Trigger CH1 | Risetime, Period, noise. | <p>CH1 CPLG=RC CH1= 700 mV/Div</p>  <p>MT=Ch 1 Main=80 ns/Div</p> |
| 6 | Test at A11TP1 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 700 mV Time/Div 80 ns Trigger CH1 | Risetime, Period, noise. | <p>CH1 CPLG=RC CH1= 700 mV/Div</p>  <p>MT=Ch 1 Main=80 ns/Div</p> |
| 7 | Test at A11TP1 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 500 mV Time/Div 10 ns Trigger CH1 | Clean signal for TTL level transition | <p>CH1 CPLG=RC CH1= 500 mV/Div</p>  <p>MT=Ch 1 Main=10 ns/Div</p> |
| 8 | Digital Tests Press INSTR PRESET Set A11W1 to SA1 A11W2 to mid A11W3 to mid | Oscilloscope CH1 Coupling AC CH1 V/Div 1 V Time/Div 100 us Trigger CH1 | Squarewave frequency. | <p>A11U60 pin 5 12 kHz pin 9 12 kHz A11U35 pin 14 12 kHz pin 13 6 kHz</p> <p>12 kHz = 83.3 us 6 kHz = 166.7 us</p> |

Table 8-13a. A11 Circuit Board, Signature Analysis Data (SA1)

| Component | Pin | Signature | Component | Pin | Signature | |
|-----------|------|-----------|-----------|------|-----------|------|
| U1 to U6 | 1 | 0772 | U6 | 9 | 48CU | |
| | 2 | 4U2A | | 10 | FH4C | |
| | 3 | 4442 | | 11 | 26HU | |
| | 4 | P030 | | 13 | HF26 | |
| | 5 | H0AA | | 14 | C9P0 | |
| | 6 | HA07 | | 15 | 9P5H | |
| | 7 | C21A | | 16 | 8UF5 | |
| | 8 | H62A | | 17 | 384A | |
| | 18 | 7A70 | | U7 | 2 | 40F2 |
| | 21 | U424 | | | 5 | 40PF |
| | 22 | 1734 | | | 6 | A884 |
| | 23 | 9635 | | | 9 | 5667 |
| | U1 | 9 | | | 8185 | 11 |
| 10 | | 81H9 | 12 | 8U70 | | |
| 11 | | P1A4 | 15 | 9482 | | |
| 13 | | 9070 | 16 | U706 | | |
| 14 | | A795 | 19 | U0H2 | | |
| 15 | | AFFU | U8 | 2 | 479P | |
| 16 | | HU98 | | 5 | F950 | |
| 17 | PP0F | 6 | | U8C2 | | |
| U2 | 9 | 8U3H | 9 | 7954 | | |
| | 10 | 92A0 | 11 | 0000 | | |
| | 11 | 8A94 | 12 | F6AP | | |
| | 13 | 8H5H | 15 | 77HA | | |
| | 14 | PUC4 | 16 | 7U48 | | |
| | 15 | U2A9 | U9 | 2 | C886 | |
| 16 | U164 | 5 | | 5C55 | | |
| 17 | UP91 | 6 | | F7A0 | | |
| U3 | 9 | 710F | | 9 | 74HA | |
| | 10 | C6AC | | 11 | 0000 | |
| | 11 | 62C0 | 12 | 12AA | | |
| | 13 | 2554 | 15 | 98P5 | | |
| | 14 | 31FC | 16 | 642F | | |
| | 15 | P9C5 | 19 | 3158 | | |
| | 16 | 8U40 | U10 | 2 | 7CPC | |
| 17 | 46F8 | 5 | | 1929 | | |
| U4 | 9 | U7H7 | | 6 | H1UA | |
| | 10 | 3252 | 9 | P4HU | | |
| | 11 | 61A6 | 11 | 0000 | | |
| | 13 | 8HP6 | 12 | 81CC | | |
| | 14 | 10C7 | 15 | 885C | | |
| | 15 | F9CP | 16 | UF1H | | |
| | 16 | 2H79 | U11 | 2 | 973F | |
| 17 | 76AA | 5 | | 4P0A | | |
| U5 | 9 | 2P78 | | 6 | 2F26 | |
| | 10 | 9F15 | | 9 | 8589 | |
| | 11 | CHFH | | 11 | 0000 | |
| | 13 | 08P9 | | 12 | 0474 | |
| | 15 | 0C12 | | 15 | PF1C | |
| | 16 | 584H | 16 | F43C | | |
| | 17 | 8877 | | | | |

Table 8-13a. A11 Circuit Board, Signature Analysis Data (SA1) Cont.

| Component | Pin | Signature | Component | Pin | Signature | | |
|-----------|-----|-----------|-----------|------|-----------|-------|------|
| U12 | 2 | 245U | U25 | 15 | 0000 | | |
| | 5 | P6A5 | | 29 | H32H | | |
| | 6 | 80AA | | 36 | C9PH | | |
| | 9 | 8866 | | 37 | 3663 | | |
| | 11 | 0000 | | 38 | 2CU4 | | |
| | 12 | A95C | | 39 | H1A5 | | |
| | 15 | 5FU0 | | 15 | 0000 | | |
| | 16 | 9F25 | | 25 | U15U | | |
| | U13 | 7 | | 7A70 | 29 | 2H4C | |
| | | 14 | | 7A70 | 36 | HFUCU | |
| U14 | 7 | 7A70 | 37 | 14F6 | | | |
| | 14 | 7A70 | 38 | 548H | | | |
| U15 | 14 | 4FUU | 39 | 09HF | | | |
| | 31 | 0000 | U27 | 15 | 0000 | | |
| U16 | 3 | 3HPP | | 23 | U00C | | |
| | 12 | 479P | | 29 | C2F3 | | |
| | 13 | 0C61 | | 36 | 20C3 | | |
| U17 | 1 | 784U | | 37 | CF8C | | |
| | 2 | 4HU1 | | 38 | 9690 | | |
| | 3 | C00P | 39 | 56U3 | | | |
| U18 | 15 | 7066 | U28 | 4 | 9H9F | | |
| | 15 | 6U69 | | 5 | 9539 | | |
| U21 | 1 | 7449 | 10 | 2P6U | | | |
| | 2 | 1602 | U29 | 1 | 642F | | |
| | 3 | 2374 | | 2 | 642F | | |
| | 4 | AA37 | | 3 | 1P5F | | |
| | 9 | 53F5 | | 8 | 2P6U | | |
| | 11 | H32H | | 9 | 5C55 | | |
| | 12 | 2H4C | | 10 | C886 | | |
| | 13 | C2F3 | | 11 | 4C28 | | |
| | 14 | P658 | | 12 | 3158 | | |
| | 15 | 4417 | | 13 | 3158 | | |
| | U23 | 3 | | HPH3 | U30 | 5 | PU50 |
| | | 18 | | 4HU1 | | 10 | FP6H |
| | | 19 | | 26U8 | | 12 | 3F7C |
| U24 | 15 | 0000 | | 15 | 0000 | | |
| | 22 | UHUU | U31 | 2 | P91U | | |
| | 23 | 207U | | 3 | 7A70 | | |
| | 29 | 53F5 | | 4 | 936U | | |
| | 31 | 784U | | 6 | 936U | | |
| | 33 | 4HU1 | | 9 | C41H | | |
| | 36 | 370C | | 10 | FP6H | | |
| | 37 | 8C91 | | 11 | 7A70 | | |
| | 38 | 7066 | | U35 | 2 | 4U2A | |
| | 39 | 784U | | | 13 | 7UAP | |
| | | 14 | | | 4858 | | |
| | | U36 | 1 | 0496 | | | |
| | | | 5 | HPH3 | | | |
| | | U43 | 7 | 05HP | | | |
| | | | 9 | 4858 | | | |

Table 8-13a. A11 Circuit Board, Signature Analysis Data (SA1) Cont.

| Component | Pin | Signature | Component | Pin | Signature |
|-----------|-----|-----------|-----------|------|-----------|
| U44 | 1 | 0000 | U48 | 3 | 0000 |
| | 2 | 0000 | | 5 | 245U |
| | 3 | 0000 | | 6 | 5P2U |
| | 4 | 0000 | | 8 | 9FH9 |
| | 5 | 7A70 | | 9 | P6A5 |
| U45 | 5 | C2F3 | U49 | 8 | F2UA |
| U46 | 15 | 207U | U50 | 3 | 40H0 |
| | 17 | UHUU | 8 | C88A | |
| U47 | 3 | U15U | U56 | 6 | 7A70 |
| | 5 | U00C | U57 | 6 | 7PP6 |
| | | | U59 | 9 | U424 |
| | | | U60 | 3 | 7A70 |
| | | | | 5 | UAUU |
| | | | | 9 | 4858 |

Table 8-13b. A11 Circuit Board, Signature Analysis Data (SA1)

| Move Signature Analyzer QUAL lead to A11U33 pin 11. Set QUAL mode to LOW. +5 V Signature = 001U Momentarily ground TP6 | | |
|--|-----|-----------|
| Component | Pin | Signature |
| U33 | 1 | 0009 |
| | 4 | 001U |
| | 5 | 0000 |
| | 9 | 0009 |
| | 10 | 0009 |
| | 11 | 0000 |
| | 13 | 001U |
| | 14 | 001U |
| | 15 | 0009 |
| | 15 | 0009 |
| U34 | 1 | 0009 |
| | 4 | 001U |
| | 9 | 0009 |
| | 10 | 0009 |
| | 13 | 001U |
| U41 | 15 | 0009 |
| | 1 | 0009 |
| | 4 | 001U |
| | 9 | 0009 |
| | 10 | 0009 |
| U42 | 13 | 001U |
| | 15 | 0009 |
| | 1 | 0009 |
| | 9 | 0009 |
| | 10 | 0009 |
| | 15 | 0019 |

Table 8-13c. A11 Circuit Board, Signature Analysis Data (SA1)

| Move Signature Analyzer QUAL lead to A11U12 pin 19. Set QUAL mode to LOW. + 5 Signature = CH38 | | |
|--|-----|-----------|
| Component | Pin | Signature |
| U37 | 4 | 0000 |
| | 5 | 0000 |
| | 7 | AAPC |
| U38 | 1 | 6C05 |
| | 2 | U282 |
| | 3 | 75AC |
| | 5 | 3U80 |
| | 12 | 017A |
| | 13 | 3159 |
| | 14 | 7095 |
| U39 | 15 | 8C8P |
| | 4 | 0000 |
| | 6 | 3A68 |
| | 7 | H540 |
| | 9 | 6A83 |
| U40 | 11 | 7CF9 |
| | 1 | 3U80 |
| | 3 | 82C8 |
| | 5 | CH38 |
| | 6 | CH38 |
| | 8 | 75A5 |
| | 11 | CH38 |
| | 12 | 0000 |

Table 8-13d. A11 Circuit Board, Signature Analysis Data (SA1)

| Move the Signature Analyzer QUAL lead to A11U12 pin 6. Set QUAL mode to LOW. +5 Signature = F4AU | | |
|--|------|-----------|
| Component | Pin | Signature |
| U51 | 1 | 0000 |
| | 2 | 91H9 |
| | 3 | C024 |
| | 4 | C014 |
| | 5 | 9388 |
| | 6 | 91A5 |
| | 7 | C3HP |
| | 8 | C014 |
| | 9 | 918H |
| | 11 | A97A |
| | 12 | 9321 |
| | 13 | C3PP |
| | 14 | C3HP |
| | 15 | 93A0 |
| | 16 | 91A5 |
| | 17 | C3HP |
| | 18 | C3HP |
| | U52 | 19 |
| 1 | | 0000 |
| 2 | | H3U8 |
| 3 | | C014 |
| 4 | | C3HP |
| 5 | | H351 |
| 6 | | 92HP |
| 7 | | C014 |
| 8 | | C3HP |
| 9 | | F986 |
| 11 | | A97A |
| 12 | | HF2P |
| 13 | | C0H5 |
| 14 | | 2A7U |
| 15 | | F056 |
| 16 | | PACP |
| 17 | | C7H8 |
| 18 | | C3HP |
| 19 | UA05 | |

NOTE: These signatures are valid for both sides of A13RP3 and A13RP4.

Table 8-13e. A11 Circuit Board, Signature Analysis Data (SA1)

| Move Signature Analyzer CLOCK lead to A11U19 pin 1. Set QUAL mode to LOW. +5 Signature = 8132 | | |
|--|-----|-----------|
| Component | Pin | Signature |
| U19 | 3 | 53A1 |
| | 5 | 4898 |
| | 7 | UF13 |
| | 9 | 34P0 |
| | 12 | PPA7 |
| | 14 | H90C |
| | 16 | 9051 |
| | 18 | 2UH0 |
| U20 | 3 | A1UH |
| | 5 | 9C81 |
| | 7 | PAU6 |
| | 9 | C8PU |
| | 12 | 5178 |
| | 14 | 467C |
| | 16 | 3A9F |
| | 18 | 09P4 |

NOTE: All buffer output signatures are the same as input signatures.

Table 8-13f. A11 Circuit Board Signature Analysis Data (SA1)

| Move the Signature Analyzer CLOCK lead to A11U22 pin 1. Set QUAL mode to LOW. +5 Signature = 6PF5 | | |
|---|-----|-----------|
| Component | Pin | Signature |
| U22 | 3 | 6516 |
| | 4 | 6516 |
| | 5 | 6516 |
| | 6 | 6516 |
| | 7 | PCPC |
| | 9 | U050 |
| | 11 | 6516 |
| | 12 | 958P |
| | 13 | HU2H |

**Table 8-13g. A11 Circuit Board
Signature Analysis Data (SA1)**

Move the Signature Analyzer QUAL lead to A11U24 pin 6. Set QUAL mode to HIGH.

+5 Signature = 6692

| Component | Pin | Signature |
|-----------|-----|-----------|
| U24 | 8 | F4PP |
| | 9 | 3U1C |
| U25 | 8 | 3U1C |
| | 9 | UC73 |
| U26 | 8 | UC73 |
| | 9 | UA54 |
| U27 | 8 | UA54 |
| | 9 | HA91 |

**Table 8-13h. A11 Circuit Board
Signature Analysis Data (SA1)**

Move the Signature Analyzer QUAL lead to A11U32 pin 1. Set QUAL mode to LOW.

+5 Signature = CH38

| Component | Pin | Signature |
|-----------|-----|-----------|
| U32 | 3 | 0000 |
| | 5 | 0000 |
| | 7 | 75A5 |

**Table 8-13i. A11 Circuit Board
Signature Analysis Data (SA1)**

Move the Signature Analyzer QUAL lead to A11U53 pin 1. Set QUAL mode to HIGH.

+5 Signature = 6PF5


| Component | Pin | Signature |
|-----------|-----|-----------|
| U53 | 2 | U084 |
| | 3 | 6PF5 |
| | 7 | C0C6 |
| | 9 | H786 |
| | 14 | PCPC |

**Table 8-13J. A11 Circuit Board
Signature Analysis Data (SA1)**

| Move the Signature Analyzer QUAL lead to A11U54 pin 1. Set QUAL mode to LOW. +5 Signature = CH38 | | | |
|--|------|-----------|------|
| Component | Pin | Signature | |
| U54 | 2 | 97HC | |
| | 3 | 8CF9 | |
| | 4 | 024H | |
| | 5 | 92H2 | |
| | 6 | 97F0 | |
| | 7 | 2FP4 | |
| | 8 | H8FP | |
| | 9 | 1958 | |
| | 11 | 82C8 | |
| | 12 | 17H3 | |
| | 13 | P90C | |
| | 14 | 6HH8 | |
| | 15 | 97F0 | |
| | U55 | 2 | H565 |
| | | 3 | 01AH |
| 4 | | 76AC | |
| 5 | | 75AC | |
| 6 | | 6C05 | |
| 7 | | 2261 | |
| 8 | | U7U9 | |
| 9 | | U282 | |
| 11 | | 82C8 | |
| 12 | | 5A15 | |
| 13 | | U655 | |
| 14 | | 7631 | |
| 15 | | 6958 | |
| 16 | | 5HH3 | |
| 17 | | 8918 | |
| 18 | 43A3 | | |
| 19 | 32F7 | | |

**Table 8-14. A11 Circuit Board
Signature Analysis Data (SA2)**

| + 5 Signature = 9515 | | | | | |
|----------------------|------|-----------|-----------|------|-----------|
| Component | Pin | Signature | Component | Pin | Signature |
| U19 | 3 | AC37 | U25 | 15 | 0000 |
| | 5 | 56CA | | 36 | 876F |
| | 7 | 56CA | | 37 | 122F |
| | 9 | AC37 | | 38 | 8264 |
| | 12 | 5HUF | 39 | 10F8 | |
| | 14 | AP3U | U26 | 15 | 0000 |
| | 16 | AP3U | | 36 | 876F |
| | 18 | 5HUF | | 37 | 122F |
| | U20 | 3 | AP3U | 38 | 8264 |
| | | 5 | 5HUF | 39 | 10F8 |
| 7 | | AP3U | U27 | 15 | 0000 |
| 9 | | AC37 | | 36 | 876F |
| 12 | | 56CA | | 37 | 122F |
| 14 | | 5HUF | | 38 | 8264 |
| 16 | | 56CA | 39 | 10F8 | |
| 18 | | AC37 | U45 | 2 | 5HHF |
| U21 | 1 | 2PAF | | 3 | 9515 |
| | 2 | 2U1A | | 5 | 0020 |
| | 3 | 2PAF | 10 | 0000 | |
| | 4 | 2U1A | 11 | 0020 | |
| | 9 | CCC9 | U59 | 9 | AF44 |
| | 11 | CCC9 | | | |
| | 12 | CCC9 | | | |
| | 13 | 0020 | | | |
| | 14 | 2PAF | | | |
| | 15 | 2U1A | | | |
| U24 | 1 | A352 | | | |
| | 2 | 967C | | | |
| | 3 | FU97 | | | |
| | 4 | 50C8 | | | |
| | 5 | H5C0 | | | |
| | 6 | 0000 | | | |
| | 7 | U5P2 | | | |
| | 11 | 01C6 | | | |
| | 12 | U76H | | | |
| | 13 | 7FU0 | | | |
| | 14 | CG95 | | | |
| | 15 | 0000 | | | |
| | 17 | A170 | | | |
| | 18 | 9U2U | | | |
| | 19 | 2FU6 | | | |
| | 20 | 46A5 | | | |
| | 26 | CA76 | | | |
| | 27 | 3U4A | | | |
| | 28 | F9AP | | | |
| | 31 | 10F8 | | | |
| 36 | 876F | | | | |
| 37 | 122F | | | | |
| 38 | 8264 | | | | |
| 39 | 10F8 | | | | |

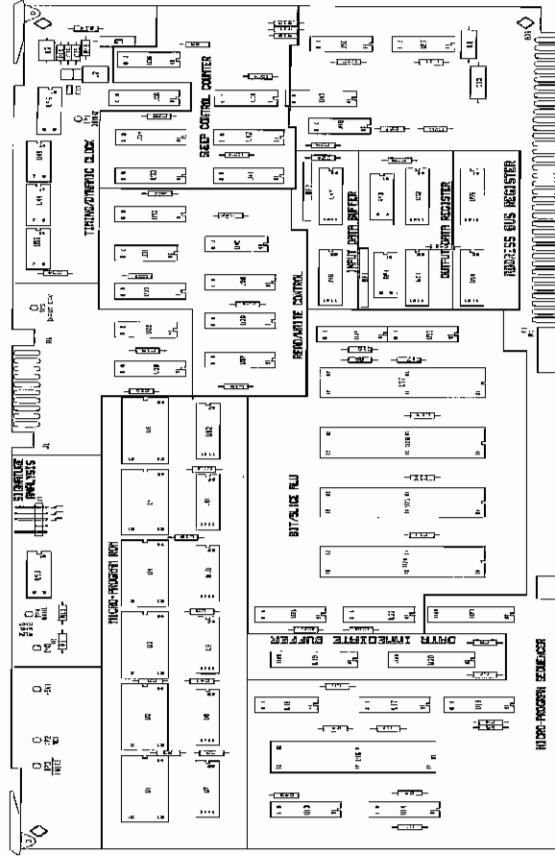

8-14 SERVICE GROUP A12, TRACE MEMORY ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on:

INSTR PRESET

All Oscilloscope waveforms are taken using a 1:1 probe and a HP 1980B Oscilloscope.

Troubleshooting Hints

- a. The A12 Trace Memory board can be fully tested from the front panel without removal of the instrument covers. Press the SPCL FCTN hardkey and select the SERVICE DIAG softkey. Press the TRC MEM TEST softkey to test the A12 circuit board. Replace all components as indicated in the selftest.

NOTE

The A11 Fast Processor must be operational for the trace memory self test to operate. To verify that the Fast Processor is operating correctly, run the FASTPROC TEST and the FAST BUS INT TEST. If both of these tests pass, then the Fast Processor is not causing false Trace Memory failures.

- b. If the battery back-up is suspect of being bad, connect the Oscilloscope to A12TP1. With power applied to the HP 3577A, the voltage should be approximately 5 V. With the 3577A power turned off, the voltage should read approximately 3 V. Repeat the above for A21U19 pin 6. With power applied, the voltage should be approximately 0 V. With the power removed the voltage should be approximately 3 V.

8-15 SERVICE GROUP A13, MAIN PROCESSOR-CONTROLLER ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.



Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on:

INSTR PRESET

All Oscilloscope waveforms are taken using a 1:1 probe and a HP 1980B Oscilloscope. All signatures are taken using a HP 5006A Signature Analyzer.

NOTE

When running all signature analysis routines, keep the signature analyzer and the HP 3577A physically far from each other to prevent digital signal coupling.

Troubleshooting Hints

- a. This procedure assumes the initial Fault Isolation procedure listed in Section II has been followed and has indicated running these procedures. If the Fault Isolation Procedures have not been run, perform them now to make sure that the fault is resident on the Main Processor-Controller circuit board.
- b. Clock signal waveforms are shown in Table 8-15. Check these waveforms as described in Table 8-15.

- c. The following procedure is to be used as a general troubleshooting procedure when a fault exists on the A13 Main Processor-Controller board. Refer to the Digital Block Diagram in Section II when performing these tests as it shows the interaction of all the bus in the instrument.
 1. Disconnect the mains power cord from the rear panel and remove the top cover. Reconnect the mains power cord and turn the instrument on.
 2. Allow about 2 minutes for the display to warm up.
 3. If the display does not operate, be sure that the display is not causing the problem by running the Fault Isolation procedures in Section II.
 4. With the instrument properly warmed up, press the RESET pushbutton (A13S1) through the shield over the A13 board. Watch the ROM and RAM test LEDs.
 5. If the ROM test LED extinguishes after approximately 5 seconds, then the ROM test has passed. This test verifies the ROM checksums and the first buffer on the main processor address and data bus.
 6. If the RAM test LED extinguishes after approximately 10 seconds, then the RAM test has passed. This test verifies the RAM with a marching ones test, and the second buffer on the main processor address and data bus. Note that all peripheral devices (fast processor, display, HP-IB, etc) are tied to this bus, so if any of these buffers are loading the bus, the RAM will not pass the self test. This self test verifies all RAM except that which have non-volatile requirements. The non-volatile memory stores the saved instrument states. If the instrument does not operate correctly when a saved state is recalled, then perform the total RAM test as described in the Power On Self Tests in Section II.
 7. Run the Service Diagnostics for the peripheral devices. To run these diagnostics, press the SPCL FCTN hardkey and select the SERVICE DIAC softkey. All service diagnostics to be run, and any special instructions for running them, are listed below
 - a. TEST PATTERN: This test requires no external interaction with the user. The display test pattern as documented in the HP 1345A manual supplied with this instrument. This will verify the display buffer and the display operation. To exit from this test mode, press the INSTR PRESET hardkey.
 - b. TRC MEM TEST: This test performs a marching ones test on the A12 Trace Memory board. This test requires no external interaction with the user and is fully documented in Section II of this manual. Please note that the main processor talks to the trace memory through the fast processor bus. If the fast processor does not operate correctly, it may cause the trace memory test to fail, even though the trace memory is good.

- c. **FASTPROC TEST:** This test has the main processor command the fast processor to perform a self test, and send the results back to the main processor. This verifies the main processor, fast processor buffers and the fast processor logic.
 - d. **FAST BUS INT TEST:** This test has the main processor write to one of the main processor, fast processor buffers, then read the data from the other. The test is then repeated write to the other buffer and reading from the first. The fast processor decoding logic must be operational for this test to pass.
 - e. **DISP MEM TEST:** This test verifies the memory board in the HP 1345A display. The display buffer is also verified in this test. This is fully documented in Section II of this manual.
 - f. **DISP HP-IB:** This test makes the HP-IB circuit read the HP-IB control and data lines at the rear panel. Note that HP-IB protocol will not be followed in this test. To run this test, the operator should ground each of the HP-IB control and data lines to the connector shield. As the lines are grounded, a dot should appear in the slot for it drawn on the display. To exit from this test mode, press the INSTR PRESET hardkey.
8. Run the confidence test for each of the inputs. The confidence test is run by pressing the SPCL FCTN hardkey and the CONF TEST softkey. The test requires a cable to connect the source to the channel under test. This test will verify that the instrument control bus is working properly, along with any hard analog failures.
- d. Due to the interaction of the circuits on this board, it is impossible to have a troubleshooting tree which would catch all cases of error. If the procedure in step c does not lead you to the fault, then perform each of the signature analysis routines listed below. Run the SA1 routine first, as it is the most general test. SA2 is to be used when ambiguity remains after running SA1.

SYMPTOM: Unit fails ROM self test.

- a. Check the +5V supply on the A13 board at A13TP2. The reading should be $5\text{ V} \pm 0.2\text{V}$. If the voltage is bad, replace the faulty components.
- b. Check for the clock signal at TP3 with the oscilloscope. The signal should look like the one in step 3 of Table 8-15. With the signal on the oscilloscope, press the Line pushbutton, off then on. With the power on, the 8 MHz phase locked loop will free run. The frequency of the free run should be between 6 and 8 MHz. If the frequency is outside these limits, the microprocessor may not reset correctly, and will hang up. When the $\overline{\text{POP}}$ line goes high, then the signal should phase lock to the 1 MHz input signal from the A6 reference board. If either of these tests fail, then replace the faulty components.

- c. Run the SA1a signature analysis routine. If the SA1a tests pass, then run the SA1b signature analysis routine. This tests the ROM as a total unit. If this test fails, run SA1c to test the individual ROM components.

SYMPTOM: Unit fails RAM self test.

- a. If only one RAM shows up as bad, then it is most likely a RAM chip failure. If half or all of RAM fails, then it is most likely a bus or an address decoder, A13U9 or U10, failure. Replace all faulty components.
- b. Look at each data bus line with the oscilloscope while the RAM test is in progress. Each data line should toggle. If any data line does not toggle, then one of the buffers tied to this bus is most likely loading it down. Replace all faulty components.
- c. Run the SA2b signature analysis routine on the data bus buffers. If +5V signature is bad, then look in the Address Decoding functional sub-block for failures. If the +5V signature is good, then check all the buffers tied to the RAM bus.

SA1 Signature Analysis Routine

This routine is the general signature analysis routine for the Main Processor-Controller board. Run this test first when led to the Main Processor-Controller from the Fault Isolation procedures. Remove the Fast Processor (A11) and the Trace Memory (A12) boards. Disconnect all three Receiver (A1) boards from the fast bus by placing A1W5 and A1W6 into the TriState position. The SA1 test set is described below.

Signature Analysis SA1 Routine Test Set Up

| | |
|---------------|---------------|
| Clock | A13J2 |
| Start | A13J2 |
| Stop | A13J2 |
| Qualify | No Connection |

Signature Analyzer Set Up

| | |
|---------------|---|
| Clock |  |
| Start |  |
| Stop |  |
| Qualify | N/A |

+5 V signature = UP73
 GND signature = 0000

Set the signature analysis jumper A13W1 to the TEST position and connect the Signature Analyzer to the SA test connectors. Press the reset switch A13S1 to start the SA mode.

10. SA2 Signature Analysis Routine

This routine is used primarily to test the "kernel" and isolating functional sub-blocks from each other. This is done in the SA mode by setting all the tri-state buffers to read mode only. Run this after completing the Main Processor-Controller SA1 Signature Analysis Test and a functional sub-block is suspect. Remove the Fast Processor (A11) and the Trace Memory (A12) boards. Disconnect all three Receiver (A1) boards from the fast bus by placing A1W5 and A1W6 into the Tri-State position. The SA2 test set up is described below.

Signature Analysis SA2 Routine Test Set Up

| | |
|---------------|---------------|
| Clock | A13J2 |
| Start | A13TP4 |
| Stop | A13TP4 |
| Qualify | No Connection |

Signature Analyzer Set Up

| | |
|---------------|---|
| Clock |  |
| Start |  |
| Stop |  |
| Qualify | N/A |

+5 V signature = AU47
GND signature = 0000

Set the signature analysis jumper A13W2 to the TEST position and connect the Signature Analyzer to the SA test connectors. Press the reset switch A13S1 to start the SA mode.

Table 8-15. A13 Circuit Board, Troubleshooting Data

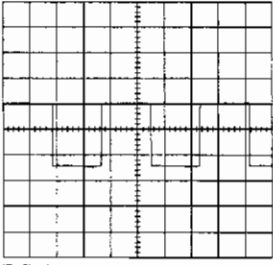
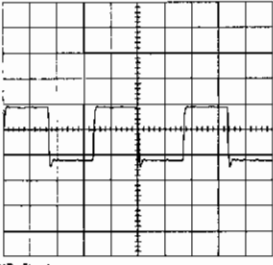
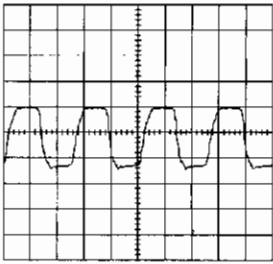
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|--|--|----------------------|--|
| 1 | Test at A13U77 Pin 8 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 1.5 V Time/Div 70 us Trigger CH1 | Risetime, Period | <p>CH1 CPLG=RC CH1= 1.5 V/Div</p>  <p>MT=Ch 1 Main=70000 ns/Div</p> |
| 2 | Test at A13P2A30 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 1.5 V Time/Div 300 ns Trigger CH1 | Risetime, Period | <p>CH1 CPLG=RC CH1= 1.5 V/Div</p>  <p>MT=Ch 1 Main=300 ns/Div</p> |
| 3 | Test at A13TP3 Press INSTR PRESET | Oscilloscope CH1 Coupling AC CH1 V/Div 1.5V Time/Div 50 ns Trigger CH1 | Risetime, Period | <p>CH1 CPLG=RC CH1= 1.5 V/Div</p>  <p>MT=Ch 1 Main=50 ns/Div</p> |
| | | | | |

Table 8-16a. A13 Circuit Board, Signature Analysis Data (SA1a)

This signature analysis test is used to test the microprocessor and all functional sub-blocks. This test should be run first, after fault isolation to the A13 board is performed.

+ 5V Signature = UP73

| Component | Pin | Signature | Component | Pin | Signature | |
|-----------|------|-----------|-----------|------|-----------|------|
| U1 | 9 | UP73 | U6 | 2 | F3U8 | |
| | 10 | 0000 | | 3 | FA75 | |
| | 12 | UP73 | | 4 | FAF6 | |
| | 13 | UP73 | | 5 | 85U4 | |
| | 17 | UP73 | | 6 | 55H1 | |
| | 18 | UP73 | | 7 | 334U | |
| | 21 | UP73 | | 8 | 0U16 | |
| | 22 | UP73 | | 9 | 00UP | |
| | 26 | UP73 | | 11 | 00UP | |
| | 27 | UP73 | | 12 | 0U16 | |
| | 28 | 0000 | | 13 | 334U | |
| | 29 | 55H1 | | 14 | 55H1 | |
| | 30 | 334U | | 15 | 85U4 | |
| | 31 | 0U16 | | 16 | FAF6 | |
| | 32 | 00UP | | 17 | FA75 | |
| | 33 | UUUU | | 18 | F3U8 | |
| | 34 | 34P0 | | U7 | 3 | 0000 |
| | 35 | 0U52 | | | 5 | UP73 |
| | 36 | 48C6 | 6 | | UP8H | |
| | 37 | HAP7 | 7 | | 0U16 | |
| | 38 | 85U4 | 8 | | 334U | |
| | 39 | FAF6 | 9 | | 55H1 | |
| | 40 | 3HPH | 11 | | 55H1 | |
| | 41 | U1U8 | 12 | | 334U | |
| | 42 | FA75 | 13 | | 0U16 | |
| | 43 | C5F0 | 14 | | UP8H | |
| | 44 | F3U8 | 15 | UP73 | | |
| | 45 | 55H1 | 16 | 0000 | | |
| | 46 | 33U4 | 18 | 0000 | | |
| | 47 | 0U16 | U9 | 1 | 3HPH | |
| | U2 | 8 | | H06U | 2 | U1U8 |
| | | 12 | | H06U | 3 | FA75 |
| | U5 | 2 | | C5F0 | 4 | UP8H |
| 3 | | U1U8 | | 5 | 0000 | |
| 4 | | 3HPH | | 6 | 0U16 | |
| 5 | | 48C6 | | 7 | F402 | |
| 6 | | HAP7 | | 9 | 6C58 | |
| 7 | | 0U52 | | 12 | CHU3 | |
| 8 | | 34P0 | | 13 | F120 | |
| 9 | | UUUU | 14 | 05PA | | |
| 11 | | UUUU | 15 | 0766 | | |
| 12 | | 34P0 | | | | |
| 13 | | 0U52 | | | | |
| 14 | HAP7 | | | | | |
| 15 | 48C6 | | | | | |
| 16 | 3HPH | | | | | |
| 17 | U1U8 | | | | | |
| 18 | C5F0 | | | | | |


Table 8-16a. A13 Circuit Board, Signature Analysis Data (SA1a)

| Component | Pin | Signature | Component | Pin | Signature | | |
|-----------|------|-----------|-----------|------|-----------|------|------|
| U10 | 1 | 3HPH | U51 | 1 | UP73 | | |
| | 2 | U1U8 | | 2 | UP73 | | |
| | 3 | FA75 | | 3 | UP73 | | |
| | 4 | UP8H | | 4 | UP73 | | |
| | 5 | 0000 | | 6 | 9U6A | | |
| | 6 | 0U16 | | 9 | UP73 | | |
| | 12 | CHU3 | | 10 | 9U6A | | |
| | 13 | F120 | | 12 | 9U6A | | |
| | 14 | 05PA | | U52 | 1 | UP73 | |
| | 15 | 0766 | | | 6 | 0000 | |
| | U12 | 1 | | | F3U8 | 7 | 0000 |
| | | 2 | | | 55H1 | 8 | 0000 |
| | | 3 | | | 334U | 9 | UP82 |
| | | 4 | | | UP8H | 10 | 4U05 |
| | | 5 | | | 0U16 | 11 | H06U |
| 6 | | UP73 | 12 | | UP73 | | |
| 7 | | AC80 | 13 | | 9U6A | | |
| 9 | | AC90 | 14 | | 9U6A | | |
| 10 | | 5595 | U56 | | 11 | 47H7 | |
| 11 | | 55C5 | | | 12 | 47H7 | |
| 12 | | A9CU | | | 13 | UP73 | |
| 13 | | A9UU | U57 | | 1 | UP73 | |
| 14 | | 51PC | | | 2 | 231A | |
| 15 | | 516A | | 3 | 231A | | |
| U13 | | 1 | U67C | 8 | 231A | | |
| | 2 | 8H9U | 9 | 0P26 | | | |
| | 3 | 8A66 | 10 | H34U | | | |
| | 4 | H34U | U58 | 1 | 6C58 | | |
| | 5 | 0P26 | | 2 | HAP7 | | |
| | 6 | 13UU | | 3 | 59PP | | |
| | 7 | H06U | | 11 | UP73 | | |
| | 8 | 2P54 | | 12 | UP82 | | |
| | 9 | 47H7 | | 13 | UP73 | | |
| | 10 | 4U05 | | U59 | 3 | UP73 | |
| | 11 | 4518 | | | 4 | UP73 | |
| | 18 | F402 | | | 5 | 0000 | |
| | 19 | 0000 | | | 6 | UP73 | |
| | 20 | HAP7 | | | 8 | 0UU1 | |
| | 21 | 48C6 | | | 9 | 8A66 | |
| | 22 | 0U52 | | | 10 | 8H9U | |
| | 23 | 34P0 | 11 | U67C | | | |
| | U31 | 12 | 231A | U64 | 1 | UP82 | |
| | | 19 | 231A | | 2 | 00U1 | |
| | | 24 | UP73 | | 3 | UP73 | |
| | U32 | 12 | 231A | 4 | 0000 | | |
| 19 | | 231A | 8 | U182 | | | |
| U37 | 24 | UP73 | 9 | 0UU1 | | | |
| | 1 | 0P26 | U66 | 3 | UP73 | | |
| 13 | H34U | U67 | | 5 | UP73 | | |
| U44 | 1 | | | 13UU | 6 | 0000 | |
| | 19 | | 13UU | U45 | 1 | 13UU | |
| U45 | 1 | 13UU | 19 | | 13UU | | |
| | 19 | 13UU | U47 | | 1 | 2P54 | |
| U47 | 1 | 2P54 | | 19 | 0000 | | |
| | | 19 | 0000 | | | | |

Table 8-16a. A13 Circuit Board, Signature Analysis Data (SA1a)

| Component | Pin | Signature | Component | Pin | Signature |
|-----------|-----|-----------|-----------|------|-----------|
| U68 | 1 | UP73 | U69 | 4 | 0000 |
| | 2 | UP82 | | 5 | 0000 |
| | 3 | UP73 | | 6 | UP73 |
| | 4 | UP73 | 11 | UP82 | |
| | 5 | 00U1 | 12 | UP73 | |
| | 6 | UP73 | 13 | 00U1 | |
| | 8 | UP73 | U79 | 13 | 47H7 |
| | 9 | UP73 | | U85 | 5 |
| | 10 | 0000 | 6 | | UP73 |
| | 11 | UP82 | U86 | 1 | 0000 |
| | 12 | 0U16 | | 2 | UP8H |
| | 13 | UP8H | | 3 | UP8H |

Table 8-16b. A13 Circuit Board, Signature Analysis Data (SA1b)


Move Signature Analyzer Stop lead to A13TP7, Set Start trigger to . Press A13S1 Reset.

This signature analysis test is used to isolate the ROM functional sub-block. This tests the ROM as a total unit. SA1c tests the individual ROM components

+5 V Signature = 000U

| Component | Pin | Signature |
|-----------|------|-----------|
| U83 | 2 | HA2C |
| | 4 | C06H |
| | 6 | 2412 |
| | 8 | 002F |
| | 11 | 5755 |
| | 13 | 6U8H |
| | 15 | 654U |
| | 17 | FUUH |
| | U84 | 2 |
| 4 | | IFCC |
| 6 | | 0APC |
| 8 | | 6269 |
| 11 | | U717 |
| 13 | | HF81 |
| 15 | | 88FS |
| 17 | 7U35 | |

 Table 8-16c. A13 Circuit Board, Signature Analysis Data (SA1c)

Move Signature Analyzer Start and Stop lead to Uxx Pin20, Set Start trigger to . Press A13S1 Reset.

This signature analysis test checks the individual ROM components in the ROM functional sub-block, and should be run after SA1b. Each ROM is isolated from the others by the Start and Stop SA pins to the ROM under test.

+ 5V signature = 755U

| Component | Pin | Signature |
|-----------|-----|----------------------------------|
| U19 | 11 | 9FC0 Start and Stop to U19 pin20 |
| | 12 | F2P1 |
| | 13 | 90H3 |
| | 15 | 8245 |
| | 16 | 7F81 |
| | 17 | P2A8 |
| | 18 | 60P3 |
| | 19 | C977 |
| | U20 | 11 |
| 12 | | 4526 |
| 13 | | 1F7F |
| 15 | | 6A30 |
| 16 | | 896C |
| 17 | | 0FHC |
| 18 | | C4UA |
| 19 | | 09P8 |
| U21 | | 11 |
| | 12 | ACCU |
| | 13 | CFF4 |
| | 15 | F120 |
| | 16 | FA8F |
| | 17 | 7F4F |
| | 18 | 8A74 |
| | 19 | HHSC |
| | U22 | 11 |
| 12 | | HHFS |
| 13 | | P774 |
| 15 | | 41HP |
| 16 | | 93F8 |
| 17 | | 4113 |
| 18 | | 2651 |
| 19 | | 600H |
| U23 | | 11 |
| | 12 | 5249 |
| | 13 | 55AU |
| | 15 | AF35 |
| | 16 | C718 |
| | 17 | CP59 |
| | 18 | F4P4 |
| | 19 | 05H3 |

Table 8-16c. A13 Circuit Board, Signature Analysis Data (SA1c) Cont.

| Component | Pin | Signature |
|-----------|-----|----------------------------------|
| U24 | 11 | 9AC2 Start and Stop to U24 pin20 |
| | 12 | 01CA |
| | 13 | HU5U |
| | 15 | 13H7 |
| | 16 | 6905 |
| | 17 | P897 |
| | 18 | 993C |
| | 19 | 1827 |
| | U25 | 11 |
| 12 | | 44AH |
| 13 | | FF45 |
| 15 | | 46AH |
| 16 | | F273 |
| 17 | | 3U39 |
| 18 | | 8300 |
| 19 | | H4UP |
| U26 | | 11 |
| | 12 | FA8C |
| | 13 | 859A |
| | 15 | UUF9 |
| | 16 | A8PU |
| | 17 | UPPF |
| | 18 | 8413 |
| | 19 | U14U |

Table 8-16d. A13 Circuit Board, Signature Analysis Data (SA1d)

Move Signature Analyzer Start and Stop leads to A13TP6. Press A13S1 Reset switch.

This signature analysis test checks the Bus Error Detection circuitry for faults.

+5 V Signature = 6PCP

| Component | Pin | Signature |
|-----------|-----|-----------|
| U1 | 50 | 91FC |
| | 51 | 3CPF |
| | 52 | F9C2 |
| U55 | 1 | 9P5H |
| | 2 | 3CPF |
| | 3 | F9C2 |
| U58 | 1 | 06AU |
| | 2 | FP47 |
| | 3 | 9336 |
| | 4 | 6PCP |
| | 5 | 9P5H |
| | 6 | 6PCP |
| | 11 | 6PCP |
| U66 | 12 | 2P3F |
| | 13 | 6PCP |
| | 8 | 9P5H |
| | 9 | 6PCP |
| | 10 | U0P3 |
| | 11 | U0P3 |
| | 12 | 6PCP |
| | 13 | 9P5H |

Table 8-17a. A13 Circuit Board, Signature Analysis Data (SA2a)

| This signature analysis test is primarily used to test the "kernel" and to isolate functional sub-blocks from each other. This test should be run after completing the A13 SA1 test. | | | | | | |
|--|------|-----------|-----------|------|-----------|------|
| +5 V Signature = AU47 | | | | | | |
| Component | Pin | Signature | Component | Pin | Signature | |
| U2 | 8 | C471 | U35 | 1 | 0000 | |
| | 9 | P1H5 | | 2 | 467A | |
| | 11 | P1H5 | | 3 | 5626 | |
| U7 | 12 | C471 | | 4 | 6755 | |
| | 5 | P1H5 | | 5 | HFA2 | |
| U13 | 15 | P1H5 | | 6 | 08U5 | |
| | 1 | 247A | | 7 | 8570 | |
| | 2 | 4096 | | 8 | 3438 | |
| | 3 | 3775 | | 9 | 8A70 | |
| | 4 | 2852 | | 11 | 8A70 | |
| | 5 | 3580 | | 12 | 3438 | |
| | 6 | AUF6 | | 13 | 8570 | |
| | 7 | C471 | | 14 | 08U5 | |
| | 8 | AU47 | | 15 | HFA2 | |
| | 9 | U459 | | 16 | 6755 | |
| | 10 | 9299 | | 17 | 5626 | |
| | 11 | 67HA | | 18 | 467A | |
| | 18 | 5F0H | | 19 | 0000 | |
| | 19 | 0000 | | U36 | 1 | 0000 |
| | 20 | 9U01 | 2 | | 9U01 | |
| | 21 | 5626 | 4 | | UP15 | |
| | 22 | HFA2 | 6 | | UP15 | |
| | 23 | 8570 | 7 | | H519 | |
| | U14 | 1 | 5CP0 | | 8 | U34A |
| | | 2 | 8HP7 | | 9 | H519 |
| 3 | | P5H1 | 11 | | H519 | |
| 4 | | 1363 | 12 | | U34A | |
| 5 | | 16F4 | 13 | | H519 | |
| 6 | | 9917 | 14 | UP15 | | |
| 9 | | 13C9 | 16 | UP15 | | |
| 10 | | 9F7P | 18 | 9U01 | | |
| 11 | | AU47 | 19 | 0000 | | |
| 13 | | 10P0 | U38 | 4 | 0894 | |
| 14 | | 6668 | | 9 | 8U38 | |
| 15 | | 0894 | | 11 | 67HA | |
| 16 | | 8CC0 | U47 | 7 | 97P2 | |
| 17 | | 5F19 | | 9 | C1P6 | |
| 18 | | 8914 | | 11 | C1P6 | |
| 19 | P1H5 | U50 | 13 | 97P2 | | |
| 20 | 9U01 | | 1 | AU47 | | |
| 21 | 5626 | | 3 | 5F19 | | |
| 22 | HFA2 | | 4 | AU47 | | |
| 23 | 8570 | | 5 | C1P6 | | |
| U31 | 12 | | C295 | 9 | 97P2 | |
| | 19 | | C295 | 10 | AU47 | |
| U32 | 24 | 10P0 | 11 | 8CC0 | | |
| | 24 | 10P0 | 13 | AU47 | | |

Table 8-17a. A13 Circuit Board, Signature Analysis Data (SA2a)Cont.

| Component | Pin | Signature | Component | Pin | Signature | |
|-----------|------|-----------|-----------|------|-----------|------|
| U51 | 1 | AU47 | U59 | 1 | 23P7 | |
| | 2 | AU47 | | 2 | AU47 | |
| | 3 | AU47 | | 3 | AU47 | |
| | 4 | AU47 | | 4 | 57P2 | |
| | 6 | 26P8 | | 5 | U8A5 | |
| | 9 | AU47 | | 6 | AU47 | |
| | 10 | 26P8 | | 8 | UFHP | |
| | 12 | 26P8 | | 9 | 3775 | |
| | 13 | 26P8 | | 10 | 4096 | |
| | U52 | 1 | | AU47 | 11 | 247A |
| | | 6 | | 0000 | 12 | 8FA0 |
| | | 7 | | 0000 | 13 | AU47 |
| | | 9 | | U6UP | U61 | 1 |
| 10 | | 9299 | 2 | 9299 | | |
| 11 | | C471 | 3 | 9299 | | |
| 12 | | AU47 | 4 | P1H5 | | |
| 13 | 26P8 | 5 | AU47 | | | |
| 14 | 26P8 | 6 | AU47 | | | |
| U53 | 1 | AU47 | 8 | 98UU | | |
| | 3 | 6668 | 9 | 4P92 | | |
| | 4 | AU47 | 10 | 9299 | | |
| | 5 | U807 | 11 | 98UU | | |
| | 9 | F4U8 | 12 | 98UU | | |
| | 10 | AU47 | 13 | 0000 | | |
| | 11 | 6668 | U62 | 1 | 0000 | |
| 13 | AU47 | 2 | | P1H5 | | |
| U55 | 5 | U807 | | 3 | P1H5 | |
| | 8 | 0000 | | 4 | 467A | |
| U56 | 9 | F4U8 | | 5 | 0000 | |
| | 10 | 6CCU | | 6 | 6755 | |
| | 11 | 6CCU | | 7 | 388C | |
| U57 | 8 | 9F7P | 8 | 08U5 | | |
| | 9 | AU47 | 12 | 08U5 | | |
| U58 | 10 | 9F7P | 13 | 388C | | |
| | 1 | AU47 | 14 | 6755 | | |
| | 2 | C295 | 15 | 0000 | | |
| | 3 | C295 | 16 | 467A | | |
| | 8 | C295 | 17 | P1H5 | | |
| | 9 | 3580 | 18 | P1H5 | | |
| U59 | 10 | 2852 | 19 | 0000 | | |
| | 1 | 8914 | U64 | 1 | U6UP | |
| | 2 | 9U01 | | 2 | 59C9 | |
| | 3 | 0021 | | 3 | AU47 | |
| | 4 | 0000 | | 4 | 0000 | |
| | 8 | P1H5 | | 5 | AU47 | |
| | 9 | 0000 | | 6 | 0000 | |
| | 10 | P1H5 | | 8 | 5399 | |
| | | | | 9 | UFHP | |
| | | | | 12 | 4P92 | |
| | | 13 | | P1H5 | | |

Table 8-17a. A13 Circuit Board, Signature Analysis Data (SA2a) Cont.

| Component | Pin | Signature | Component | Pin | Signature | |
|-----------|-----|-----------|-----------|------|-----------|---|
| U66 | 2 | AU47 | U79 | 1 | 9F7P | |
| | 3 | AU47 | | 2 | 0000 | |
| | 4 | AU47 | | 3 | 0000 | |
| | 5 | A7AF | | 4 | 13C9 | |
| | 6 | 08PC | | 5 | 0171 | |
| U68 | 1 | 0000 | U80 | 1 | 26P8 | |
| | 2 | U6UP | | 2 | 9299 | |
| | 3 | U6UP | | 3 | AU47 | |
| | 4 | 0000 | | 4 | P1H5 | |
| | 5 | 59C9 | | 5 | 26P8 | |
| | 6 | 59C9 | | 6 | 199C | |
| | 8 | 0000 | | 8 | 26P8 | |
| | 9 | 0000 | | 9 | 0000 | |
| | 10 | 0000 | | 10 | 26P8 | |
| | 11 | UPU6 | | 11 | P1H5 | |
| | 12 | H519 | | 12 | 0000 | |
| | 13 | 23P7 | | 13 | P1H5 | |
| | U69 | 4 | | 388C | U85 | 5 |
| 5 | | 0000 | 6 | U838 | | |
| 6 | | AU47 | U86 | 1 | 0000 | |
| 8 | | AP36 | | 2 | 23P7 | |
| 9 | | 0171 | | 3 | 23P7 | |
| 10 | | AU47 | | | | |
| 11 | | U6UP | | | | |
| 12 | | P1H5 | | | | |
| 13 | | 59C9 | | | | |
| U70 | | 1 | AU47 | | | |
| | | 2 | A840 | | | |
| | | 3 | 08PC | | | |
| | | 4 | AU47 | | | |
| | 6 | 3223 | | | | |
| | 8 | 3223 | | | | |
| | 10 | AU47 | | | | |
| | 11 | 08PC | | | | |
| | 12 | 1663 | | | | |
| | 13 | AU47 | | | | |

Table 8-17b. A13 Circuit Board, Signature Analysis Data (SA2b)


| Component | Pin | Signature | |
|-----------|-----|-----------|-----------------------|
| U33 | 1 | 5U9U | Qualify to U33 pin 19 |
| | 2 | F5AF | |
| | 3 | 6CU9 | |
| | 4 | 3752 | |
| | 5 | 8P05 | |
| | 6 | UFAC | |
| | 7 | 19U7 | |
| | 8 | H34P | |
| | 9 | 463F | |
| | 11 | 463F | |
| | 12 | H34P | |
| | 13 | 19U7 | |
| | 14 | UFAC | |
| | 15 | 8P05 | |
| | 16 | 3752 | |
| | 17 | 6CU9 | |
| | 18 | F5AF | |
| | U34 | 1 | |
| 2 | | AF05 | |
| 3 | | C8AC | |
| 4 | | 91U7 | |
| 5 | | F34P | |
| 6 | | 663F | |
| 7 | | 2FH9 | |
| 8 | | C913 | |
| 9 | | 9286 | |
| 11 | | 9286 | |
| 12 | | C913 | |
| 13 | | 2FH9 | |
| 14 | | 663F | |
| 15 | | F34P | |
| 16 | | 91U7 | |
| 17 | | C8AC | |
| 18 | | AF05 | |

Table 8-17b. A13 Circuit Board, Signature Analysis Data (SA2b) Cont.

| Component | Pin | Signature | |
|-----------|-----|-----------|---|
| U39 | 1 | 5U9U | Qualify to U39 pin19 +5 V Signature = 9515 |
| | 2 | 9286 | |
| | 3 | AF05 | |
| | 4 | C8AC | |
| | 5 | C913 | |
| | 6 | 2FH9 | |
| | 7 | 663F | |
| | 8 | F34P | |
| | 9 | 91U7 | |
| | 11 | 91U7 | |
| | 12 | F34P | |
| | 13 | 663F | |
| | 14 | 2FH9 | |
| | 15 | C913 | |
| | 16 | C8AC | |
| | 17 | AF05 | |
| | 18 | 9286 | |
| | U40 | 1 | |
| 2 | | F5AF | |
| 3 | | 463F | |
| 4 | | 6CU9 | |
| 5 | | H34P | |
| 6 | | 3752 | |
| 7 | | 19U7 | |
| 8 | | 8P05 | |
| 9 | | UFAC | |
| 11 | | UFAC | |
| 12 | | 8P05 | |
| 13 | | 19U7 | |
| 14 | | 3752 | |
| 15 | | H34P | |
| 16 | | 6CU9 | |
| 17 | | 463F | |
| 18 | | F5AF | |
| U41 | | 1 | 0000 |
| | 2 | 5FP9 | |
| | 3 | AP74 | |
| | 4 | H73A | |
| | 5 | 6C9H | |
| | 6 | C5FP | |
| | 7 | 5AP7 | |
| | 8 | 2H73 | |
| | 9 | 96C9 | |
| | 11 | 96C9 | |
| | 12 | 2H73 | |
| | 13 | 5AP7 | |
| | 14 | C5FP | |
| | 15 | 6C9H | |
| | 16 | H73A | |
| | 17 | AP74 | |
| | 18 | 5FP9 | |

Table 8-17b. A13 Circuit Board, Signature Analysis Data (SA2b) Cont.

| Component | Pin | Signature | |
|-----------|-----|-----------|---|
| U42 | 1 | PH5U | Qualify to U42 pin19 +5 V signature = 4C63 |
| | 2 | F28U | |
| | 3 | UAC7 | |
| | 4 | 66AC | |
| | 5 | A8A5 | |
| | 6 | 4UA2 | |
| | 7 | 3F21 | |
| | 8 | 05P0 | |
| | 9 | 9900 | |
| | 11 | 9900 | |
| | 12 | 05P0 | |
| | 13 | 3F21 | |
| | 14 | 4UA2 | |
| | 15 | A8A5 | |
| | 16 | 66AC | |
| | 17 | UAC7 | |
| | 18 | F28U | |
| | U43 | 1 | |
| 2 | | PF9A | |
| 3 | | P8C2 | |
| 4 | | PAA6 | |
| 5 | | 6CAF | |
| 6 | | 2C29 | |
| 7 | | 0C6C | |
| 8 | | 1C4A | |
| 9 | | 135A | |
| 11 | | 135A | |
| 12 | | 1C4A | |
| 13 | | 0C6C | |
| 14 | | 2C29 | |
| 15 | | 6CAF | |
| 16 | | PAA6 | |
| 17 | | P8C2 | |
| 18 | | PF9A | |
| U45 | | 1 | 0000 |
| | 3 | 0001 | |
| | 5 | 0001 | |
| | 7 | 0000 | |
| | 9 | 0001 | |
| | 12 | 0001 | |
| | 14 | 0000 | |
| | 16 | 0001 | |
| | 18 | 0001 | |
| | U85 | 2 | 0001 |
| | 3 | 0001 | |
| | 4 | 0000 | |
| | 5 | 0000 | |
| | 6 | 0000 | |
| | 8 | 0001 | |
| | 9 | 0001 | |
| | 10 | 0000 | |
| | 11 | 0001 | |
| | 12 | 0001 | |
| | 13 | 0000 | |

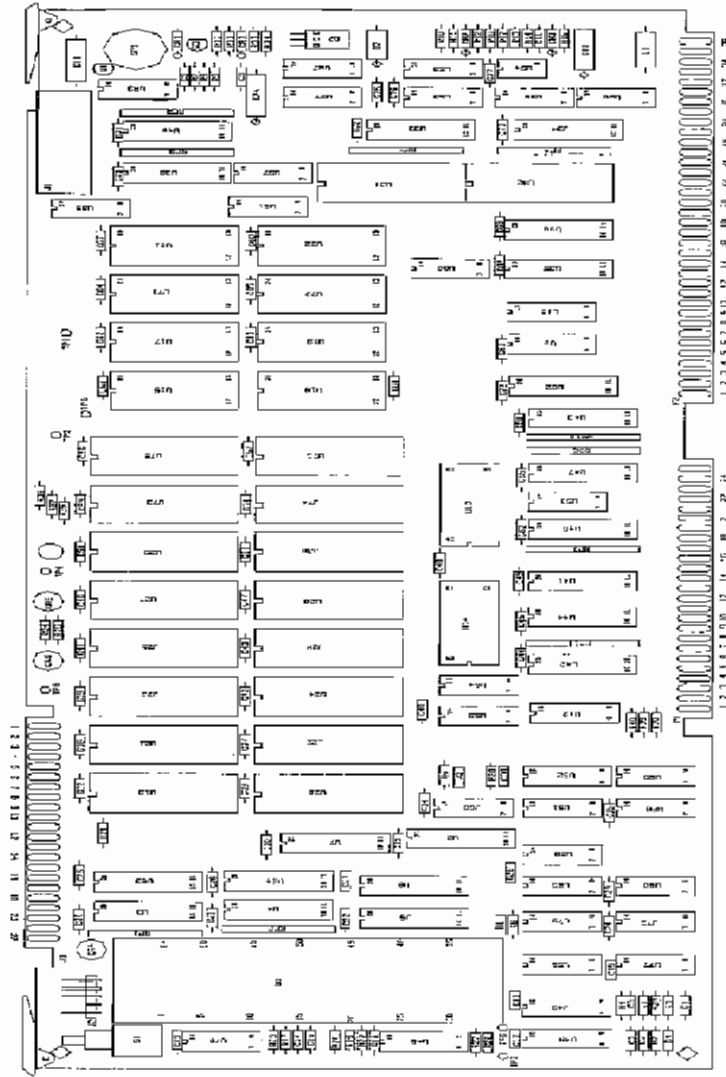

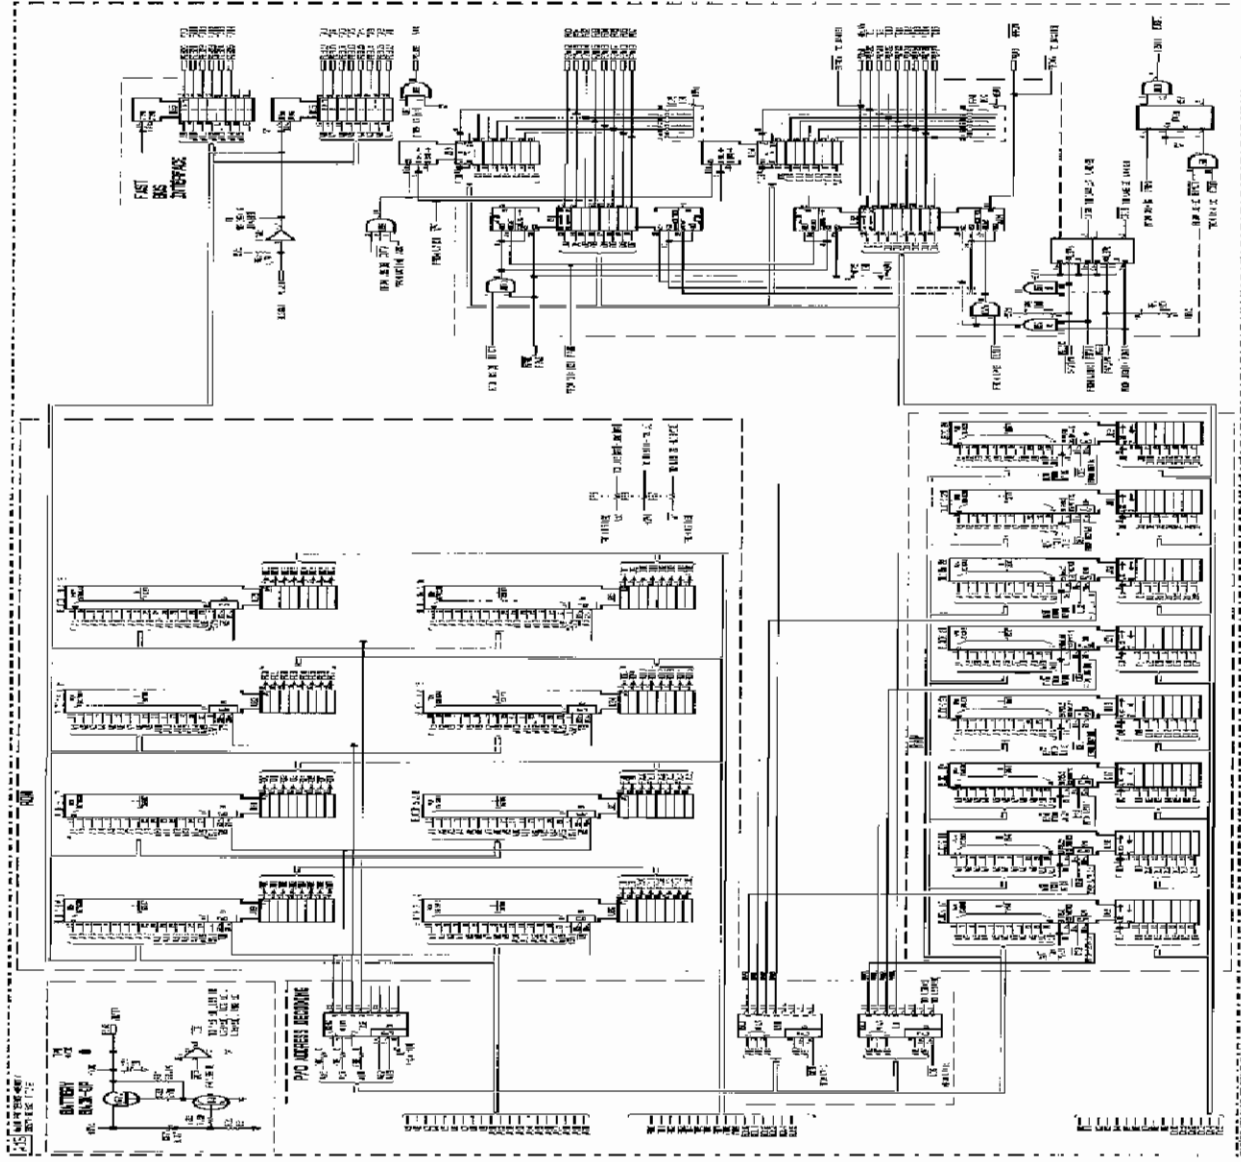



Figure 10.1.1 Main Process Control Board, KUMONAN Spinning

A13a

11/2007

| NO. | REV. | DATE | DESCRIPTION |
|-----|------|----------|-----------------------------------|
| 01 | 001 | 01/01/07 | Initial Issue |
| 02 | 002 | 02/01/07 | Modification of Relay Connections |
| 03 | 003 | 03/01/07 | Update of Component Values |
| 04 | 004 | 04/01/07 | Change of Terminal Block Labels |
| 05 | 005 | 05/01/07 | Correction of Wiring Diagram |
| 06 | 006 | 06/01/07 | Replacement of Faulty Components |
| 07 | 007 | 07/01/07 | Optimization of Control Logic |
| 08 | 008 | 08/01/07 | Final Review and Approval |
| 09 | 009 | 09/01/07 | Implementation on Site |
| 10 | 010 | 10/01/07 | Post-Installation Testing |
| 11 | 011 | 11/01/07 | Documentation Update |
| 12 | 012 | 12/01/07 | Final Report Submission |
| 13 | 013 | 01/02/07 | Archiving of Documents |
| 14 | 014 | 02/02/07 | Project Completion |
| 15 | 015 | 03/02/07 | Final Review |
| 16 | 016 | 04/02/07 | Approval |
| 17 | 017 | 05/02/07 | Final Sign-off |
| 18 | 018 | 06/02/07 | Project Closure |
| 19 | 019 | 07/02/07 | Final Report |
| 20 | 020 | 08/02/07 | Project End |


| NO. | REV. | DATE | BY | CHKD. | DESCRIPTION |
|-----|------|----------|-----------|-------|-------------|
| 1 | 001 | 08-10-64 | W. J. ... | ... | ... |
| 2 | 002 | 08-10-64 | ... | ... | ... |
| 3 | 003 | 08-10-64 | ... | ... | ... |
| 4 | 004 | 08-10-64 | ... | ... | ... |
| 5 | 005 | 08-10-64 | ... | ... | ... |
| 6 | 006 | 08-10-64 | ... | ... | ... |
| 7 | 007 | 08-10-64 | ... | ... | ... |
| 8 | 008 | 08-10-64 | ... | ... | ... |
| 9 | 009 | 08-10-64 | ... | ... | ... |
| 10 | 010 | 08-10-64 | ... | ... | ... |
| 11 | 011 | 08-10-64 | ... | ... | ... |
| 12 | 012 | 08-10-64 | ... | ... | ... |
| 13 | 013 | 08-10-64 | ... | ... | ... |
| 14 | 014 | 08-10-64 | ... | ... | ... |
| 15 | 015 | 08-10-64 | ... | ... | ... |
| 16 | 016 | 08-10-64 | ... | ... | ... |
| 17 | 017 | 08-10-64 | ... | ... | ... |
| 18 | 018 | 08-10-64 | ... | ... | ... |
| 19 | 019 | 08-10-64 | ... | ... | ... |
| 20 | 020 | 08-10-64 | ... | ... | ... |
| 21 | 021 | 08-10-64 | ... | ... | ... |
| 22 | 022 | 08-10-64 | ... | ... | ... |
| 23 | 023 | 08-10-64 | ... | ... | ... |
| 24 | 024 | 08-10-64 | ... | ... | ... |
| 25 | 025 | 08-10-64 | ... | ... | ... |
| 26 | 026 | 08-10-64 | ... | ... | ... |
| 27 | 027 | 08-10-64 | ... | ... | ... |
| 28 | 028 | 08-10-64 | ... | ... | ... |
| 29 | 029 | 08-10-64 | ... | ... | ... |
| 30 | 030 | 08-10-64 | ... | ... | ... |
| 31 | 031 | 08-10-64 | ... | ... | ... |
| 32 | 032 | 08-10-64 | ... | ... | ... |
| 33 | 033 | 08-10-64 | ... | ... | ... |
| 34 | 034 | 08-10-64 | ... | ... | ... |
| 35 | 035 | 08-10-64 | ... | ... | ... |
| 36 | 036 | 08-10-64 | ... | ... | ... |
| 37 | 037 | 08-10-64 | ... | ... | ... |
| 38 | 038 | 08-10-64 | ... | ... | ... |
| 39 | 039 | 08-10-64 | ... | ... | ... |
| 40 | 040 | 08-10-64 | ... | ... | ... |
| 41 | 041 | 08-10-64 | ... | ... | ... |
| 42 | 042 | 08-10-64 | ... | ... | ... |
| 43 | 043 | 08-10-64 | ... | ... | ... |
| 44 | 044 | 08-10-64 | ... | ... | ... |
| 45 | 045 | 08-10-64 | ... | ... | ... |
| 46 | 046 | 08-10-64 | ... | ... | ... |
| 47 | 047 | 08-10-64 | ... | ... | ... |
| 48 | 048 | 08-10-64 | ... | ... | ... |
| 49 | 049 | 08-10-64 | ... | ... | ... |
| 50 | 050 | 08-10-64 | ... | ... | ... |

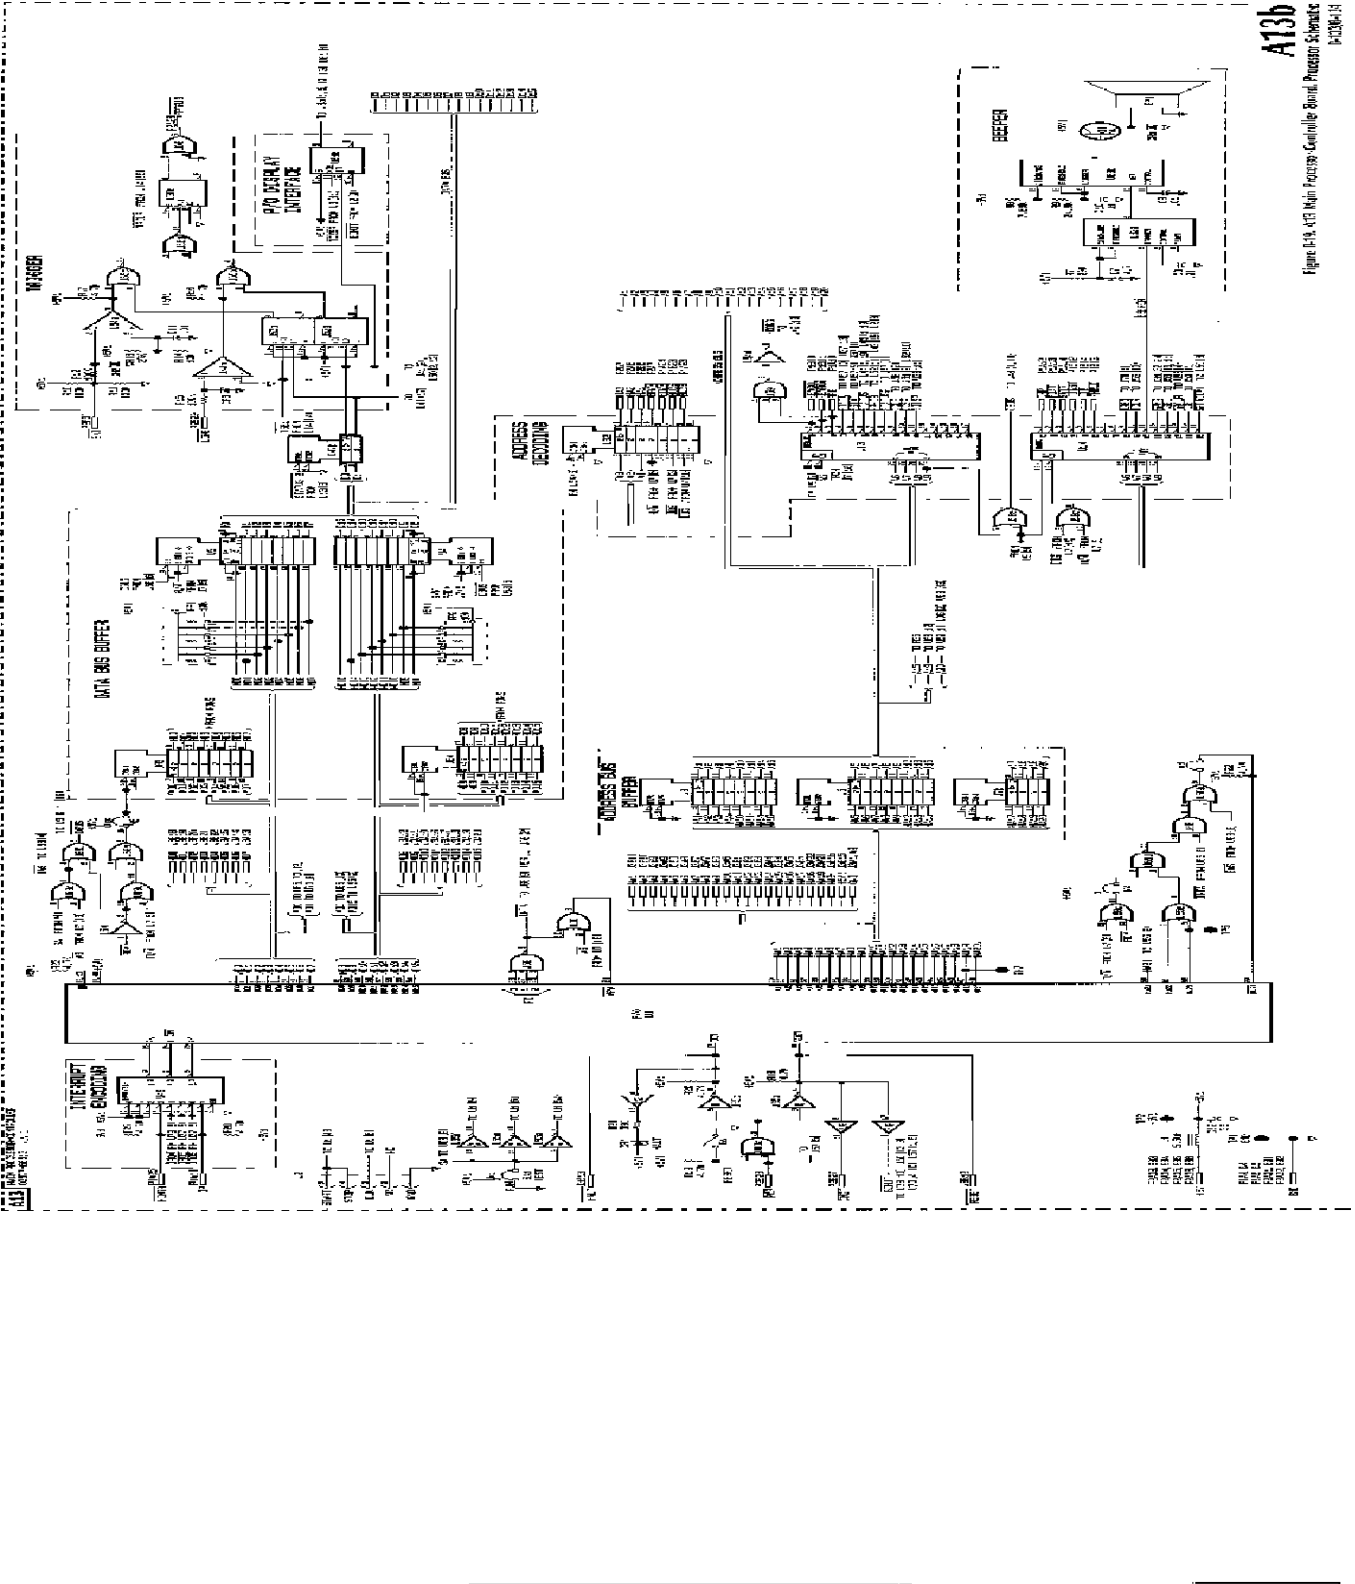

A13B
 Figure A13B-413 Main Access Control System Schematic
 1-6206-14

FORM NO. 100-1000 (REV. 6-64)

| K | REF ID | REV | DATE | BY | CHK |
|----|--------|-----|----------|-----|-----|
| 01 | 001 | 1 | 10/10/77 | ... | ... |
| 02 | 002 | 1 | 10/10/77 | ... | ... |
| 03 | 003 | 1 | 10/10/77 | ... | ... |
| 04 | 004 | 1 | 10/10/77 | ... | ... |
| 05 | 005 | 1 | 10/10/77 | ... | ... |
| 06 | 006 | 1 | 10/10/77 | ... | ... |
| 07 | 007 | 1 | 10/10/77 | ... | ... |
| 08 | 008 | 1 | 10/10/77 | ... | ... |
| 09 | 009 | 1 | 10/10/77 | ... | ... |
| 10 | 010 | 1 | 10/10/77 | ... | ... |
| 11 | 011 | 1 | 10/10/77 | ... | ... |
| 12 | 012 | 1 | 10/10/77 | ... | ... |
| 13 | 013 | 1 | 10/10/77 | ... | ... |
| 14 | 014 | 1 | 10/10/77 | ... | ... |
| 15 | 015 | 1 | 10/10/77 | ... | ... |
| 16 | 016 | 1 | 10/10/77 | ... | ... |
| 17 | 017 | 1 | 10/10/77 | ... | ... |
| 18 | 018 | 1 | 10/10/77 | ... | ... |
| 19 | 019 | 1 | 10/10/77 | ... | ... |
| 20 | 020 | 1 | 10/10/77 | ... | ... |
| 21 | 021 | 1 | 10/10/77 | ... | ... |
| 22 | 022 | 1 | 10/10/77 | ... | ... |
| 23 | 023 | 1 | 10/10/77 | ... | ... |
| 24 | 024 | 1 | 10/10/77 | ... | ... |
| 25 | 025 | 1 | 10/10/77 | ... | ... |
| 26 | 026 | 1 | 10/10/77 | ... | ... |
| 27 | 027 | 1 | 10/10/77 | ... | ... |
| 28 | 028 | 1 | 10/10/77 | ... | ... |
| 29 | 029 | 1 | 10/10/77 | ... | ... |
| 30 | 030 | 1 | 10/10/77 | ... | ... |
| 31 | 031 | 1 | 10/10/77 | ... | ... |
| 32 | 032 | 1 | 10/10/77 | ... | ... |
| 33 | 033 | 1 | 10/10/77 | ... | ... |
| 34 | 034 | 1 | 10/10/77 | ... | ... |
| 35 | 035 | 1 | 10/10/77 | ... | ... |
| 36 | 036 | 1 | 10/10/77 | ... | ... |
| 37 | 037 | 1 | 10/10/77 | ... | ... |
| 38 | 038 | 1 | 10/10/77 | ... | ... |
| 39 | 039 | 1 | 10/10/77 | ... | ... |
| 40 | 040 | 1 | 10/10/77 | ... | ... |

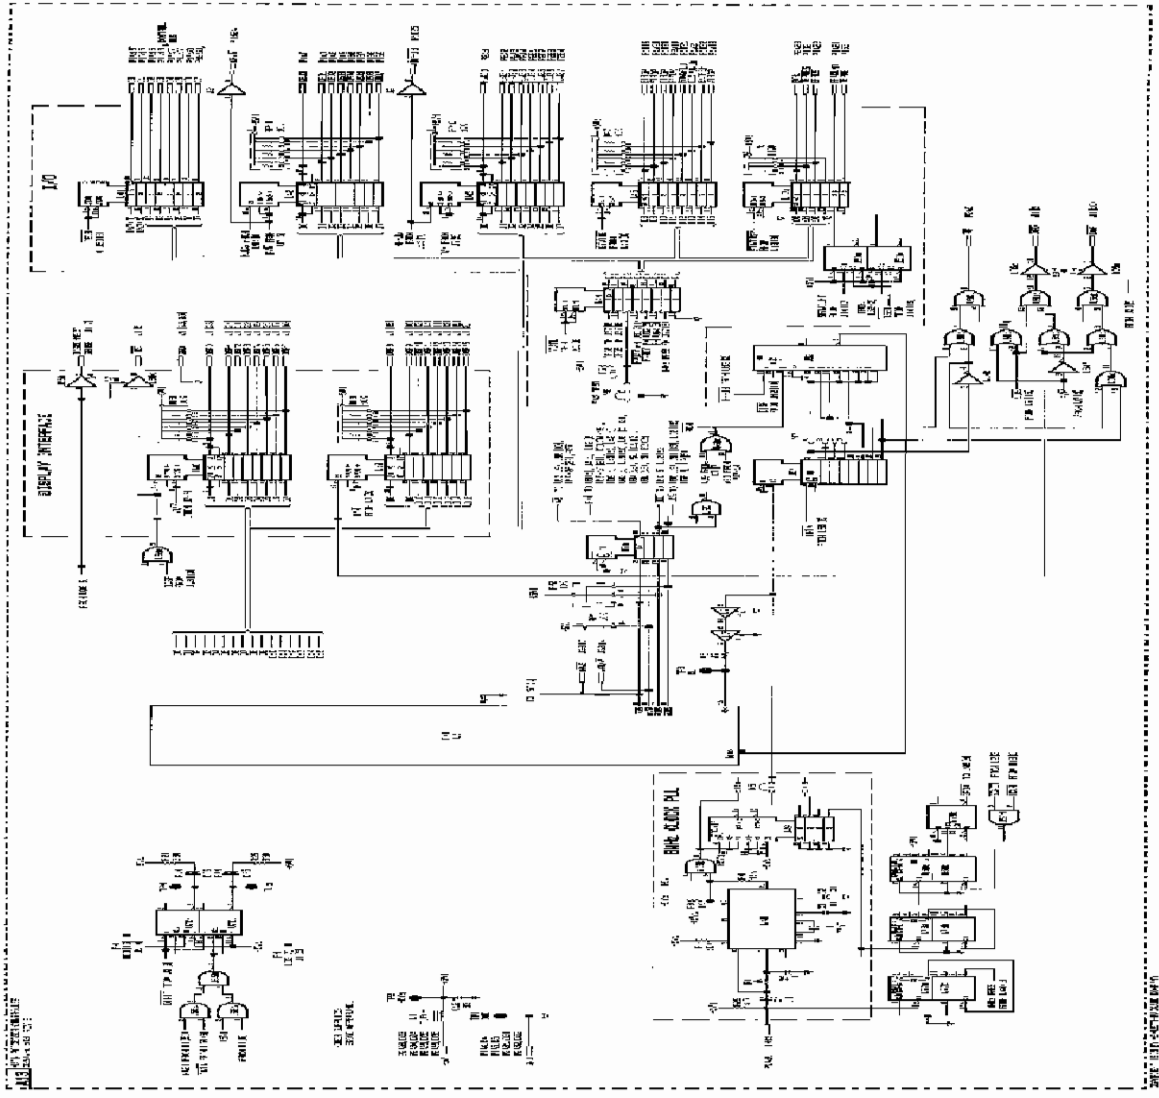

A13C
Figure A13C Main Process Control Board Interface Schematic
P/REV 135

8-16 SERVICE GROUP A15, KEYBOARD ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions


Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on:

Press INSTR PRESET

All Oscilloscope waveforms are taken using a 1:1 probe and an HP 1980B Oscilloscope.

Troubleshooting Hints

1. Troubleshoot at each side of the latches separating the suspect key, LED, or the RPC from the keyboard connector J1. Key closure is indicated by TTL ground.

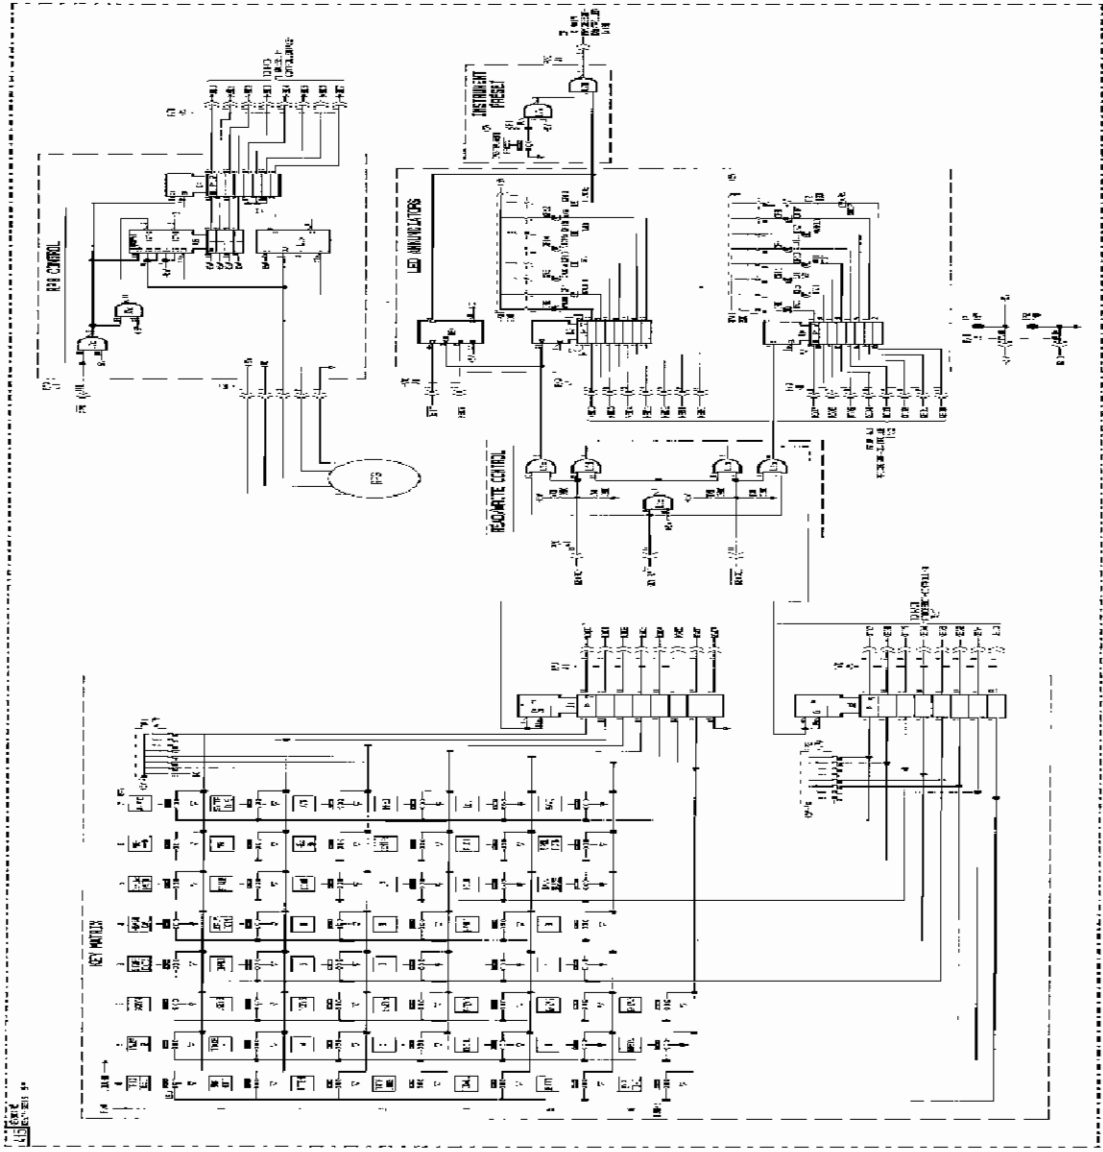

A15
Figure 101. A15 Keyboard Schematic

| C | Q | OP | RES. | VAL. | UNIT |
|-----|-----|-----|------|------|------|
| 1 | 2 | 3 | 4 | 5 | 6 |
| 7 | 8 | 9 | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 | 17 | 18 |
| 19 | 20 | 21 | 22 | 23 | 24 |
| 25 | 26 | 27 | 28 | 29 | 30 |
| 31 | 32 | 33 | 34 | 35 | 36 |
| 37 | 38 | 39 | 40 | 41 | 42 |
| 43 | 44 | 45 | 46 | 47 | 48 |
| 49 | 50 | 51 | 52 | 53 | 54 |
| 55 | 56 | 57 | 58 | 59 | 60 |
| 61 | 62 | 63 | 64 | 65 | 66 |
| 67 | 68 | 69 | 70 | 71 | 72 |
| 73 | 74 | 75 | 76 | 77 | 78 |
| 79 | 80 | 81 | 82 | 83 | 84 |
| 85 | 86 | 87 | 88 | 89 | 90 |
| 91 | 92 | 93 | 94 | 95 | 96 |
| 97 | 98 | 99 | 100 | 101 | 102 |
| 103 | 104 | 105 | 106 | 107 | 108 |
| 109 | 110 | 111 | 112 | 113 | 114 |
| 115 | 116 | 117 | 118 | 119 | 120 |
| 121 | 122 | 123 | 124 | 125 | 126 |
| 127 | 128 | 129 | 130 | 131 | 132 |
| 133 | 134 | 135 | 136 | 137 | 138 |
| 139 | 140 | 141 | 142 | 143 | 144 |
| 145 | 146 | 147 | 148 | 149 | 150 |
| 151 | 152 | 153 | 154 | 155 | 156 |
| 157 | 158 | 159 | 160 | 161 | 162 |
| 163 | 164 | 165 | 166 | 167 | 168 |
| 169 | 170 | 171 | 172 | 173 | 174 |
| 175 | 176 | 177 | 178 | 179 | 180 |
| 181 | 182 | 183 | 184 | 185 | 186 |
| 187 | 188 | 189 | 190 | 191 | 192 |
| 193 | 194 | 195 | 196 | 197 | 198 |
| 199 | 200 | 201 | 202 | 203 | 204 |
| 205 | 206 | 207 | 208 | 209 | 210 |
| 211 | 212 | 213 | 214 | 215 | 216 |
| 217 | 218 | 219 | 220 | 221 | 222 |
| 223 | 224 | 225 | 226 | 227 | 228 |
| 229 | 230 | 231 | 232 | 233 | 234 |
| 235 | 236 | 237 | 238 | 239 | 240 |
| 241 | 242 | 243 | 244 | 245 | 246 |
| 247 | 248 | 249 | 250 | 251 | 252 |
| 253 | 254 | 255 | 256 | 257 | 258 |
| 259 | 260 | 261 | 262 | 263 | 264 |
| 265 | 266 | 267 | 268 | 269 | 270 |
| 271 | 272 | 273 | 274 | 275 | 276 |
| 277 | 278 | 279 | 280 | 281 | 282 |
| 283 | 284 | 285 | 286 | 287 | 288 |
| 289 | 290 | 291 | 292 | 293 | 294 |
| 295 | 296 | 297 | 298 | 299 | 300 |

| LINE | TERMINAL |
|------|----------|
| 1 | 2 |
| 3 | 4 |
| 5 | 6 |
| 7 | 8 |
| 9 | 10 |
| 11 | 12 |
| 13 | 14 |
| 15 | 16 |
| 17 | 18 |
| 19 | 20 |
| 21 | 22 |
| 23 | 24 |
| 25 | 26 |
| 27 | 28 |
| 29 | 30 |
| 31 | 32 |
| 33 | 34 |
| 35 | 36 |
| 37 | 38 |
| 39 | 40 |
| 41 | 42 |
| 43 | 44 |
| 45 | 46 |
| 47 | 48 |
| 49 | 50 |
| 51 | 52 |
| 53 | 54 |
| 55 | 56 |
| 57 | 58 |
| 59 | 60 |
| 61 | 62 |
| 63 | 64 |
| 65 | 66 |
| 67 | 68 |
| 69 | 70 |
| 71 | 72 |
| 73 | 74 |
| 75 | 76 |
| 77 | 78 |
| 79 | 80 |
| 81 | 82 |
| 83 | 84 |
| 85 | 86 |
| 87 | 88 |
| 89 | 90 |
| 91 | 92 |
| 93 | 94 |
| 95 | 96 |
| 97 | 98 |
| 99 | 100 |

8-17 SERVICE GROUP A16, HP-IB ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on:

Press INSTR PRESET

All Oscilloscope waveforms are taken using a 1:1 probe and a HP 1980B Oscilloscope. All signatures were taken using a HP 5006A Signature Analyzer.

NOTE

When running all signature analysis routines, keep the signature analyzer and the HP 3577A physically far from each other to prevent digital signal coupling.

Troubleshooting Hints

NOTE

The HP-IB signature analysis routine is run from the Main Processor-Controller. Faulty +5VI and GNDI signatures would indicate Main Processor-Controller and HP-IB communication fault.

1. Run the DISP HP-IB test routine under the SPCL FCTN hardkey and SERVICE DIAG softkey. Using a small jumper, short each of the control pins to HP-IB connector ground. When each pin is grounded, the appropriate pin shown should have a dot in it.

If this test passes, and there is still an HP-IB fault, then the fault would either be in either the HP-IB chip or in Main Processor-Controller servicing of the HP-IB circuit. All signal paths and buffers are checked using the above procedure.

If this test fails, then all components are still suspect. Run the HP-IB Signature Analysis routine under the SPCL FCTN hardkey and SERVICE DIAG softkey. If the Signatures are correct and there is still an HP-IB fault, then there is probably a firmware fault, and the Main Processor-Controller ROMs should be checked as described in the Power-On Selftest section of Section II.

2. To run the HP-IB signature analysis routine, press the SPCL FCTN hardkey and select the HP-IB SA softkey. Connect the Signature Analyzer to the HP 3577A as described below.

Clock A16J3 pin3
 Qualify No Connection
 Start A16J3 pin5
 Stop A16J3 pin4

Signature Analyzer set-up.

Clock 
 Qualify N/A
 Start 
 Stop 

+5VI signature = P672
 GNDI signature = 0000

Test for correct signatures as noted on Figure 8-22, HP-IB Schematic. All data path signatures are identical.

Table 8-18. A16 Circuit Board, Troubleshooting Data


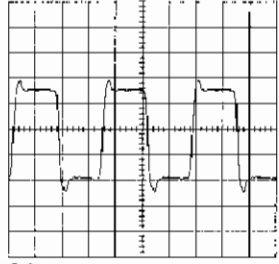
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|----------------------------------|--|----------------------|--|
| 1 | Test at A16TP5 (Clock signal) | Oscilloscope CH1 Coupling DC CH1 V/Div 1V Time/Div 60 ns Trigger CH1 | Risetime, Period |  <p>CH1 CPLG=RC CH1=1 V/Div</p> <p>HP-Q1 Main=60 ns/Div</p> |
| | | | | |
| | | | | |
| | | | | |


FIG. P-3 (CONT.)

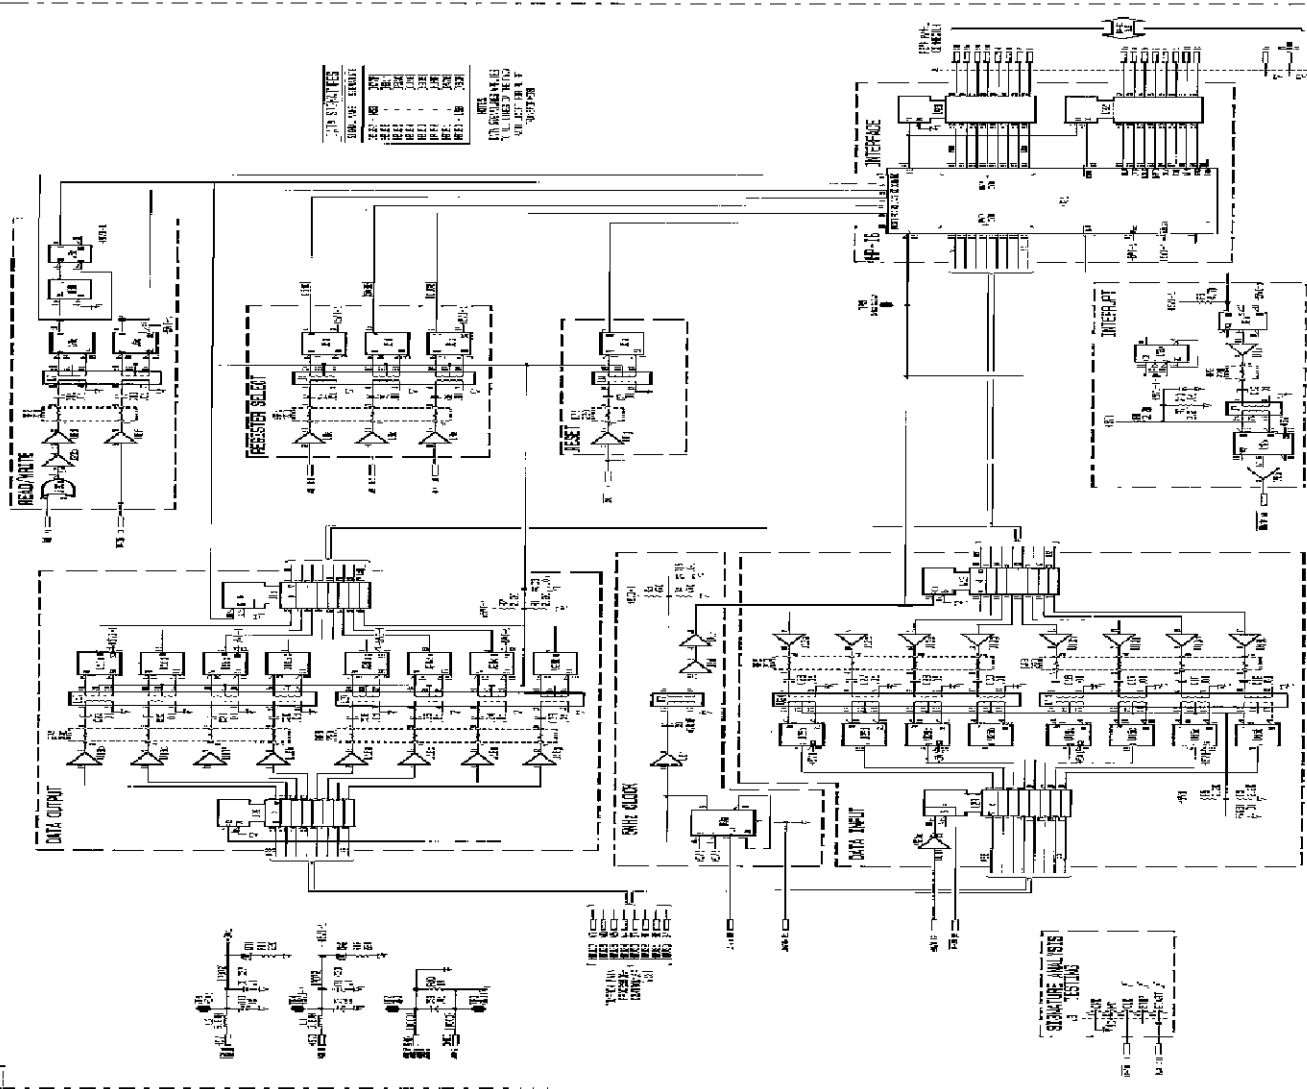

IN STATES

| | |
|-----------------|----|
| READ/WRITE | 00 |
| DATA ALLOC | 00 |
| DATA INPUT | 00 |
| DATA OUTPUT | 00 |
| REGISTER SELECT | 00 |
| STORAGE ADDRESS | 00 |
| INTERFAC | 00 |
| INTERPRT | 00 |

INITIAL STATES
 1. 00000000
 2. 00000000
 3. 00000000
 4. 00000000
 5. 00000000
 6. 00000000
 7. 00000000
 8. 00000000
 9. 00000000
 10. 00000000
 11. 00000000
 12. 00000000
 13. 00000000
 14. 00000000
 15. 00000000
 16. 00000000
 17. 00000000
 18. 00000000
 19. 00000000
 20. 00000000
 21. 00000000
 22. 00000000
 23. 00000000
 24. 00000000
 25. 00000000
 26. 00000000
 27. 00000000
 28. 00000000
 29. 00000000
 30. 00000000
 31. 00000000
 32. 00000000
 33. 00000000
 34. 00000000
 35. 00000000
 36. 00000000
 37. 00000000
 38. 00000000
 39. 00000000
 40. 00000000
 41. 00000000
 42. 00000000
 43. 00000000
 44. 00000000
 45. 00000000
 46. 00000000
 47. 00000000
 48. 00000000
 49. 00000000
 50. 00000000
 51. 00000000
 52. 00000000
 53. 00000000
 54. 00000000
 55. 00000000
 56. 00000000
 57. 00000000
 58. 00000000
 59. 00000000
 60. 00000000
 61. 00000000
 62. 00000000
 63. 00000000
 64. 00000000
 65. 00000000
 66. 00000000
 67. 00000000
 68. 00000000
 69. 00000000
 70. 00000000
 71. 00000000
 72. 00000000
 73. 00000000
 74. 00000000
 75. 00000000
 76. 00000000
 77. 00000000
 78. 00000000
 79. 00000000
 80. 00000000
 81. 00000000
 82. 00000000
 83. 00000000
 84. 00000000
 85. 00000000
 86. 00000000
 87. 00000000
 88. 00000000
 89. 00000000
 90. 00000000
 91. 00000000
 92. 00000000
 93. 00000000
 94. 00000000
 95. 00000000
 96. 00000000
 97. 00000000
 98. 00000000
 99. 00000000
 100. 00000000

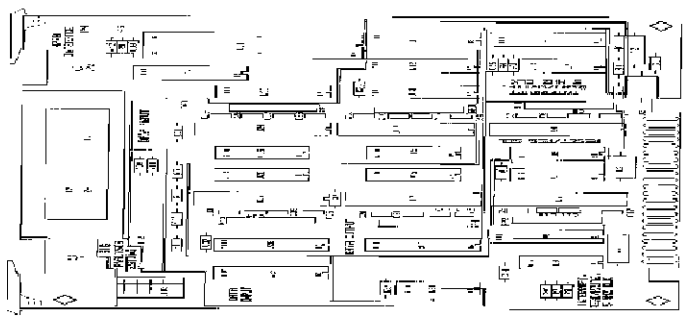

| NO. | QTY. | DESCRIPTION | REF. DESIG. |
|-----|------|-------------|-------------|
| 1 | 1 | 7400 | U1 |
| 2 | 1 | 7410 | U2 |
| 3 | 1 | 7411 | U3 |
| 4 | 1 | 7412 | U4 |
| 5 | 1 | 7413 | U5 |
| 6 | 1 | 7414 | U6 |
| 7 | 1 | 7415 | U7 |
| 8 | 1 | 7416 | U8 |
| 9 | 1 | 7417 | U9 |
| 10 | 1 | 7418 | U10 |
| 11 | 1 | 7419 | U11 |
| 12 | 1 | 7420 | U12 |
| 13 | 1 | 7421 | U13 |
| 14 | 1 | 7422 | U14 |
| 15 | 1 | 7423 | U15 |
| 16 | 1 | 7424 | U16 |
| 17 | 1 | 7425 | U17 |
| 18 | 1 | 7426 | U18 |
| 19 | 1 | 7427 | U19 |
| 20 | 1 | 7428 | U20 |
| 21 | 1 | 7429 | U21 |
| 22 | 1 | 7430 | U22 |
| 23 | 1 | 7431 | U23 |
| 24 | 1 | 7432 | U24 |
| 25 | 1 | 7433 | U25 |
| 26 | 1 | 7434 | U26 |
| 27 | 1 | 7435 | U27 |
| 28 | 1 | 7436 | U28 |
| 29 | 1 | 7437 | U29 |
| 30 | 1 | 7438 | U30 |
| 31 | 1 | 7439 | U31 |
| 32 | 1 | 7440 | U32 |
| 33 | 1 | 7441 | U33 |
| 34 | 1 | 7442 | U34 |
| 35 | 1 | 7443 | U35 |
| 36 | 1 | 7444 | U36 |
| 37 | 1 | 7445 | U37 |
| 38 | 1 | 7446 | U38 |
| 39 | 1 | 7447 | U39 |
| 40 | 1 | 7448 | U40 |
| 41 | 1 | 7449 | U41 |
| 42 | 1 | 7450 | U42 |
| 43 | 1 | 7451 | U43 |
| 44 | 1 | 7452 | U44 |
| 45 | 1 | 7453 | U45 |
| 46 | 1 | 7454 | U46 |
| 47 | 1 | 7455 | U47 |
| 48 | 1 | 7456 | U48 |
| 49 | 1 | 7457 | U49 |
| 50 | 1 | 7458 | U50 |
| 51 | 1 | 7459 | U51 |
| 52 | 1 | 7460 | U52 |
| 53 | 1 | 7461 | U53 |
| 54 | 1 | 7462 | U54 |
| 55 | 1 | 7463 | U55 |
| 56 | 1 | 7464 | U56 |
| 57 | 1 | 7465 | U57 |
| 58 | 1 | 7466 | U58 |
| 59 | 1 | 7467 | U59 |
| 60 | 1 | 7468 | U60 |
| 61 | 1 | 7469 | U61 |
| 62 | 1 | 7470 | U62 |
| 63 | 1 | 7471 | U63 |
| 64 | 1 | 7472 | U64 |
| 65 | 1 | 7473 | U65 |
| 66 | 1 | 7474 | U66 |
| 67 | 1 | 7475 | U67 |
| 68 | 1 | 7476 | U68 |
| 69 | 1 | 7477 | U69 |
| 70 | 1 | 7478 | U70 |
| 71 | 1 | 7479 | U71 |
| 72 | 1 | 7480 | U72 |
| 73 | 1 | 7481 | U73 |
| 74 | 1 | 7482 | U74 |
| 75 | 1 | 7483 | U75 |
| 76 | 1 | 7484 | U76 |
| 77 | 1 | 7485 | U77 |
| 78 | 1 | 7486 | U78 |
| 79 | 1 | 7487 | U79 |
| 80 | 1 | 7488 | U80 |
| 81 | 1 | 7489 | U81 |
| 82 | 1 | 7490 | U82 |
| 83 | 1 | 7491 | U83 |
| 84 | 1 | 7492 | U84 |
| 85 | 1 | 7493 | U85 |
| 86 | 1 | 7494 | U86 |
| 87 | 1 | 7495 | U87 |
| 88 | 1 | 7496 | U88 |
| 89 | 1 | 7497 | U89 |
| 90 | 1 | 7498 | U90 |
| 91 | 1 | 7499 | U91 |
| 92 | 1 | 7500 | U92 |

8-18 SERVICE GROUP A20, MOTHERBOARD ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

NOTE

This circuit board contains no active or signal conditioning components. All signal paths shown in Table 8-19 can be checked for continuity using an ohmmeter.

How to Use Table 8-19

All signal names are listed vertically with each of the circuit boards listed horizontally. When a signal is connected to a circuit board, the edge connector pin number is entered in the table at the intersection point of the signal name and the circuit board in the matrix. All circuit board connections for a specific signal can be seen by looking left to right in the signal name row. All signals connected to a circuit board can be seen by looking up and down in the circuit board column.


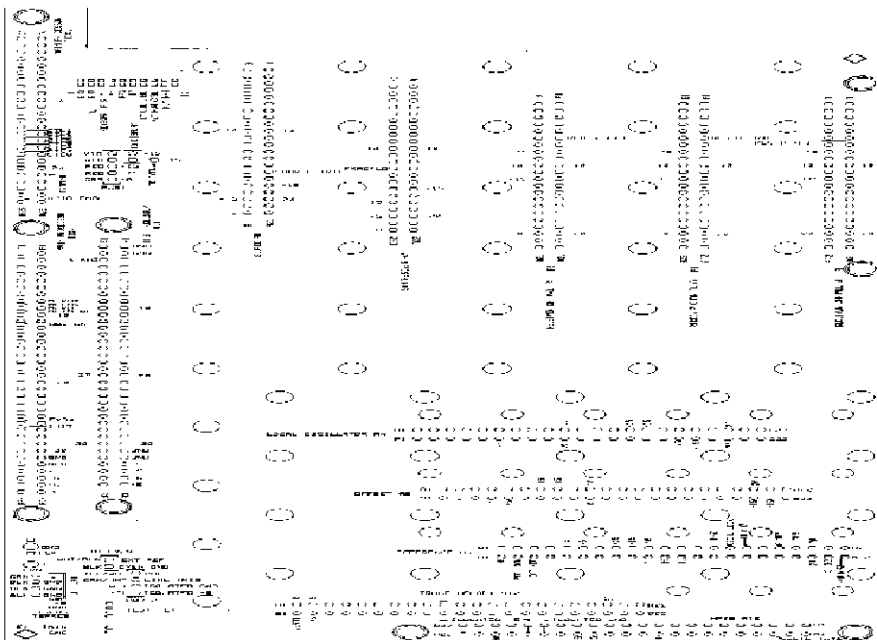


FIG. 10

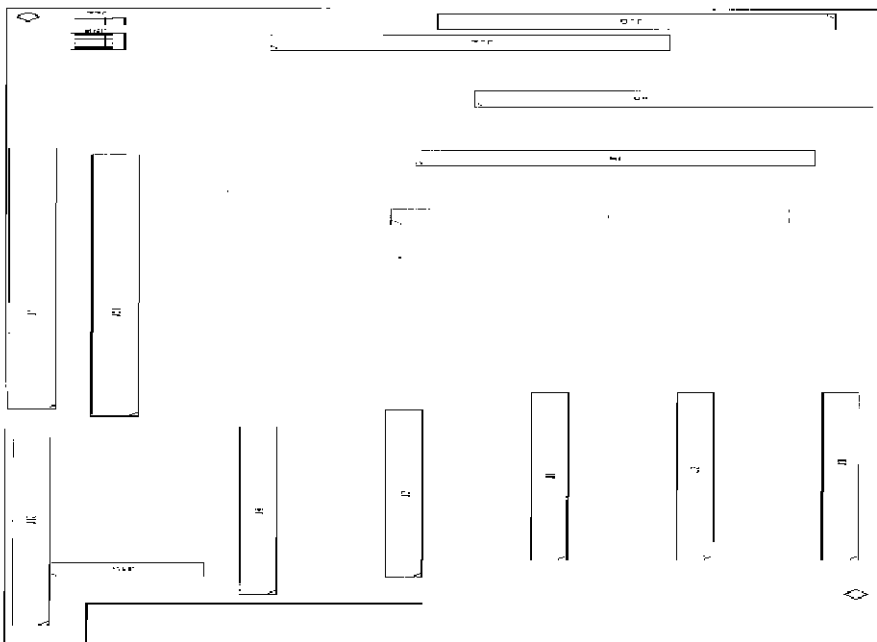

| Category | Observed | Expected | Residual | Chi-Square | Df | P-Value |
|----------|----------|----------|----------|------------|----|---------|
| 1 | 10 | 10 | 0 | 0 | 1 | 0.95 |
| 2 | 15 | 15 | 0 | 0 | 1 | 0.95 |
| 3 | 20 | 20 | 0 | 0 | 1 | 0.95 |
| 4 | 25 | 25 | 0 | 0 | 1 | 0.95 |
| 5 | 30 | 30 | 0 | 0 | 1 | 0.95 |
| 6 | 35 | 35 | 0 | 0 | 1 | 0.95 |
| 7 | 40 | 40 | 0 | 0 | 1 | 0.95 |
| 8 | 45 | 45 | 0 | 0 | 1 | 0.95 |
| 9 | 50 | 50 | 0 | 0 | 1 | 0.95 |
| 10 | 55 | 55 | 0 | 0 | 1 | 0.95 |
| 11 | 60 | 60 | 0 | 0 | 1 | 0.95 |
| 12 | 65 | 65 | 0 | 0 | 1 | 0.95 |
| 13 | 70 | 70 | 0 | 0 | 1 | 0.95 |
| 14 | 75 | 75 | 0 | 0 | 1 | 0.95 |
| 15 | 80 | 80 | 0 | 0 | 1 | 0.95 |
| 16 | 85 | 85 | 0 | 0 | 1 | 0.95 |
| 17 | 90 | 90 | 0 | 0 | 1 | 0.95 |
| 18 | 95 | 95 | 0 | 0 | 1 | 0.95 |
| 19 | 100 | 100 | 0 | 0 | 1 | 0.95 |
| 20 | 105 | 105 | 0 | 0 | 1 | 0.95 |
| 21 | 110 | 110 | 0 | 0 | 1 | 0.95 |
| 22 | 115 | 115 | 0 | 0 | 1 | 0.95 |
| 23 | 120 | 120 | 0 | 0 | 1 | 0.95 |
| 24 | 125 | 125 | 0 | 0 | 1 | 0.95 |
| 25 | 130 | 130 | 0 | 0 | 1 | 0.95 |
| 26 | 135 | 135 | 0 | 0 | 1 | 0.95 |
| 27 | 140 | 140 | 0 | 0 | 1 | 0.95 |
| 28 | 145 | 145 | 0 | 0 | 1 | 0.95 |
| 29 | 150 | 150 | 0 | 0 | 1 | 0.95 |
| 30 | 155 | 155 | 0 | 0 | 1 | 0.95 |
| 31 | 160 | 160 | 0 | 0 | 1 | 0.95 |
| 32 | 165 | 165 | 0 | 0 | 1 | 0.95 |
| 33 | 170 | 170 | 0 | 0 | 1 | 0.95 |
| 34 | 175 | 175 | 0 | 0 | 1 | 0.95 |
| 35 | 180 | 180 | 0 | 0 | 1 | 0.95 |
| 36 | 185 | 185 | 0 | 0 | 1 | 0.95 |
| 37 | 190 | 190 | 0 | 0 | 1 | 0.95 |
| 38 | 195 | 195 | 0 | 0 | 1 | 0.95 |
| 39 | 200 | 200 | 0 | 0 | 1 | 0.95 |
| 40 | 205 | 205 | 0 | 0 | 1 | 0.95 |
| 41 | 210 | 210 | 0 | 0 | 1 | 0.95 |
| 42 | 215 | 215 | 0 | 0 | 1 | 0.95 |
| 43 | 220 | 220 | 0 | 0 | 1 | 0.95 |
| 44 | 225 | 225 | 0 | 0 | 1 | 0.95 |
| 45 | 230 | 230 | 0 | 0 | 1 | 0.95 |
| 46 | 235 | 235 | 0 | 0 | 1 | 0.95 |
| 47 | 240 | 240 | 0 | 0 | 1 | 0.95 |
| 48 | 245 | 245 | 0 | 0 | 1 | 0.95 |
| 49 | 250 | 250 | 0 | 0 | 1 | 0.95 |
| 50 | 255 | 255 | 0 | 0 | 1 | 0.95 |
| 51 | 260 | 260 | 0 | 0 | 1 | 0.95 |
| 52 | 265 | 265 | 0 | 0 | 1 | 0.95 |
| 53 | 270 | 270 | 0 | 0 | 1 | 0.95 |
| 54 | 275 | 275 | 0 | 0 | 1 | 0.95 |
| 55 | 280 | 280 | 0 | 0 | 1 | 0.95 |
| 56 | 285 | 285 | 0 | 0 | 1 | 0.95 |
| 57 | 290 | 290 | 0 | 0 | 1 | 0.95 |
| 58 | 295 | 295 | 0 | 0 | 1 | 0.95 |
| 59 | 300 | 300 | 0 | 0 | 1 | 0.95 |
| 60 | 305 | 305 | 0 | 0 | 1 | 0.95 |
| 61 | 310 | 310 | 0 | 0 | 1 | 0.95 |
| 62 | 315 | 315 | 0 | 0 | 1 | 0.95 |
| 63 | 320 | 320 | 0 | 0 | 1 | 0.95 |
| 64 | 325 | 325 | 0 | 0 | 1 | 0.95 |
| 65 | 330 | 330 | 0 | 0 | 1 | 0.95 |
| 66 | 335 | 335 | 0 | 0 | 1 | 0.95 |
| 67 | 340 | 340 | 0 | 0 | 1 | 0.95 |
| 68 | 345 | 345 | 0 | 0 | 1 | 0.95 |
| 69 | 350 | 350 | 0 | 0 | 1 | 0.95 |
| 70 | 355 | 355 | 0 | 0 | 1 | 0.95 |
| 71 | 360 | 360 | 0 | 0 | 1 | 0.95 |
| 72 | 365 | 365 | 0 | 0 | 1 | 0.95 |
| 73 | 370 | 370 | 0 | 0 | 1 | 0.95 |
| 74 | 375 | 375 | 0 | 0 | 1 | 0.95 |
| 75 | 380 | 380 | 0 | 0 | 1 | 0.95 |
| 76 | 385 | 385 | 0 | 0 | 1 | 0.95 |
| 77 | 390 | 390 | 0 | 0 | 1 | 0.95 |
| 78 | 395 | 395 | 0 | 0 | 1 | 0.95 |
| 79 | 400 | 400 | 0 | 0 | 1 | 0.95 |
| 80 | 405 | 405 | 0 | 0 | 1 | 0.95 |
| 81 | 410 | 410 | 0 | 0 | 1 | 0.95 |
| 82 | 415 | 415 | 0 | 0 | 1 | 0.95 |
| 83 | 420 | 420 | 0 | 0 | 1 | 0.95 |
| 84 | 425 | 425 | 0 | 0 | 1 | 0.95 |
| 85 | 430 | 430 | 0 | 0 | 1 | 0.95 |
| 86 | 435 | 435 | 0 | 0 | 1 | 0.95 |
| 87 | 440 | 440 | 0 | 0 | 1 | 0.95 |
| 88 | 445 | 445 | 0 | 0 | 1 | 0.95 |
| 89 | 450 | 450 | 0 | 0 | 1 | 0.95 |
| 90 | 455 | 455 | 0 | 0 | 1 | 0.95 |
| 91 | 460 | 460 | 0 | 0 | 1 | 0.95 |
| 92 | 465 | 465 | 0 | 0 | 1 | 0.95 |
| 93 | 470 | 470 | 0 | 0 | 1 | 0.95 |
| 94 | 475 | 475 | 0 | 0 | 1 | 0.95 |
| 95 | 480 | 480 | 0 | 0 | 1 | 0.95 |
| 96 | 485 | 485 | 0 | 0 | 1 | 0.95 |
| 97 | 490 | 490 | 0 | 0 | 1 | 0.95 |
| 98 | 495 | 495 | 0 | 0 | 1 | 0.95 |
| 99 | 500 | 500 | 0 | 0 | 1 | 0.95 |
| 100 | 505 | 505 | 0 | 0 | 1 | 0.95 |
| 101 | 510 | 510 | 0 | 0 | 1 | 0.95 |
| 102 | 515 | 515 | 0 | 0 | 1 | 0.95 |
| 103 | 520 | 520 | 0 | 0 | 1 | 0.95 |
| 104 | 525 | 525 | 0 | 0 | 1 | 0.95 |
| 105 | 530 | 530 | 0 | 0 | 1 | 0.95 |
| 106 | 535 | 535 | 0 | 0 | 1 | 0.95 |
| 107 | 540 | 540 | 0 | 0 | 1 | 0.95 |
| 108 | 545 | 545 | 0 | 0 | 1 | 0.95 |
| 109 | 550 | 550 | 0 | 0 | 1 | 0.95 |
| 110 | 555 | 555 | 0 | 0 | 1 | 0.95 |
| 111 | 560 | 560 | 0 | 0 | 1 | 0.95 |
| 112 | 565 | 565 | 0 | 0 | 1 | 0.95 |
| 113 | 570 | 570 | 0 | 0 | 1 | 0.95 |
| 114 | 575 | 575 | 0 | 0 | 1 | 0.95 |
| 115 | 580 | 580 | 0 | 0 | 1 | 0.95 |
| 116 | 585 | 585 | 0 | 0 | 1 | 0.95 |
| 117 | 590 | 590 | 0 | 0 | 1 | 0.95 |
| 118 | 595 | 595 | 0 | 0 | 1 | 0.95 |
| 119 | 600 | 600 | 0 | 0 | 1 | 0.95 |
| 120 | 605 | 605 | 0 | 0 | 1 | 0.95 |
| 121 | 610 | 610 | 0 | 0 | 1 | 0.95 |
| 122 | 615 | 615 | 0 | 0 | 1 | 0.95 |
| 123 | 620 | 620 | 0 | 0 | 1 | 0.95 |
| 124 | 625 | 625 | 0 | 0 | 1 | 0.95 |
| 125 | 630 | 630 | 0 | 0 | 1 | 0.95 |
| 126 | 635 | 635 | 0 | 0 | 1 | 0.95 |
| 127 | 640 | 640 | 0 | 0 | 1 | 0.95 |
| 128 | 645 | 645 | 0 | 0 | 1 | 0.95 |
| 129 | 650 | 650 | 0 | 0 | 1 | 0.95 |
| 130 | 655 | 655 | 0 | 0 | 1 | 0.95 |
| 131 | 660 | 660 | 0 | 0 | 1 | 0.95 |
| 132 | 665 | 665 | 0 | 0 | 1 | 0.95 |
| 133 | 670 | 670 | 0 | 0 | 1 | 0.95 |
| 134 | 675 | 675 | 0 | 0 | 1 | 0.95 |
| 135 | 680 | 680 | 0 | 0 | 1 | 0.95 |
| 136 | 685 | 685 | 0 | 0 | 1 | 0.95 |
| 137 | 690 | 690 | 0 | 0 | 1 | 0.95 |
| 138 | 695 | 695 | 0 | 0 | 1 | 0.95 |
| 139 | 700 | 700 | 0 | 0 | 1 | 0.95 |
| 140 | 705 | 705 | 0 | 0 | 1 | 0.95 |
| 141 | 710 | 710 | 0 | 0 | 1 | 0.95 |
| 142 | 715 | 715 | 0 | 0 | 1 | 0.95 |
| 143 | 720 | 720 | 0 | 0 | 1 | 0.95 |
| 144 | 725 | 725 | 0 | 0 | 1 | 0.95 |
| 145 | 730 | 730 | 0 | 0 | 1 | 0.95 |
| 146 | 735 | 735 | 0 | 0 | 1 | 0.95 |
| 147 | 740 | 740 | 0 | 0 | 1 | 0.95 |
| 148 | 745 | 745 | 0 | 0 | 1 | 0.95 |
| 149 | 750 | 750 | 0 | 0 | 1 | 0.95 |
| 150 | 755 | 755 | 0 | 0 | 1 | 0.95 |
| 151 | 760 | 760 | 0 | 0 | 1 | 0.95 |
| 152 | 765 | 765 | 0 | 0 | 1 | 0.95 |
| 153 | 770 | 770 | 0 | 0 | 1 | 0.95 |
| 154 | 775 | 775 | 0 | 0 | 1 | 0.95 |
| 155 | 780 | 780 | 0 | 0 | 1 | 0.95 |
| 156 | 785 | 785 | 0 | 0 | 1 | 0.95 |
| 157 | 790 | 790 | 0 | 0 | 1 | 0.95 |
| 158 | 795 | 795 | 0 | 0 | 1 | 0.95 |
| 159 | 800 | 800 | 0 | 0 | 1 | 0.95 |
| 160 | 805 | 805 | 0 | 0 | 1 | 0.95 |
| 161 | 810 | 810 | 0 | 0 | 1 | 0.95 |
| 162 | 815 | 815 | 0 | 0 | 1 | 0.95 |
| 163 | 820 | 820 | 0 | 0 | 1 | 0.95 |
| 164 | 825 | 825 | 0 | 0 | 1 | 0.95 |
| 165 | 830 | 830 | 0 | 0 | 1 | 0.95 |
| 166 | 835 | 835 | 0 | 0 | 1 | 0.95 |
| 167 | 840 | 840 | 0 | 0 | 1 | 0.95 |
| 168 | 845 | 845 | 0 | 0 | 1 | 0.95 |
| 169 | 850 | 850 | 0 | 0 | 1 | 0.95 |
| 170 | 855 | 855 | 0 | 0 | 1 | 0.95 |
| 171 | 860 | 860 | 0 | 0 | 1 | 0.95 |
| 172 | 865 | 865 | 0 | 0 | 1 | 0.95 |
| 173 | 870 | 870 | 0 | 0 | 1 | 0.95 |
| 174 | 875 | 875 | 0 | 0 | 1 | 0.95 |
| 175 | 880 | 880 | 0 | 0 | 1 | 0.95 |
| 176 | 885 | 885 | 0 | 0 | 1 | 0.95 |
| 177 | 890 | 890 | 0 | 0 | 1 | 0.95 |
| 178 | 895 | 895 | 0 | 0 | 1 | 0.95 |
| 179 | 900 | 900 | 0 | 0 | 1 | 0.95 |
| 180 | 905 | 905 | 0 | 0 | 1 | 0.95 |
| 181 | 910 | 910 | 0 | 0 | 1 | 0.95 |
| 182 | 915 | 915 | 0 | 0 | 1 | 0.95 |
| 183 | 920 | 920 | 0 | 0 | 1 | 0.95 |
| 184 | 925 | 925 | 0 | 0 | 1 | 0.95 |
| 185 | 930 | 930 | 0 | 0 | 1 | 0.95 |
| 186 | 935 | 935 | 0 | 0 | 1 | 0.95 |
| 187 | 940 | 940 | 0 | 0 | 1 | 0.95 |
| 188 | 945 | 945 | 0 | 0 | 1 | 0.95 |
| 189 | 950 | 950 | 0 | 0 | 1 | 0.95 |
| 190 | 955 | 955 | 0 | 0 | 1 | 0.95 |
| 191 | 96 | | | | | |

8-19 SERVICE GROUP A21, MAIN POWER SUPPLY ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

WARNING

230 Vdc is present in the Main Power Supply board (A21) even with the line switch in the OFF position and the power cord removed. Be extremely careful when working in the proximity of this area. This high voltage could cause serious personal injury if contacted. To remove this voltage, remove the main power cord from the rear panel and remove the bottom cover. Using insulated pliers, set the Main Power Supply board (A21) jumpers W1 and W2 into the TEST position. The capacitors (A21C2 and A21C3) holding this voltage will discharge to a relatively safe level after approximately two minutes.

NOTE

All power supplies in the HP 3577A are driven by the FET DRIVE circuit and transformer T1. The +5 volt supply is the reference for the PULSEWIDTH MODULATOR, and must be operating correctly for the other supplies to be in regulation.

Initial Conditions

The following conditions apply to all procedures in this section:

Turn OFF the instrument's power switch, and remove the power cord before removing the bottom cover.


The +5 V supply must be loaded by at least the A11 Fast Processor and the A13 Main Processor boards. The voltage levels and circuit conditions in these procedures may not be correct if these boards are not inserted.

The +15V and -15 V supplies must have no load. Disconnect J1, J2, J3, J4, and J5.

Unless otherwise noted, all jumpers, test pins, and components referred to in these procedures are located on the A21 Main Power Supply board.

Troubleshooting Hints

Symptom: The HP 3577A does not power up when the line switch is turned on.

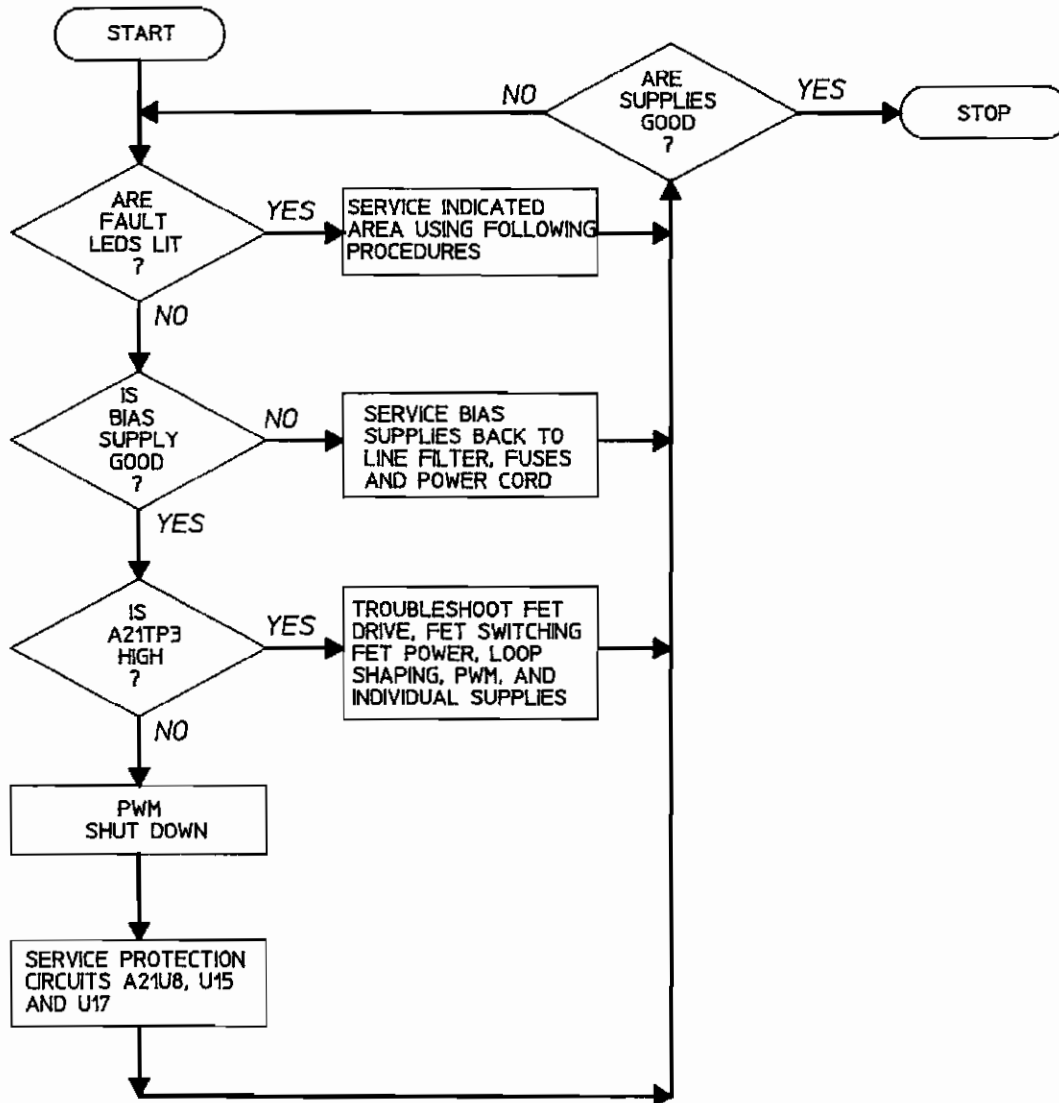

Symptom: The +5 V supply cannot be adjusted to the correct value.

If the voltage is too high, troubleshoot the listed circuits in the following order:

- FET Drive
- Loop Shaping/Pulsewidth Modulator
- 5 V Control Loop

If the voltage is too low, troubleshoot the listed circuits in the following order:

- FET Drive
- FET Power
- Loop Shaping/Pulsewidth Modulator
- 5 V Control Loop

Symptom: A supply other than the +5 V is bad.

If the +5 V supply is properly loaded and adjusted to $+5.10 \pm 0.02$ V, troubleshoot from the secondary of T1 to the output. Remember that the output of T1 is a 40 kHz square wave (the reason for the large LC filters on the rectifier output).

Protection Circuits

The A21 Main Power Supply protection mechanisms (except fuses) are as follows:

Primary protection circuits

- Turn On/Pop Circuits
- Primary Current Limit

Secondary protection circuits

- +5 V Current Limit
- +15 V Current Limit
- 15 V Current Limit
- +5 V Overvoltage
- +15 V Overvoltage
- 15 V Overvoltage
- Hi Temp

If TP3 is a TTL low, the pulsewidth modulator is shut down. The only protection circuit without a warning LED is the Turn On/Pop circuit. Check this circuit first if TP3 is a TTL low and there are no warning LEDs lit.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

To distinguish between a real overvoltage or overcurrent situation and a protection circuit problem, turn OFF the instrument's power switch, and remove the power cord. Place W1 and W2 into the TEST position using insulated pliers. Connect the instrument to the power line and turn the POWER switch ON. If the fault indication persists, the problem is most likely in the protection circuit itself.

Turn On/Pop Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury.

- b. Connect the oscilloscope's channel A to TP25.
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. The signal on the oscilloscope should stay low for approximately 2.4 seconds and then go high.
- e. If this test failed, continue this procedure.
- f. Connect the voltmeter positive terminal to TP24 and negative terminal to chassis ground. The voltage should read $+27 \pm 3$ V.
- g. If this test failed, troubleshoot from the diode bridge (CR110) back to the line filter.
- h. If this test passed, troubleshoot the TURN ON/POP circuits.

Primary Current Limit Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the TEST position. Short TP16 to TP15.
- c. Connect the instrument to the power line, and turn the POWER switch ON. The yellow primary current limit LED (CR22) should not be lit.
- d. Turn the POWER switch OFF. Remove the short between TP16 and TP15, and short TP16 to TP14.
- e. Turn the POWER switch ON. The yellow primary current limit LED (CR22) should be lit.
- f. If this test failed, troubleshoot the primary current limit circuit.

- g. If this test passed, continue this procedure.
- h. Turn OFF the instrument's power switch, and remove the power cord.
- i. Move W1 and W2 into the NORMAL position using insulated needlenose pliers. Turn the +15 V, -15 V, and +5 V adjustment pots fully counter clockwise. Verify that J1, J2, J3, J4, and J5 are not connected.
- j. Connect the instrument to the power line, and turn the POWER switch ON. The yellow primary current LED (CR22) should not be lit.
- k. If this test failed, the fault is most likely between T1 and the secondary current limit sense resistors.

NOTE

Intermittent connections in the +5 V output area(L1, C71, and the +5 V connector) can cause a primary current limit.

- l. If the fault cannot be located with an ohmmeter, begin isolating portions of the secondary by lifting the diodes leading to the secondary outputs. DO NOT REMOVE CR40. DAMAGE TO THE FETs MAY RESULT.

NOTE

The primary current limit circuit is much faster than the secondary current limit circuits. Therefore it is possible for a secondary load following the current sense resistor to cause a primary current limit.

- m. If the primary current limit LED is not lit after lifting a diode, troubleshoot the components in the associated area.
- n. If the cause of the primary current limit does not appear to be in the secondary circuitry, first verify that the FET drive waveform is correct and then troubleshoot the primary circuits.

NOTE

Quite often, when one or both FETs are shorted, several other parts are damaged; notably those in the gate circuit. Occasionally, T1 itself has been known to cause a primary current limit. Also, the problem may be related to the primary current limit transformer T2 and diodes CR23 and CR24 which are not tested in steps a through e.

- o. If the above procedure fails to uncover the cause of the primary current limit, perform the +5 V Control Loop Troubleshooting Procedure.

NOTE

If the supply can be brought up slowly without causing a primary current limit, the problem may be associated with the soft start circuit (C59). The +5 V Control Loop Troubleshooting Procedure can be performed with or without a supply load. If the supply is loaded, a faulty soft start circuit may cause a primary current limit because of surge currents. The soft start circuit insures that the pulsewidth modulator starts out with a low duty cycle and then increases gradually (0.5 second) to the proper value.

+ 5 V Current Limit Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the TEST position. Short TP33 to TP2 (+5 V REF).
- c. Connect the instrument to the power line, and turn the POWER switch ON. The yellow +5 current limit LED (CR14) should not be lit.
- d. Turn the POWER switch OFF. Remove the short connecting TP33 to TP2, and short TP32 to TP2.
- e. Turn the POWER switch ON. The yellow +5 current limit LED (CR14) should be lit.
- f. If this test failed, troubleshoot the +5 V current limit circuit.
- g. If this test passed, then the fault is most likely in the +5 V output, +5 V loading, or current sensing circuits.

+ 15 V Current Limit Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the NORMAL position. Verify that J1, J3, J4, and J5 are not connected and that the +5 V supply is properly loaded.
- c. Connect the instrument to the power line, and turn the POWER switch ON. The yellow +15 V current limit LED (CR84) should not be lit.
- d. If this test failed, the fault is most likely the +15 V current limit, +15 V output, or the current sensing circuits.
- e. If this test passed, continue this procedure.
- f. Turn the POWER switch OFF. Short TP35 to TP36.
- g. Turn the POWER switch ON. The yellow +15 V current limit LED (CR84) should not be lit.
- h. Turn the POWER switch OFF. Remove the short connecting TP35 to TP36, and short TP34 to TP36.
- i. Turn the POWER switch ON. The yellow +15 V current limit LED (CR84) should be lit.
- j. If this test failed, troubleshoot the +15 V current limit circuit.
- k. If this test passed, then the fault is most likely in the +15 V output, +15 V loading, or current sensing circuits.

-15 V Current Limit Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the NORMAL position. Verify that J1, J3, J4, and J5 are not connected and that the +5 V supply is properly loaded.
- c. Connect the instrument to the power line, and turn the POWER switch ON. The yellow -15 V current limit LED (CR92) should not be lit.
- d. If this test failed, the fault is most likely the -15 V current limit, -15 V output, or the current sensing circuits.
- e. If this test passed, continue this procedure.
- f. Turn the POWER switch OFF. Short TP39 to TP37.
- g. Turn the POWER switch ON. The yellow +15 V current limit LED (CR84) should not be lit.
- h. Turn the POWER switch OFF. Remove the short connecting TP39 to TP37, and short TP37 to TP38.
- i. Turn the POWER switch ON. The yellow -15 V current limit LED (CR92) should be lit.
- j. If this test failed, troubleshoot the -15 V current limit circuit.
- k. If this test passed, then the fault is most likely in the -15 V output, -15 V loading, or current sensing circuit.

+5 V Overvoltage Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the NORMAL position. Disconnect the +5 V load (J8). Turn the +5 V adjust (R22) fully counter clockwise.
- c. Connect the voltmeter positive terminal to TP26 and negative terminal to chassis ground.
- d. Connect the instrument to the power line, and turn the POWER switch ON.
- e. Adjust R22 slowly until the +5 V overvoltage circuit trips and the red overvoltage LED (CR100) lights. The overvoltage trip point should be approximately 5.4 V.
- f. If this test passed, then the fault is most likely in the +5 V output, loop shaping, or pulsewidth modulator circuits.

- g. If this test failed, continue this procedure.

NOTE

A power supply that can drive 5.5 V into 10 ohms is needed for this procedure. The recommended power supply is an HP 6235A.

- h. Turn OFF the instrument's power switch, and remove the power cord. Move jumpers W1 and W2 into the TEST position using insulated needlenose pliers.
- i. Connect the voltmeter positive terminal to TP26 and negative terminal to chassis ground.
- j. Connect the variable DC power supply positive terminal to TP26 and negative terminal to chassis ground.
- k. Connect the instrument to the power line, and turn the POWER switch ON.
- l. Adjust the DC power supply voltage slowly until the +5 V overvoltage circuit trips and the red overvoltage LED (CR100) lights. The overvoltage trip point is approximately 5.4 V.
- m. If this test failed, troubleshoot the +5 V overvoltage circuit.
- n. If this test passed, then the fault is most likely in the +5 V output, loop shaping, or pulsewidth modulator circuits.

+ 15 V Overvoltage Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the NORMAL position. Disconnect the +5 V load (J8). Turn the +5 V adjust (R22) fully counter clockwise.
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. Adjust R122 (+15 V adj) for +15.00 (+0.05, -0.00) V.
- e. Turn the POWER switch OFF. Short TP6 to TP8.
- f. Turn the POWER switch ON. The red +15 V overvoltage LED (CR95) should not be lit.
- g. Turn the POWER switch OFF. Remove the short connecting TP6 to TP8, and short TP7 to TP8.
- h. Turn the POWER switch ON. The red +15 V overvoltage LED (CR95) should be lit.
- i. If this test failed, troubleshoot the +15 V overvoltage circuit.
- j. If this test passed, then the fault is most likely in the +15 V output, +15 V loading, or the voltage sensing circuits.

-15 V Overvoltage Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the NORMAL position. Verify that J1, J3, J4, and J5 are not connected and that the +5 V supply is properly loaded. Turn the -15 V adjust (R124) fully counter clockwise.
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. Adjust R124 (-15 V adj) for -15.00 ± 0.05 V.
- e. Turn the POWER switch OFF. Short TP4 to chassis ground.
- f. Turn the POWER switch ON. The red -15 V overvoltage LED (CR103) should not be lit.
- g. Turn the POWER switch OFF. Remove the short connecting TP4 to chassis ground, and short TP5 to chassis ground.
- h. Turn the POWER switch ON. The red -15 V overvoltage LED (CR103) should be lit.
- i. If this test failed, troubleshoot the -15 V overvoltage circuit.
- j. If this test passed, then the fault is most likely in the -15 V output, -15 V loading, or voltage sensing circuits.

HI Temp Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord. After removing the bottom cover, allow about 20 minutes for all components to cool off.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

- b. Using insulated needlenose pliers, set jumpers W1 and W2 into the TEST position. Apply cool spray to S4 (mounted on CR40).
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. The red HI Temp LED (CR106) should not be lit.
- e. If this test failed, troubleshoot the HI Temp circuit. (Check for loose hardware holding the temperature switch to the diodes.)

- f. If this test passed, then the fault is most likely in the +5 V current limit or +5 V output circuit. The high temp switch monitors CR40's case temperature, which increases with diode current. The high temperature trip point is approximately 105 ° C.

NOTE

A dirty fan screen or improper fan operation may cause a HI Temp condition.

Bias Supply Troubleshooting Procedure

- a. Connect the instrument to the power line, and turn the POWER switch ON.
- b. Connect the voltmeter negative terminal to chassis ground and positive terminal to TP23. The DC voltage should be $+15 \pm 1$ V.
- c. Move the voltmeter positive terminal to TP22. The DC voltage should be -15 ± 1 V.
- d. If this test failed, troubleshoot the bias supplies back to the line filter.

FET Drive Troubleshooting

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the TEST position.
- c. Set the oscilloscope to A-B mode and the trigger to external. Connect the external trigger to TP1 using a 1:1 probe. Connect channel A to TP17 and channel B to TP18 with properly compensated 10:1 probes. Connect the probe ground leads to the chassis.
- d. Connect the instrument to the power line, and turn the POWER switch ON.
- e. The waveform should appear as shown in Table 8-20 step 1.
- f. If this test failed, then the fault is most likely the loop shaping circuit, pulsewidth modulator circuit, or shorted FETs. Check the voltage at TP29 with a DC voltmeter. It should be at approximately +6.0 to +6.6 V. If the voltage is near zero, the loop shaping circuit is probably shutting down the pulsewidth modulator (U5).

NOTE

With W1 and W2 in the TEST position, the loop shaping circuit drives the FETs with a maximum duty cycle in an attempt to raise the output from zero to +5 V. This drives TP29 to about +6 V. The FETs are not damaged since FET power is removed.

WARNING

After replacing shorted FETs and BEFORE turning the HP 3577A on with the jumpers in the NORMAL position, perform the FET Switching Troubleshooting Procedure.

FET Switching Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

CAUTION

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the TEST position.
- c. Set an external DC power supply to approximately 20 V with the current limited to approximately 200 mA.
- d. Connect the power supply positive terminal to the junction of R9 and W1 and negative terminal to the junction of R10 and W2.
- e. Connect the instrument to the power line, and turn the POWER switch ON.
- f. The current meter on the external power supply should indicate < 50 mA.
- g. A current significantly in excess of 50 mA indicates a shorted FET or improper FET drive. To determine if one or both sides of the FET drive circuit is shorted, repeat the remainder of this procedure for both sides of the FET drive (use the locations in parentheses for the other side of the FET drive).
- h. Set the oscilloscope to A-B mode. Connect channel A to TP18 (TP20) and channel B to the junction of W1 and R9 (W2 and R10). A square wave with an approximate 50% duty cycle should be seen.
- i. If this test passed, return to step h and check the other side of the FET drive circuit using the locations in the parenthesis.
- j. If this test failed, continue this procedure to check the gate drive.

NOTE

A Leaky/shorted CR7 or leaky/open C2 or C3 can cause the power FETs to be turned on at an improper time, thus causing the FETs to conduct current simultaneously and draw excessive, if not destructive, currents.

- k. Move channel B to TP17 (TP19) and leave channel A connected to TP18 (TP20). The oscilloscope should display a square wave with an approximate 50% duty cycle.
- l. If this test passed, the fault is probably a shorted FET.
- m. If this test failed, continue this procedure to determine if the input to the FET drive from the pulsewidth modulator is working properly.
- n. Set the oscilloscope to A-B mode and the trigger to "CHOP". Connect channel A to U3 pin 3 and channel B to U3 pin 12. The oscilloscope should display negative pulses 180 degrees out of phase.
- o. If this test passed, troubleshoot the FET drive.
- p. If this test failed, troubleshoot the pulsewidth modulator circuit.

FET Power Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.



Perform the FET Switching Troubleshooting Procedure before doing this procedure.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the NORMAL position.
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. Connect the voltmeter negative terminal to TP21 and positive terminal to the positive side of C2(+). The DC voltmeter should read $+150 \pm 15V$.
- e. Move the voltmeter positive terminal to the negative side of C3(-). The DC voltmeter should read $-150 \pm 15 V$.
- f. If this test failed, troubleshoot the FET power circuit back to the line filter.
- g. If this test passed, continue this procedure.
- h. Set the oscilloscope to A-B mode. Connect channel A to the positive side of C10 and channel B to TP21 using properly compensated 10:1 probes. Connect the probe ground leads to chassis ground. The waveform should appear as shown in Table 8-20 step 2.
- i. If this test failed, the fault is most likely in the FET drive (including the FETs), pulsewidth modulator, +5 V output, or loop shaping circuits.

+ 5 V Control Loop Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

NOTE

Use this procedure if FET drive output is good with W1 and W2 in the test position, but the +5 V output cannot be adjusted to $+5.10 \pm 0.02$ V.



When manually controlling the FET drive pulse width, it is very easy to damage (by overdriving) the power MOSFETs. This is especially true if any of the protection circuits have been disabled for troubleshooting purposes. Perform the +5 V Overvoltage Troubleshooting Procedure before continuing.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury.

- b. Using insulated needlenose pliers, place W1 and W2 into the NORMAL position.
- c. Set a positive referenced variable DC supply to 0 V output. Connect the positive terminal to TP28 and negative terminal to chassis ground. Turn the supply on.
- d. Place a short across R32.
- e. Connect the oscilloscope's channel A to the lead of C23 that is physically closest (and electrically connected) to L1 using a properly compensated 10:1 probe.
- f. Connect the DC voltmeter positive terminal to TP29 and negative terminal to chassis ground.



DO NOT apply power to the HP 3577A unless the external supply is connected, turned on, and set to zero volts output, otherwise damage to the circuit may occur.

- g. Connect the instrument to the power line, and turn the POWER switch ON. Nothing should happen on the secondary side of T1 because the pulsewidth modulator is shut down. The DC voltmeter should read approximately 0 V.
- h. SLOWLY increase the output of the variable DC supply watching the voltmeter and oscilloscope. As the voltage at (TP29) reaches about 0.8 V, narrow pulses should appear on the oscilloscope (C23). See Table 8-20 Step 4.

- i. Move the voltmeter positive terminal to TP26 (+5 V Output).
- j. Continue increasing the output of the variable DC supply, watching the pulse width and the +5 V output (TP26) increase. When the +5 V output (TP26) is approximately +3.1 V, the pulses on the oscilloscope (C23) should look like the waveform in Table 8-20 Step 5.
- k. If this test failed, troubleshoot back to the pulsewidth modulator or loop shaping circuits.
- l. Reduce the DC supply to 0 volts output. Turn OFF the instrument's power switch, remove the power cord, and return the HP 3577A to its original state.

Loop Shaping/Pulse Width Modulator Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury. These voltages will discharge to a relatively safe level after approximately two minutes, provided the jumpers are installed in the TEST position.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the TEST position.
- c. Set an external variable DC power supply to 0 V output. Connect the negative terminal to chassis ground and positive terminal to TP28. Adjust the supply output to between 1 and 2 V.
- d. Short TP27 to chassis ground.
- e. Connect the voltmeter positive terminal to TP29 and negative terminal to chassis ground.
- f. Connect the oscilloscope's channel A to the cathode of CR30 and channel B to the cathode of CR31 using properly compensated 10:1 probes. Connect the external trigger to TP1 using a 1:1 probe. Connect the probe ground leads to chassis ground.
- g. Setup oscilloscope and verify that the waveform is as shown in Table 8-20 Step 3. The two waveforms should be exactly 180 degrees out of phase. This insures that only one of the power MOSFETs is ON at a time.
- h. Slowly decrease the output of the variable supply. When the voltage measured at TP29 reaches about 3 V, the pulse width should start to narrow. When the voltage measured at TP29 reaches about 0.3 V or close to 0 V, the pulsewidth modulator should completely shut down. The external supply should have complete control over the duty cycle up to a maximum of near 50%.
- i. If this test passed, return to Troubleshooting Hints section.
- j. If this test failed, continue this procedure.
- k. Monitor TP29 with the voltmeter. It should vary from 0 to the +15 V supply rail as the voltage on TP28 varies from 0 to 2 V.
- l. Check TP29 with a oscilloscope for a clean waveform and a smooth response to the variable DC supply on TP28.

- m. If this test failed, troubleshoot the loop shaping circuit.
- n. If this test passed and the pulsewidth modulator is still shut down, continue this procedure.
- o. Drive TP29 to about 6 V by adjusting the variable DC supply. This produces a 50% duty cycle in the pulsewidth modulator. Check for 6 V on U5 pin 1.
- p. Measure the voltage at U5 pin 5. A logic low here represents a pulsewidth modulator shutdown. Troubleshoot the protection circuits. If the logic level at U5 pin 5 is high, verify the +5 V Ref (TP2) and +15 V Bias (U5 pin 17).

NOTE

While troubleshooting the pulsewidth modulator, remember that Q35 and Q36 are capable of shutting down the pulsewidth modulator output if either one is turned on or shorted. R86 and C56 externally set the pulsewidth modulator frequency to 40 ± 4 kHz.

+15 V and -15 V Output Regulator Troubleshooting Procedure

- a. Turn OFF the instrument's power switch, and remove the power cord.

WARNING

Even with the power removed, there can be sufficient stored energy in some circuits to cause personal injury.

- b. Using insulated needlenose pliers, move jumpers W1 and W2 into the NORMAL position. Verify that J1, J3, J4, and J5 are disconnected and that the +5 V supply is properly loaded.
- c. Connect the instrument to the power line, and turn the POWER switch ON.
- d. Connect the voltmeter positive terminal to TP26 and negative terminal to chassis ground. The DC voltmeter reading should be $+5.10 \pm 0.02$ V.
- e. If this test failed, return to the Troubleshooting Hints section.
- f. If this test passed and a 15 V supply cannot be adjusted to the correct value, troubleshoot the 15 V regulator circuits. Trace the proper voltages back through the circuit to the main power transformer T1.

NOTE

The three pin voltage regulators usually require a 3 V to 5 V potential difference between the input and output for proper regulation.



Final Power Supply Adjustments


- a. Perform the adjustment in section 4-5, Power Supply Adjustments.

Table 8-20 A21 Circuit Board, Troubleshooting Data

| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|--------|--|---|--|--|
| 1 | Connect CH A to A21TP17 Connect CH B to A21TP18 Externally trigger on A21TP1 Set A21W1 and W2 to TEST | Oscilloscope Mode A-B CH A V/Div 500 mV CH B V/Div 500 mV Time/Div 5 μ s Trigger EXT CH A Coupling DC CH B Coupling DC | Pulse shape and duty cycle. | <p>CH1 CPLG-DC CH2= 500 mV/Div</p> <p>MT=Ch 1 Rate= 5 us/Div</p> |
| 2 | Connect CH A to A21C10 Connect CH B to A21TP21 Set A21W1 and W2 to NORMAL | Oscilloscope Mode A-B CH A V/Div 5 V CH B V/Div 5 V Time/Div 5 μ s Trigger INT CH A Coupling DC CH B Coupling DC | Pulse shape and duty cycle | <p>CH1 CPLG-DC CH2= 5 V/Div</p> <p>MT=EXT/10 AC CPLG LF REJ Rate= 5 us/Div</p> |
| 3 | Connect CH A to A21CR30 Connect CH B to A21CR31 Externally trigger on A21TP1 Jumper TP27 to GND Set A21W1 and W2 to TEST Drive TP28 with external power supply to 1 V | Oscilloscope CH A V/Div 2 V CH B V/Div 2 V Time/Div 5 μ s Trigger EXT CH A Coupling DC CH B Coupling DC | Pulse shape, only one signal on at a time (no overlap) | <p>CH1 CPLG-DC CH2 CPLG-DC CH1= 100 mV/Div CH2= 100 mV/Div</p> <p>MT=EXT/1 DC CPLG RE1TP1 Rate= 5 us/Div</p> |
| 3 cont | Connect CH A to A21CR30 Connect CH B to A21CR31 Externally trigger on A21TP1 Jumper TP27 to GND Set A21W1 and W2 to TEST Drive TP28 with external power supply to 0.5 V | Oscilloscope CH A V/Div 100 mV CH B V/Div 100 mV Time/Div 5 μ s Trigger EXT CH A Coupling DC CH B Coupling DC | Pulse shape, only one signal on at a time (no overlap) | <p>CH1 CPLG-DC CH2 CPLG-DC CH1= 100 mV/Div CH2= 100 mV/Div</p> <p>MT=Ch 1 Rate= 5 us/Div</p> |

Table 8-20. A21 Circuit Board, Troubleshooting Data
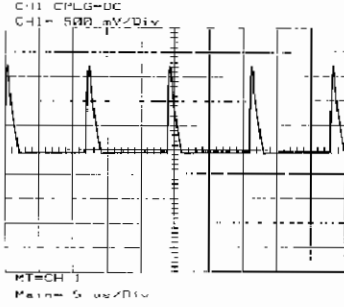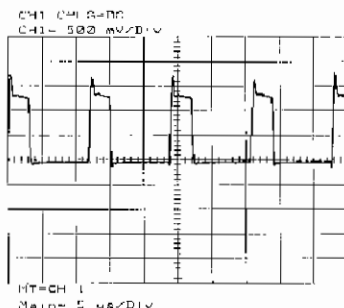
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|---|--|---|---|
| 4 | Connect CH A to A21C23 Set A21W1 and W2 to NORMAL Drive TP28 with external power supply to 0.8 V on TP29 Place a short across A21R32 | Oscilloscope CH A V/Div 500 mV Time/Div 5 μ s Trigger INT CH A Coupling DC | Peak-to-peak voltage |  |
| 5 | Connect CH A to A21C23 Set A21W1 and W2 to NORMAL Drive TP28 with external power supply to 3.1 V on TP26 Place a short across A21R32 | Oscilloscope CH A V/Div 500 mV Time/Div 5 μ s Trigger INT CH A Coupling DC | Peak-to-peak voltage, pulse shape, duty cycle, DC level |  |
| | | | | |
| | | | | |

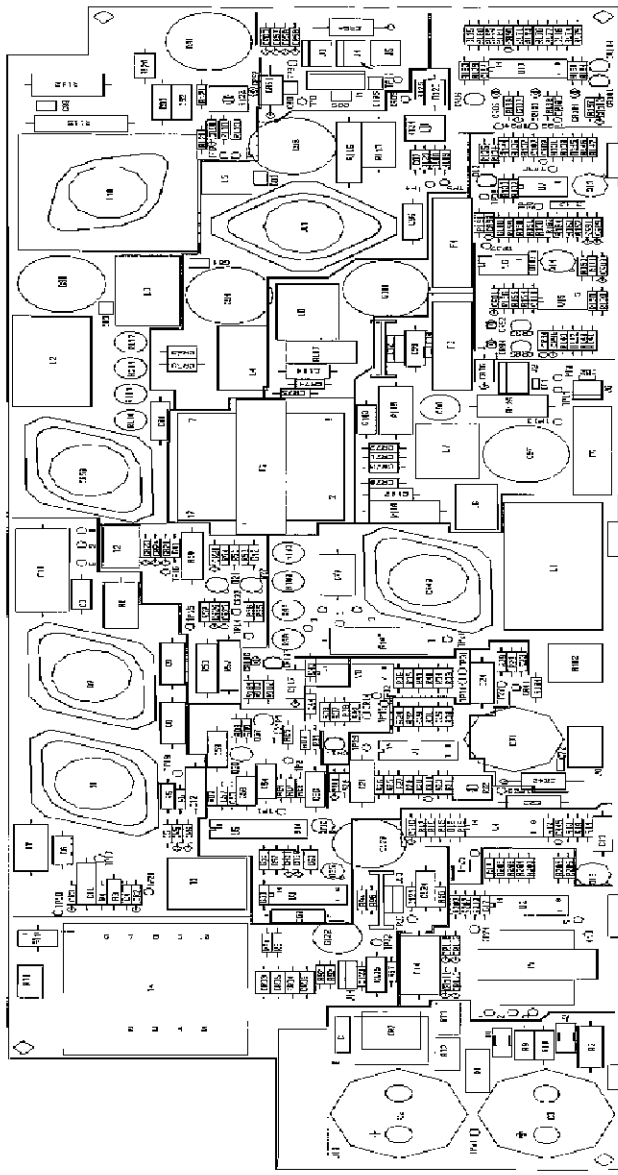

8-20 SERVICE GROUP A31, OVEN ASSEMBLY

The information in this section should be used to isolate faulty functional sub-blocks when servicing the HP 3577A. All procedures assume the Fault Isolation procedures of Section II have been used to determine which functional block has failed, and the Circuit Descriptions of Section VII are understood.

WARNING

Service procedures described in this section are performed with the protective covers removed and power applied. Energy available at many points can, if contacted, result in personal injury.

CAUTION

Do not insert or remove any circuit board in the HP 3577A with the line power turned on. Power transients caused by insertion or removal may damage the circuit boards.

Initial Conditions

Unless otherwise stated in the troubleshooting sections of the signal table, set the 3577A as described below, after power on:




Press INSRT PRESET
Disconnect the EXT REF if connected



All Oscilloscope waveforms are taken using a 1:1 probe and a HP 1980B Oscilloscope. All Spectrum Analyzer waveforms connected to an SMB connector are taken through the 03577-84401 Service Kit BNC to SMB cable. All Spectrum Analyzer waveforms taken off component leads are taken through a 10007B 1:1 probe. This probe has 215 Ω of series resistance.

Troubleshooting Hints

1. Jumper A31U2 pin 7 to ground. A31Q3 and A31Q4 should turn on and the oven signal should be on at A31J1 at approximately -1 dBm. If the signal is not present, suspect both A31Q3 and A31Q4 as being faulty.
2. Connect a jumper across A31R17 shorting it. A31Q3 and A31Q4 should turn off and the oven signal should be < -100 dBm at A31J1. If the signal is higher, suspect both A31Q3 and A31Q4 as being leaky.

Table 8-22. A31 Circuit Board, Troubleshooting Data
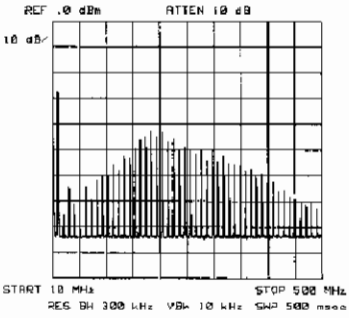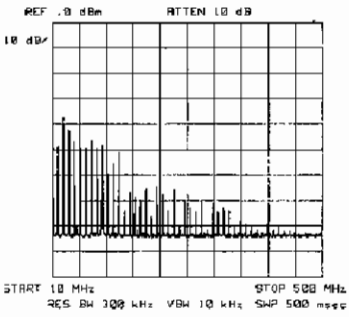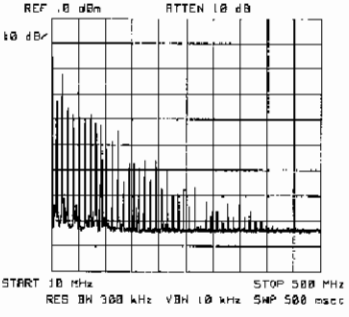
| Step | HP 3577A Set up | Measurement Set up | Important Parameters | Waveform |
|------|--|--|------------------------------------|--|
| 1 | Test at A31J1 Press INSTR PRESET | Spectrum Analyzer Start 10 MHz Stop 500 MHz Res BW 300 kHz VBW 10 kHz Ref Level 0 dBm dB/Div 10 dB | 10 MHz Amplitude, Harmonics. |  |
| 2 | Test at A31U1 pin 4 Press INSTR PRESET | Spectrum Analyzer Start 10 MHz Stop 500 MHz Res BW 300 kHz VBW 10 kHz Ref Level 0 dBm dB/Div 10 dB | 10 MHz Amplitude, Harmonics |  |
| 3 | Test at A31Q1 emmitter Press INSTR PRESET | Spectrum Analyzer Start 10 MHz Stop 500 MHz Res BW 300 kHz VBW 10 kHz Ref Level 0 dBm dB/Div 10 dB | 10 MHz Amplitude Harmonics. |  |
| 4 | Test at A31U2 pin 7 | Oscilloscope Volts/Div 1 V Time/Div any Autotrigger | TTL State | Should TTL toggle when EXT REF is connected and disconnected. |

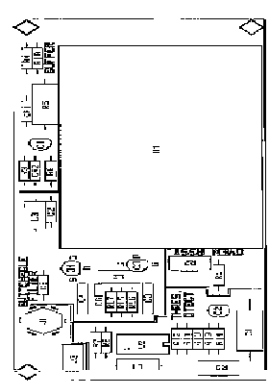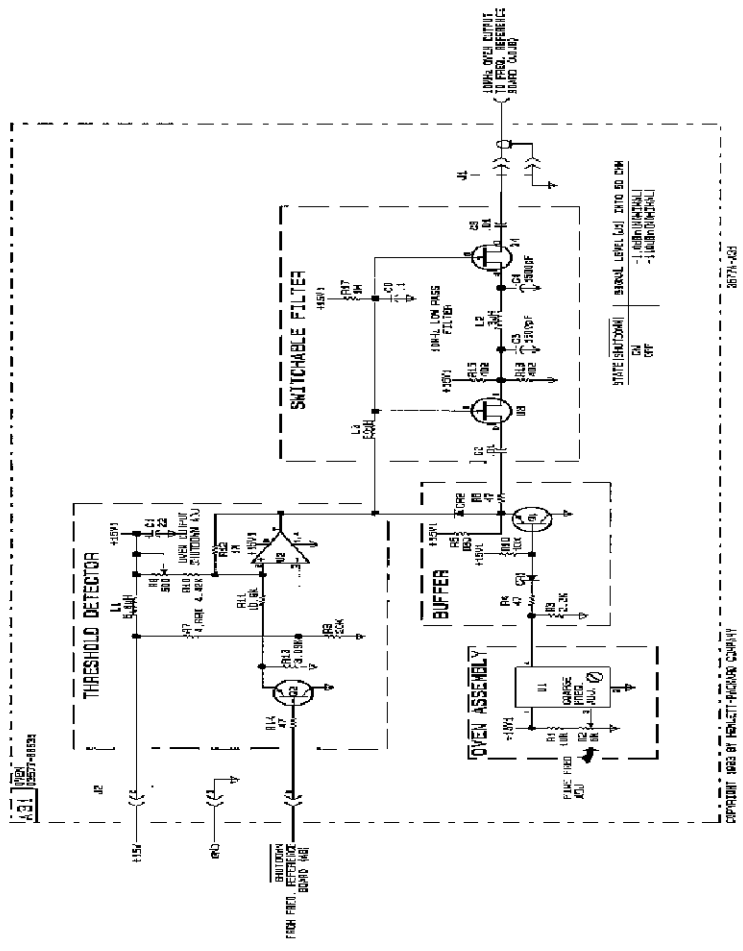

A31
 Figure 8-34. A31 Oven Board Schematic
 8-177/8-170

8-21 HP 1345A DISPLAY REMOVAL

The HP 1345A Digital Display is a stand alone digital display which is serviced separately using the HP 1345A service manual included with the instrument. To remove the display for servicing, the only screws requiring removal are those called out in Figure 8-25. With the HP 3577A placed on its side, the internal cables used to connect to the display can be connected to the removed display. Perform the following steps to remove the display.

- a. Disconnect the mains power cord from the rear panel and remove the top cover.
- b. Remove both internal shields from over the display unit and A31 Reference circuit board.
- c. Remove the side handle from the left side of the HP 3577A by removing the two screws at the end of each side of the handle.
- d. Remove the side cover by removing the screw which connects the side panel to the rear frame.
- e. Remove the trim strip from top of the front frame.
- f. Remove the front frame and side panel screws as shown in Figure 8-25.
- g. Remove the screw which attaches the display to the instrument bottom deck as shown in Figure 8-25.
- h. The display will pull out of the unit from the front. Disconnect the display power cable and the display interface cable.

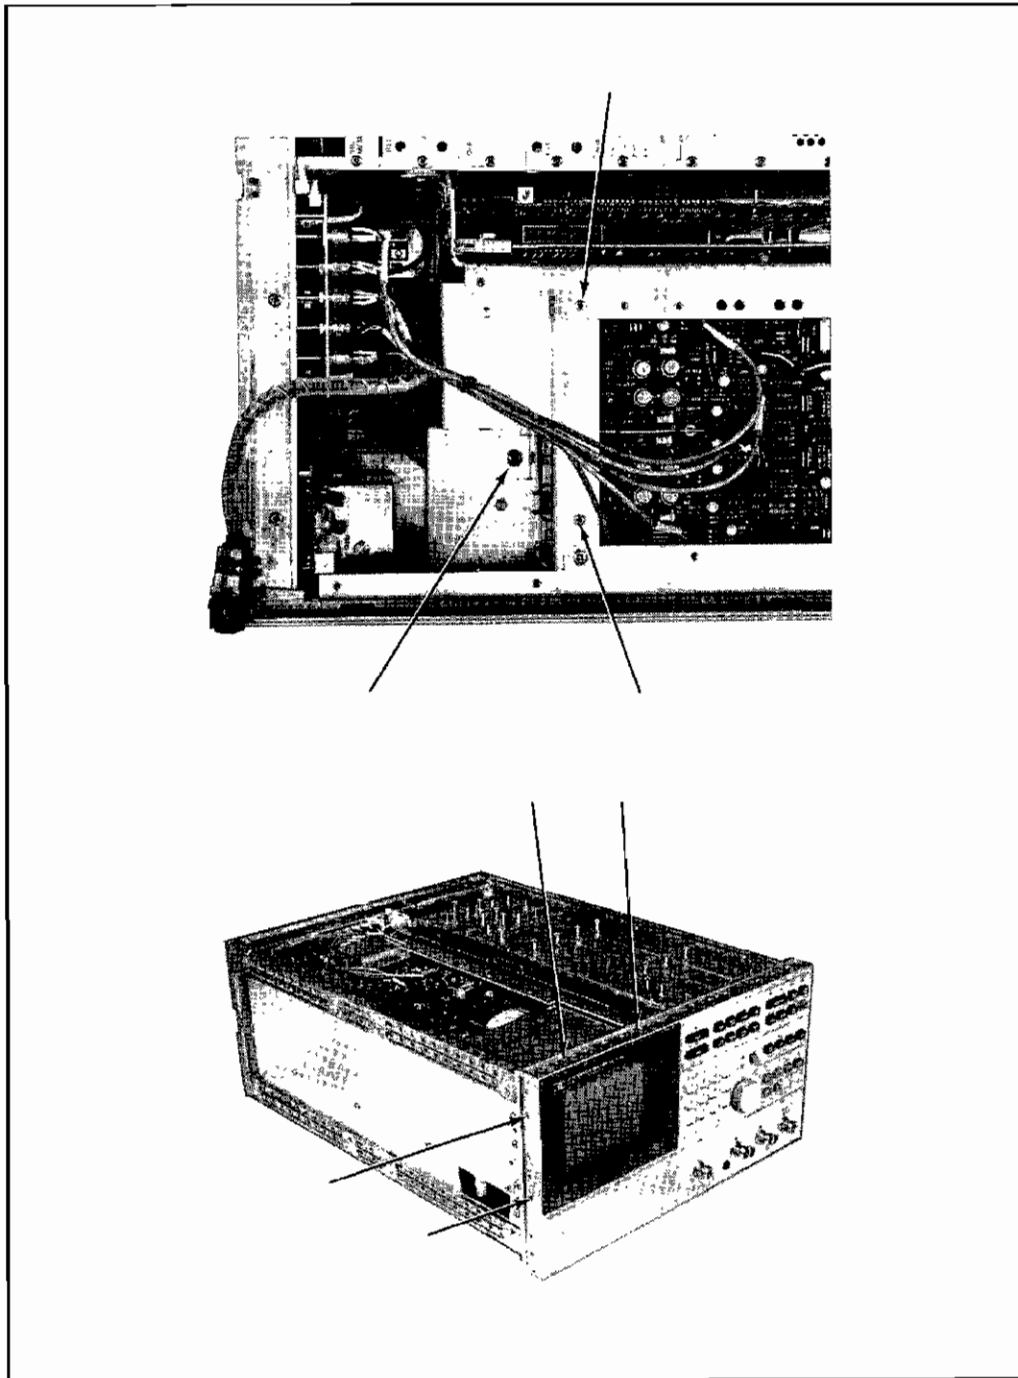


Figure 8-25. HP 1345A Removal