# **RadioShack**<sub>®</sub>

## 25W RMS/50W Max. POWERHORN

Mounting

Cautions:

1. Remove the nuts, washers,

2. Attach the powerhorn's base to the mounting location and fix with six suitable screws (Dia.4.0x25.0~30.0mm) and nuts (screws and nuts not supplied).

3. Place the speaker back onto

washers and screws.

to the desired angle.

the base and secure with nuts,

4. Adjust the powerhorn's speaker

• Be sure to tilt the powerhorn's

• Mount the powerhorn away

www.radioshack.com

find a recycle location near you.

Protect the environment by recycling used

electronics. Go to www.ecyclingcentral.com to

from heat sources.

speaker slightly downward to

prevent water collecting inside.

remove the speaker.

and screws from the base then

40-1440

Thank you for purchasing your 25W RMS/50W Max. Powerhorn from RadioShack. Please read this user's quide before installing, setting up and using your new powerhorn.

#### What's Included

Powerhorn

User's Guide

#### **Specifications**

Power Handling 25 Watts (RMS)
Maximum Power
Voice Coil Impedance8 Ohms
Frequency Response500–10,000 Hz
Horn Diameter 4 × 6 Inches
(102 × 153 mm)
Overall Length 8 in (203 mm)
Weight26.4 oz (750 g)
Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

#### **Limited Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from *RadioShack* company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT. SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor: (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a *RadioShack* Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state

RadioShack Customer Relations



### Connecting

- 1. Connect the speaker wire with the white stripe to the PA system's negative (--) terminal.
- 2. Connect the speaker wire without a stripe to the PA system's positive (+) terminal.

©2008. RadioShack Corporation. All rights reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

07A08 40-1440 Printed in Taiwan