


## Undercupboard Radio



- GB Undercupboard Radio
- IE Operating manual
- CY Operating manual

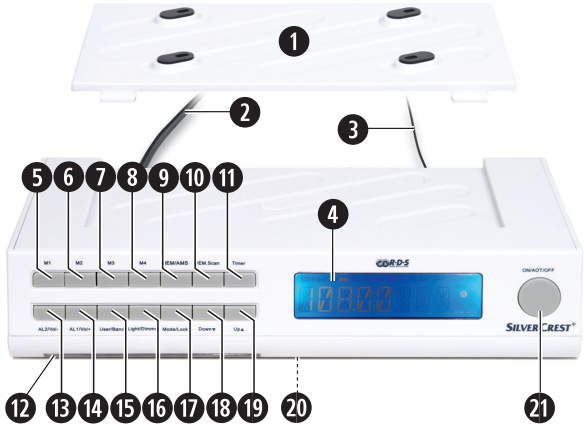

<b>INDEX</b>	<b>PAGE</b>
<b>Intended Use</b>	<b>2</b>
<b>Items supplied</b>	<b>2</b>
<b>Technical data</b>	<b>2</b>
<b>Safety instructions</b>	<b>3</b>
<b>The appliance components</b>	<b>6</b>
<b>Setting up the appliance</b>	<b>6</b>
<b>Fixing the kitchen radio beneath a wall cabinet</b>	<b>7</b>
<b>Setting up the kitchen radio</b>	<b>7</b>
<b>The Settings menu</b>	<b>8</b>
<b>Further setting possibilities</b>	<b>10</b>
<b>Radio operation</b>	<b>12</b>
<b>Cleaning</b>	<b>16</b>
<b>Disposal</b>	<b>16</b>
<b>CE Conformity</b>	<b>17</b>
<b>Importer</b>	<b>17</b>
<b>Warranty and Service</b>	<b>17</b>

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass this booklet on to whoever might acquire the appliance at a future date.

## Intended Use

---

This Kitchen Radio is intended for use either free-standing or for assembly beneath a wall cabinet. The intended uses for this Kitchen Radio are the reception of FM radio transmissions and as an alarm/timer, using either signal tones or the radio itself.

This Kitchen Radio is not intended for utilisation in commercial or industrial applications. The warranty does not provide compensation for damage caused by improper use of the appliance!

## Items supplied

---

- 1 Kitchen radio KH 2299
- 1 Mounting plate
- 4 Screws
- 1 Operating manual

## Technical data

---

Power supply:	220 - 240 V~, 50 Hz
Power consumption:	
Operation:	5 W
Standby:	approx. 1.8 W
Output level:	1 W at 10% THD
Frequency range	UKW (FM) 87.5 - 108 MHz MW (AM) 526,5 - 1606,5 kHz
Operating temperature:	+5 ~ +35°C
Humidity:	5 ~ 90 % (No condensation)
Dimensions	
(W x H x D):	27,5 x 15,7 x 6,4 cm
Weight:	1.070 g
Protection class:	II / □
Backup batteries	2 x 1.5 V Type AAA/Micro (not supplied)

The technical features of this appliance enable an adjustable reception capability that exceeds the permitted frequency range of 87,5-108 MHz and 526,5-1606,5 kHz. In some countries, different national regulations may apply to the assigned radio frequency ranges. Please note that information received outside of the assigned radio frequency ranges may not be utilised, passed on to third parties or otherwise misused.

## Safety instructions

---

- This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that they do not play with the appliance.
- Always remove the power plug before cleaning the appliance.
- Check the appliance and all parts for visible damages. The safety concept can work only if the appliance is in a faultless condition.
- The power plug must always be easily accessible, so that in the event of an emergency the appliance can be quickly disconnected from the mains power supply.

### **Risk of electrical shocks.**

- Connect the appliance only to correctly installed and earthed mains power sockets. Ensure that the rating of the local power supply tallies completely with the details given on the rating plate of the appliance.
- Arrange for Customer Services to repair or replace connecting cables and/or appliances that are not functioning properly or have been damaged.
- NEVER submerge the appliance in water. Wipe it only with a slightly damp cloth.
- Do not expose the appliance to rain and never use it in a humid or wet environment.
- Always take hold of the power cable by the plug. Do not pull on the cable itself and never touch the power cable with wet hands, this could result in either a short circuit or you receiving an electric shock.
- Do not place the appliance, furniture or anything else on the power cable and ensure that it does not become clamped.
- NEVER make a knot in the power cable and do NOT bind it together with other cables. The power cable should be positioned so that no one can step on or trip over it.
- Ensure that the power cable does not become wet during operation.

- You are not permitted to open the appliance housing or repair the appliance. If the housing is opened, you run the risk of receiving a potentially fatal electric shock and the warranty lapses.
- Protect the appliance against drip and spray water. Do not place any water-filled vessels (e.g. flower vases) on or near the appliance.

 **Risk of fire!**

- Do not use the appliance near hot surfaces.
- Do not place the appliance in locations that are subject to direct sunlight. Otherwise, it may overheat and become irreparably damaged.
- Do not locate the kitchen radio directly above hotplates. The kitchen radio may be damaged. There is a danger of fire!
- Never leave the appliance unattended while it is being used.
- Never cover the ventilation slots of the appliance while it is on.
- Do not place open fire sources, such as candles, on or near the appliance.

 **Risk of personal injury!**

- Keep the power cable and appliance away from children. Children frequently underestimate the dangers of electrical appliances.
- Provide a stable location for the appliance.
- Do not operate the appliance if it has sustained a fall or is damaged.
- Arrange for the appliance to be checked and/or repaired by qualified technicians.
- Keep batteries well away from children. Children can put batteries into their mouths and swallow them.
- If a battery is swallowed medical assistance must be sought immediately.

 **Note:**

- Some aggressive furniture finishes can have a destructive influence on the appliance's rubber pads. If necessary, place the appliance on a nonslip pad.

 **Thunderstorms!**

- Equipment connected to a power supply can be damaged during a thunderstorm. You should therefore always remove the plug from the power socket when there is a storm.

**⚠ Notice regarding separation from mains-power**

The ON/AOT/OFF switch does not completely disconnect the appliance from the power network. Additionally, the appliance consumes power when in standby-mode.

To completely separate the appliance from mains power, the power plug **MUST** be removed from the mains power socket.

**⚠ Notice regarding electrical power surges (EFT / electrical fast transient) and electrostatic discharges:**

In a case of malfunction due to an electrical fast transient (power surge) and/or electrostatic discharge, the appliance must be returned to default settings in order to re-establish normal operation. Possibly the power supply must be separated and then reconnected. The batteries (if present) must be removed and then reinserted.

**⚠ Information regarding the handling of batteries**

The appliance uses batteries for memory conservation. For the handling of batteries please observe the following:

**⚠ Risk of explosion!**

- Do not throw batteries into a fire. Do not recharge the batteries.
- Never open batteries, never solder or weld batteries. The risk of explosions and injuries exists!
- Regularly check the condition of the batteries. Leaking batteries can cause damage to the appliance.
- If you do not intend to use the appliance for an extended period, remove the batteries.
- Should the batteries leak, put on a pair of protective gloves and clean the battery compartment and terminals with a dry cloth.

**⚠ Important!**

No liability/warranty will be considered for damage to the Kitchen Radio caused by the effects of moisture, water penetration or overheating!

## The appliance components

---

- |     |                          |  |
|-----|--------------------------|--|
| ①   | Mounting plate/Baseplate |  |
| ②   | Power cable              |  |
| ③   | Wire aerial              |  |
| ⑤-⑧ | M1-M4                    | - Memory buttons M1-M4   |
| ⑨   | MEM/AMS                  | - to save and automatically search for and save radio stations |
| ⑩   | MEM.SCAN                 | - automatic recall of saved radio stations                     |
| ⑪   | TIMER                    | - controls the timer programming                               |
| ⑫   | Illuminated clamp strip  |  |
| ⑬   | AL2/VOL -                | - controls the alarm function 2<br>- Volume reduction          |
| ⑭   | AL1/VOL +                | - controls the alarm function 1<br>- Volume increase           |
| ⑮   | USER/BAND                | - User switching,<br>Radio waveband switching                  |
| ⑯   | LIGHT/DIMMER             | - controls the display and clamp strip illumination            |
| ⑰   | MODE/LOCK                | - recalls the settings,<br>Button lock                         |
| ⑱   | DOWN ▼                   | - Selection button down  |
| ⑲   | UP ▲                     | - Selection button up  |
| ⑳   | Battery compartment      |  |
| ㉑   | ON/AOT/OFF               | - Switch the radio on/off<br>controls the switch off timer     |

## Setting up the appliance

---

First take all appliance components from the packaging and remove all packing foil and tape.

### Inserting the back-up batteries

The back-up batteries ensure that the time, date and alarm time setting are not lost in the event of a power cut. For this you require two 1.5 V batteries of the type AAA/Micro. They are not supplied.

1. Open the lid of the battery compartment ㉑ on the underside of the kitchen radio.
2. Insert the batteries. Make sure the polarities are correct. Otherwise, the memory receipt will not function and damage may be caused to the appliance.
3. Close the lid of the battery compartment ㉑. The lid must audibly engage.



**i Note:**

*The back-up batteries must be checked at least once per year and, if necessary, exchanged for new ones.*

## Fixing the kitchen radio beneath a wall cabinet

---

With the supplied mounting plate ❶ you can fix the kitchen radio below, for example, a kitchen wall cabinet:

1. Determine a suitable location for the kitchen radio.
2. Press the two retaining levers on the back of the appliance down. Push the mounting plate ❶ back and remove it.
3. Hold the mounting plate ❶ under the installation location. Thereby, the front edge of the mounting plate ❶ should be approx. 3.5 cm behind the front of the kitchen cabinet..
4. Mark the four points for the drillholes with a pencil.
5. Using a spike, make a small depression at the marking points. Firmly secure the mounting plate ❶ with the supplied screws.
6. Hold the kitchen radio slanted, with the two recesses in the retaining lugs on the mounting plate ❶.  
Press the kitchen radio upwards until it audibly engages.

### Disassembly

- To disassemble the kitchen radio, press the two retaining levers at the rear of the appliance downwards. Then pull the radio out to the front and remove it.
- Unscrew the screws and remove the assembly plate ❶.

## Setting up the kitchen radio

---

Do not set the kitchen radio up without the mounting plate ❶. Otherwise the speakers are covered and the sound is scarcely audible.

To fit the kitchen radio with the supplied mounting plate ❶:

1. Simultaneously press the two retaining levers on the back of the appliance down.  
Push the mounting plate ❶ back and remove it.
2. Push the two retainer lugs on the mounting plate ❶ into the recesses on the lower rear side of the kitchen radio.
3. Press the mounting plate ❶ firmly in the direction of the appliance rear until it audibly engages.

## Providing mains power

- When you have completed installation of the appliance, insert the plug into a mains power socket. The display ④ is illuminated and the appliance tries to receive an RDS signal to automatically adjust the time and date.
- For as long as the appliance waits for the RDS signal, the display ④ shows "PLEASE WAIT FOR SETTING THANKS". This can take several minutes.

## The Settings menu

---

### Setting the time

Should this not succeed, you must set the clock manually. For this, the radio cannot be switched on (= automatic mode).

1. In automatic mode press the button MODE/LOCK ⑰ once. The time display blinks.
2. Press the buttons UP▲/DOWN▼ ⑱/⑲ to set the time in minute intervals. Pressing and holding the button changes the time at ten-minute intervals.
3. Press the button MODE/LOCK ⑰ once again to save the time and switch to the date setting.

If you do not press a button for 10 seconds when making the settings, the appliance saves the current setting and returns to automatic mode.

### Setting the date

1. In automatic mode press the button MODE/LOCK ⑰ twice. In the display ④ appears "01.01.2010", the date display flashes.
2. Press the buttons UP▲/DOWN▼ ⑱/⑲ to set the date at day intervals. Pressing and holding the buttons changes the date at intervals of 10 days.
3. Press the button MODE/LOCK ⑰ once again to save the date and to switch to setting the memory function.

If you later press the DOWN button ▼ ⑲ in automatic mode, the display ④ briefly shows "DAY". Subsequently, the time and date display alternate themselves. To switch back to an exclusive time display, press the button DOWN ▼ ⑲ once again.

### Setting the memory functions

You can programme in up to 6 dates, which the appliance will remind you of when they are reached.

1. In automatic mode press the button MODE/LOCK ⑰ three times. The display ④ shows alternatively a date and the SDA 1 indicator for reminder date 1.

2. Press the buttons UP▲/DOWN▼ ⑱/⑱ to set the first desired reminder date. Pressing and holding one of the buttons changes the display in ten-minute intervals.
3. When you press the button TIMER ⑪, the year number is deactivated and thus you are reminded on this date every year.
4. Should you wish to programme in further dates, press the button MEM.SCAN ⑩ to select the desired memory positions 2-6.
5. Follow the same steps with the other dates.
6. To deactivate the memory function, programme in a date that lies in the past.
7. Press the button MODE/LOCK ⑰ once again to save the settings of the memory function and to switch to setting the update function.

### Setting the update function

Using this function, the appliance can automatically update the settings for the clock based on the RDS data.

1. In automatic mode press the button MODE/LOCK ⑰ four times. The display ④ shows "UP DATE".
2. Press the button DOWN▼ ⑱, to deactivate the Actualisation function. The blinking clock symbol ⌚ in the display ④ then disappears.
3. Press the button UP▲ ⑱ to reactivate the update function. The hour symbol ⌚ appears.
4. Press the button MODE/LOCK ⑰ once again to save the settings of the update function and to switch to setting the 12 or 24 hour mode.

### Selecting 12 or 24 hour time display

1. In automatic mode press the button MODE/LOCK ⑰ five times. In the display ④ appears "24 HOUR" for the 24 hour modus.
2. Press the button DOWN▼ ⑱ to select the 12 hour modus. In the display ④ appears "12 HOUR". Press the button UP▲ ⑱ to return to the 24 hour modus.

In the 12 hour mode "AM" appears between 0:00 and 11:59 (**a**n**t**e **m**erid**i**em = mornings) behind the time display, from 12:00 to 23:59 "PM" (**p**ost **m**erid**i**em = afternoons) is shown in the display ④.

Press the button MODE/LOCK ⑰ to save the menu settings and to close it down.

## Further setting possibilities

---

### Setting the display brightness

Press the button LIGHT/DIMMER 16 repeatedly to set the brightness level at which the display should be illuminated. The brightness can be set at 3 levels.

### Illuminated clamp strip

Documents, for example recipes, with a width of up to 10 cm can be inserted and automatically held in the clamp strip 12. If you press and hold the button LIGHT/DIMMER 16 for two seconds, the downward facing lamp is switched on, which then illuminates the recipe. Press and hold the button 16 once again for two seconds to switch the lamp off.

### Kitchen timer

1. Press the button TIMER 11.
2. Using the buttons UP▲/DOWN▼ 19/18, set the desired time interval (a time span between 1 minute and 23:59 h is possible). Pressing and holding one of the buttons changes the display in ten-minute intervals. Or press one of the buttons M1 – M4 5 – 8 to recall a saved preset time for the kitchen timer. The following times are factory pre-programmed:  
Button M1 5 = 5 min. (Indicator = T1)  
Button M2 6 = 10 min. (Indicator = T2)  
Button M3 7 = 15 min. (Indicator = T3)  
Button M4 8 = 20 min. (Indicator = T4)
3. Press the button TIMER 11 once again to start the kitchen timer. In the display 4 a clock icon running in reverse and a cooking pot symbol appears.
4. From 30 seconds before expiry of the time span an acoustic signal sounds, repeating at shorter intervals the closer the set time approaches. When the time has expired, the alarm sounds continuously and with increasing volume.
5. Press the button TIMER 11 to terminate the acoustic signal.

### Interrupting the kitchen timer.

- To interrupt the kitchen timer, switch to the kitchen timer mode by pressing the button TIMER 11.
- Then briefly press the button TIMER 11 to interrupt the kitchen timer.

The time is halted, the indicator blinks for 10 seconds. After this period the appliance returns to automatic modus. To restart the kitchen timer, briefly press the button TIMER 11 again to switch back into the kitchen timer mode.

- Press the button **TIMER 11** once again. The time then continues to run.
- To completely switch the kitchen timer off, press and hold the button **TIMER 11** for 3 seconds. The clock and cooking pot symbol disappear.


 
## Programming the kitchen timer

You can programme frequently used times for the kitchen timer into the appliance, so that you do not need to enter them in repeatedly. As the appliance can be used by several people, it has user switching, A/B. Both users can save 4 different timer periods each.

1. First, select the desired user. To switch between users, press and hold the button **USER/BAND 15** for two seconds.
2. Then press the button **TIMER 11**.
3. Using the buttons **UP▲/DOWN▼ 19/18** enter in the desired time.
4. Press the button **MEM/AMS 9**. On the right and next to the time indicator, "7" lights up.
5. Press one of the pre-set buttons **M1 - M4 5 - 8**, under which the kitchen timer period should be saved. Its number is now shown to the right of the "7".
6. Press the button **MEM/AMS 9** once again to conclude the saving.

## Setting alarm times (Alarms 1 and 2)

You can programme two alarm times into your kitchen radio.

Alarm function	Symbol in the display 4
Acoustic signal	
Radio	
Switched off	no symbol

1. In automatic mode press the button **AL1/VOL. + 14** (or **AL2/VOL. - 13**). In the display 4 the last set alarm time and the symbol for the type of alarm blink for 10 seconds.
2. Press the buttons **UP▲/DOWN▼ 19/18** to set the desired alarm time.
3. Press the button **AL1/VOL. + 14** (or **AL2/VOL. - 13**) repeatedly until the desired alarm function (see the table above) is indicated in the display 4.
4. Repeatedly press the button **TIMER 11** to set the weekdays on which you require the alarm function: You can select

between "workdays" (Mo, Tu, We, Th, Fr), "weekends" (Su, Sa) and "every day" (Su, Mo, Tu, We, Th, Fr, Sa). Thereby, orientate yourself on the weekday indicator in the display ④:

Mo	= Monday
Tu	= Tuesday
We	= Wednesday
Th	= Thursday
Fr	= Friday
Sa	= Saturday
Su	= Sunday.

5. If you hold the button TIMER ⑪ pressed down for 2 seconds, you can also, through repeated brief pressing of the TIMER ⑪ button, select a specific weekday (e.g. only "We"). The selected setting is indicated in the display ④.
6. To return to the selection of workdays, weekends or whole weeks, once again hold the button TIMER ⑪ pressed down for 2 seconds.
7. After 10 seconds the blinking in the display stops and your input is saved. The appliance then returns to automatic modus.

### When the alarm signal sounds...

- and the alarm function "Radio" has been selected, the radio plays for one hour at a pre-defined alarm volume. To halt it, press the button AL1/VOL. + ⑭ (or AL2/VOL. - ⑬).
- and the alarm function "Signaltones" has been selected, the signal tone sounds for 10 minutes, with an increasing volume. To halt it, press the button AL1/VOL. + ⑭ (or AL2/VOL. - ⑬).

### The Reminder function

The appliance can remind you of a date that you have set with the reminder function. In these cases, from 8:00 - 23:00 on that day, and at every full hour, the acoustic alarm sounds for 10 minutes. In addition, the SDA-panel in the display ④ blinks. To stop the reminder alarm, press any button.

## Radio operation

---

For radio reception, completely unwind the wire aerial ③ and, with the radio switched on, determine the most favourable positioning for it. The appliance has a built-in ferrite aerial for the reception of MW transmitters. Should the MW reception be insufficient, please turn the appliance towards a more favourable direction.


## Switching the radio on and off

1. To switch the radio function on, press the button ON/AOT/OFF 21. In the display 4 the currently selected frequency is shown.
2. Press the button ON/AOT/OFF 21 once again to switch the radio off and return the appliance to the automatic modus.

### **i** Note:

*By pressing and holding the button ON/AOT/OFF 21 you switch to the function switch-off time (see S. 15 chapter AOT Switch-off timer).*

## Manual station selection

1. Using the button USER/BAND 15, select the required radio frequency: MW (AM) or VHF (FM).
2. Briefly press the button UP▲ 19 repeatedly to search for stations with a higher frequency than the one shown in the display 4.
3. Briefly press the button DOWN▼ 18 repeatedly to search for stations with a lower frequency than the one shown in the display 4.
4. Should the currently selected radio station transmit RDS data, the  RDS-indicator lights-up in the display 4. Then the display 4 shows the name of the radio station, and the time is updated (if activated in the settings, see section "Setting Update function").

## Automatic station search

You can have the kitchen radio search for stations.

The kitchen radio searches the frequency range until it finds a station.

1. Press and hold the button UP▲ 19 for two seconds: the kitchen radio searches for the station with the next highest frequency.
2. Press and hold the button DOWN▼ 18 for two seconds: the kitchen radio searches for the station with the next lowest frequency.

Repeat these steps until you have found a radio station to your liking.

## Save and recall a radio station manually

As the appliance can be used by numerous people, it is fitted with user switching, A/B. Both users can save different radio stations. To switch between users, press and hold the button USER/BAND 15 for two seconds.

Each user can save 36 radio stations in the appliance. 32 x VHF stations and 4 x MW stations. For saving UKW stations, User "A" has available:

Preset button M1 ⑤ for the save positions A1 – A8,  
Preset button M2 ⑥ for the save positions B1 – B8,  
Preset button M3 ⑦ for the save positions C1 – C8, and  
Preset button M4 ⑧ for the save positions D1 – D8.

Available for User "B" are:

Preset button M1 ⑤ for the save positions 11 – 18,  
Preset button M2 ⑥ for the save positions 21 – 28,  
Preset button M3 ⑦ for the save positions 31 – 38, and  
Preset button M4 ⑧ for the save positions 41 – 48.

Press the corresponding preset button once to address the save position "1", press twice for "2", etc.

With MW radio stations, each preset button is for one of the 4 save positions.

1. Setting the user, the desired radio wavelength and the desired radio station.
2. Press the button MEM/AMS ⑨. In the display ④ the save position indicator and "MEM" blink.
3. Press one of preset buttons M1 – M4 ⑤ – ⑧, if necessary repeatedly, to save the radio station to the desired save position. In the display ④, the indicator for the save position selected by you and "MEM" blink.
4. Press the button MEM/AMS ⑨ once again. "MEM" and the save position are constantly indicated, the radio station is saved.
5. Repeat the steps 1 to 4 (for both users) until all of the desired radio stations are saved.
6. To recall the saved radio stations, press the corresponding preset buttons (M1 – M4 ⑤ – ⑧) in radio mode, several times if need be, until the number of the saved position appears in the display ④.

### **Automatically save and recall a radio station**

With the AMS function (Automatic Memory System), the radio automatically searches for radio stations and then saves them to the available save positions in the radio waveband. Previously saved radio stations are thereby erased.

1. Press and hold the button MEM/AMS ⑨ for two seconds. The kitchen radio automatically searches for sufficiently powerful radio stations and saves them in the memory.
2. The station search can be stopped by pressing on the button MEM/AMS ⑨. The most recently found radio station plays.



3. When you press the button MEM.SCAN ⑩, the saved radio stations are recalled in their sequence and each is played for 10 seconds.
4. To quickly move on to another radio station, press the button MEM.SCAN ⑩.
5. To quit the automatic recall, press the button MODE/LOCK ⑰. The display ④ will then show the time for 10 seconds.

### Adjusting the volume.

- To reduce the sound volume, in radio operation repeatedly press the button AL2/VOL - ⑬, or hold the button down.
- To increase the sound volume, in radio operation repeatedly press the button AL1/VOL. + ⑭, or hold the button down.

### Lock function

You can lock the kitchen radio so that settings cannot be altered by unauthorised people or children.

- Press and hold the button MODE/LOCK ⑰ for 3 seconds. A key symbol appears in the display ④.
- When a key is pressed and the lock is activated, the key symbol blinks but no other functions are carried out.
- To disable the lock function, press and hold the button MODE/LOCK ⑰ until the key symbol extinguishes.

### A.O.T. - Switch-off timer

This appliance is fitted with a switch-off timer for up to 90 minutes.

1. With the radio switched on, press the button ON/AOT/OFF ⑳ down for 2 seconds to recall the function.
2. Repeatedly press the button ON/AOT/OFF ⑳ to programme in the number of minutes, in increments of 5 minutes, for which the appliance is to remain switched on. After a few seconds the display again shows the radio station currently being played.
3. On expiry of the time period the appliance switches itself off.
4. To simply switch the radio function off, press the button ON/AOT/OFF ⑳.

## Cleaning

---

### **Warning!**

*Always remove the plug before cleaning the appliance!*

*Moisture penetrating into the appliance creates the risk of electric shock! Additionally, the kitchen radio could become irreparably damaged!*

Clean the housing of the kitchen radio with a slightly moist cloth and a mild detergent only. Ensure that moisture cannot permeate into the appliance during cleaning!

## Disposal

---

**Do not dispose of the appliance in your normal domestic waste. This product is subject to the provisions of European Directive 2002/96/EC.**



### **Disposing of the appliance**

- Arrange for the product, or parts of it, to be disposed of by a professional disposal company or by your communal waste facility.
- Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.

### **Disposal of batteries/accumulators**

- Used batteries/rechargeable batteries may not be disposed of in household waste.
- Batteries/rechargeable batteries can contain toxic substances which may damage the environment. Therefore, dispose of the batteries/rechargeable batteries in accordance with statutory regulations.
- Every consumer is statutorily obliged to dispose of batteries/rechargeable batteries to a community collection centre in their district or to a dealer. The purpose of this obligation is to ensure that batteries are disposed of in a non-polluting manner.
- Only dispose of batteries when they are fully discharged.

### **Disposal of packaging**

Dispose of all packaging materials in an environmentally friendly manner.



This device complies, regarding conformity, to the basic requirements and other relevant provisions of the Low Voltage Directive 2004/108/EC, the Directive for Low Voltage Appliances 2006/95/EC and the Eco Design Directive 2009/125/EC (Ordinance 1275/2008 Appendix II, Number 1).

## Importer

---

KOMPERNASS GMBH  
BURGSTRASSE 21  
44867 BOCHUM, GERMANY  
[www.kompernass.com](http://www.kompernass.com)

## Warranty and Service

---

The warranty for this appliance is for 3 years from the date of purchase. The appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase. In the event of a warranty claim, please make contact by telephone with our Service Department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers only claims for material and manufacturing defects, but not for transport damage, for wearing parts or for damage to fragile components, e.g. buttons or batteries. This product is for private use only and is not intended for commercial use.

The warranty is void in the case of abusive and improper handling, use of force and internal tampering not carried out by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

The warranty period will not be extended by repairs made under warranty. This applies also to replaced and repaired parts. Any damage and defects extant on purchase must be reported immediately after unpacking the appliance, at the latest, two days after the purchase date. Repairs made after the expiration of the warranty period are subject to payment.

**GB DES Ltd**

Tel.: 0871 5000 700 (£ 0.10 / minute)  
e-mail: [support.uk@kompernass.com](mailto:support.uk@kompernass.com)

**IE Kompernass Service Ireland**

Tel: 1850 930 412 (0,082 EUR/Min.)  
Standard call rates apply. Mobile operators may vary.  
e-mail: [support.ie@kompernass.com](mailto:support.ie@kompernass.com)





