

HUAWEI Vision Manual



Consumer
Cellular®

Contents

1	Important Device Information	1
1.1	Safety Precautions.....	1
1.2	Personal Information and Data Security	2
1.3	Legal Notice.....	3
2	Getting Started	6
2.1	Your Smartphone.....	6
2.2	Setting Up the Smartphone	7
2.3	Power On or Off the Smartphone	10
2.4	Using the Touchscreen.....	11
2.5	Locking and Unlocking the Screen	12
2.6	Home Screen.....	13
2.7	Applications and Widgets	17
2.8	Using a microSD Card	18
3	Calling	19
3.1	Making a Call	19
3.2	Answering or Rejecting a Call.....	20
3.3	Other Operations During a Call	21
4	People Application	22
4.1	Opening the People Application	22
4.2	Importing Contacts from a SIM Card	22
4.3	Adding a Contact	23
4.4	Adding a Contact to Your Favorites.....	23
4.5	Searching for a Contact	23
4.6	Editing a Contact	24
4.7	Communicating with Your Contacts.....	24
4.8	Deleting a Contact	25
4.9	Backing Up and Synchronizing Contacts.....	25
4.10	Managing Groups	26

4.11	Joining and Separating Contacts	26
4.12	Sending Contacts	27
5	Text Input	28
5.1	Displaying the Keyboard.....	28
5.2	Choosing an Input Method.....	28
5.3	Using the Android Keyboard.....	29
5.4	Editing Text.....	29
5.5	Using the Landscape Keyboard.....	30
5.6	Customizing Your Keyboard Settings	30
6	Messaging	30
6.1	Opening Messaging.....	30
6.2	Creating and Sending a Text Message	31
6.3	Creating and Sending a Multimedia Message	31
6.4	Opening and Viewing a Multimedia Message.....	32
6.5	Replying to a Message	32
6.6	Searching for a Message.....	32
6.7	Customizing Message Settings	33
7	Getting Connected	33
7.1	Mobile Networks	33
7.2	Wi-Fi®	34
7.3	Controlling Data Usage.....	34
7.4	Web Browser	35
7.5	Bluetooth®	37
8	E-mail	38
8.1	Adding an E-mail Account	39
8.2	Switching Between E-mail Accounts	39
8.3	Viewing an E-mail Message	39
8.4	Saving an E-mail Attachment	39
8.5	Creating and Sending an E-mail Message	40
8.6	Replying to an E-mail Message	40

8.7	Deleting an E-mail Account	40
8.8	Changing E-mail Account Settings	41
9	Entertainment	41
9.1	Taking Photos and Recording Videos	41
9.2	Using the Gallery	43
9.3	Enjoying Music.....	44
9.4	Listening to the FM Radio	45
10	Google Services	46
10.1	Creating a Google Account.....	47
10.2	Gmail	47
10.3	Google Talk	49
10.4	Google Maps	50
10.5	YouTube	51
10.6	Google Play Store®	52
11	Synchronizing Information.....	53
11.1	Managing Your Accounts.....	53
11.2	Customizing Your Account Synchronization.....	55
12	Using Other Applications.....	56
12.1	All Back-up.....	56
12.2	Calendar	57
12.3	File Manager.....	59
12.4	Clock.....	61
12.5	Calculator.....	61
12.6	Notes	62
13	Managing the Smartphone	62
13.1	Setting the Date and Time	62
13.2	Setting the Display	63
13.3	Setting Ringers	63
13.4	Setting Smartphone Services	64

13.5	Adjusting the Speech Rate	65
13.6	Protecting the Smartphone	65
13.7	Managing Applications.....	66
13.8	Resetting the Smartphone	67
14	Appendix	68
14.1	FAQs.....	68
14.2	Warranty Information	70

1 Important Device Information

1.1 Safety Precautions

Please read the safety precautions carefully to ensure the correct use of the smartphone.



Do not crash, throw, or puncture the smartphone. Avoid dropping, squeezing or bending the smartphone.



Do not use the smartphone in a moist environment, such as the bathroom. Prevent the smartphone from being soaked or washed in liquid.



Do not switch on the smartphone when it is prohibited to use smartphones or when the smartphone may cause interference or danger.



Do not use the smartphone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off the smartphone near any medical apparatus.



Switch off the smartphone while on an aircraft. The smartphone may cause interference to control equipment of the aircraft.



Switch off the smartphone near high-precision electronic devices. The smartphone may affect the performance of these devices.



Do not attempt to disassemble the smartphone or its accessories. Only qualified personnel are allowed to service or repair the smartphone.



Do not place the smartphone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near the smartphone. Radiation from the smartphone may erase the information stored on them.



Do not put the smartphone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep the smartphone and its accessories away from children. Do not allow children to use the smartphone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise the smartphone or PC may be damaged.

1.2 Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.

- Periodically back up personal information kept on your SIM/UIM card, memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or e-mails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or third-party application providers.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.
- If you have concerns about the security of your personal information and data, please contact mobile@huawei.com.

1.3 Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2013. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said

software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



, and **HUAWEI** are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android is a trademark of Google Inc.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not match exactly the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

Third-Party Software Statement

Huawei Technologies Co., Ltd. does not own the intellectual property of the third-party software and applications that are delivered with this product.

Therefore, Huawei Technologies Co., Ltd. will not provide any warranty of any kind for these third-party software and applications. Neither will Huawei Technologies Co., Ltd. provide support to customers who use these third-party software and applications, nor be responsible or liable for the functions of these third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time. Huawei Technologies Co., Ltd. does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the control of Huawei Technologies Co., Ltd. To the greatest extent permitted by applicable law, it

is explicitly stated that Huawei Technologies Co., Ltd. shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei Technologies Co., Ltd. shall not be responsible for the legality, quality, or any other aspects of any software installed on this product, or for any uploaded or downloaded third-party works, such as texts, images, videos, or software. Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product uses the open-source Android™ platform. Huawei Technologies Co., Ltd. has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei Technologies Co., Ltd. shall not be liable for any of such situation.

DISCLAIMER OF WARRANTIES

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

LIMITATIONS OF LIABILITY

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI TECHNOLOGIES CO., LTD. ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy

To better understand how we protect your personal information, please see the privacy policy at


<http://consumer.huawei.com/en/privacy-policy/index.htm> .

2 Getting Started

ⓘ All the pictures in this guide are for reference only. the smartphone's actual display features may be different to those described here, depending on its software version.

2.1 Your Smartphone

2.1.1 Key Functions at Your Fingertips

-
- Press and hold to power on the smartphone.
 - When the smartphone is powered on, press and hold this  button to display the options menu. You can then choose to power off the smartphone or perform shortcut operations.
 - Press to lock the screen when the smartphone is active.

 Touch to open the menu on an active screen.

 
-
- Touch to return to the Home screen.
 - Touch and hold to display recently used applications.
-

-
- Touch to return to the previous screen or exit the application you are running.
- ↩
- Touch to hide the keyboard.
-

2.2 Setting Up the Smartphone

2.2.1 Installing the SIM Card


There are two steps to install the SIM card:

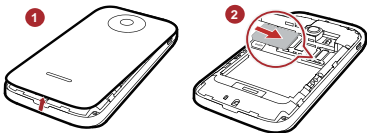

1. Remove the battery cover.
2. Insert the SIM card.


2.2.2 Installing the microSD Card

 The smartphone is already equipped with a large-volume built-in embedded MultiMediaCard (eMMC). If you want to expand the smartphone memory, you can also insert a microSD card.

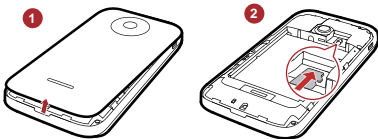

1. Remove the battery cover.
2. Insert the microSD card into the card slot as shown in the diagram.

 2.2.3 Installing the Battery

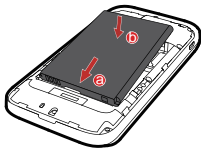


1. Angle the edge labeled **a** (with the contacts) into the bottom end of the battery compartment.
2. Push the edge labeled **b** into the compartment until the battery clicks firmly into place.

2.2.4 Charging the Battery

Before charging the battery, ensure that it has been properly installed on the smartphone.

 


1. Connect the USB cable that came with the smartphone to the charger.
2. Connect the other end of the USB cable to the smartphone. Then, to start charging, plug the charger into an electrical outlet.

If you charge the smartphone while it is powered on, the battery icon on the notification bar indicates the charging status. When the battery icon changes to , the smartphone is fully charged.

Status Indicator

The color of the status indicator tells you the status of the smartphone's battery.



Green: Fully charged (when connected to charger).

Orange: Charging in progress (when connected to charger).

Red: Battery low.



2.2.5 Important Information About the Battery

- If the battery has not been used for a long time, you may not be able to power on the smartphone immediately after you begin charging the battery. Allow the battery to charge for a few minutes with the smartphone powered off before attempting to power the smartphone on.
- As it ages, the battery's performance will degrade, in particular it will not hold charge as it did when it was new. When the battery life becomes noticeably shorter than usual after being charged properly, replace the battery with a new one of the same type.
- Using data services increases the power consumption of the smartphone and will therefore reduce the length of time that the smartphone can be used between battery charges.
- The time required to fully charge the battery depends on the ambient temperature and the age of the battery.
- When the battery power is low, the smartphone will alert you and display a message. When the battery power is almost exhausted, the smartphone will power off automatically.

2.2.6 Power Saving Tips


The longevity of battery power depends on the network to which you connect, and how you use the smartphone.

Try the following to conserve battery power:

- When the smartphone is not in use, turn off the screen backlight.
- Reduce the time it takes for your screen backlight to turn off when the smartphone is idle.
- Lower the screen brightness.
- Turn off Bluetooth when you are not using it. Only make the smartphone visible to other Bluetooth devices when you need to establish a Bluetooth connection.
- Turn off Wi-Fi when you are not using it.
- Turn off the smartphone's GPS receiver when you are not using it.
- Lower the volume.
- Close power-draining programs, when you do not need them.
- Turn off the data service.

2.3 Power On or Off the Smartphone

2.3.1 Powering the Smartphone On

Press and hold . If you have protected the smartphone with a personal identification number (PIN), enter it before using the smartphone.


2.3.2 Setting Up the Smartphone

The first time you power on the smartphone, the smartphone displays a set-up wizard to help you set-up the smartphone.

The set-up wizard helps you:

- Create or sign in to your account
- Make some initial decisions about how you want to use the smartphone

2.3.3 Powering Off the Smartphone

1. Press and hold  to display the options menu.

2. Touch **Power off**.

If **Quick Pwr On** is enabled, the smartphone will enter deep sleep mode. If **Quick Pwr On** is disabled, touch **OK** to power off the smartphone.

2.3.4 Turning On Fast Boot

1. Touch > **Settings**.

2. Touch the button next to **Quick Pwr On**.

 Do not turn on **Quick Pwr On** while on an airplane.

2.3.5 Restarting the Smartphone

1. Press and hold to display the options menu.

2. Touch **Restart**.

3. Touch **OK**.

2.3.6 Using Airplane Mode

Some locations may require you to turn off the smartphone's wireless connections. Rather than powering off the smartphone, you can place it in **Airplane mode**.

1. Press and hold .

2. Touch **Airplane mode** in the options menu.

2.4 Using the Touchscreen

2.4.1 Touchscreen Actions



Touch: Tap the screen with your finger to select an item, confirm a selection, or start an application.



Touch and hold: Touch an item with your finger and do not release it until the smartphone responds. For example, to open the options menu for the active screen, touch and hold the screen until the menu appears.




Flick: Move your finger either vertically or horizontally across the screen.



Drag: Touch and hold the desired item with your finger. To move an item, drag the item to any part of the screen. You can drag an icon to move or delete it.


2.4.2 Rotating the Smartphone Screen

The orientation of most screens will change to landscape or portrait view when you rotate the smartphone sideways.


 On the Home screen, touch  > **Settings** > **Display** > **Auto-rotate screen** to disable this function.

 
2.5 Locking and Unlocking the Screen


2.5.1 Locking the Screen

- When the smartphone is on, press  to lock the screen. When the screen is locked, you can still receive messages and calls.
- If the smartphone is idle for a while, the screen will lock automatically.

 
2.5.2 Unlocking the Screen


1. Press  to wake up the screen.
2. Drag the unlocking icon to the small open lock, the screen is unlocked.

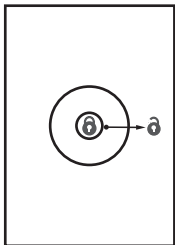





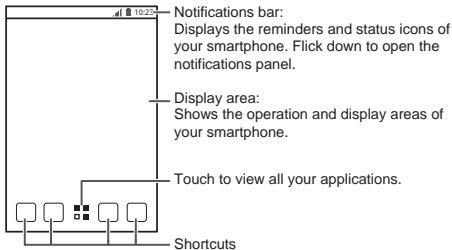





















-  If you have set up a screen unlock pattern, you will be prompted to draw the pattern on the screen to unlock it.













2.6 Home Screen



-  Touch and hold a shortcut until the smartphone vibrates, you can then drag it to your desired location or move it to the trash. You can also drag an icon from another area of the screen to the shortcut position.

2.6.1 Notification and Status Icons


	Signal strength		No signal
	Connected to GPRS mobile network		GPRS in use
	Connected to 3G mobile network		3G in use
	Roaming		Airplane mode
	Bluetooth on		Receiving location data from GPS
	Vibration mode		Ringer silenced
	Call muted		Charging battery
	Battery full		Battery extremely low
	Call in progress		Missed call
	Alarm enabled		New mail from Gmail
	New text message		Problem with text or multimedia message delivery
	New chat message		New e-mail
	New voicemail		Connected to a PC

	Open Wi-Fi network available		Upcoming event
	Uploading		Downloading
	Smartphone storage space is getting low		Sign-in or synchronization problem
	Preparing the microSD card		More undisplayed notifications
	Synchronizing data		Synchronization failed
	Connected to a VPN		Disconnected from a VPN

2.6.2 Notification Panel

The smartphone will notify you when you receive a new message or there is an upcoming event. The notification panel also informs you of alarms and settings. Open the notification panel to see your network operator or to view a message, reminder, or event notification.

 
Opening the Notification Panel

1. When a new notification icon appears on the notification bar, place your finger on the notification bar and flick down to open the notification panel.
2. On the panel, you can:
 - Touch a notification to open the corresponding application.
 - Flick left or right on a notification to delete it.
 - Touch the cross sign (x) to clear all notifications.
 - Touch  to display the settings screen.

Closing the Notification Panel

Touch and hold the bottom of the panel. Then flick up to close it.

2.6.3 Viewing Other Parts of the Home Screen

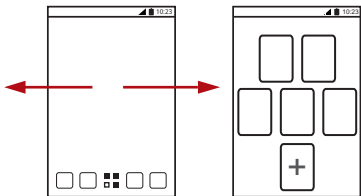

Flick your finger left or right across the Home screen.

Touch \leftrightarrow to view thumbnails of the Home screen and its extensions. Touch a thumbnail to open the screen.

2.6.4 Customizing the Home Screen

Adding a New Home Screen Item

1. On the Home screen, touch $\blacksquare\blacksquare$ to display the application list.
2. Press and hold an application icon, and then drag the icon to a blank area on the Home screen.


Moving a Home Screen Item

1. Touch and hold the item on the Home screen that you want to move until the smartphone vibrates.
2. Without lifting your finger, drag the item to the desired position on the screen, and then release it.

Removing an Icon from the Home Screen


1. Touch and hold an item on the Home screen that you want to remove until the smartphone vibrates.
2. Without lifting your finger, drag the item to the trash can. Wait until the item and the trash can turn red.
3. Release the item.

2.6.5 Service Shortcuts

1. Open the notification bar.
2. Touch  at the top of the screen to switch data services on or off.

 You can also touch , ,  or  to turn the corresponding services on or off.


2.6.6 Changing the Wallpaper

1. On the Home screen, touch  > **Wallpaper**.
2. Touch the following menu items to select a picture and set it as the wallpaper:
 - **Gallery**
 - **Live Wallpapers**
 - **Wallpapers**





2.6.7 Changing the Theme

On the Home screen, touch  > **Theme settings** to select a theme.

2.7 Applications and Widgets

The Application screen holds icons for all of the applications on the smartphone. You can touch  on the Home screen to open the application screen.


2.7.1 Moving Icons on the Application Screen

1. On the application screen, touch .
 2. Touch and hold the icon you want to move on the application screen.
 3. Without lifting your finger, drag the icon to the desired location, and then release it.
-  To move more icons, repeat steps 2 and 3.
4. Touch  or  to save.

2.7.2 Accessing Widgets

On the application screen, touch the **WIDGETS** tab to switch to the widget screen. From the widget screen, you can touch and hold a widget, and then drag it to the Home screen.

2.7.3 Viewing Recently Used Applications

To display the list of recently used applications, press and hold . To open an application, touch the corresponding thumbnail. To close the application, flick left or right across the screen.


2.8 Using a microSD Card

2.8.1 Using the microSD Card as a USB Mass Storage


To transfer all your favorite music and pictures from your PC to the smartphone's microSD card, set the microSD card as a USB mass storage.

1. Connect the smartphone to your PC with the USB cable provided. Your PC will detect the microSD card as a removable storage device.
2. Open the notification bar, and then touch **USB connected**.
3. Touch **Turn on USB storage** in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to the smartphone's microSD card.

-  When your microSD card acts as a USB mass storage, the smartphone will not use this memory space. Ensure that you follow the correct procedures to disconnect the USB mass storage device (the smartphone) from the PC when you have finished transferring files.

2.8.2 Removing the microSD Card


1. On the Home screen, touch  > **Settings**.
2. Scroll down the screen, and then touch **Storage > Unmount SD card**.
3. Touch **OK**
4. Carefully remove the microSD card.

3 Calling

To make a smartphone call, you can dial a number using the keypad or touch a number saved in your contact list, on a webpage, or in other places. When you are in a call, you can answer other incoming calls or redirect them to your voicemail. You can also set up conference calls with several participants.




3.1 Making a Call

To make a call, you can use the **Phone** application, or select a number from **People**.

When you are in a call, you can touch  to use other functions. To return to the call screen, flick the notification bar down and touch **Current call**.



ⓘ Be careful not to block the microphone at the bottom of the smartphone if you want your voice heard by the other parties in a call.

3.1.1 Making a Call with the Phone Application


1. On the Home screen, touch  > **Phone**. If the dialer is not displayed, touch .
2. Enter the phone number.
3. Touch  to initiate the call.


During a call, touch  to enter other numbers on the dialer.

3.1.2 Making a Call from People

1. On the Home screen, touch  > **Phone**.
2. Touch  to display the contacts saved on the smartphone. Select a contact to place a call.

3.1.3 Making a Call from the Call Log


1. On the Home screen, touch  > **Phone**, and then touch  to display the call log.

2. Touch  on the right of a log entry to dial that number.

3.1.4 Using Voice Dialing

Calls can be placed using voice dialing. When you open the voice dialing application, the smartphone's speaker will be enabled.

ⓘ Background noise will affect the accuracy of voice dialing.

 
1. On the Home screen, touch  > **Voice Dialer**.
2. Follow the onscreen instructions, then say your command close to the microphone. The smartphone will identify the command and make a call.

3.2 Answering or Rejecting a Call

3.2.1 Answering an Incoming Call

When you receive a phone call, the incoming call screen opens. If you have previously saved the caller's number in **People**, the caller's name and number are displayed. If the caller's number is not saved in **People**, the caller's number is displayed.

Drag  to the right to answer the call.

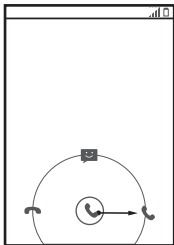



3.2.2 Ending a Call

During a call, touch  to hang up.

3.2.3 Rejecting an Incoming Call

 Drag  to the left to reject the call.

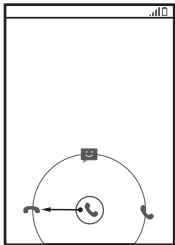






 You can also drag  to the message icon to reject the call and send a message to the caller.



3.3 Other Operations During a Call

3.3.1 Making a Conference Call

If you receive a new call while you are already in a call, you can add the second call to the call you are in. This feature is known as conference calling. You can also set up a conference call with multiple callers.


 Contact your network operator to ask if conference calls are supported and, if yes, how many parties can participate.

1. To initiate a conference call, dial the number of the first participant. After you have connected to the first participant, keep the connection open, touch .
2. Enter the phone number of the next person you want to invite for the conversation and touch , or select someone from your  or . The first participant is automatically placed on hold while you do this.

3. Once you have connected to the second person, touch  to begin the conference call.
4. To end the conference call and disconnect from everyone, touch .

3.3.2 Switching Between Calls

If you receive a new call while you are already in a call, you can switch between the two calls.


1. While you are in the first call and the second call comes in, answer the incoming call, and then touch .
2. The current call is placed on hold and you are connected to the first call.

4 People Application

The **People** application enables you to save and manage information such as phone numbers and addresses of your contacts. After you save contact information on the smartphone, you have easy access to the people with whom you want to communicate.

4.1 Opening the People Application

On the Home screen, touch  > **People** to open the **People** application.



- If you have not yet added any contacts to the smartphone, touch  to create a contact.
- Any contacts that are already saved on the smartphone are displayed alphabetically in a list that you can scroll through.

4.2 Importing Contacts from a SIM Card


1. In the contacts list, touch  > **Manage contacts**.
2. Touch **Copy from SIM card**.

3. Wait for the SIM card contents to be loaded. Touch one contact to import that contact individually to the smartphone, or touch **SELECT ALL** to import all contacts to the smartphone.
4. Touch **COPY**.
5. If you have more than one account on the smartphone, touch the account into which you want to import the contacts.


4.3 Adding a Contact

1. In the contact list, touch .
 2. From the screen displayed, create a contact in the smartphone, SIM card or your account. Add a new account if you do not have one.
 3. Enter the contact's name, and then add detailed information such as phone numbers and address.
 4. Touch **DONE** to save the contact information.
-  To save a contact from your call log, touch and hold the desired phone number to display the options menu, and then touch **Add to contacts**.

4.4 Adding a Contact to Your Favorites



Select a contact and touch the star on the right of the contact's name. If the  icon is highlighted, the contact is in your favorites list.

4.5 Searching for a Contact

1. In the contact list, touch .
2. Enter the name of the contact you wish to search for. As you type, contacts with matching names appear below the search box.

4.6 Editing a Contact

You can make changes to the information you have stored for a contact at any time.

1. In the contacts list, touch the contact whose details you want to edit, and then touch .
2. Touch the category of contact information you wish to change: name, phone number, e-mail address, or any other information you recorded earlier.
3. Make the desired changes to the contact information, and then touch **DONE**. To cancel all of your changes, touch  **> Cancel**.

4.7 Communicating with Your Contacts

You can quickly call or send a text (SMS) or multimedia (MMS) message to a contact's default phone number. You can also open details to view a list of all the ways you can communicate with that contact. This section describes how to communicate with a contact when viewed in your contacts list.


4.7.1 Using Quick Contact for Android

1. Touch the contact's picture or picture frame (if you have not assigned a picture to the contact) to open Quick Contact for Android.
2. Touch the icon for the way you want to communicate with the contact.


The icons available depend on the information you have entered for the contact, the applications installed on the smartphone, and the accounts you have.

4.7.2 Communicating with a Contact

1. In the contacts list, touch the contact that you want to communicate with.
2. On the contact's details screen, you can communicate with the contact in one of the following ways:

- Touch the phone number to place a call.
- Touch the e-mail address to send an e-mail.
- Touch  to send a text message.

4.8 Deleting a Contact



1. In the contact list, touch the contact that you want to delete, and then touch  > **Delete**.
2. Touch **OK** to confirm that you want to delete the contact.

4.9 Backing Up and Synchronizing Contacts

You can back up contacts from the smartphone to a microSD card, or synchronize smartphone contacts with a server using your Google account.

4.9.1 Using a microSD Card to Back Up Contacts

Backing Up Contacts

1. In the contact list, touch  > **Manage contacts**.
2. From the displayed menu, touch **Export to storage**.
-  After touching **Export to storage**, a message is displayed to show the storage location of the .vcf file to which your contacts will be exported.
3. Touch **OK** to export the smartphone contact's information to the installed microSD card.

You can copy the .vcf files backed up on the microSD card to your computer.

Restoring Contacts

1. In the contact list, touch  > **Manage contacts**.
2. Touch **Import from storage** in the displayed menu.




If there is more than one .vcf files saved on the microSD card, you can choose to restore one, multiple, or all the of them.

4.9.2 Using a Google Account to Synchronize Contacts

You can synchronize contacts using your Google account. For details, see Changing an Account's Synchronization Settings.



4.10 Managing Groups

4.10.1 Creating a Group


1. On the Home screen, touch  > **People**, and then touch .
2. Touch  in the group list.
3. Enter the name you want to assign to the group.
4. Touch **DONE** to save the group.


4.10.2 Editing a Group

You can always make changes to the information you have saved for a group.

1. In the groups list, touch the group that you want to edit, and then touch  > **Edit**.
2. Make the desired changes to the group information, and then touch **DONE**. To cancel all changes you made to the group information, touch  > **Discard**.

4.10.3 Adding a Contact to Your Groups

Select a group, touch  to select the desired contact, and then touch **ADD MEMBERS**.

-  You can only add contacts saved in the smartphone memory to a group, you cannot add contacts saved in your SIM/UIM card.


4.11 Joining and Separating Contacts

You may have duplicate contacts if you import contacts by:

- Adding an account, such as a Gmail account.
- Using other methods, such as exchanging e-mails.

To avoid duplication, join two or more contacts together to form a single contact.


4.11.1 Joining Contacts

1. On the Home screen, touch  > **People**.
2. Touch a duplicated contact.
3. Touch **Manage joined contacts**, and then touch **Add contact**.
4. Select the contact to be joined to combine two duplicate contacts.

Two contacts will be joined together and displayed as one contact. Touch the contact to view the joined information. You can see that the contact is joined together by two contacts. You can also combine more than two contacts.

4.11.2 Separating Contacts


If contact information from different sources was joined together in error, you can separate the contacts.

1. On the Home screen, touch  > **People**.
2. Touch the joint contact to be separated.
3. Touch **Manage joined contacts**.
4. Select the contact to be separated from the joint contact.

The joint contact is then separated into two contacts displayed separately in **People**.

4.12 Sending Contacts

You can send contact information as a .vcf file via Bluetooth or E-mail.

1. Select a contact from the contacts list.
2. Touch  > **Share**.
3. Select your preferred method to send the contacts you have selected, for example Bluetooth or E-mail.

5 Text Input


5.1 Displaying the Keyboard

To enter text, use the onscreen keyboard. The keyboard is displayed automatically when you run certain applications. If not, touch a text field to open the keyboard.

 
Touch  to hide the keyboard.

5.2 Choosing an Input Method

1. When the keyboard is displayed, the keyboard icon is shown on the notification bar. Flick the notification bar downwards to open the notification panel.
2. Touch **Select input method**.
3. Select the desired input method.

You can also change the default input method. To do so, touch  > **Settings > Language & input > Default** on the Home screen, and then select an input method.

5.3 Using the Android Keyboard

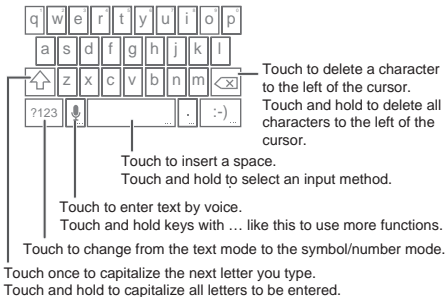






- ❗ The keyboard layout may vary slightly depending on the field where you are entering text. The previous figure is provided for your reference only.

5.4 Editing Text

To edit text quickly, touch and hold the text you have entered, and choose the content you want to edit. You can then edit the text quickly using icons in the upper right corner as follows:


 
- ☐ : Select all content.
- ✂ : Cut the selected content. Touch and hold the text. Drag the grab points to select the text you want to cut. Then touch this button to cut the selected text. After the text is cut, touch a blank area in the text field to display . Move to select where you want to paste the text. Touch > **PASTE** to paste the previously cut text.

-  : Copy the selected text. Touch and hold the text. Drag the grab points to select text you want to copy. Touch this button to copy the text. After the text is copied, touch a blank area in the text field to display  . Move  to where you want to paste the text. Touch  > **PASTE** to paste the previously copied text.
-  : Move the cursor to an input position. Touch this icon to replace the selected content with what you just cut or copied.

5.5 Using the Landscape Keyboard

If you find the keyboard inconvenient or difficult to use, turn the smartphone sideways. The screen will display the keyboard in landscape orientation, providing you with a wider keyboard layout.

5.6 Customizing Your Keyboard Settings

1. On the Home screen, touch  > **Settings** > **Language & input**.
2. In **KEYBOARD & INPUT METHODS**, touch  next to an input method to customize the input method.




6 Messaging

The **Messaging** application allows you to exchange text messages (SMS) and multimedia messages (MMS) with anyone using an SMS-or-MMS-capable smartphone.

6.1 Opening Messaging

On the Home screen, touch  > **Messaging** to open the message application.

6.2 Creating and Sending a Text Message

1. Touch  > **Messaging**, then .
2. Enter a phone number or a contact's name in the **To** field, or touch  to select a contact from **People**.

As you enter the phone number or the contact's name, the smartphone displays possible matches from your contacts. Select a contact from the list of possible matches or continue entering.




After you select a contact or finish entering a number, you can enter another recipient.

3. Touch the composition text box to start composing your message.
4. When you are ready to send the message, touch **Send**.


Sent and received messages will be displayed in a message thread and grouped together in a conversation.

6.3 Creating and Sending a Multimedia Message

You can use multimedia messages to make everyday communications very special. You can record a message and send it as an audio file, for example, sing "Happy Birthday" and send it to a friend, or send a slideshow of photographs of a special event. The possibilities are enormous.

1. Touch  > **Messaging**, then .
2. Enter a phone number in the **To** field, or touch  to select a contact from **People**.
3. Touch the composition text box to start composing your message.



 If you want to enter a smiley, touch , then **Insert smiley**.

4. Touch  to attach a picture, an audio file, or a video clip to the message.
5. When you are ready to send the message, touch **Send MMS**.

- 🔍 You can select a media file (music, video, or picture) and send it as an attachment in a multimedia message. In **File Manager**, touch and hold a media file, and then touch **Share > Messaging**.

6.3.1 Adding a Slideshow

If you want to attach more than one file to your message, use the **Slideshow** option.

1. On the message composing screen, touch  to display the options panel.
2. Touch **Slideshow**, and then select a slide to edit.
3. Touch  then **Add slide** to add more slides.
4. Touch **Done** to return to the multimedia message screen when you finish editing the message.
5. To modify your multimedia message, touch **Edit** on the multimedia message screen. When you are ready to send the message, touch **Send**.


6.4 Opening and Viewing a Multimedia Message

1. In the message list, touch the message thread you wish to view.
2. Touch the multimedia message to view the message.


6.5 Replying to a Message

1. In the message list, touch a text or multimedia message thread to open it.
2. Touch the text box to compose your message. Once finished, touch **Send**.

6.6 Searching for a Message

To find a message quickly: On the messages list screen, touch  and enter the message content to search for.

6.7 Customizing Message Settings


In the message list, touch , and then touch **Settings** to customize the message settings.


7 Getting Connected

7.1 Mobile Networks


The smartphone will be automatically configured to use your network operator's 2G/3G service (if available) when you turn on the smartphone for the first time. Note that the SIM/UIM card must be inserted (some CDMA smartphones have an integrated UIM card and do not need a separate UIM card)

7.1.1 Checking the Network Connection

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **More... > Mobile networks**.
3. Touch **Network operators** or **Access Point Names** to check the network connection.

 The smartphone will automatically read the access point settings from the SIM/UIM card (if any). Therefore, do not change the access point parameters; otherwise, you might not be able to access network resources.

7.1.2 Turning On the Data Service

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **More... > Mobile networks**.
3. Select the **Data enabled** check box to turn on the data connection.

If you do not need to access a wireless data network, you can clear the **Data enabled** check box to save data traffic costs.


7.2 Wi-Fi®


Wi-Fi gives you wireless access to broadband Internet. To use Wi-Fi on the smartphone, you must have an access to wireless access points (hotspots). Obstacles that block the Wi-Fi signal will reduce its strength.

7.2.1 Turning On Wi-Fi

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch the button next to **Wi-Fi**.

7.2.2 Connecting to a Wireless Network

1. After turning on Wi-Fi, touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **Wi-Fi** to display the **Wi-Fi** screen. You will see a list of detected Wi-Fi networks.
3. Touch a Wi-Fi network to connect to it.
 - If you select an open network, the smartphone will automatically connect to it.
 - If you select a network that is secured with Wired Equivalent Privacy (WEP) and it is the first time that you have connected to it, enter the password as prompted, and then touch **Connect**. If you connect to a secured wireless network that you have already used, you will not be prompted to enter the password again unless you have reset the smartphone to its default settings.

 On the **Wi-Fi** screen, touch **ADD NETWORK** to add a new Wi-Fi network.

7.3 Controlling Data Usage

With **Data usage**, you can set a data usage cycle and the mobile data limit for this period. You will be notified when data usage reaches the set limit. You can also query the data usage within a certain period or by a certain application.

On the Home screen, touch  > **Settings** > **Data usage** to configure the data usage settings:


- Touch **Mobile data** to turn on or off the mobile data function. The mobile data function must be turned on to configure data control and query data usage.
- Select the **Set mobile data limit** check box. When data traffic reaches the preset limit, the smartphone's mobile data connection will be disabled.
- Touch the scroll arrow beside **Data usage cycle**, then **Change cycle....** After setting the data usage cycle, touch **Set**.
- Drag the red line to set a data usage limit or the orange line to set a warning limit. When data traffic reaches the yellow line, you will be notified; when data traffic reaches the red line, the smartphone's mobile networks data connection will be disabled.
- Scroll the white time axis to view data usage within a certain period.
- Touch an application to check its data usage.


7.4 Web Browser

The smartphone comes with an Internet browser pre-installed.


7.4.1 Basic Operations

Touch  > **Browser** to open the home page.

-  When known or open Wi-Fi networks and mobile data networks are available at the same time, the smartphone will preferably select a Wi-Fi network for Internet access.

Touch  on the upper section of the screen, and all web pages currently open are displayed. You can:


- Touch one page to enlarge it.
- Touch the cross sign (x) to close that page.
- Touch (+) to open a new browser window.

Touch  to open the browser options menu and perform one of the following operations:


- **Bookmarks:** Touch to display bookmarks.

- **Refresh:** Touch to refresh the current webpage.
- **Forward:** Touch to navigate to the web page from which you returned to the current web page.

7.4.2 Opening a Webpage

1. In a browser window, touch the URL field at the top of the screen.
2. Use the keyboard to enter a webpage address. You can touch  to enter the web page address by voice.
3. As you enter the address, matching webpage addresses will appear on the screen. If you see the address you want, touch it and go directly to that webpage or complete entering your desired webpage.


7.4.3 Setting a Home Page

1. In a browser window, touch  .
2. Touch **Settings > General > Set homepage**.
3. Select one page from the list, or touch **Other** to enter desired homepage's URL, and then touch **OK**.


7.4.4 Managing Bookmarks

You can store as many bookmarks as you want on the smartphone.


Adding a Bookmark

1. In a browser window, go to the webpage you want to save as a bookmark.
2. Touch  , and then touch **Save to bookmarks**.
3. Edit the bookmark name and then touch **OK**.

Opening a Bookmark

1. In a browser window, touch  , then **Bookmarks**.
On the **Bookmarks** screen, touch the **HISTORY** tab to view the pages you have visited, or touch **SAVED PAGES** to view saved pages.
2. Touch the bookmark of the website you want to open.

7.4.5 Customizing Browser Settings


Customize the browser to suit your browsing style. Use **Browser** to set page content, privacy, and security preferences. In a browser window, touch , and then touch **Settings**.


7.5 Bluetooth®

The smartphone has Bluetooth, which allows you to create a wireless connection with other Bluetooth devices so you can share files with your friends, talk hands-free with a Bluetooth headset, or even transfer photos from the smartphone to your PC.

If you are using Bluetooth, remember to stay within 10 meters (33 feet) of the other Bluetooth devices to which you want to connect. Be aware that obstacles like walls or other electronic equipment may interfere with your Bluetooth connection.

7.5.1 Turning On Bluetooth

1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch the button next to **Bluetooth**. When Bluetooth is turned on, the Bluetooth icon appears in the notification bar.
3. Touch **Bluetooth**, and your device's Bluetooth name is displayed on the screen. Touch the device name and set your device to be visible to other Bluetooth devices.

Touch  > **Rename phone** to change your device's name, and then touch **Rename**.

7.5.2 Pairing with and Connecting to a Bluetooth Device

You can do the following by using the Bluetooth:

- Hands Free Profile (HFP): allows you to use a hands-free Bluetooth device.
- Headset Profile (HSP): allows you to use a mono Bluetooth headset.

- Object Push Profile (OPP): allows you to transfer files over a Bluetooth connection.
- Advanced Audio Distribution Profile (A2DP): allows you to use a stereo Bluetooth headset.
- A/V Remote Control Profile (AVRCP): allows you to remotely control audio playing using a Bluetooth headset.

Before using the Bluetooth, perform the following steps to pair the smartphone with another Bluetooth device:



1. Ensure that the Bluetooth function on the smartphone is enabled.
2. Under **WIRELESS & NETWORKS**, touch **Bluetooth**. The smartphone will then scan for Bluetooth devices in range.
3. From the list of found devices, touch the device you want to pair the smartphone with.

7.5.3 Sending Files via Bluetooth

With Bluetooth, you can share pictures, videos, or music files with your family and friends. To send files via Bluetooth:

1. Touch and hold the file to be sent in the smartphone or SD card. The active options menu is displayed.
2. Touch **Share**, then **Bluetooth** to select a paired device.

7.5.4 Disconnecting from or Unpairing with a Bluetooth Device


1. Touch  > **Settings**.
2. Under **WIRELESS & NETWORKS**, touch **Bluetooth**.
3. Navigate to the **PAIRED DEVICES** section, and then touch .
4. Touch **Unpair** to disconnect from the device.


8 E-mail

The smartphone also puts e-mail at your fingertips. With the smartphone's **Email** application, you can use your e-mail account with Yahoo!, AOL, or other popular e-mail services on the smartphone.

8.1 Adding an E-mail Account

When using the **Email** application for the first time, you must configure an e-mail account. The E-mail setup wizard helps you to configure your account. A number of popular e-mail providers are supported. You can work with the same e-mail service that you use on your PC or you can select another e-mail service.


1. On the Home screen, touch  > **Email**.
2. Touch the e-mail service provider you want to use, or touch **Others** to enter an e-mail address and password, then touch **Next**.
3. Follow the onscreen instructions to set parameters such as POP3, IMAP, and account. If you do not know how to set the parameters, contact your e-mail service provider or search online.
4. Touch **Next**, and the **Inbox** of the newly configured e-mail account will be displayed.

After creating your initial e-mail account, touch  > **Settings** > **ADD ACCOUNT** on the **Inbox** screen to add more e-mail accounts.

8.2 Switching Between E-mail Accounts

On the **Inbox** screen, touch the e-mail address bar on the top, and choose an e-mail account from the e-mail account list displayed. The selected account's **Inbox** is then displayed by default.

8.3 Viewing an E-mail Message

On the **Inbox** screen, touch the e-mail message you want to view. You can also touch  and select another folder to view.


8.4 Saving an E-mail Attachment

1. On the **Inbox** screen, touch the e-mail message you want to view.
2. Touch the attachment tab to display the attachment.

3. Touch **SAVE** to download the attachment.



After being downloaded, the attachment is saved in the **Download** folder on the microSD card.

8.5 Creating and Sending an E-mail Message



1. On the **Inbox** screen, touch .
2. In the **To** field, enter the recipient's name or e-mail address.
3. Enter the subject of your message and compose the message.

To send an attachment with the message, touch .


4. Touch .

If you are not ready to send the message, touch  > **Save draft** or  to save the message as a draft.

8.6 Replying to an E-mail Message

1. On the **Inbox** screen, touch the e-mail message to which you want to reply.
2. Touch  or  > **Reply all** to reply to the e-mail message.

8.7 Deleting an E-mail Account

1. On the **Inbox** screen, touch  > **Settings** to enter the account configuration screen.
2. Select an e-mail account.
3. In the menu at the bottom, touch **Remove account** then touch **OK**.

8.8 Changing E-mail Account Settings

You can change a number of account settings, including the e-mail checking frequency, new mail notification method, and details about the account's e-mail sending and receiving servers.

❗ Your account's incoming and outgoing settings depend on the kind of e-mail service you are using. You can enter the necessary details manually, although you may need to contact your e-mail service provider to obtain the correct information.

1. On the **Inbox** screen, touch **☰** > **Settings** to enter the account configuration screen.
2. Select an e-mail account.
3. Change the account settings, such as **DATA USAGE**, **NOTIFICATION SETTINGS**, and **SERVER SETTINGS**.



9 Entertainment

 
In addition to being a communication device and personal assistant, the smartphone also provides you with a multitude of entertainment possibilities. You can take photos, create videos and audio clips, and download and listen to music.

9.1 Taking Photos and Recording Videos


The camera is a combination of camera and camcorder that you can use to shoot and share pictures and videos.

9.1.1 Opening Your Camera

- Touch  > **Camera** to open the camera.
- Touch  to close the camera.

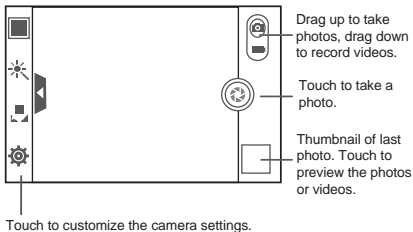






9.1.2 Taking a Photo

1. Open your camera application and switch it to camera mode.
2. If necessary, change the camera settings. The preview changes as you change the settings.
3. Frame your photo within the photo capture screen.
4. Touch  to take your photo.



Photos taken are displayed for a moment. You can take another photo or review your photos.

9.1.3 Viewing Your Photos








1. After taking a photo, a thumbnail of the photo you have just taken is shown in the lower right corner of the capture screen. Touch the thumbnail to view the photo.
2. Touch the onscreen buttons for the following functions:
 - Touch  to enter the gallery.
 - Touch  >  to send the photo via Bluetooth.
 - Touch  >  to send the photo via a multimedia message.

3. If you want to view more photos, flick your finger left or right across the screen.

9.1.4 Recording a Video

1. Open the camera application, and then switch it to camcorder mode.
2. If necessary, change the camcorder settings.
3. Frame the scene with which you want to start your video.
4. Touch  to start recording a video.
5. Touch  to stop recording.


9.1.5 Viewing Your Videos

1. After recording a video, a thumbnail of the video you have just recorded is shown in the lower right corner of the capture screen. Touch the thumbnail to view it.
2. Touch the onscreen button to do any of the following:
 - Touch  to enter the gallery.
 - Touch    to send the video via Bluetooth.
 - Touch    to send the video via a multimedia message.
3. If you want to view more videos, flick your finger left or right across the screen.

9.2 Using the Gallery

Your **Gallery** application can automatically search for pictures and videos on the smartphone and microSD card. Use **Gallery** to sort photos and videos into folders, view and edit pictures, watch videos, and set a picture as wallpaper or as a photo for a contact.


9.2.1 Opening the Gallery

On the Home screen, touch  > **Gallery**.


The **Gallery** application categorizes your pictures and videos by storage location and displays these files in folders. Touch a folder to view the pictures or videos inside.

9.2.2 Viewing a Picture


1. In **Gallery**, touch the folder that contains the pictures you want to view.
2. Touch the picture to view it in full-screen mode.

 The picture viewer supports the automatic rotation function. When you rotate the smartphone, the picture adjusts itself to the rotation.

9.2.3 Rotating a Picture

1. When viewing a picture, touch  to display the operations panel.
2. Select either **Rotate Left** or **Rotate Right**. The picture is saved with the new orientation.

9.2.4 Cropping a Picture

1. When viewing a picture, touch  to display the operation panel, and then touch **Crop**.
2. Use the cropping tool to select the portion of the picture to crop.
 - Drag from the inside of the cropping tool to move it.
 - Drag an edge of the cropping tool to resize the image.
 - Drag a corner of the cropping tool to resize the image.
3. Touch **SAVE** to save the cropped picture. Touch **CANCEL** to discard the changes.

9.3 Enjoying Music

 
9.3.1 Opening the Music Library


Touch  > **Play Music** to open the music library.

The music library automatically scans for music stored on your microSD card and displays them in **ALBUMS**, **SONGS**, **PLAYLISTS**, **FOLDERS**.

9.3.2 Playing Music

1. From the music library, select a way to view your music.
2. Touch the music file you want to play.

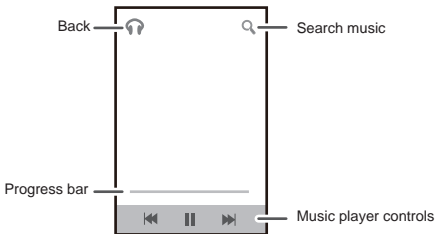

While playing music, touch  to return to the Home screen, the music will continue to play in the background and you can use other applications. Open the notifications panel and touch the playing music to return to the music playing screen.

9.3.3 Adding Music to a Playlist

1. From the music library select a way to view your music.
2. Touch and hold a music file, and then touch **Add to playlist**.

9.3.4 Playing Music in a Playlist

1. In music library, touch **PLAYLISTS**.
2. Touch and hold the playlist you want to play.
3. Touch **Play** to play the playlist.

9.4 Listening to the FM Radio





The FM radio lets you listen to FM radio programs on the smartphone. Since the FM radio uses the provided wired stereo headset as its antenna, before opening the application, connect the headset to the smartphone's audio jack.

9.4.1 Opening the FM Radio


1. On the Home screen, touch  > **FM Radio** to open the application.
2. The first time you open FM radio, touch **Auto tuning**, which automatically scans for available FM channels, saves them as presets, and plays the first FM channel found.

9.4.2 Tuning the FM Radio


Open the **FM Radio** application, and then do the following:

- Touch  or  to tune the radio to the previous or next channel.
- Slide the knob left or right to perform precision tuning. When a channel is found, touch , then **Save station**. Enter the channel name, touch **OK**, and then select an empty channel to save the new channel to the channel list.
- Touch  > **Auto tuning** to scan automatically for available FM channels.

10 Google Services

-  Availability of Google applications, services, and features may vary according to your country or carrier. Please follow local laws and regulations to use them.

When you turn on the smartphone for the first time, touch a Google service such as **Talk**, **Gmail**, or **Play Store**, and you will be prompted to sign in to your Google account.


-  Ensure that the smartphone has an active data connection (3G/GPRS) before you sign in to your Google account.

If you already have a Google account, touch **Sign in** and enter your username and password.

10.1 Creating a Google Account

If you do not have a Google account, you can create one:

1. After reading the setup information, touch **New**.
2. Enter the first name, last name, and then touch **Next**.
3. Enter the user name for your Google account, and then touch **Next**. The smartphone will connect to a Google server to check whether the username is available. If the username you entered is already in use, you will be prompted to choose another one or select one from a list.
4. Enter and confirm your Google account password, and then touch **Next**.
5. Select a security question from the drop-down menu, and then enter the answer, and then touch **Next**.
6. When the **Finish creating account** screen appears, touch **I accept**.
7. Enter the characters that appear on the screen, and then touch **Next**.

 To use another Google account, go to the **Accounts & sync** screen, and touch **ADD ACCOUNT** to select which type of accounts you want to add.

10.2 Gmail

Gmail is Google's web-based e-mail service. When you first set up the smartphone, you may have configured it to use an existing **Gmail** account or create a new account. The first time you open the **Gmail** application on the smartphone, your **Inbox** will contain the messages from your **Gmail** web account.





10.2.1 Opening Gmail

On the Home screen, touch  > **Gmail**. The **Inbox** mail list appears. Any e-mails you decide to keep on the smartphone will go to your **Inbox** folder.





10.2.2 Switching Between Accounts

1. In the mail list, touch  > **Settings**.
2. Touch the account that contains the e-mail you want to read.



10.2.3 Creating and Sending an E-mail

1. In the mail list, touch .
2. Enter the message recipient's e-mail address in the **To** field. If you are sending the e-mail to several recipients, separate the e-mail addresses with commas. You can add as many message recipients as you want.
If you want to send a copy (Cc) or a blind copy (Bcc) of the e-mail to other recipients, touch , and then touch **Add Cc/Bcc**.
3. Enter the e-mail subject and write your e-mail.
If you want to add a picture attachment, touch , and then touch **Attach file** to select the picture you want to attach.
4. After writing your e-mail, touch .

10.2.4 Replying to or Forwarding an E-mail

1. In the mail list, touch the e-mail that you want to reply to or forward.
2. Touch  to reply. You can also touch , and then touch **Reply all** or **Forward**.
3. Do one of the following:
 - If you selected **Reply all**, enter your message.
 - If you selected **Forward**, specify the message recipients and add any additional text you want to include in the forwarded message.
4. Touch  to send, or touch  to save as a draft.

10.2.5 Searching for an E-mail

1. In the mail list, touch .
2. Enter the search keywords in the box, and then touch .

10.2.6 Customizing Your Gmail Settings

In the mail list, touch  > **Settings** to customizing your **Gmail**.

10.3 Google Talk



Talk is Google's instant messaging service. You can use it to communicate in real time with other people using **Talk** on a smartphone or on the web.

10.3.1 Opening Google Talk

On the Home screen, touch  > **Talk** to open the application.

ⓘ Your **Talk** account is based on the Google account you set up with the smartphone.


10.3.2 Adding a Friend

1. In the friends list, touch .
2. Enter the Gmail address of the friend you want to add.
3. Touch .


10.3.3 Accepting an Invitation

1. If someone else has invited you to chat, this information will appear in the friends list.
2. Touch a pending invitation, and then touch **Accept**.

10.3.4 Starting a Chat


1. In the friends list, touch a friend's name in the friends list.
2. Use the onscreen keyboard to enter text and chat with your friend.
3. After entering your message, touch .

10.3.5 Setting Notifications for New Instant Messages

Whenever you receive an instant message, the smartphone can play a sound, vibrate, or display an icon. To set up one of these handy notifications, start in the friends list, and then touch  > **Settings**. Then touch the account that you want to set. Now choose from one of the following:

IM notifications	Select the check box to receive a notification on the notification bar when you receive an instant message.
Notification ringtone	Touch to choose the ringtone used for a new instant message. You will hear a short sample of the ringtone when you select it. To turn the ringtone off, select Silent .
Vibrate	Select the check box to make the smartphone vibrate when you receive a new instant message.

10.3.6 Signing out of Google Talk


On the friends list screen, touch  , and then touch **Sign out** to quit **Talk**.

10.4 Google Maps

Maps lets you find your current location, view real-time traffic conditions (depending on availability in your locale), and get detailed directions to various destinations. You can view satellite images, traffic maps, or other kinds of maps of your current or other locations.

10.4.1 Enabling the Location Service


Before you open **Maps** to find your location or search for places of interest, you must enable the location service.

1. On the Home screen, touch  > **Settings**.
2. Touch **Location services**.
3. Select the **Google's location service** check box, the **GPS satellites** check box, or both.



10.4.2 Opening Google Maps

On the Home screen, touch  > **Maps** to open the application.

10.4.3 Searching for Places of Interest

1. On the map, touch  .
2. Enter the place you want to search for in the search box, and then touch the Search icon.
3. Your search results will then be displayed. Touch a place you are interested in and the application will show where it is on the map.

10.4.4 Getting Directions

1. While viewing a map, touch  .
2. Enter the starting point in the first text box, and then enter your destination in the second text box.
3. Touch the icon for car, public transit, or walking directions.
4. Touch **GET DIRECTIONS**. Your directions will appear in a list.
5. Touch a direction item on the list to show it on the map.
6. When you finish viewing or following the directions, touch  , and then touch **Clear Map** to reset the map.


10.5 YouTube

YouTube is Google's free online video streaming service for watching, searching for, and uploading videos.

10.5.1 Opening YouTube

On the Home screen, touch  > **YouTube**. You will then see the YouTube screen.

10.5.2 Searching for a Video

1. On the **YouTube** screen, touch  .
2. Enter a search keyword, and then touch the Search icon.
3. You will see a number of search results displayed below the notification bar. Scroll through the results and touch a video to watch it.

10.5.3 Sharing a Video


From the video list on the **YouTube** screen, select a video clip and touch

 to share the video.

10.6 Google Play Store[®]

Google **Play Store** provides direct access to applications and games which you can download and install on the smartphone.


10.6.1 Opening Google Play Store

1. On the Home screen, touch  > **Play Store**.
2. When you open **Play Store** for the first time, the **Google Play Terms of Service** window will appear. Touch **Accept** to continue.


10.6.2 Installing an Application

1. In the **Play Store**, select a category, and then touch the application you want to download. On the application details screen, you can view more information about the selected application, such as its cost, overall rating, user comments, and similar applications in which you might be interested. You can also scroll down to view information about the application developer, including other applications from the same developer and a link to the developer's website. In addition, you can send the developer an e-mail.
2. Follow the onscreen instructions to download and install the application.
3. To check the progress of a download, open the notification panel. Most applications are installed within seconds. To stop an application from downloading, touch the cross (x).

After the application has been downloaded and installed on the smartphone, the content download icon appears in the notification bar.

- ❗ If you want to install a non-Play Store application, touch  > **Settings** > **Security**, and then select the **Unknown sources** check box to allow installation of the non-Play Store application.

10.6.3 Uninstalling an Application

1. On the **Play Store** screen, touch  > **My Apps**.
2. Touch the application you want to uninstall, and then touch **Uninstall**.
3. When prompted, touch **OK** to remove the application from the smartphone.

11 Synchronizing Information


Some applications on the smartphone give you access to the same personal information that you can add, view, and edit on your computer. If you add, change, or delete your information in any of these applications on the web, the updated information also appears on the smartphone. This is made possible through over-the-air data synchronization. The process occurs in the background and does not interfere with use of the smartphone. When the smartphone is synchronizing, a data synchronization icon will be shown in the notification bar.

11.1 Managing Your Accounts


You can synchronize contacts, e-mail, and other information on the smartphone with multiple Google accounts or other kinds of accounts, depending on the applications installed on the smartphone. For example, you can start by adding your personal Google account, so your personal e-mail, contacts, and calendar are always available. You could then add a work account, so your work-related e-mails and work contacts are handy. If you like, you may add multiple Google accounts or other accounts.

11.1.1 Adding an Account


When you add an account, the **People** application compares contacts from the newly synchronized account with contacts from your existing smartphone accounts and attempts to merge duplicates into a single entry in **People**. While it is presented as a single contact entry, the contact data itself is not merged.

1. On the Home screen, touch  > **Settings > Accounts & sync**. The screen displays your current synchronization settings and a list of your current accounts.
 - ⓘ In some cases, you may need to obtain account details from IT support. For example, you may need to know the account's domain or server address.
2. Touch **ADD ACCOUNT**.
3. Touch the kind of account to add.
4. Follow the onscreen steps to enter the required and optional information about the account. Most accounts require a username and password, but the details depend on the kind of account and the configuration of the service to which you are connecting.
5. Configure the account. Depending on the kind of account, you may be asked to configure what kind of data you want to synchronize to the smartphone, to name the account, and for other details. When you are finished, the account is added to the list on the **Accounts & sync** screen.

11.1.2 Adding an Exchange Account

1. On the Home screen, touch  > **Settings > Accounts & sync**.
2. Touch **ADD ACCOUNT > Corporate**.
3. Follow the instructions and enter the required information about the exchange account you want to add. For details, contact the server administrator.
4. Touch **Next** to display the **Account setup** screen. Configure the synchronization settings for this account.
5. Touch **Next** to finish configuring the account settings. If e-mails are not synchronized properly, contact the server administrator.

11.1.3 Removing an Account

1. On the **Accounts & sync** screen, touch the account to be deleted.
2. Touch  > **Remove account**.
3. Confirm that you want to remove the account.

11.2 Customizing Your Account Synchronization

You can configure background data use and synchronization options for all the applications on the smartphone. You can also configure what kind of data you synchronize for each account.

For some accounts, synchronization is bi-directional; changes that you make to the information on the smartphone are made to the copy of that information on the web. Some accounts support only one-way synchronization; the information on the smartphone is read-only.

11.2.1 Configuring General Synchronization Settings

Touch the button at the top of the **Accounts & sync** screen.

In the account list, touch the account you want to synchronize, then configure whether changes you make to information on the smartphone or on the web are automatically synchronized with each other.


11.2.2 Changing an Account's Synchronization Settings


1. On the **Accounts & sync** screen, touch the account whose synchronization settings you want to change. The data and synchronization screen opens, displaying a list of the kinds of information the account can synchronize.
2. Selected items are configured to synchronize to the smartphone.
3. Select or clear the check box of information you want to synchronize with the smartphone.

12 Using Other Applications

12.1 All Back-up

You can back up data using **All Backup**, which provides the following options: **Backup**, **Restore**, **Quick backup**, **Scheduled backup**, and **Applications**.

To open **All Backup**, touch  > **All Backup** on the Home screen.

 If a microSD card is inserted into the smartphone, the files backed up are stored in the HuaweiBackup folder on the card by default; if no microSD card is inserted, the backup files are stored in the HuaweiBackup folder in the smartphone memory.

12.1.1 Backing Up Data on the Smartphone

1. On the **All Backup** screen, touch **Backup**.
2. In the **FILE NAME** field, enter a file name. You can also use the default file name.
3. In the **BACKUP CONTENTS** section, select the data you want to back up.
4. Touch **BACKUP** to back up the data you have selected.

12.1.2 Restoring Data

1. On the **All Backup** screen, touch **Restore**.
2. Find the file you want to restore from the backup file list.
3. Select the file.
4. Touch **RESTORE**, and follow the onscreen instructions to complete data restoration.

12.1.3 Backing Up Data Quickly

1. On the **All Backup** screen, touch **Quick backup**.
2. A dialog box is displayed, showing data that can be backed up quickly. Touch **Backup**.

3. Wait until the system completes automatic backup. Touch **OK**.

12.1.4 Backing up an Application

On the **All Backup** screen, touch **Applications** to display the application backup list. Here you can:

- **Backup**: Back up an application installed on the smartphone.
- **Restore**: Restore an application you have previously backed up.
- **Manage**: Manage an application you have previously backed up.

12.2 Calendar


Calendar enables you to create and manage events, meetings, and appointments. Depending on your synchronization settings, the calendar on the smartphone can be synchronized with the internet-based calendar you use.

12.2.1 Opening Calendar

On the Home screen, touch  > **Calendar** to open the application.

12.2.2 Creating an Event

1. In any calendar view, touch  , and then touch **New event**.

 If you have more than one calendar, select the calendar where you want to save the event.

2. Enter the event name.

- If there is a time frame for the event, touch **FROM** and **TO** to set the beginning and end times of the event.
- If the event is a special occasion such as a birthday or a day-long activity, set the date for **FROM** and **TO**, and then select the **ALL DAY** check box.

3. Enter the location of the event and a description.

4. Specify in **REPETITION** whether the event recurs and, if it does, how frequently, and then set the time for your event reminder in **REMINDERS**.

5. Touch **SAVE**.

- 🔍 To quickly create an event in the day, week, touch and hold an empty time slot, and then touch **New event**. A new event details screen will appear with the selected time slot and date in the **FROM** and **TO** fields.

12.2.3 Setting an Event Reminder

1. In any calendar view, touch an event to view its details or an event summary.
2. Touch the **Add reminder** button to add a reminder, or touch the reminder's **×** button to delete an existing reminder.
3. Touch the reminder time, and then, from the list displayed, touch the length of time before the event when you want to be reminded. When the time comes, you will receive a notification about the event.

12.2.4 Setting Synchronization and Display

The Calendars screen displays all the calendars you have added or subscribed to for each account that is configured to synchronize events to the smartphone, organized by account. (Calendars for accounts you have configured not to synchronize Calendar events are not included in the list.)

1. In any calendar view, touch **☰**. Then touch **Calendars to display > Calendars to sync**.
2. Touch the icon next to a calendar to change whether it is synchronized and whether it is displayed.

You remain subscribed to Calendars that you configure not to store on the smartphone and can still work with them with Google Calendar on the web, or using other calendar services.

3. Touch **OK**.

12.2.5 Customizing Calendar Settings

In any calendar view, touch **☰**. Then touch **Settings > General settings** and choose from the following:

- **Hide declined events**: Select to hide events for which you have declined invitations.

- **Notifications:** Touch to set event reminders to alert you, to send you a notification, or to turn off event notifications on the smartphone.
- **Choose ringtone:** Touch to select the ringtone to sound when you receive an event reminder.
- **Vibrate:** Select to vibrate the smartphone when you receive an event notification.
- **Default reminder time:** Touch to select the default time before an event for event reminders to occur.

12.3 File Manager


File Manager is like having a pocket-sized personal assistant (PA), letting you organize, edit, and delete files and folders.

12.3.1 Opening File Manager




On the Home screen, touch  > **File Manager** to open the application.

- 🔍 Before performing operations on the **SD card** list, ensure that a microSD card is inserted.



12.3.2 Creating a Folder

1. On the **File Manager** screen, touch **Internal** or **SD card**.
2. Touch  > **New folder**.
3. Enter the name of the new folder in the text box.
4. Touch **Save**.

12.3.3 Moving or Copying a File


1. On the **File Manager** screen, touch **Internal** or **SD card**, and then touch  > **Select item(s)**.
2. Touch the file or folder you want to move or copy.
3. Touch , and then touch **Cut** or **Copy**.
4. Select the path where you want the file to be copied or moved to. Touch  to move or copy the file to the selected path.

12.3.4 Searching for a File



1. On the **File Manager** screen, touch **Internal** or **SD card**, and then touch a folder to access the directory where the file you want is located.
2. Touch .
3. In the search box, enter a word contained in the name of the file you are searching for.
4. Touch **Go**. The smartphone will start the search.
5. A list of search results will be displayed. Touch a file in the list to open it.
6. Touch  to return to the file manager screen.

12.3.5 Compressing or Extracting Files

The smartphone supports compressing and extracting files.

-  You can only compress files and folders into .zip files, but can extract both .zip and .rar files.

Compressing Files

1. On the **File Manager** screen, touch **Internal** or **SD card**, and then touch  > **Select item(s)**.
2. Select the files or folders you want to compress.
3. Touch  > **Compress**.
4. Edit the save path and the name of the target file, and then touch **OK** to start compressing the files and folders.

Extracting a File

1. Touch and hold a compressed file.
2. Touch **Extract**.
3. Edit the save path for the extracted files.
4. Touch **OK** to start extracting.

12.3.6 Viewing Your Memory Status

On the **File Manager** screen, touch  to open the options panel, and then touch **Storage**. The memory management screen will be displayed. This

screen allows you to view the memory status and available memory on the smartphone and microSD card.

12.4 Clock

Clock displays the date and time. You can also use **Clock** to turn the smartphone into an alarm clock.

12.4.1 Opening the Clock

On the Home screen, touch  > **Clock** to open the application.

12.4.2 Opening the Alarms

On the **Clock** screen, touch  to open the **Alarms**.

Adding an Alarm

1. On the alarm list screen, touch **Add alarm**.
2. Set the alarm, and then touch **OK**.

Setting an Alarm

1. On the alarm list screen, touch one of the alarms on the screen.
2. Touch **Time** to set the time of the alarm.
3. Touch **Repeat** to set the days when you want the alarm to sound.
4. Touch **Ringtone** to select a ringtone for the alarm.
5. Select the **Vibrate** check box to enable the smartphone to vibrate, in addition to playing the ringtone.
6. Touch **Label** to enter a name for the alarm.
7. Touch **OK**.

Customizing Alarm Settings

On the alarm list screen, touch , and then touch **Settings**.

12.5 Calculator

Use **Calculator** to solve simple arithmetic problems or use its advanced operators to solve more complex equations.

12.5.1 Opening Calculator




On the Home screen, touch  > **Calculator** to open the application.

12.5.2 Switching Between Basic and Advanced panel

On the **Calculator** screen, flick the screen to the right or left to switch between **Advanced panel** and **Basic panel**.

12.6 Notes


Notes features a simple text processor. In the note list, you can add, edit, and delete notes.





1. On the Home screen, touch  > **Notes** to open the application.
2. Touch  to create a note.
3. Touch  to save the note.

13 Managing the Smartphone

To configure the smartphone, touch  > **Settings**.

13.1 Setting the Date and Time


 When the smartphone is using the date and time settings provided automatically by the network, you cannot change the settings.

1. On the **Settings** screen, touch **Date & time**.
2. Clear the **Automatic date & time** and the **Automatic time zone** check boxes.
3. Touch **Set date**. On the set date screen, touch  or  to adjust the date, month, and year, and then touch **Set** when the configuration is complete.
4. Touch **Set time**. On the set time screen, touch  or  to adjust the hour and minute. Touch **Set** when the configuration is complete.

5. Touch **Select time zone**, and then select the desired time zone from the list. Scroll to view more time zones.
6. Select or clear the **Use 24-hour format** check box to switch between 24-hour and 12-hour formats.
7. Touch **Select date format** to select how you want the date to be displayed.

13.2 Setting the Display

13.2.1 Adjusting the Screen Brightness

1. On the **Settings** screen, touch **Display > Brightness**.
 If you want to adjust the screen brightness manually, first clear the **Automatic brightness** checkbox.
2. Drag the slider left to make the screen darker, or right to make it brighter.
3. Touch **OK** to save the adjustment.

13.2.2 Adjusting the Time Before the Screen Turns Off

If the smartphone is idle for several minutes, it will turn off the screen to save battery power. To set a longer or shorter idle time:

1. On the **Settings** screen, touch **Display > Sleep**.
2. Select the duration you want the screen to be illuminated.

13.3 Setting Ringers

13.3.1 Turning On Silent Mode

1. On the **Settings** screen, touch **Sound**.
2. Select **Silent mode** to silence all sounds except alarms, music, and video media.

13.3.2 Adjusting the Volume

You can adjust the volume while on the Home screen or on most of the application screens (such as the screen displayed during a call or when



playing music or videos). Press the Volume keys to adjust volume to the level you desire. You can also adjust the volume from the settings screen.

1. On the **Settings** screen, touch **Sound > Volume**.
2. Drag the slider left to make the volume lower, or right to make it higher.
3. Touch **OK** to save the adjustment.

13.3.3 Changing the Smartphone Ringtone

1. On the **Settings** screen, touch **Sound > Phone ringtone**.
2. In the displayed list, select an option:
 - **Ringtone**: Select a preinstalled ringtone. The ringtone plays when selected.
 - **Local music**: Select the music stored in the smartphone or on the microSD card. The music plays when selected.
3. Touch **OK**.



13.3.4 Changing the Message Ringtone

1. On the Home screen, touch  > **Messaging**.
2. In the message list, touch  > **Settings > Choose ringtone**.
3. Touch the ringtone you want to use. The ringtone plays when selected.
4. Touch **OK**.

13.4 Setting Smartphone Services

13.4.1 Customizing Call Settings

Smartphone service providers offer services including call forwarding, call waiting, fixed dialing numbers, and voicemail. You can customize the services included in your call fee package.

On the Home screen, touch  > **Phone**, and then touch  > **Settings** to customize call functions.

13.4.2 Turning on Data Roaming

1. On the **Settings** screen, touch **More... > Mobile networks**.
2. Select the **Data roaming** check box.

- ⓘ Accessing data services while roaming may incur additional charges. Ask your wireless service provider about data roaming fees.

13.4.3 Disabling the Data Service

1. On the **Settings** screen, touch **More... > Mobile networks**.
2. Clear the **Data enabled** check box.

13.5 Adjusting the Speech Rate

1. On the **Settings** screen, touch **Language & input > Text-to-speech output > Speech rate**.
2. Select a speed at which the text is to be spoken.

13.6 Protecting the Smartphone

13.6.1 Turning on Your SIM Card PIN

1. On the **Settings** screen, touch **Security > Set up SIM card lock**.
2. Select the **Lock SIM card** check box.
3. Use the keyboard to enter the PIN, and then touch **OK**.
4. To change the PIN at any time, touch **Change SIM PIN**.

- ⓘ You can dial emergency numbers any time from the smartphone.

13.6.2 Protecting the Smartphone with a Screen Lock

To keep your data more secure, lock the screen and/or require a screen unlock pattern every time the smartphone is turned on or wakes up from sleep mode.

1. On the **Settings** screen, touch **Security > Screen lock > Pattern**.
2. Flick your finger vertically, horizontally or diagonally, connect at least four dots in any order you choose. Lift your finger from the screen when you are finished.

You must drag your finger between the dots on the screen to create the pattern, not simply touch individual dots.

3. The smartphone will record the pattern. Touch **Continue**.
4. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.

To change your unlock screen pattern, touch **Security > Screen lock > Pattern**.

13.6.3 Protecting the Smartphone with a Numeric PIN

You can set up a numeric PIN to lock the smartphone.

1. On the **Settings** screen, touch **Security > Screen lock > PIN**.
2. Enter at least four characters.
3. Touch **Continue**.
4. Enter the same characters again and touch **OK**.


To change your PIN, touch **Security > Screen lock > PIN**.

13.7 Managing Applications

13.7.1 Viewing an Installed Application

1. On the **Settings** screen, touch **Apps > ALL**.
2. In the applications list, do either of the following:
 - Touch **≡**, and then touch **Sort by size**. Then touch an application to view its details.
 - Touch an application directly to view its details.

13.7.2 Uninstalling an Application

 You cannot uninstall the applications that are pre-installed on the system.

1. On the **Settings** screen, touch **Apps**.
2. Touch an application, and then touch **Uninstall**.

13.7.3 Moving an Application to the microSD Card

Some applications are designed to be stored on the smartphone's USB storage or microSD card (depending on the model of the smartphone),

rather than in its internal storage. Others are designed so you can change where they are stored. You may find it helpful to move large applications off your internal storage, to make more room for other applications that do not offer the option.

1. On the **Settings** screen, touch **Apps**.
2. Touch an application in the list. Then touch **Move to SD card** to move the bulk of the application from the smartphone's internal storage.

The **Move to phone** section of the application's details screen shows details about the memory used by the application. If the application can be moved, the **Move to SD card** button is active.

Touch **Move to phone** to move the application back to the smartphone's internal storage.

13.7.4 Ways to Free Up the Smartphone Memory

- Move files and e-mail attachments to the microSD card.
- In **Browser**, clear all temporary Internet files and Browser history information.
- Move applications to the microSD card.
- Uninstall any downloaded programs that you no longer use.
- Reset the smartphone.

13.8 Resetting the Smartphone

13.8.1 Backing Up My Data

You can use your Google account to back up the smartphone's settings to Google servers. If you replace the smartphone, the settings you have backed up will be transferred to the new smartphone the first time you sign in to your Google account.

1. On the **Settings** screen, touch **Backup & reset**.
2. Select the **Back up my data** check box.

13.8.2 Restoring Factory Data

If you reset the smartphone to its factory settings, all of your personal data stored on the smartphone, including information about your Google account, any other accounts that you have configured, your system and application settings, all the data stored on your SD card or on the smartphone's internal SD card, and any applications you have installed will be erased. Resetting the smartphone does not erase any system updates you have downloaded.

1. On the **Settings** screen, touch **Backup & reset > Factory data reset**.
2. When prompted, touch **Reset phone**, and then touch **Erase everything**. The smartphone resets the settings to the original factory settings, and then restarts.

14 Appendix

14.1 FAQs

How Can I Use a microSD Card to Import Contacts to My Smartphone from Another Smartphone?

The smartphone supports contact files in the .vcf format only.

1. Save the contacts you want to import to the smartphone to a microSD as a .vcf file.
 2. Insert the microSD card into the smartphone and find the .vcf file using **File Manager**.
 3. Touch the .vcf file. The smartphone displays a message asking whether you want to import the contacts.
 4. Touch **OK** to import the contacts.
- ⓘ Compatibility problems may occur with .vcf files created by different phones, and certain contact information may be lost when contacts are imported.

How Do I Set a Song As a Smartphone Ringtone?

In **Play Music**, touch and hold the song to be set as ringtone, and then touch **Set as ringtone**.

How Do I Disable Automatic Change of Screen Orientation When Rotating My Smartphone?

On the Home screen, touch  > **Settings > Display**, and then clear the **Auto-rotate screen** check box to disable this function.

How Do I Set an Unlock Pattern?

On the Home screen, touch  > **Settings > Security > Screen lock > Pattern**.

How Can I Change the Input Method?

When the keypad is displayed, a keypad icon is displayed on the status bar. Flick the status bar downwards and touch **Select input method** to select an input method.

How Do I Stop the Song Playing in the Background?

Flick the notification bar downwards to open the notifications panel, touch the music playing notification to go to the music playing screen, and then stop playing the song.

How Do I Return to the Call Screen?

If you switched to another screen during a call, flick the notification bar downwards to open the notifications panel, and then touch the current call notification to return to the call screen.

How Do I Create an Application Shortcut on the Home Screen?

Touch and hold an application icon on the application screen until the Home screen is displayed. Then drag the icon to where you want to place it and release your finger.

How Do I Hide the Keyboard?

Touch  to hide the keyboard.

How Do I Forward a Message?

On the message viewing screen, touch and hold a message, and then select **Forward** from the displayed menu.

Why Am I Unable to Use Navigation?

Navigation is unavailable in some countries or regions.

14.2 Warranty Information

Warranty And Technical Data

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than HUAWEI original batteries are used.

Support

For assistance, please contact:

E-mail: service@ConsumerCellular.com

Website: www.ConsumerCellular.com/support

Telephone: **1-800-686-4460**

Need to test the smartphone?

At any time you can place a smartphone test call to our FREE test line by dialing 1-888-460-8781 from the smartphone. If the call is completed correctly you will hear a recorded message telling you that the smartphone is working.

Check your minutes or change your plan.

With Consumer Cellular you are in control and can change your plan at any time. To check your usage and change your plan just go to My Account at:

www.ConsumerCellular.com

Or call 1-888-373-1777 any time. The call is free.

Further information is available on our website:

www.ConsumerCellular.com OR

www.huaweidevice.com/worldwide

You may also view helpful how-to videos at:

www.ConsumerCellular.com/Support/VideosandManuals

HUAWEI U8687

V100R001_01