

nextar™

MA933ASC

Digital MP3 Player



USER MANUAL

Thank you for your purchase.

Please read this manual carefully before using your new player.

If the actual operations of your player are not the same as in this manual, visit our website for latest product information.

[Http://www.nextar.com](http://www.nextar.com)

Main Features:

- ※ DIRECT USB2.0 FS PLUG
- ※ SUPPORTS MP3, WMA
- ※ 6 MODES OF EQ
- ※ LED DISPLAY
- ※ LOW BATTERY CONSUMPTION

Accessories:

- ※ User Manual × 1
- ※ Driver Disc × 1
- ※ USB Cable × 1
- ※ Necklace stereo earphone × 1
- ※ AAA battery × 1

How to use it

● Installation of battery

The red LED on the top panel will light after installing the battery for 8 seconds, and the player will be in stop mode.



● Power ON / OFF

To turn on the player, once the battery is installed, press and hold the Play key for 2 seconds until the LED light comes on, then press the Play button to enter play mode.

To turn off the player, press and hold the Play key for 2 seconds. During Play mode, press the Play button to enter Standby mode.



● Volume+/Volume-

Press or hold the button to turn up or down the volume during a song or recording.

 


Volume-

Volume+

● Previous Song/Next Song

Press the Last key to select the previous song, press the Next key to select the next song.

 


● Fast Reverse / Forward

In playing status, by holding the Last key, you can reverse faster; by holding the Next key, you can move forward faster.

● EQ Mode

Press the EQ key to enter the equalizer mode; 6 EQ modes: Natural, Rock, Pop, Classical, Jazz, DBB.



● Storing music to MP3 player

- ◇ Connect Mp3 Player to PC
- ◇ Take off the cover and connect to PC via USB plug
- ◇ Click "My Computer" to find "Removable Disk"
- ◇ Transfer songs of MP3 or WMA format from your computer to your mp3 player.

NOTICE:

To save energy, the player will turn off automatically in stop status without use after 30 seconds.

Driver Installation

1. Windows 98 /98SE Installation

- a. Insert driver CD disc into your CD ROM to start up:\WINDOWS 98 DRIVER\ Setup.exe
- b. A menu will automatically pop up
- c. Select Install /Remove Driver to start installation
- d. Follow the on-screen instruction to install the driver
- e. Click "OK" to restart. (Must restart to complete installation), illustration 1
- f. After restart, insert SPORT MP3 to the USB port on your computer/laptop. Windows will automatically detect the new hardware. If setup is correctly performed as instructed, you should find two "Removable Disks" shown in "My Computer".

2. Windows ME /Windows XP /Windows 2000 Installation

For these operating systems, NO Driver is required because Windows has a built-in driver that supports your unit. Simply plug your device into the USB port and the operating system will recognize it. Next you will see two "Removable Disks" drives in My Computer.

3. Linux 2.4.0+ / Mac 8.6 + Installation

No Driver is required for these operating systems. Simply plug the device into the USB port and the system will automatically find it.

Specification

Weight	25g (Without battery)	
LED indication	In stop status LED light, In play status LED flash	
PC Connection	USB2.0 Full Speed	
Flash memory	Flash storage: 32MB -2GB	
Battery	One AAA(No.7) alkaline battery	
	Max Play Time:10hours	
MP3, WMA, WMV, ASF	Max output of earphone	(L) 10mW+ (R) 10mW(32Ohm)
	MP3 bits rate	8K bps - 320K bps
	WMA, WMV, ASF bits rate	5K bps - 384K bps
	Frequency response	20Hz to 20KHz
	SNR	85dB
Music format	MP1, MP2, MP3, WMA, WMV, ASF, WAV	
Working Temperature	-5 - 40 °C	
Operating System	Windows98/SE/ME/2000/XP/2003, Mac OS 10, Linux 2.4.2	