



| | | | |
|--|---------|------------|---------------|
| Example of a starting Serial # RT8060210000001 | | | |
| RT8 | 06 | 0210 | 000001 |
| Model # | Plant # | Year/month | Serial Number |
| Operation Manual REX2288 | | | |
| Service Manual M051-00K25-A059 | | | |











