Brookstone°

Off The Hook BLUETOOTH® HANDSET



TABLE OF CONTENTS

Warnings and Cautions	2
Location of Controls	6
Charging the Handset	6
Pairing the Handset with your Phone	7
Using the Handset	8
Warranty	9

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER.
 THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE
 THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

SAVE THESE INSTRUCTIONS

DANGER

To reduce the risk of electric shock, burns, fire or injury:

- 1. Do not use while bathing or in a shower.
- 2. Do not place or store unit where it can fall or be pulled into a tub or sink.
- 3. Do not place in, drop or submerge in water or other liquid.
- 4. Do not reach for unit that has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

- Close supervision is necessary when this product is being charged by or near children or mentally disabled individuals.
- 2. Use this unit only for its intended use as described in this manual.
- 3. Unplug this unit from an electrical outlet during lightning storms or when unused for long periods of time.
- 4. Never drop or insert an object into any opening.
- 5. Protect the adapter cord from being walked on or pinched, particularly at plug outlets and the point where it exits the unit.
- 6. Do not allow adapter cord to touch hot surfaces. Wrap cord loosely around the unit, or disconnect adapter, when storing.


- 7. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat registers, stoves, or other units (including amplifiers or stereos) that produce heat.
- 8. Never block the air openings of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
- 9. Do not overload electrical outlet. Use only the power source as indicated.
- 10. Do not carry this unit by adapter cord or use adapter cord as handle.
- 11. Never operate this unit if it has a damaged adapter cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. If the unit's adapter cord or plug is damaged, do not attempt to fix it yourself.
- 12. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
- 13. Do not operate in the presence of explosive and/or flammable fumes.
- 14. Never remove the adapter from the socket by pulling the power cord.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

LOCATION OF PARTS AND CONTROLS

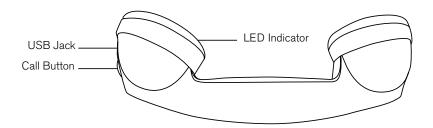

CHARGING THE HANDSET

- Connect the Bluetooth Handset to the included USB cable and plug into your computer's USB port. You may also use a USB adapter (not included) with the USB cable and connect it to an electrical outlet to charge.
- The blue LED Indicator light will illuminate during charging. It will turn off when charging is complete.
- Charging takes between 3 and 4 hours (initial charge takes 6 to 8) for 120 hours of standby time and 10 hours of talk-time.

PAIRING THE HANDSET WITH YOUR PHONE

Note: Your device must be Bluetooth enabled to work with the Handset.

- 1. Refer to your cell phone manual for instructions on how to use the Bluetooth pairing function in your phone.
- 2. Push and hold the silver button on the Handset. After 5 seconds you will hear a high-tone beep, and the blue LED Indicator light on the Retro Handset will blink briefly. Continue holding the silver button until you hear a low-tone beep and the blue LED illuminates solid blue. The Handset is now in pairing mode.
- Follow your cell phone's instruction manual to pair your cell phone with a Bluetooth device and initiate its pairing process.
- Your cell phone should scan for local Bluetooth devices and should locate the Handset "H680" after 10-20 seconds.
- 5. Your cell phone will then prompt you to enter a PIN number. Enter "0000".
- 6. Complete the Bluetooth pairing by following your cell phone's instructions.
- 7. Now you will be able to place a call using your cell phone's keypad, internal phonebook, or voice dial and use the Off The Hook Handset in place of your cell phone's handset.

Note: If you power-off your cell phone, you may need to reconnect.

USING THE HANDSET

IMPORTANT: You must be within 30 feet of your paired Bluetooth cell phone.

- 1. To answer an incoming call press the silver button.
- 2. To disconnect from a phone call, press the silver button.
- To turn off the Handset, press and hold the silver button for 5 seconds until you hear a single high-tone beep, followed by a double low-tone beep. The blue LED Indicator light turns off.

Note: To redial the last number called, press the silver button.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or

suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Brookstone a world of innovation

Since 1965, people have come to Brookstone to see what's new, discover smart solutions to everyday problems—and have some fun. At Brookstone, we believe there's always a better way to do things. And we created a world of innovation to prove it.