


Parts Catalog

Hedgetrimmer


Model: THT-232

All Units Prior To Serial Number F 148391

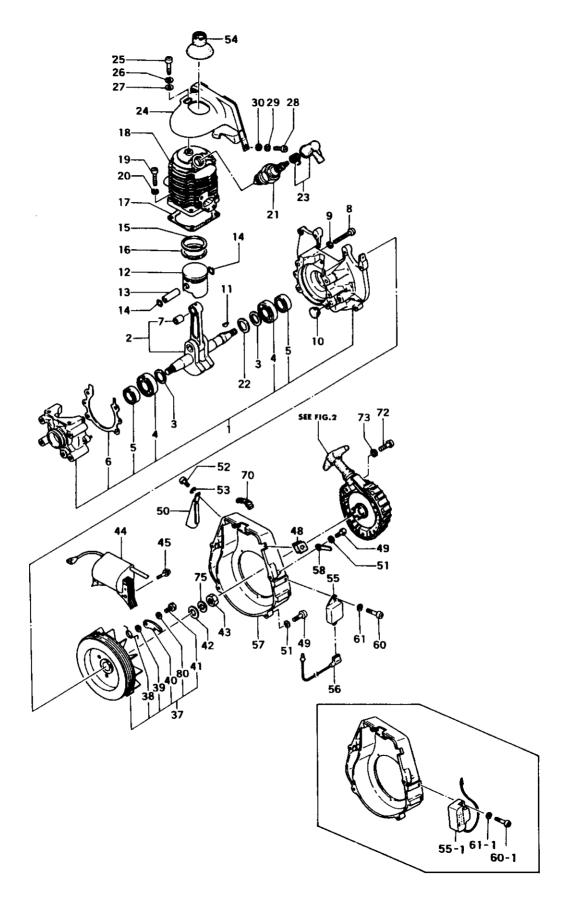


/	JER		
REF	NER PARNER	PARNAME	ST SERVATOR REMARKS
1-001 1-002 1-003 1-004	072-00764-900 046-00700-803 070-00601-201	CRANK CASE ASS'Y CRANK SHAFT COMP. CRANK SHAFT WASHER 12.2X18 BALL BEARING #6001, 28NN/OD	
1-005 1-006 1-007	999-66122-266 090-00601-205 999-62081-225	OIL SEAL 12227 Crank case gasket Needle bearing F-810	
1-008 1-009 1-010 1-011 1-012	990-11050-251 992-10050-012 599-00601-200 068-10100-200 031-00601-202	S.VASHER 5 GRONNET VOOD-RUFF KEY 3X13X4.5 PISTON	
1-013 1-014 1-015 1-016 1-017 1-018		PISTON PIN CIRCLIP PISTON RING/TOP PISTON RING CYLINDER GASKET CYLINDER CONP.	1 2 1 1 1 1 1 1
1-019 1-020 1-021 1-022 1-022 1-022	990-11050-161 992-10050-012 018-00502-200 330-00200-210 330-00200-220 330-00200-230	S.WASHER 5 SPARK PLUG BN6A GEAR SHAFT SHIM 0.10 GEAR SHAFT SHIM 0.15	4 4 1 V V V
1-022 1-023 1-024 1-025 1-026 1-027	016-00601-800 990-11050-101 992-10050-012 992-01050-011	SPARK PLUG CAP ASS'Y CYLINDER SHROUD COMP. SCREW 5X10 S.WASHER 5 WASHER 5	V 1 1 1 1 1 1 1 1
1-028 1-029 1-030 1-037 1-038 1-038	990-11040-101 992-10040-012 992-00040-011 155-21700-900 790-00601-202 790-00601-203	S.WASHER 4 SWALL WASHER 4 WAGNETO ROTOR ASS'Y STARTER PAWL SPRING STARTER PAWL SPRING	1 1 1 1 2 2 P C132439 2 P C132440-
1-039 1-040 1-041 1-042 1-043 1-044	786-00601-200 788-00601-203 793-10200-201 065-00000-200 066-00601-200 167-20763-800	STARTER PAVL STEP BOLT Flywheel Washer Flywheel Nut Ignition Coil Comp.	2 2 2 1 1 1 1
1-045 1-045 1-048 1-049 1-050 1-050	994-18040-181 994-16040-226 203-0804A-202 990-11040-181 132-00601-200 132-00601-201	SCREW 4X22/VS Gronnet Screw 4X18 Flash Pan	2 M 2 1 4 1 P D037769 1 P D037770-
1-051 1-052 1-053 1-054 1-054 1-055,1	992-10040-012 990-11040-101 992-10040-012 255-0062A-200 255-0062A-201 159-21401-870	SCREW 4X10 S.WASHER 4 SPARK PLUG RUBBER COVER SPARK PLUG RUBBER COVER	4 1 1 1 R -D293830 1 D293831- 1 R -B078315
1-055 1-056 1-057 1-058	159-21401-871 159-21401-872 173-0162R-800 112-00700-201 198-11600-800 990-11040-181	IGNITOR COMP. TTI-IF IGNITOR LEAD WIRE COMP., R85N FAN CASE CORD CLAMP COMP.	1 N -E062000 1 N E062001- 1 N E062001- 1 N E062001- 1 -E062000
1-060 1-061,1 1-061 1-070 1-070	990-11040-081 992-10040-012 992-10040-012 130-00610-201 130-00610-202	SCREV 4X8 S.WASHER 4 S.WASHER 4 FAN CASE PLUG FAN CASE PLUG	1 N £062001- 2 -E062000 1 E062001- 1 -C085250 1 P C085251-
1-072 1-073 1-075 1-080	990-11040-101 992-10040-012 992-10070-012 822-00601-200	S.VASHER 4	3 3 1 2

FIG.2 RECOIL STARTER

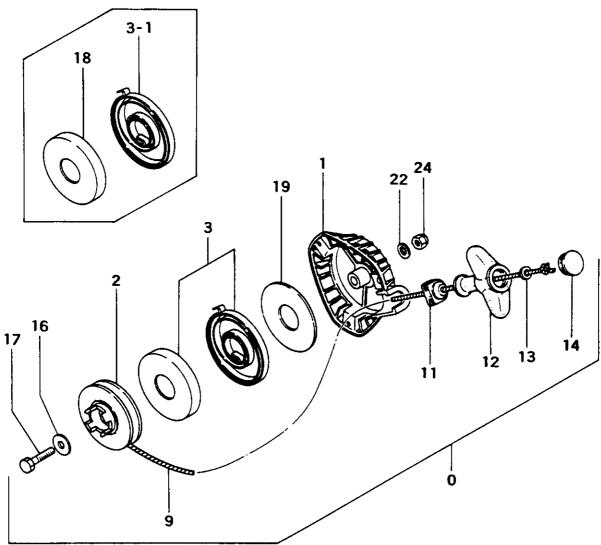


REF	NER PARTER	PARWAME	ST SERVICER REMAR	R¥ ^S
2-000	756-00601-912	RECOIL STARTER ASS'Y	1 R -8148363	
2-000 2-001		RECOIL STARTER ASS'Y RECOIL STARTER BODY COMP.	1 B148364- 1 R -B148363	
2-001		RECOIL STARTER BODY COMP.	1 R - D006550	
2-001		RECOIL STARTER BODY COMP.	1 D006551-	
2-002		STARTER ROPE REEL CONP.		
2 002		STARTER ROLE REEL CONT.		
2-003.1	779-00601-204	RECOIL SPRING	1 R - F067900	
2-003		RECOIL SPRING CASE ASS'Y	1 F067901-	
2-009	783-00601-210	ROPE	1	
2-011	780-00601-201	ROPE GUIDE	1	- 1
2-012	785-10207-201	STARTER HANDLE	1	
2-013	992-01040-011	WASHER 4	1	
2-014	833-10207-200	STARTER HANDLE CAP	1	
2-016	992-08050-006	SPECIAL WASHER 5		
2-017	990-21050-251	BOLT 5X25		
2-018		RECOIL SPRING CASE	1 D F067901-	
2-019		RECOIL SPRING CASE COVER	1	
2-022	992-20050-000	INNER TOOTHED WASHER 5		
2-024	991-43050-026	CAP NUT 5		

FIG.3 CARBURETOR

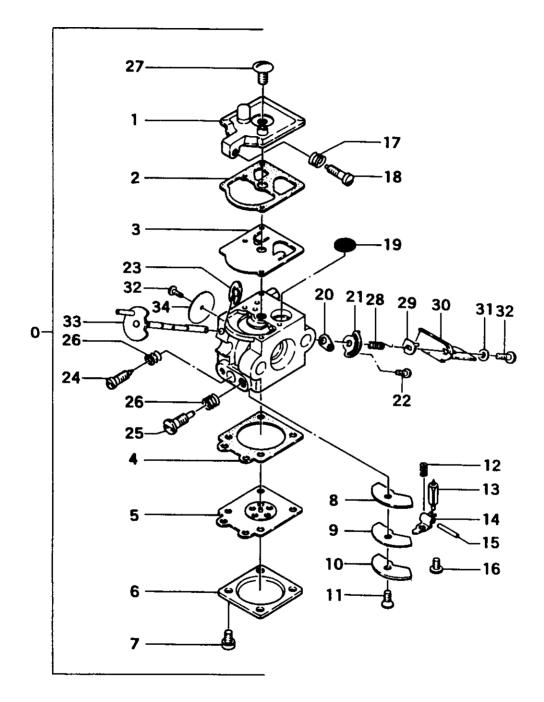


	NER PARNER	PARTIAME	SERIANDER REMARKS
3-000 3-000 3-000 3-001 3-002 3-003	455-25004-902 455-25022-900 455-25022-901 575-25001-200 577-25001-200	CARBURETOR ASS'Y Carburetor Ass'y VA-12C Carburetor Ass'y VA-12C PUMP Body	St St Rt 1 R -D006550
3-004 3-005 3-006 3-006 3-007 3-007	474-25001-800 476-25006-200		1 1 1 1 1 1 4 4
3-008 3-009 3-010 3-011 3-012 3-013	521-25001-200 523-25001-200	I CONTRACT TO MENTER	1 1 1 1 1 1
3-014 3-015 3-016 3-017 3-018 3-019	463-25008-200	HINGE PIN HINGE PIN SET SCREW IDLE ADJUST SPRING IDLE ADJUST SCREW	1 1 1 1 1 1
3-020 3-021 3-022 3-023 3-024 3-025	507-25004-200 548-25004-200 489-25004-200 461-25001-200		1 1 1 1 1 1 1 1
3-026 3-027 3-028 3-029 3-030 3-031	514-25001-200 486-25004-200 490-25004-200 630-25004-201	HIGH/LOW ADJUST SPRING SET SCREV CONTROL LEVER SPRING GOVERNOR SPRING LEVER GOVERNOR LEVER SPECIAL WASHER	2 1 1 1 1 1 1 1
3-032 3-033 3-034 3-034	464-25004-800 488-25012-200	SHUTTER SCREW THROTTLE SHAFT CONP. THROTTLE VALVE THROTTLE VALVE	2 1 1 1 1 1 1 1

FIG.4 AIR CLEANER

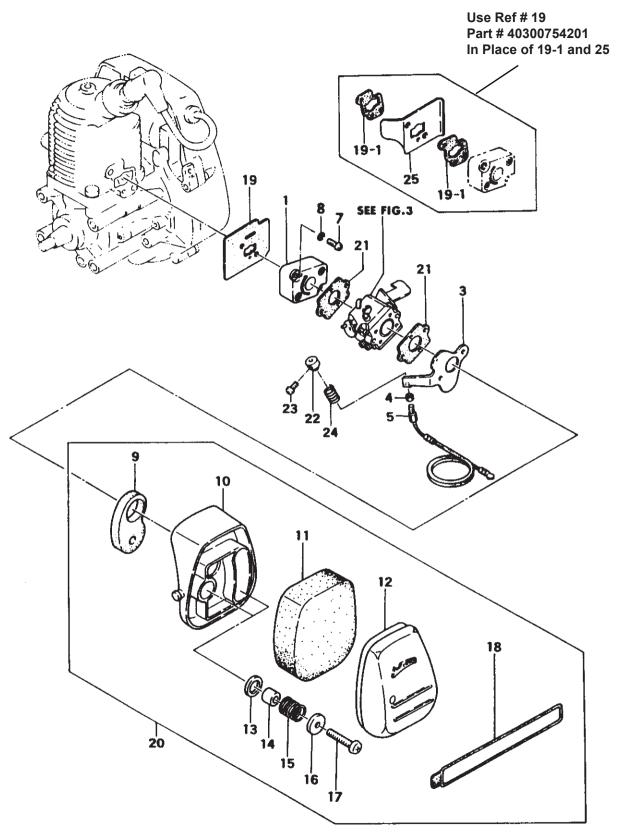


/	BR	7	1
REF	NER PARNER	PARNAME	DI SERIANBR REMARKS
$\begin{array}{r} 4-001 \\ 4-003 \\ 4-003 \\ 4-004 \\ 4-005 \\ 4-007 \end{array}$	404-0142A-801 436-0062V-250 436-0062V-251 991-01060-013	CARBURETOR INSULATOR COMP. AIR CLEANER BASE AIR CLEANER BASE NUT 6 OUTER RECEIVER	1 1 1 1 1 1 2 -C132439 C132440- 1 2
4-008 4-009 4-010 4-011 4-012 4-013	423-00601-203 444-00601-201 424-00601-202	S.WASHER 5 CLEANER GASKET AIR CLEANER BODY CLEANER ELEMENT A CLEANER COVER SPECIAL WASHER/CLEANER	2 1 1 1 1 1 2
4-014 4-015 4-016 4-017 4-018 4-019,1	432-00601-200 992-01050-011 990-11050-551 466-00624-200	SCREW 5X55	2 2 2 2 1 2 1 2 -B230282
4-019 4-019 4-020 4-021 4-022 4-023	403-00754-201 410-0062A-901		1 N -C192852 1 P C192853- 1 2 1 1
4-024 4-025	688-11501-200 132-0062¥-201	RETURN SPRING Flash pan	1 1 D B230283-

FIG.5 FUEL TANK & MUFFLER

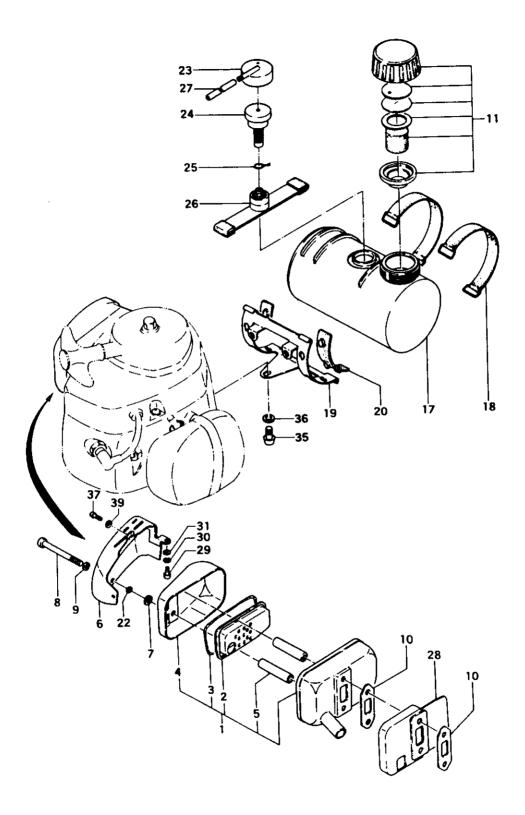



REF	NER PARNER	PARNAME	ST SERVINER REMARKS
5-001 5-001 5-001 5-002 5-002 5-002 5-002	706-0062V-900 706-0062V-901 706-0062V-910 722-0062V-800 722-0062V-810	NUFFLER ASS'Y NUFFLER ASS'Y NUFFLER ASS'Y NUFFLER PARTITIVE PLATE	1 R -B027993 1 R -C154793 1 C154794- 1 R -B027993 1 C154794- 1 R -B027993 1 R -C154793 1 C154793 1 C154794-
5-003 5-004 5-005 5-008 5-007 5-008	717-0062W-801 740-0062W-200 738-0062W-211	ASBESTOS THREAD NUFFLER BODY B CONP. NUFFLER COLLAR NUFFLER PROTECTOR NUFFLER S. GASKET SCREV 5X60	1 1 2 1 2 2
5-009 5-010 5-011 5-011 5-017 5-018	595-0062A-910 595-0062A-901 591-00764-800	NUFFLER GASKET TANK CAP ASS'Y, ORANGE TANK CAP ASS'Y	2 1 1 1 1 2
5-019 5-020 5-022 5-023 5-024 5-025	655-02101-201 992-01050-011	RUBBER PIPE CAP Rubber Pipe	1 2 2 1 1 1 1
5-026 5-027 5-027 5-028 5-028 5-028 5-028	700-03005-175	FLASH PAN	1 1 1 1 1 1 1 R -D006550 D006551- -B078316 1 N B078317-
5-029 5-030 5-031 5-035 5-036 5-037	990-11040-101 992-10040-012 992-01040-011 990-11050-101 990-11050-012 990-11040-101	S.WASHER 4 WASHER 4 SCREW 5X10 S.WASHER 5	
5-039	992-01040-011	VASHER 4	

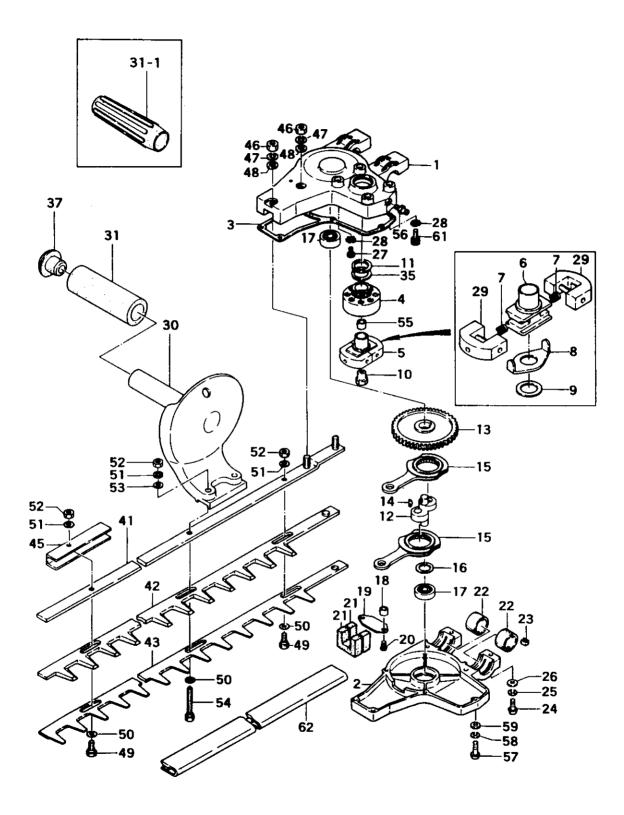

			.5
OFF	NER PARNER	PARTIANE	ST SERVATER REMARKS
6-001 6-002 6-002 6-003 6-004 6-005	300-33210-208 301-33210-202 301-33210-203 303-33210-202 288-0052W-804	GEAR CASE A GEAR CASE B	1 1 1 1 F067900 F067901- 1 1 1
6-006 6-007 6-008 6-009 6-010 6-011	339-0062W-201 992-01100-011 337-0062W-203	CLUTCH BOSS CLUTCH SPRING CLUTCH ARN FIXING PLATE WASHER 10 CLUTCH NUT GEAR SHAFT SHIN 0.10	1 2 1 1 1 1 V
6-011 6-011 6-011 6-011 6-012 6-013	330-00200-240	GEAR SHAFT SHIN 0.20 GEAR SHAFT SHIN 0.30 DRIVE SHAFT COLLAR CAN SHAFT	V V V 1 1
6-014 6-015 6-016 6-016 6-017 6-018	014-35100-201 016-35100-201 999-61629-000	WOOD-RUFF KEY 3X10X3.7 CAN ROD CONP. SHAFT SHIN 1.0 (9.3X18) SHAFT SHIN 0.2 (9.3X18) BALL BEARING #629, 26NH/OD FIXING PLATE SPACER	1 2 V 2 2
6-019 6-020 6-020 6-021 6-022 6-023	990-11050-101 990-11050-121 085-33202-200 060-33210-200	FIXING PLATE SCREV 5X10 SCREV 5X12 GREASE SEAL A HANDLE DANPER RUBBER EARTH TERNINAL	1 X X 2 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1
6-024 6-025 6-026 6-027 6-027 6-027		S.WASHER 5 SNALL WASHER 5 HEX. BOLT 5X15 BOLT 5X15	4 4 2 2 R -C085250 2 C085251- 4
6-029 6-030 6-031,1 6-031 6-035 6-035	051-33210-820 165-35100-202 165-33250-200 565-34301-200		2 1 1 R -F147891 1 F147892- -F067900 1 F067901-
6-037 6-041 6-042 6-043 6-045 6-045 6-046	121-33202-203	CUTTER GUIDE, L-832.5 Cutter B, L-825 Cutter A, L-825 Blade Holder	1 W F147892- 1 1 1 1 2
6-047 6-048 6-049 6-049 6-050 6-050	992-10060-012 992-01060-011 124-33202-205 124-33202-206 129-33202-200 129-33202-201	WASHER 6 CUTTER FIXING BOLT A CUTTER FIXING BOLT A WASHER 7	2 2 4 R -D037770 4 D037771- 5 R -D037770 5 D037771-
6-051 6-052 6-053 6-054 6-055 8-055	992-01060-011 125-33202-205 110-0062¥-200	CUTTER FIXING NUT	5 5 1 1 1 1 1
6-057 6-058 6-059 6-061 6-061 6-062	990-23050-156 990-51050-153	S.VASHER 4 SNALL VASHER 4	5 5 2 2 8 -C033284 2 C033285- 1 8 -D142726
6-062	138-33215-202	CUTTER COVER, L-773	1 D142727-

FIG.7 HANDLE

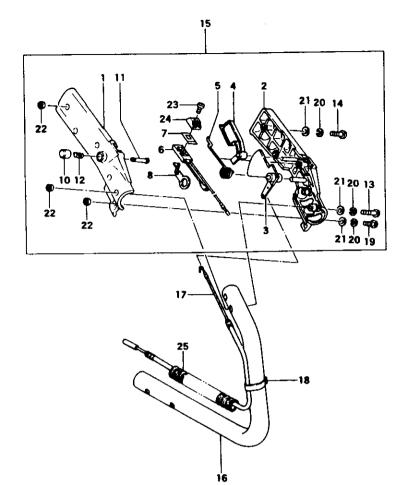


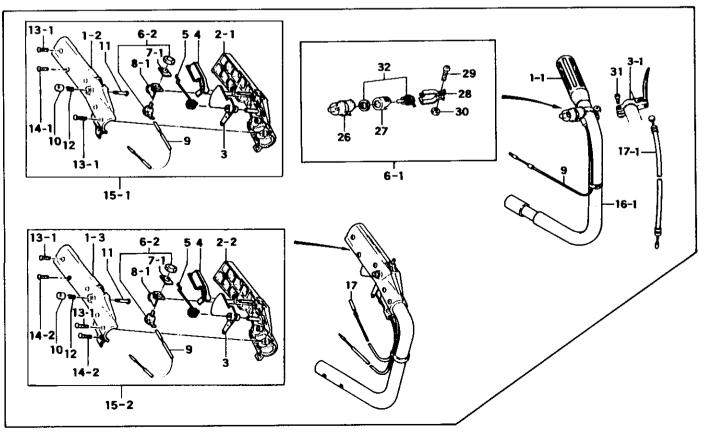


	28		111 6
RE	NBR PARNER	PARTNAME	DI SERIANBR REMARKS
7-001,1 7-001,2 7-001,2 7-001,3	165-35100-202 053-33222-200 053-33222-200 053-33222-201 053-33222-201 053-33222-202	HANDLE GRIP HANDLE GRIP A HANDLE GRIP A HANDLE GRIP A	1 -C132840 1 N C132841- 1 R -C192852 1 R -D219800 1 -F067900 1 N F067901-
7-002,1 7-002,2 7-002,2 7-002	054-33222-202	HANDLE GRIP B HANDLE GRIP B HANDLE GRIP B (SAFETY TRIGGER) HANDLE GRIP B	1 N C132841- 1 R -C192852 1 R -D219800 1 -F067900 1 N F067901- 1 -C132840
7-003 7-003 7-003 7-004 7-005 7-005	230-33210-200 230-33210-201 231-33210-200 061-32600-200	THROTTLE LEVER THROTTLE LEVER SAFETY LEVER THROTTLE LEVER SPRING	1 N C132841- 1 I -F067900 1 F067901- 1 N C132841- 1 N C132841- 1 I -F067900
7-006,1 7-006,1 7-006,1	156-33210-901 156-33210-910 156-33210-911 156-33210-911 156-33210-912	STOP BUTTON ASS'Y STOP BUTTON ASS'Y STOP BUTTON ASS'Y STOP BUTTON ASS'Y	1 F067901- 1 I -A350650 1 R -B078316 1 R -B120083 1 -C132840 1 N -F147891
7-007 7-008,1	925-32530-200 319-43225-200 319-43225-200	STOP BUTTON MARK Earth terninal Earth terninal	1 -F147891 1 N F147892- 1 N C132841- 1 -F147891 1 N F147892-
7-009 7-009 7-010 7-011 7-012 7-013,1	178-33222-800 178-33222-800 725-32600-202 064-32530-200 066-32300-201 993-41040-251	STOP CORD PUSH PIN CAP PUSH PIN STOPPER SPRING	1 N C132841- 1 D F147892- 1 N C132841- 1 N C132841- 1 N C132841- 3 N C132841- 3 N C132841-
7-013 7-014,1 7-014,2 7-014	990-11040-301 993-41040-151 993-41040-151 993-41040-151 990-11040-251	SCREW 4X30 HI-LO SCREW 4X15 HI-LO SCREW 4X15 SCREW 4X25	3 -F067900 2 N F067901- 2 -C132840 3 N -F067900 1 H F067901- 1 R -C132840
7-015,2 7-015,2 7-015,2 7-015,2	055-33222-902 055-33222-903 055-33222-903	HANDLE GRIP ASS'Y Handle grip Ass'y Handle grip Ass'y Handle grip Ass'y	1 R -D219800 1 -F067900 1 P -F147891 1 R -F147891 1 F147892- 1 -C132840
7-016 7-016 7-016 7-016 7-017,1 7-017,1	050-33222-200 050-33222-200 050-33222-201 050-33222-202 885-00764-800 885-33225-800	HANDLE A Handle A Handle A Throttle Vire Comp.	1 N -F087900 1 R -F087900 1 R -F147891 1 F147892- 1 -C132840 1 N C132841-
7-018 7-019 7-020 7-021 7-022 7-022	990-11040-141 992-10040-012	THROTTLE WIRE HOLDER SCREW 4X14 S.VASHER 4 SMALL WASHER 4 U-NUT 4	1 3 N F067901- 5 N F067901- 6 N F067901- 5 N F067901- 6 I -F147891
	991-78040-010 994-31030-101 258-11600-200	NYLON LOCK NUT 4 SCREV 3X10	8 F147892- 1 N F147892- 1 N F147892- 1 N F147892-

REF	NER PARNER		PARNAME	ST SERIANBR REMARKS
7-026 7-026	268-33210-205 268-33210-210	STOP BUTTON	RUBBER COVER RUBBER COVER	1 R -B120083 1 D C132841-
7-027 7-027 7-028 7-028 7-028 7-028 7-029	640-33210-201 640-33210-202 115-33210-200 115-33210-201 115-33210-202 990-11040-161	STOP SWITCH BRACKET BRACKET BRACKET	BRACKET	1 R -8078316 1 D C132841- 2 I -8028793 2 I -8185090 2 D C132841- 1 D C132841-
7-030 7-031 7-032	991-01040-011 990-11060-251 162-01300-900	SCREW 6X25	j	1 D C132841- 1 D C132841- 1 D C132841- 1 D C132841-

REF. NBR PARTER	PARNAME	ST SERIANBR REMARKS
8-001,1 8-001 036-29331-501 8-002 851-20000-201 8-003 862-20000-200	COMBI. BOX SPANNER 10X19 Spark plug box spanner	1 -D219800 .PLUS 1 N D219801- 1 D 1 D 1 D 1 D 1 D 1 D 1 D 1 D 1 D 1 D

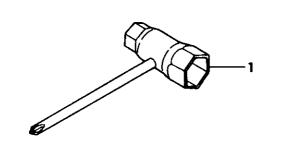

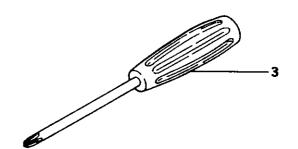

-2

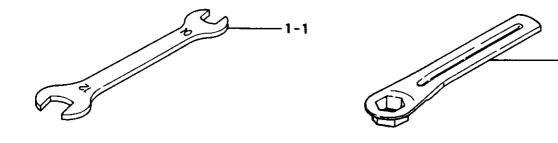


FIG.9 MARKS

